



PROPER USE OF HOVERBOARD



Please note, it is important you read the manual for correct operation of this device and to learn its abilities and limitations.

If the device is being used in an improper manner, your board will notify you with a beeping sound and a flashing red light.

This will occur in the below situations:

- **If there is an obstruction for 5 seconds**
- **If the user is riding on an incline steeper than approved for 10 seconds**

The beeping and flashing light will continue until you stop using the device and reset it.

To reset your board, please turn off your board, ensure you are meeting correct usage requirements, and turn your board on.