

**MANTENGALO ALEJADO
DEL AGUA**

Al usar aparatos eléctricos, especialmente en la presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso

MEDIDAS DE SEGURIDAD

ADVERTENCIA

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca descuide ni abandone el aparato mientras está conectado.
2. Este aparato no debe ser usado por, sobre o cerca de niños o personas con ciertas discapacidades.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante.
4. No utilice una extensión con este aparato.
5. No utilice este aparato si el cable o la clavija estuviesen dañados, si no funcionase o si estuviese demasiado caliente.
13. No toque el aparato sobre ninguna superficie mientras está caliente o conectado; utilice el soporte integrado.
- Manténgalo alejado del cable eléctrico.**
14. No utilice este aparato con un convertidor de voltaje.
15. No toque las partes calientes de este aparato; utilice los mangos/asas o los botones/ perillas.
16. El cuerpo del aparato cerca del tubo se pone muy caliente durante el uso; no lo toque.
- NOTA: no utilice este aparato sobre cabello sintético/extensiones.**

NOTA: no utilice este aparato sobre cabello sintético/extensiones.

GUARDE ESTAS INSTRUCCIONES DE OPERACION

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 120 V AC.

CÓMO RIZAR EL CABELLO

COMO RIZAR EL CABELLO

!cabello!

después de encender el aparato. Este aparato ofrece 30 opciones de temperatura, para todo tipo de cabello, y recalienta muy rápidamente. Si su cabello es fino, grueso, ondulado o resistente, le recomendamos que utilice un nivel de temperatura bajo. Si su cabello es espeso, que utilice un nivel de temperatura alto. Personalice la temperatura, según su tipo de

FUNCIONAMIENTO BÁSICO

El cabello debe estar limpio y seco. Enchufe el aparato ("ON"), el aparato; La luz de encendido se encenderá. Permita que la unidad se caliente por 30 segundos.

ADVERTENCIA: el tipo se pone muy caliente en segundos; evite el contacto con la piel

**SAVE THESE
INSTRUCTIONS
OPERATING
INSTRUCTIONS**

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

GETTING STARTED

Hair should be clean and completely dry before using the curling wand. Plug the wand into an electrical outlet. Turn on unit. The power indicator light will become illuminated. Allow unit to heat up for 30 seconds.

WARNING: The curling wand's barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling wand has been turned on.

The appliance's 30 temperature settings and instant heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or coarse hair, keep the heat setting high. You can vary the appliance's temperature according to your particular need!

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS
BEFORE USING**

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

 
1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug the appliance immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Do not use an extension cord to operate appliance.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**
6. **Keep the cord away from heated surfaces.**
7. **Do not pull, twist, or wrap line cord around appliance.**
8. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
9. Never use while sleeping.
10. Never drop or insert any object into any opening or hose.
11. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
12. This appliance is hot when in use. Do not let heated surfaces touch eyes and bare skin.
13. **Do not place the heated appliance directly on any surface or on the appliance power cord while it is hot or plugged in. Use the built-in counter rest.**
14. Do not use with a voltage converter.
15. Do not touch hot surfaces of the appliance. Use the handles or knobs.
16. Do not attempt to touch the housing of your appliance near the barrel as it is hot when in use.

NOTE: Do not use this styling appliance on hair extensions.

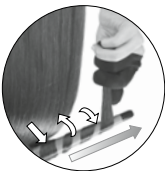

Please register this product at:
www.conair.com/registration

 
Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

NUNCA jale, fuerza ni retuerza el cable eléctrico. Nunca enrollé el cable alrededor del aparato; el aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable aparece dañado o si el aparato deja de funcionar o funcionara de manera intermitente.

INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño limpio. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regrese a un centro de servicio autorizado. No trate de reparar el aparato.

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aun cuando esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los



ADVERTENCIA: SI CREE QUE NO HAY EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

regir para usted.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$7.50 para cubrir los gastos de manejo y envío. Los residentes de California deben necesitar dar una prueba de compra y instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

**GARANTÍA LIMITADA DE DOS AÑOS
(VÁLIDA EN LOS EE.UU. Y EN
CANADÁ SOLAMENTE)**

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

 
Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER



Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Centro de servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir

USER MAINTENANCE

Your styling tool is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the appliance from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug it, allow it to cool and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the appliance. Damage will occur at the high flex point of entry into the appliance causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your styling tool is easy to store. Allow it to cool, and store out of reach of children in safe, dry location. Do not jerk or strain cord at plug connections.

Do not wrap cord tightly around appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.



**RIZADOR CÔNICO
DE 32 MM A 19 MM
CON CERÂMICA/TURMALINA**

Modelo 2016G

CONNOV

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.