



GF134CB

34" GAMING MONITOR



USER MANUAL

In order to continue serving our customers and providing the best products, our product information including our user manuals may receive updates from time to time. Please check our website for the latest user manuals and product materials.

Table of Contents

- Section 1: Safety Precautions.....4**
- Section 2: Box Contents.....5**
- Section 3: Product Overview6**
 - 3.1 – Monitor Buttons6
 - 3.2 – Monitor Ports.....6
- Section 4: Stand Installation.....7**
- Section 5: Wall Mounting.....8**
- Section 6: Basic Operation9**
- Section 7: Indicator Light10**
- Section 8: OSD Setup10**
 - 8.1 – OSD Menu Functions11
- Section 9: ECO Modes and Gameplus Switching.....13**
- Section 10: Troubleshooting14**
- Section 11: Specifications15**
- Section 12: Cleaning16**
- Section 13: Three-Year Limited Hardware Warranty16**

Section 1: Safety Precautions

Read and observe the following warnings and information below.

1. Before cleaning, always unplug your monitor. It is recommended that you use dry cloth or lightly damp cloth to clean your monitor. Dry cloth is, however, the safest. If using damp cloth, wait for your monitor to completely dry before plugging it in again.
2. Do not use alcohol or ammonia-based cleaner and/or liquids to clean your monitor.
3. This monitor features ventilation openings on the back of the unit. Avoid blocking these openings to prevent the monitor from overheating.
4. Avoid placing this monitor near any heat sources, e.g., portable heaters or heating vents, as this may cause damage to your monitor.
5. Do not spray cleaner and/or any kind of liquid directly onto the monitor's screen or any part of the monitor.
6. Do not insert anything into any part of the monitor especially the ventilation openings.
7. Always make sure your monitor is placed on a secure, level surface to prevent it from falling and sustaining damage.
8. Unplug your monitor during any extended periods of non-use.
9. Do not place heavy items on the monitor or monitor cables.
10. Do not attempt to disassemble or remove parts from the monitor. Any disassembly or modification not performed by an authorized technician can result in damage to the monitor and/or possible exposure to high voltage electricity which may lead to serious injury or death.

VIOTEK® shall not be held responsible for injury or damage of products or persons due to failure to adhere to the aforementioned precautions or any others noted hereafter.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.


Section 2: Box Contents



Monitor x 1



Stand Stem x 1

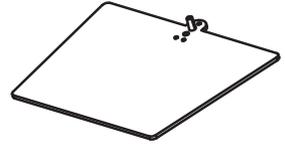

Stand Base x 1




NO. 1 Screws x 2
(for Stand Installation)




NO. 2 Screws x 3
(for Base Installation)




NO. 3 Screws x 4
(for Wall Mounting)

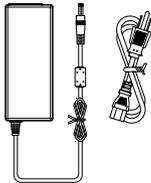

Power Adapter &
Power Cable x 1

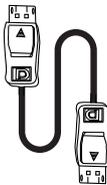

DP Cable x 1

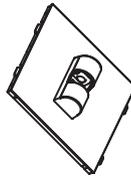

Stand Plate x 1




User Manual x 1



Extra screws may be included as backup.


Section 3: Product Overview

3.1 – Monitor Buttons

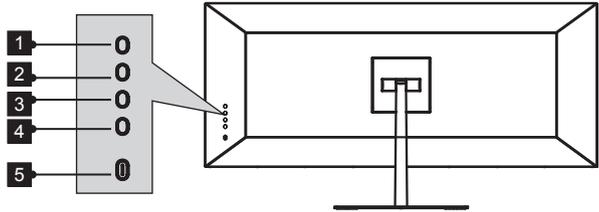

- 1 M Menu Button:** Press to display the OSD menu or enter sub-menus.
- 2 ▲ Up Button:** Press to move up in the menus.
- 3 ▼ Down Button:** Press to move down in the menus.
- 4 E Exit Button:** Press to exit.
- 5 ⏻ Power Button:** Press to turn the monitor on/off.


3.2 – Monitor Ports

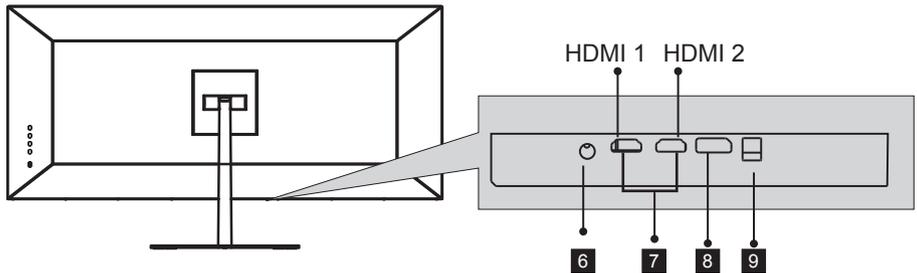


- 6 Audio Output:** Insert one end of the audio cable into an external audio source, e.g., speakers or headphones, to pass audio signals through the monitor.
- 7 HDMI 1.4 Connectors:** Insert one end of the HDMI cable into the computer's HDMI output and connect the other end to the monitor's HDMI port.
- 8 DisplayPort (DP) 1.2 Connector:** Insert one end of the DP cable into the computer's DP output and connect the other end to the monitor's DP port.
- 9 DC IN Power Connector:** Insert the power cable to supply power to the monitor.

Section 4: Stand Installation

1. Open the package and take out the product with foam still attached. Gently place it on a desktop or table.
2. Press the button at the bottom of stand plate to remove the stand plate from the opening on the back of monitor.
3. Take out the stand and insert it into the stand plate hole, then use a screwdriver (not included) and two NO.1 screws to fasten stand plate onto the stand.

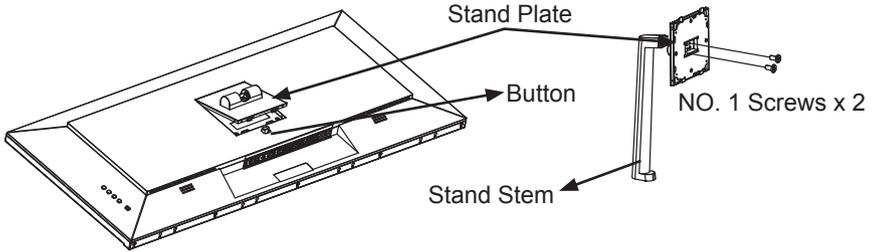

4. Take out the base, use a screwdriver (not included) and three NO.2 screws to fasten it onto the stand stem.
5. Insert the stand plate back into the opening on the back of monitor and lock it in place.

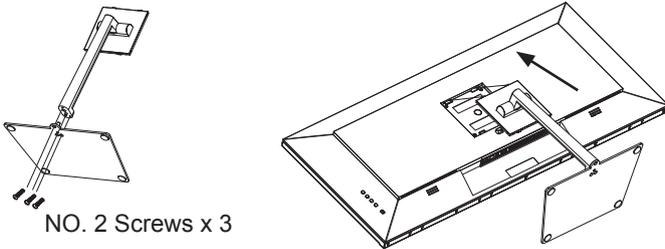


- ⓘ If needed, the stand can easily be detached from the monitor by pressing the button at the bottom of stand plate. Gently place monitor face-down on a flat surface, then unscrew the stand to remove it.


Section 5: Wall Mounting

 VESA and/or mounting accessories not included.

1. Open the package and take out the monitor with the foam still attached. Gently place it on a desktop or table. If the monitor is attached to the stand, remove the stand by pressing the button on the back of the monitor just below the stand plate.
2. Remove the stand plate from the back of the monitor, and attach the four NO. 3 screws into the mounting holes at the back of the monitor.

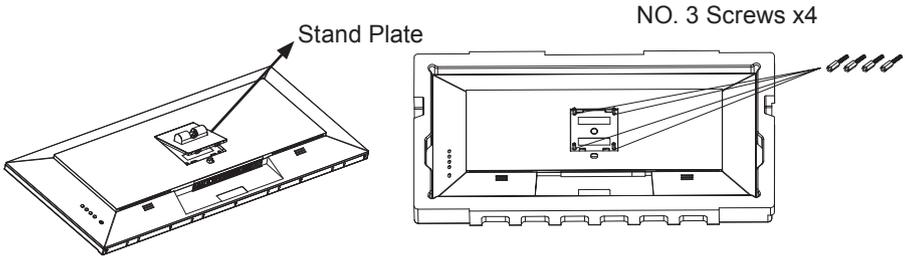


3. Follow the directions that came with your mounting kit (not included) to mount the monitor on the wall or monitor stand.

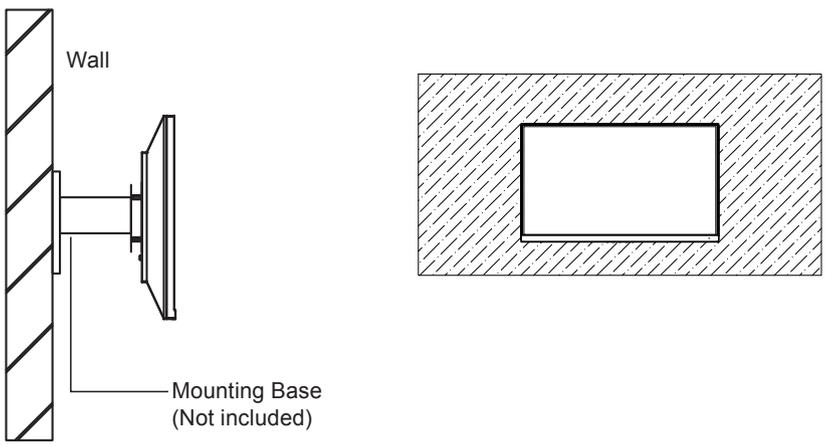


Section 6: Basic Operation

1. Insert one end of the DP cable into your PC's graphics card. An HDMI cable may also be used. HDMI cable not included.
 For optimal refresh rate (or “performance”), it is recommended to use a DP cable with the monitor's corresponding connector.
2. Connect the other end of the cable to the corresponding connector on your monitor. See the image below.

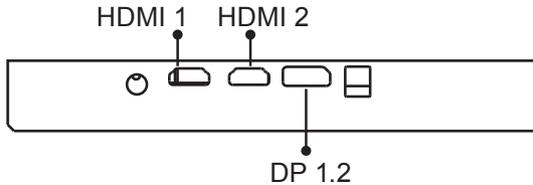

3. Connect the power cable to your monitor then connect the other end to your power source. It is recommended that you use a surge protector with adequate voltage if a wall outlet cannot be reached directly.
4. Locate the power button on the monitor and press it to turn the monitor on.
5. Carefully adjust monitor's angle as desired.

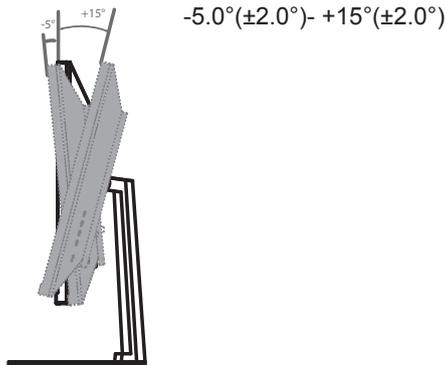


VIOTEK Adaptive Sync

Adaptive sync eliminates image tearing, stuttering and ghosting by adjusting of a monitor's vertical refresh rate to the frame rate of the graphics card. It is compatible with GPUs that use AMD® FreeSync™ or NVIDIA® G-Sync™. The feature is off on VIOTEK monitors by default and must be manually enabled in the monitor's OSD (see **Section 8: OSD**). To use this feature, the connecting device must be compatible with adaptive sync (FreeSync and/or G-Sync); have the latest graphic drivers; and be connected to the monitor using a DisplayPort (DP) cable.

Section 7: Indicator Light

Solid blue light indicates power is on and the monitor is operating normally. Red light indicates no video source, no horizontal or vertical signal has been detected or voltage is low. Please ensure your computer is on and all video cables are fully inserted and/or connected.

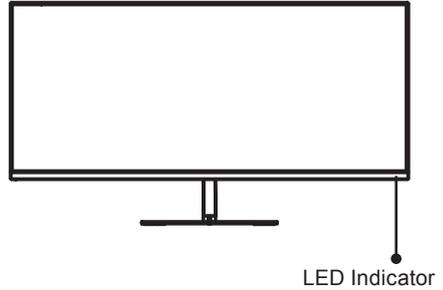

Section 8: OSD Setup

The On-Screen Display (OSD) Menu may be used to adjust your monitor's settings and appears on screen after turning on the monitor and pressing the **M** button.

 When using the monitor for the first time, settings will automatically adjust to optimal settings according to your computer's configuration.

1. Press any one of the buttons (**M**, **▲**, **▼**, **E**, **⏻**) to activate the navigation window.



2. Press **M** (🏠) to enter the OSD menu.



3. Press ▲ or ▼ to browse Main Menu settings (Brightness, Image, Color Temp., etc.).
 - Highlight the desired setting, then press **M** to enter the sub-menu.
 - Press ▲ or ▼ to browse sub-menus, then press **M** to highlight the desired function.
 - Press ▲ or ▼ to adjust the parameter, then press **M** to confirm the changes and exit the current screen.
4. Press **E** (🏠) to exit the current screen.

8.1 – OSD Menu Functions

Main Menu	Sub-Menu	Options	Description
BRIGHTNESS	BRIGHTNESS	0~100	Adjust display brightness
	CONTRAST	0~100	Adjust display contrast
	ECO	Standard, Game, RTS, FPS, Movie, Text	Set visual mode
	DCR	On	Turn on DCR function
Off		Turn off DCR function	
IMAGE	ASPECT	Auto	Best for overall use
		Wide	Set image aspect ratio to fullscreen
		4:3	Set image aspect ratio to 4:3

Main Menu	Sub-Menu	Options	Description
COLOR TEMP.	COLOR TEMP.	Warm, Cool, User	Set the display color temperature mode
	RED	0-100	Customize the display screen RGB component according to preference
	GREEN	0-100	
	BLUE	0-100	
OSD SETTING	LANGUAGE	ENGLISH, FRANÇAIS, DEUTSCH, 한국, ESPAÑOL, РУССКИЙ, PORTUGUÊS, TURKCE, 简体中文, 日本語	Set OSD language
	OSD H. POS.	0~100	Adjust the OSD Horizontal position
	OSD V. POS.	0-100	Adjust the OSD Vertical position
	OSD TIMER	0~60	Adjust OSD display time
	TRANSPARENCY	0-100	Adjust OSD transparency
RESET	RESET	None	Reset monitor configurations
MISC	SIGNAL SOURCE	HDMI1, HDMI2, DP	DP or HDMI signals input
	VOLUME	0-100	Adjust audio volume
	LOW BLUE RAY	0-100	Set blue light filtering level
	ADAPTIVE SYNC	On, Off	Turn on/off Adaptive Sync
	OVER DRIVER	High, Middle, Low, Off	Set Overdrive function

Section 9: ECO Modes and Gameplus Switching

1. Press any one of the buttons (M, ▲, ▼, E, ⏻) to activate the navigation window.



2. Press ▲ (ECO) to switch ECO modes. These modes include Standard, Text, Movie, Game, FPS, and RTS and can be used to optimize settings according to your activity. Standard mode is suitable for most activities.



3. Press ▼ (Gameplus) to switch Gameplus modes. Choose the crosshair icon best suited for your game. These game icons are primarily designed to optimize your aim during shooting games, though they can be used for other scenarios.



Section 10: Troubleshooting

The screen is blank

- Press power button to turn the monitor on.
- Confirm the brightness and contrast settings are set normally.
- Check if the Indicator Light is flashing. If so, there is no signal from your video source.
- If your source is a notebook or laptop, be sure that its settings are in mirror or extension mode and the device itself is powered on.

The image is out of focus

- Ensure the video cable is inserted properly at both ends.

The screen is flashing

- Try an alternative power source. Insufficient power may cause this issue.
- Ensure devices such as non-shielded speakers, fluorescent lighting, AC transformers, table fans etc. are a safe distance away from your screen to avoid magnetic disturbances.

The color bleeds or visual effects appear unusual.

- If your screen is all red or blue, or any colors disappear, check to see that the cable is properly inserted. A loose connection can cause a bad signal.
- Try connecting to another video source for comparison.

The screen appears to be scrolling, rolling, or moving unusually.

- Check that your source frequency is within 75Hz.
- Reconnect and ensure your video cable is secure.

The indicator light does not work

- Check if the power is on.
- Check if the power line connected with power.

Cannot plug and play.

- Inspect if the monitor is compatible with PC.
- Inspect if the graphics card is compatible with the monitor.
- Inspect if the pins in the interface are curved.

Dim image

- Adjust the brightness and contrast ratio.

Image jitter/moire pattern

- Nearby electric equipment may interfere with the monitor.

Light indicator is on or flashing, but there is no image displayed on screen

- Check if the monitor power is on.
- Check if the graphics card is installed properly.
- Check if the signal line connects securely with the monitor.
- Check if the pins in the interface are curved.

Check that monitor signal source is set correctly.

- Press and hold the E button on the OSD for ~2 seconds to auto reset image.

Color shortage (red, green, or blue)

- Check cable connectors for curved or damaged pins. Replace cables if needed.

Color difference (colors are not optimized)

- Press M (M) twice to bring up the OSD menu. Scroll down to RESET, press(M). Press E (E) to exit menus after color reset process has been complete.

Section 11: Specifications

Item	Detail
Model Number	GFI34CB
Screen Size	34"
Display Panel	ADS
Viewing Angle	H178° / V178°
Aspect Ratio	21:9
Resolution	2560 × 1080
Maximum Refresh Rate	75Hz
LED Indicator	Power on: Blue (solid); Power saving: Blue (flashing)
Brightness	Min: 250cd/m ² ; Typ: 300cd/m ²
Default Color Temperature	6500K
Color Gamut	99% sRGB; 90% NTSC, 83% ADOBE RGB
Pixel Pitch	0.31242 x 0.31 mm (H x V)
Panel Response Time w/o OD	14ms
Response Time	7ms GTG (OD)
Display Colors	16.7M colors
Ports	DisplayPort x 1, HDMI x 2, Audio out x 1
Power	AC 100-240V~, 50/60Hz
Adapter	DC12V --- 4.0A 48W
Power Consumption	Typical: 43W; Max: 55W; Standby ≤ 0.5W
OSD Language	ENGLISH, FRANÇAIS, DEUTSCH, 한국, ESPAÑOL, РУССКИЙ, PORTUGUÊS, TURKCE, 简体中文, 日本語
Usage Temp.	32°F~104°F (operating), -4°F~ 140°F (storage), 10-85% RH (non-condensing)
Tilt Angle	Forward 5°; Backward 15° (±2°)
VESA Mounting	100 x 100 mm
Dimensions (with stand)	32.17 x 17.92 x 8.5 in (817 x 455.2 x 204.5 mm)
Dimensions (with stand)	32.17 x 14.27 x 2.35 in (817 x 362.7 x 59.8 mm)
Weight (with stand)	19.03 lb. (Net) / 23.92 lb. (Gross)

Section 12: Cleaning

The monitor needs cleaning. Take the following steps when cleaning. Do not press the monitor display with hands or other objects; otherwise, there is a risk of damaging the screen.

1. Power off the monitor and PC.
2. Disconnect the power cord from the product.



Do not touch any cords or cables wet hands. Electric shock may result.

3. Use a dry, non-abrasive cloth to gently remove dust and debris.
4. Lightly wet another soft cloth in water. Ring the cloth out well. Gently wipe the exterior of the product.



Never use alcohol, solvent, surfactant or ammonia-based cleaning solutions. Do not spray water or detergent directly on the product.

5. Connect the power cord to the product when cleaning is finished.
6. Power on the product and PC.

Section 13: Three-Year Limited Hardware Warranty

Your VIOTEK® GF134CB Monitor ("Product") includes a Three-Year Limited Hardware Warranty ("Warranty"). The Warranty covers product defects in materials and workmanship under normal use. This Warranty is limited to residents of the United States and Canada only and is available only to original purchasers. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

This Warranty starts on the date of your purchase and lasts for three years (the "Warranty Period"). The Warranty Period is not extended if the Product is repaired or replaced. We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

Warranty services are provided by Viotek Warranty Pro (“WP”). If a hardware defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, WP will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the Product with a new product or a refurbished one that is substantially equivalent to the original product. This Warranty is for one replacement only of like-items and does not cover items out of production if the product is no longer made or stocked. This Warranty is not assignable or transferable. The original purchaser may call WP’s toll-free number at 1-855-229-9472 for service requests.

When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes WP’s property. This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. WP does not warrant uninterrupted or error-free operation of this Product. This Warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external causes such as accidents, abuse, or other actions or events beyond our reasonable control.

Important: Do not disassemble the Product. Disassembling the Product will void this Warranty. Only WP or a party expressly authorized by WP should perform service on this Product.

DISCLAIMER OF WARRANTY: THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR ENTIRE LIABILITY FOR ANY BREACH OF THIS LIMITED WARRANTY. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THE DURATION AND REMEDIES OF ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY.

DECLARATION OF CONFORMITY

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RELATED INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

VIOTEK[®]

COPYRIGHT © 2022 VIOTEK. ALL RIGHTS RESERVED.