



INSIGNIA™

Quick Setup Guide | NS-BIPCD03
CD Boombox with FM Radio

Congratulations on your purchase of a high-quality Insignia product. Your CD Boombox with FM Radio is designed for reliable and trouble-free performance. Use this guide for initial setup.

PACKAGE CONTENTS

 
- Boombox
- AC power adapter
- User Guide
- Quick Setup Guide




"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

FEATURES


Top

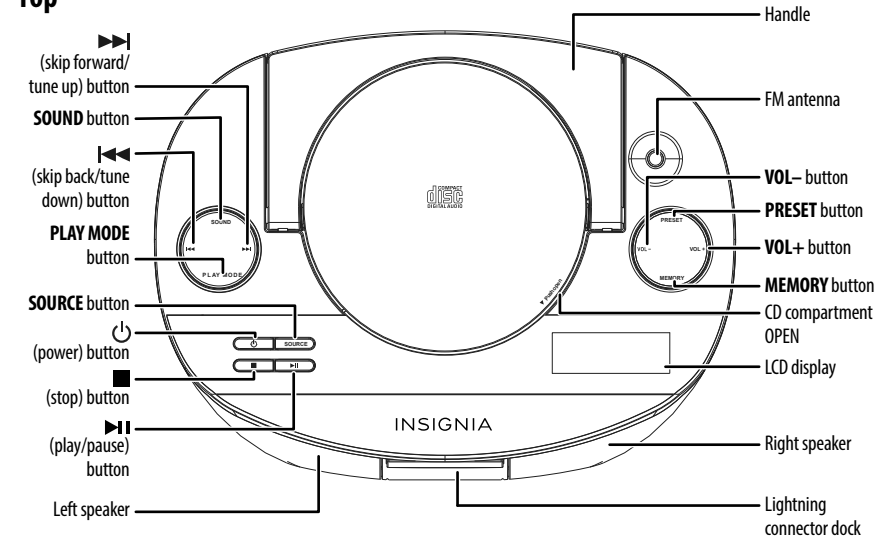

Back

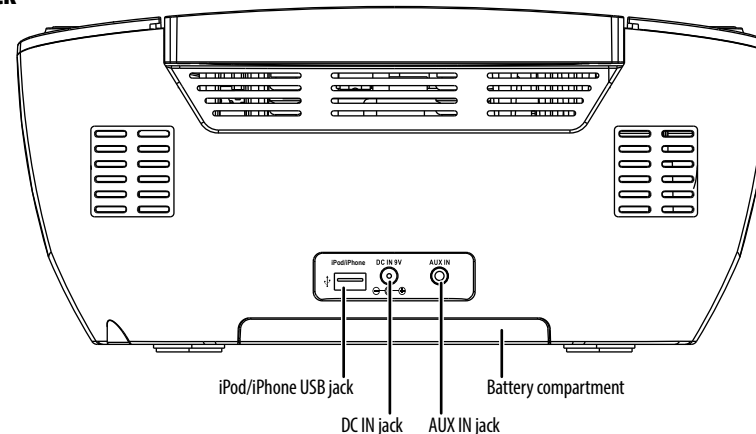 

LCD display

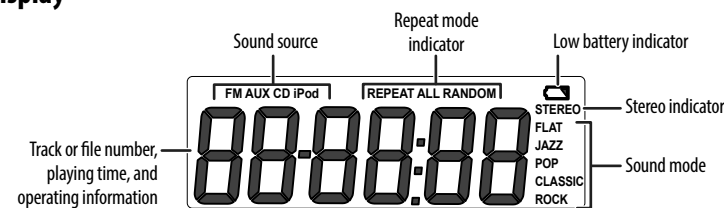 

POWERING YOUR BOOMBOX

This product can be powered by either the included AC power adapter (9V 2.2A) or by six "C" size alkaline batteries (not included).

Installing the batteries

- 1 Open the battery compartment on the bottom of your boom box.
- 2 Insert 6 "C" size alkaline batteries (not supplied) into the battery compartment. Make sure to match the + and - on each battery to the + and - signs in the battery compartment.
- 3 Close the battery compartment until it clicks into place.

Connecting the AC adapter

- 1 Insert the small connector at the end of the AC power adapter cable into the DC IN jack on the back of your boombox.
- 2 Plug the AC power adapter into a wall power outlet.

TURNING ON YOUR BOOMBOX

- Press (power) on the top of your boombox.

SELECTING THE MODE (SOURCE)

- Press **SOURCE** repeatedly on the top of your boombox to select **FM**, **iPod DOC**, **iPod USB**, **CD** or **AUX**. The source you select appears on the display.

VOLUME CONTROL

- After you select the mode you want, press **VOL+** or **VOL-** to set the volume to a comfortable level.

USING RADIO MODE

- Radio mode is the default the first time you turn your boombox on. Thereafter, it will turn on to the last mode selected.

Listening to the radio

- 1 Press the **POWER** button to turn the boombox ON. The LCD display turns on.
- 2 Repeatedly press **SOURCE** until "FM" lights on the display.

Tuning to a station

- 1 Press (power) on the top of your boombox.
- 2 Press **SOURCE** repeatedly to select the FM mode.
- 3 Press (skip back) or (skip forward) to tune the radio up or down and select the station you want. When a strong FM signal is received, **Stereo** appears on the display.
- 4 Adjust the volume to a comfortable level by pressing either the **VOL+** or **VOL-** button.
- 5 To scan to a higher or lower frequency, press and hold (skip back) or (skip forward) for one second. The radio automatically scans to the next station.
- 6 Press (power) to turn off the boombox.



Before using your new product, please read these instructions to prevent any damage.



**To improve FM reception:**

- For FM reception, raise and extend the FM antenna. You may have to reposition the antenna for best reception.

To use presets:

- 1 Press **⏻** (power) to turn on your boombox.
- 2 Press **SOURCE** repeatedly to select **FM** radio mode.
- 3 Press **⏮** or **⏭** to tune the radio up or down and select the station you want.
- 4 To save the station as a preset, press and hold **MEMORY**. "P01" blinks on the display.
- 5 Press **PRESET** to select the preset number (P01-P10) you want.
- 6 Press **MEMORY** to store the preset.
- 7 Repeat Steps 3 to 6 to store as many as ten FM presets.
- 8 To select a preset station, briefly press **PRESET** repeatedly until you reach the station you want.

USING THE CD PLAYER

CAUTION: Do not attempt to play DVDs, VCDs, or data CDs in your boombox. You may damage your unit.

- 1 Press **⏻** (power) to turn on your boombox.
- 2 Press **SOURCE** repeatedly to select the CD mode.
- 3 Press the **OPEN** area on the CD door to open the lid.
- 4 Insert a CD, label side up.
- 5 Press the **OPEN** area on the CD door to close it. The total number of tracks appears on the display.
- 6 Press **▶⏮** (play/pause) to begin playback. The current track appears on the display. The CD stops when finished.
NOTE: If the door is opened during playback, playback stops immediately and any repeat mode setting is reset.
- 7 Control CD playback as follows:
 - Press **▶⏮** (play/pause) to pause playback. Press again to resume playback.
 - Press **■** (stop) to stop playback.
 - Press **⏭** to skip the next track.
 - If the current track has played more than two seconds, press **⏮** to go to the beginning of the currently playing track. If the current track has played less than two seconds, press **⏮** to go to the previous track.
 - Press **⏭** and hold to fast forward. Release to stop the search.
 - Press **⏮** and hold to fast reverse. Release to stop the search.
 - Press **PLAY MODE** once to repeat the current track. "Repeat" appears on the display.
 - Press **PLAY MODE** twice to repeat the entire CD. "Repeat All" appears on the display.
 - Press **PLAY MODE** three times to randomly play the tracks on the CD. "Random" appears on the display.
 - To return to normal playback, press **PLAY MODE** until the play mode indicators disappear from the display.

NOTES:

- If a CD is inserted incorrectly, is dirty or damaged, is not present, or is a non-compatible format, "NO DISC" appears on the display.
- To prevent damage to the CD, never open the CD door while the CD is rotating and never touch the lens.
- Do not use the carrying handle when playing a CD. The CD player should only be used on a steady surface.
- Your CD boombox plays standard CDs and 3" CDs.

USING AN IPOD/IPHONE**To connect a newer iPod or iPhone to your boombox:**

- 1 Insert an iPod Nano 7th, iPod Touch 5th, or iPhone 5, into the lightning connector on the front of the boombox.
- 2 Press **SOURCE** until "iPod DOC" lights on the display, then press the play button on either the iPod/iPhone or the boombox to begin playback.

NOTE: If the iPod/iPhone is playing when docked, it will play at the boombox automatically without pressing the Play button. Control playback using the controls on the boombox.

To connect an older iPod or iPhone to your boombox:

- 1 For an older iPod or iPhone, such as an iPhone 4, 4S, Touch 4th, Nano 6, or earlier, use an iPod or iPhone USB cable to connect to the iPod/iPhone USB jack on the back of your boombox.
- 2 Press **SOURCE** repeatedly until "iPod USB" lights. Press **▶⏮** (play/pause) to start playback.
- 3 Adjust the volume to a comfortable level by pressing either the **VOL+** or **VOL-** button.
- 4 Control playback using the controls on the boombox.

To charge the iPod/iPhone battery:


- Insert the iPod by lightning connector or iPod/iPhone USB Jack. The battery charging indicator appears on the iPod display.

NOTES:

- When your iPod/iPhone is docked using the lightning connector or USB, it will be charged only when your boombox is connected to AC power.
- When there is more than one iPod/iPhone connected to the boombox via Lightning connector and USB, both devices will be charged using AC power.

PLAYING MUSIC FROM AN EXTERNAL SOUND SOURCE

- 1 Make sure that your boombox is turned off.
- 2 Connect an external sound source, such as an MP3 player, by plugging one end of an audio cable with a 3.5 mm plug (not included) into the **AUX In** jack on the back of your boombox and the other end into your playback device.

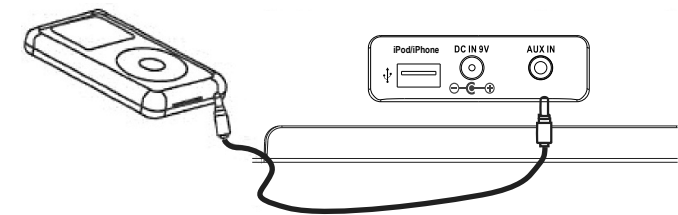

- 3 Press **SOURCE** repeatedly on the top of your boombox to select **AUX In**. "AUX" lights up on the display.
- 4 Start playback on the external device.
- 5 Press **VOL+** or **VOL-** to adjust the volume.
NOTE: You can also use the volume control on the device to adjust the volume, but the volume knob on the boombox provides the best control.
- 6 Control playback using the controls on the external device.

FCC PART 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

CAN ICES-3 (B)/NMB-3 (B)

One-year limited warranty. Visit www.insigniaproducts.com for details. For customer service, call: 877-467-4289 (U.S./Canada markets). We're here for you at www.insigniaproducts.com.

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2013 BBY Solutions, Inc. All Rights Reserved.

