

PACKAGE CONTENTS

- USB 3.0 multi-format memory card reader
- USB 3.0 cable
- Quick Setup Guide


SYSTEM REQUIREMENTS

- Windows® 8.1, Windows® 8, Windows® 7, Windows Vista®, Windows® XP, or Mac OS 10.4.x or higher


FEATURES

- Easily transfer music, photos, video, and other files between your computer and a digital camera/camcorder, action camera, smartphone, tablet, or similar device
- Supports SD, SDHC, SDXC, microSD, microSDHC, microSDXC, MMC, MemoryStick, MS PRO, MS-Duo, MS PRO Duo, MS PRO-HG Duo, MemoryStick Micro (M2), and CompactFlash types I and II cards
- Supports MMC plus or MINI SD with adapter. Adapters not included.
- USB 3.0 Super Speed for up to 5 Gbps data transfer, complies with USB 2.0

Front view

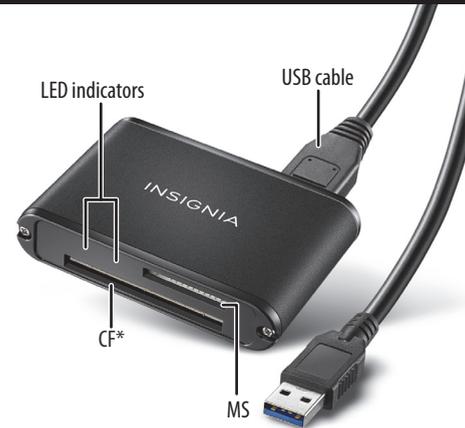

Back view

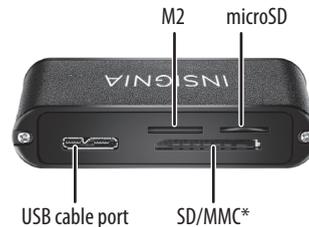

*Insert card into this slot label side down.

CONNECTING THE CARD READER

Plug one end of the USB cable into the card reader and the other end into an available USB port on your computer. Your computer loads the drivers automatically.

USING THE CARD READER

Cautions:

- Insert a card into the appropriate slot, label side up (except for CF and SD/MMC slots, which require that cards be inserted label side DOWN). The data LED lights. Failure to do so may result in damage to your card and/or card reader.
- Do not remove memory cards while the blue or green data LED on the reader is flashing. Doing so may lead to loss of data or damage to your memory card.
- This card reader supports multiple cards at the same time, such as CF+MS+SD+microSD or CF+MS+SD+M2. It does not support microSD and M2 cards at the same time.

If you connect this card reader to a USB 2.0 port, the green LED lights. When you transfer data over USB 2.0, the green LED blinks. If you connect this card reader to a USB 3.0 port, the blue LED lights. When you transfer data over USB 3.0, the blue LED blinks.

To access a memory card using Windows:

- 1 Insert a card into the appropriate slot, label side up (except for CF and SD/MMC slots, which require that cards be inserted label side DOWN). The data LED lights.
- 2 Click **Start**, then click *My Computer/Computer*. Double-click the drive letter to see its contents.
- 3 Use normal Windows procedures to open, copy, paste, and delete files.
- 4 Right-click the name of your card and select **Eject** when you are finished.
- 5 Do not remove your card from the card reader until the data LED stops blinking and the name of your card disappears from the window.

To access a memory card using Mac OS 10.4.x or higher:

- 1 Insert a card into the appropriate slot, label side up (except for CF and SD/MMC slots, which require that cards be inserted label side DOWN). The data LED lights.
- 2 Open the **Finder** window, then click your card's name in the left menu to view its contents.
- 3 Use normal Mac procedures to open, copy, paste, and delete files.
- 4 Right-click the name of your card and select the **Eject** when you are finished.

- 5 Do not remove your card from the card reader until the data LED stops blinking and the name of your card disappears from the Finder window.

TROUBLESHOOTING

For troubleshooting help, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003 statement

CAN ICES-3 (B)/NMB-3(B)

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)
www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2015 Best Buy. All rights reserved.
Made in China