

 
 


## QUICK SETUP GUIDE

# MINI WIRELESS PRO CONTROLLER FOR SWITCH NX-SWLCA

## PACKAGE CONTENTS


- Charging Grip
- Play and Charging Cable(1.5m)

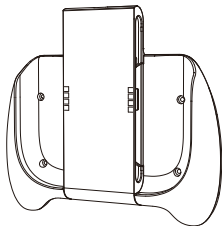


Before using your new product, please read these instructions to prevent any damage.



## HOW TO USE THE CHARGING GRIP

 1. Using the included USB-C Play and Charging cable, connect to the USB-C port at the top of the Charging Grip, and then connect the other end to the Switch 2 dock or any available USB-A adapter.

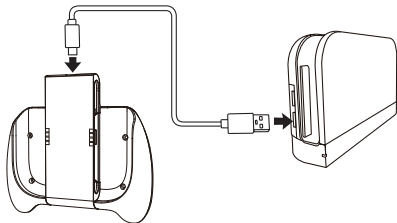

  
 
2. To attach/remove the controllers, pull the grips apart in opposite directions.

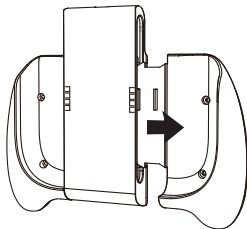

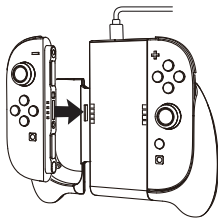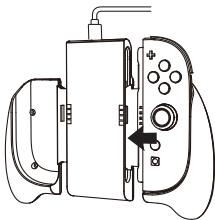

4. The LED indicator lights will display through the lens once the Joy-Con 2 are properly seated.

LED Color	DESCRIPTION Status
Amber	Charging in Process
Green	Charging Complete

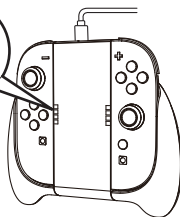  

To check the charging status of the Joy-Con 2 controller, please check the LED indicator at the top of the charging grip. When the Joy-Con 2 controller are fully charged, the LED indicator will change from amber to green.

# LEGAL NOTICES

## FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## ONE-YEAR LIMITED WARRANTY

Visit [www.next-accessories.com](http://www.next-accessories.com) for details.

This product is not approved, endorsed or affiliated with Sony.

©2025. All Rights Reserved.

Made in China

English V1-24-1014