

# KENWOOD

**DDX7051BT**  
**DDX794**  
**DDX774BH**

**DDX751WBTL**  
**DDX594**  
**DDX574BH**

**DDX517BT**  
**DDX417BT**  
**DDX394**

## MONITOR WITH DVD RECEIVER INSTRUCTION MANUAL

JVCKENWOOD Corporation



HD2/HD3

Digital Sound

Program Info

Emergency Alerts



**PANDORA®**

**DOLBY AUDIO™**

**Take the time to read through this instruction manual.**

**Familiarity with installation and operation procedures will help you obtain the best performance from your new DVD-receiver.**

### For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your Kenwood dealer for information or service on the product.

Model DDX7051BT/DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX517BT/DDX417BT/DDX394 Serial number \_\_\_\_\_

**US Residents Only**

**Register Online**

Register your Kenwood product at [www.kenwood.com/usa/](http://www.kenwood.com/usa/)

# CONTENTS

<b>BEFORE USE</b> .....	2	Using external audio/video players—AV-IN.....	50
How to reset your unit.....	3	Using an external component via ADS adapter	
<b>INITIAL SETTINGS</b> .....	4	—OEM Features.....	51
Initial setup.....	4	Using a smartphone—Mirroring.....	51
Setting the security function .....	4	Watching a TV.....	51
Clock settings .....	6	Using the external navigation unit.....	52
<b>BASICS</b> .....	7	<b>BLUETOOTH</b> .....	53
Component names and functions .....	7	<b>SETTINGS</b> .....	61
Common operations.....	9	Settings for using applications of iPod touch/	
Common screen operations.....	10	iPhone/Android .....	61
Selecting the playback source.....	12	Sound adjustment .....	62
Using short-cut buttons.....	13	Adjustment for video playback.....	65
<b>DISCS</b> .....	14	Changing the display design .....	66
<b>USB</b> .....	19	Customizing the Home screen.....	68
<b>Android</b> .....	21	Customizing the system settings .....	68
<b>iPod/iPhone</b> .....	22	Setting menu items.....	70
<b>APPS</b> .....	25	<b>REMOTE CONTROLLER</b> .....	74
<b>Pandora®</b> .....	27	<b>CONNECTION/INSTALLATION</b> .....	77
<b>iHeartRadio</b> .....	29	<b>REFERENCES</b> .....	85
<b>Spotify</b> .....	31	Maintenance .....	85
<b>HD Radio™ tuner</b> .....	33	More information .....	85
<b>RADIO</b> .....	37	Error message list .....	89
<b>SiriusXM® Satellite Radio</b> .....	39	Troubleshooting.....	90
<b>OTHER EXTERNAL COMPONENTS</b> .....	47	Specifications.....	92
Using camera.....	47		

## How to read this manual:

- Illustrations of DDX7051BT are mainly used for explanation. The displays and panels shown in this manual are examples used to provide clear explanations of the operations. For this reason, they may be different from the actual displays or panels.
- This manual mainly explains operations using the buttons on the monitor panel and touch panel. For operations using the remote controller (RC-DV340: supplied only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT), see page 74.
- < > indicates the various screens/menus/operations/settings that appear on the touch panel.
- [ ] indicates the buttons on the touch panel.
- **Indication language:** English indications are used for the purpose of explanation. You can select the indication language from the <Setup> menu. (Page 73)
- Updated information (the latest Instruction Manual, system updates, new functions, etc.) is available from <<http://www.kenwood.com/cs/ce/>>.

# BEFORE USE

## IMPORTANT

 
To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe WARNINGS and CAUTIONS in this manual. Please keep the manual in a safe and accessible place for future reference.

## ⚠ WARNINGS: (To prevent accidents and damage)

- DO NOT install any unit or wire any cable in a location where;
  - it may obstruct the steering wheel and gearshift lever operations.
  - it may obstruct the operation of safety devices such as air bags.
  - it may obstruct visibility.
- DO NOT operate the unit while driving. If you need to operate the unit while driving, be sure to look around carefully.
- The driver must not watch the monitor while driving.

## For DDX417BT:

### The marking of products using lasers



The label is attached to the chassis/case and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

## BEFORE USE

For DDX794/DDX774BH/DDX594/DDX574BH/DDX394:

### ⚠ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, the following are reproductions of labels on, or inside the product relating to laser product safety.

JVC KENWOOD Corporation  
2967-3, ISHIKAWA-MACHI, HACHIOJI-SHI, TOKYO, JAPAN

THIS PRODUCT COMPLIES WITH DHHS RULES 21CFR  
SUBCHAPTER J IN EFFECT AT DATE OF MANUFACTURE.

Location : Top plate

### FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### FCC NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

For DDX794/DDX774BH/DDX594/DDX574BH/  
DDX394:

### IC (Industry Canada) Notice

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### CAUTION

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.

- Contains Transmitter Module  
FCC ID : ZWY8350X (for DDX794/DDX774BH/  
DDX594/DDX574BH)/ZWY8811X (for DDX394)
- Contains Transmitter Module  
IC: 12033A-8350X (for DDX794/DDX774BH/  
DDX594/DDX574BH)/12033A-8811X (for DDX394)

### ⚠ Cautions on the monitor:

- The monitor built into this unit has been produced with high precision, but it may have some ineffective dots. This is inevitable and is not considered defective.
- Do not expose the monitor to direct sunlight.
- Do not operate the touch panel using a ball-point pen or similar tool with a sharp tip. Touch the buttons on the touch panel with your finger directly (if you are wearing a glove, take it off).

- When the temperature is very cold or very hot...
  - Chemical changes occur inside, causing malfunction.
  - Pictures may not appear clearly or may move slowly. Pictures may not be synchronized with the sound or picture quality may decline in such environments.

### For safety...

- Do not raise the volume level too much, as this will make driving dangerous by blocking outside sounds, and may cause hearing loss.
- Stop the car before performing any complicated operations.

### Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

### ❑ How to reset your unit

If the unit fails to operate properly, press the reset button.

**DDX7051BT/DDX794/DDX774BH**



**DDX751WBTL**



**DDX594/DDX574BH/DDX517BT/DDX417BT/  
DDX394**



# INITIAL SETTINGS


## Initial setup

When you power on the unit for the first time or reset the unit, the initial setting screen appears.

- You can also change the settings on the **<Setup>** screen. (Page 70)

### 1 Perform the initial settings.

- You can change the page to display more items by pressing [**▲**]/[**▼**].

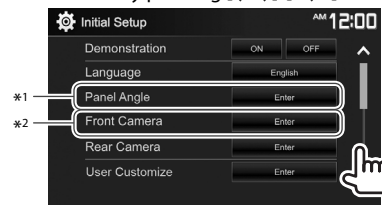

**<Demonstration>** Activate or deactivate the display demonstration. (Page 72)

**<Language>** Select the text language used for on-screen information. (Page 73)

- Set **<GUI Language>** to display the operation buttons and menu items in the selected language (**[Local]**) or English (**[English]**).

**<Panel Angle>**\*1 Adjust the panel angle. (Page 10)

**<Front Camera>**\*2 Configure the settings to display the picture from the connected front view camera. (Page 47)

**<Rear Camera>** (Page 47)

Configure the settings to display the picture from the connected rear view camera.

**<User Customize>** (Page 66)

Change the display design.

**<Viewing Angle>** (Page 72)

Select the viewing angle in relation to the monitor panel to make the panel easier to see.

### 2 Finish the procedure.

- You can change the page to display more items by pressing [**▲**]/[**▼**].



The Home screen is displayed.

\*1 Only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL.

\*2 Only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394.

## Setting the security function

### ❑ Registering a security code (only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT)

You can set a security code to protect your receiver system against theft.

#### 1 Display the Home screen.

On the monitor panel:

**DDX7051BT**




**DDX751WBTL**



**DDX517BT/DDX417BT**



#### 2 Display the **<System>** setting screen.

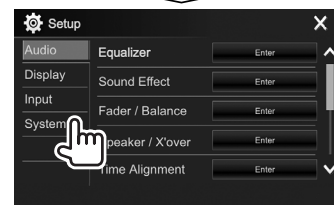





## INITIAL SETTINGS

### 3 Display the <Security Code Set> screen.

- You can change the page to display more items by pressing [**▲**]/[**▼**].

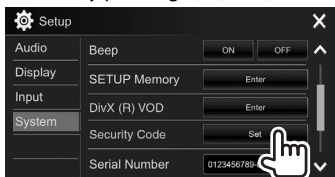

### 4 Enter a four-digit number (①), then confirm the entry (②).

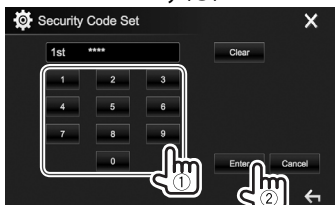

- Press [**Clear**] to delete the last entry.
- Press [**Cancel**] to cancel the setting.
- Press [**X**] to return to the current source control screen.

### 5 Repeat step 4 to confirm your security code.

Now, your security code is registered.

- To clear the registered security code, perform steps 1 and 2.  
On step 3, press [**CLR**] to display <Security Code> screen. Then, enter the current security code to clear and press [**Enter**].
- When the unit has been reset or disconnected from the battery, you are required to enter the security code. Enter the correct security code, then press [**Enter**].


### ❑ Activating the security function (only for DDX594/DDX574BH/DDX517BT/DDX417BT/DDX394)

You can activate the security function to protect your receiver system against theft.


#### 1 Display the <System> setting screen.

On the Home screen:

- You can change the page to display more items by pressing [**▲**]/[**▼**].

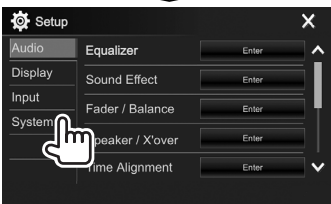

#### 2

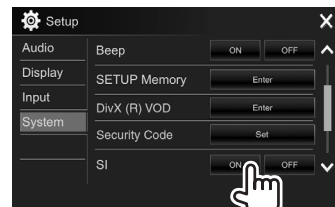

The security function is activated.

The security indicator on the monitor panel flashes when the vehicle ignition is off.

**To deactivate the security function:** Select [**OFF**] for <SI>.

## INITIAL SETTINGS

### Clock settings

#### 1 Display the Home screen.


 
 
On the monitor panel:  
**DDX7051BT/DDX794/  
DDX774BH**

**DDX751WBTL**

**DDX594/DDX574BH/  
DDX517BT/DDX417BT/  
DDX394**




#### 2 Display the <Clock> screen.

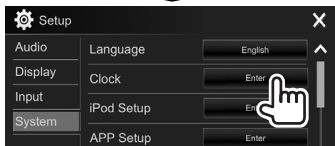

- You can also display the <Clock> setting screen by touching the clock area on the Home screen.

#### 3 Set the clock time.

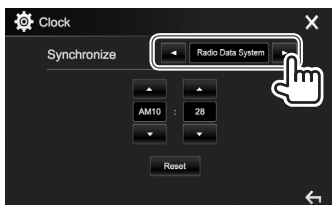

**<NAV>\*** Synchronizes the clock time with the connected navigation unit.


**<Radio Data System>** Synchronizes the clock time with FM RBDs.

**<OFF>** Sets the clock manually. (See below.)


When selecting **<OFF>**:

Adjust the hour (①), then adjust the minute (②).

- Press **[Reset]** to set the minute to "00".

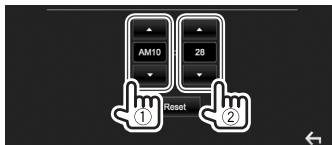

#### 4 Finish the procedure.

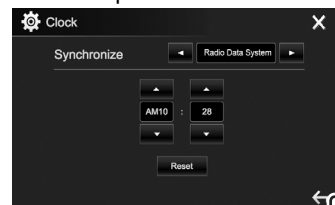

- \* Only for DDX7051BT/DDX751WBTL/DDX517BT: Appears only when a navigation unit is connected.


# BASICS

## Component names and functions

### ⚠ Caution on the volume setting:

Digital devices produce very little noise compared with other sources. Lower the volume before playing these digital sources to avoid damaging the speakers by sudden increase of the output level.

### DDX7051BT/DDX794/DDX774BH

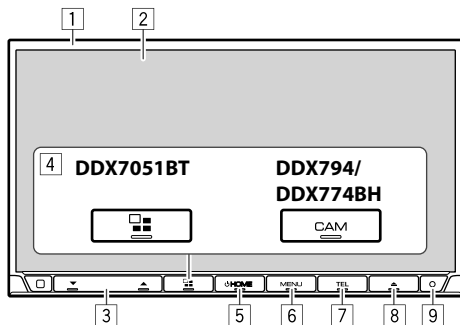


- 1 Monitor panel\*
- 2 Screen (touch panel)
- 3 VOLUME ▼/▲ buttons  
Adjusts the audio volume. (Page 9)
- 4 For DDX7051BT: /CAMERA button
  - Displays the “**Mirroring**” source control screen. (Press) (Page 26)
  - Displays the picture from the connected camera. (Hold) (Page 48)
 For DDX794/DDX774BH: CAM/DISP OFF button
  - Displays the picture from the connected camera. (Press) (Page 48)
  - Turns off the screen. (Hold) (Page 10)

- 5 HOME button
  - Displays the Home screen. (Press) (Page 11)
  - Turns on the power. (Press) (Page 9)
  - Turns off the power. (Hold) (Page 9)
- 6 MENU/ATT button
  - Pops up the short-cut menu. (Press) (Page 13)
  - Attenuates the sound. (Hold) (Page 9)
- 7 TEL/VOICE button
  - Displays the phone control screen. (Press) (Page 57)
  - Activates voice dialing. (Hold) (Page 58)
- 8 (Eject) button
  - Ejects the disc. (Tilts the monitor panel fully.) (Page 14)
  - Opens/closes the monitor panel.
- 9 Reset button  
Resets the unit. (Page 3)

\* You can change the color of the buttons on the monitor panel. (Page 66)

### DDX751WBTL

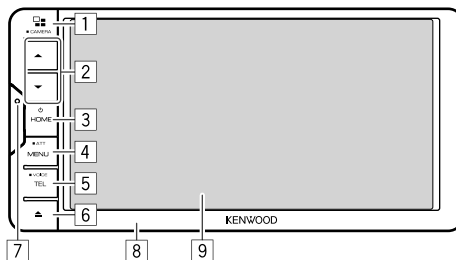


- 1 /CAMERA button
  - Displays the “**Mirroring**” source control screen. (Press) (Page 26)
  - Displays the picture from the connected camera. (Hold) (Page 48)
- 2 VOLUME ▼/▲ buttons  
Adjusts the audio volume. (Page 9)
- 3 HOME/ button
  - Displays the Home screen. (Press) (Page 11)
  - Turns on the power. (Press) (Page 9)
  - Turns off the power. (Hold) (Page 9)
- 4 MENU/ATT button
  - Pops up the short-cut menu. (Press) (Page 13)
  - Attenuates the sound. (Hold) (Page 9)
- 5 TEL/VOICE button
  - Displays the phone control screen. (Press) (Page 57)
  - Activates voice dialing. (Hold) (Page 58)
- 6 (Eject) button
  - Ejects the disc. (Tilts the monitor panel fully.) (Page 14)
  - Opens/closes the monitor panel.
- 7 Reset button  
Resets the unit. (Page 3)
- 8 Monitor panel\*
- 9 Screen (touch panel)

\* You can change the color of the buttons on the monitor panel. (Page 66)

Continued on the next page...

## BASICS

### DDX594/DDX574BH/DDX394

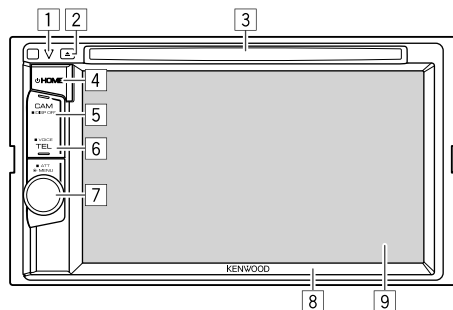


- 1 Reset button/Power indicator/Security indicator
  - Resets the unit. (Page 3)
  - Lights up while the unit is turned on.
  - Flashes when the security function is activated. (Page 5)
- 2 ▲ (Eject) button  
Ejects the disc. (Page 14)
- 3 Loading slot
- 4 ⏻ HOME button
  - Displays the Home screen. (Press) (Page 11)
  - Turns on the power. (Press) (Page 9)
  - Turns off the power. (Hold) (Page 9)
- 5 CAM/DISP OFF button
  - Displays the picture from the connected camera. (Press) (Page 48)
  - Turns off the screen. (Hold) (Page 10)

- 6 TEL/VOICE button
  - Displays the phone control screen. (Press) (Page 57)
  - Activates voice dialing. (Hold) (Page 58)
- 7 Volume/MENU/ATT knob
  - Adjusts the audio volume. (Turn) (Page 9)
  - Pops up the short-cut menu. (Press) (Page 13)
  - Attenuates the sound. (Hold) (Page 9)
- 8 Monitor panel\*
- 9 Screen (touch panel)

\* You can change the color of the buttons on the monitor panel. (Page 66)

### DDX517BT/DDX417BT

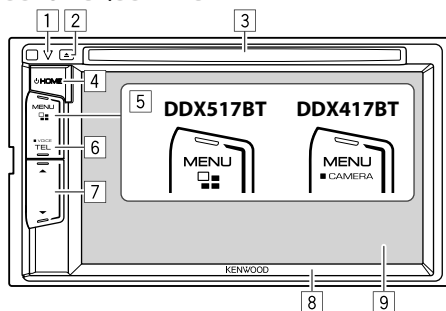

- 1 Reset button/Power indicator/Security indicator
  - Resets the unit. (Page 3)
  - Lights up while the unit is turned on.
  - Flashes when the security function is activated. (Page 5)
- 2 ▲ (Eject) button  
Ejects the disc. (Page 14)
- 3 Loading slot
- 4 ⏻ HOME button
  - Displays the Home screen. (Press) (Page 11)
  - Turns on the power. (Press) (Page 9)
  - Turns off the power. (Hold) (Page 9)
- 5 For DDX517BT: MENU/☐ button
  - Pops up the short-cut menu. (Press) (Page 13)
  - Displays the **"Mirroring"** source control screen. (Hold) (Page 26)
- For DDX417BT: MENU/CAMERA button
  - Pops up the short-cut menu. (Press) (Page 13)
  - Displays the picture from the connected camera. (Hold) (Page 48)
- 6 TEL/VOICE button
  - Displays the phone control screen. (Press) (Page 57)
  - Activates voice dialing. (Hold) (Page 58)
- 7 Volume ▼/▲ buttons  
Adjusts the audio volume. (Page 9)
- 8 Monitor panel\*
- 9 Screen (touch panel)

\* You can change the color of the buttons on the monitor panel. (Page 66)

## BASICS

### Common operations

#### Turning on the power

DDX7051BT/DDX794/  
DDX774BH



DDX751WBTL



DDX594/DDX574BH/  
DDX517BT/DDX417BT/  
DDX394



#### Turning off the power

 
DDX7051BT/DDX794/  
DDX774BH



DDX751WBTL




DDX594/DDX574BH/  
DDX517BT/DDX417BT/  
DDX394




#### Adjusting the volume

To adjust the volume (00 to 35)

 
DDX7051BT/  
DDX794/DDX774BH



DDX751WBTL

 


DDX517BT/  
DDX417BT

 

Press ▲ to increase, and press ▼ to decrease.

- Holding ▲ increases the volume continuously to level 15.

 DDX594/DDX574BH/  
DDX394



Turn to the right to increase, and turn to the left to decrease.

To attenuate the sound (only for DDX7051BT/  
DDX794/DDX774BH/DDX751WBTL/DDX594/  
DDX574BH/DDX394)

DDX7051BT/DDX794/  
DDX774BH



DDX751WBTL



DDX594/DDX574BH/  
DDX394






The ATT indicator lights up.

**To cancel the attenuation:** Press the same button again.


## BASICS
 
### ❑ Adjusting the panel angle (only for DDX7051BT/DDX794/DDX774BH/DDX751WBT)

- 1 Display the <Angle Adjust> screen.  
On the Home screen:  
  - You can change the page to display more items by pressing [**▲**]/[**▼**].

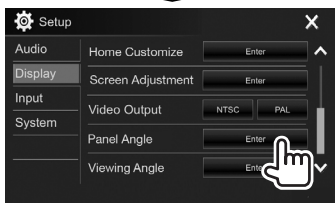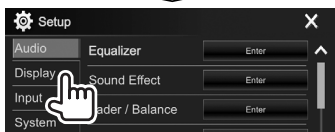


- 2 Select an angle (0 – 6).

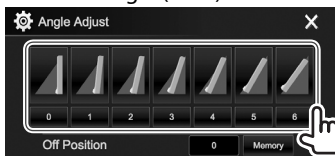



- To set the current position as the power off position, select [**Memory**].

### ❑ Putting the unit in standby

 - 1 Display all playback sources and items.  
On the Home screen:



- 2

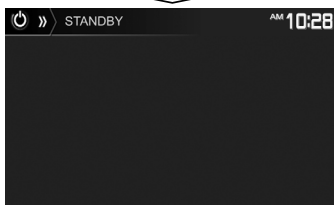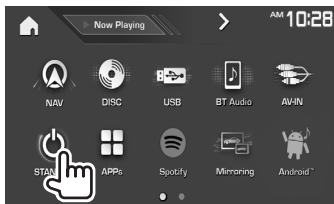

### ❑ Turning off the screen

On the pop-up short-cut menu (Page 13):  
Display the pop-up short-cut menu by pressing MENU on the monitor panel, then select [**Display OFF**].



On the monitor panel (only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394):

#### DDX794/DDX774BH



#### DDX594/DDX574BH/DDX394



**To turn on the screen:** Press and hold the same button, or touch the display.

## Common screen operations


### ❑ Common screen descriptions

You can display other screens at any time to change the source, show the information, or change the settings, etc.

#### Source control screen

Performs source playback operations.

- The operation buttons and information displayed vary depending on the selected source.

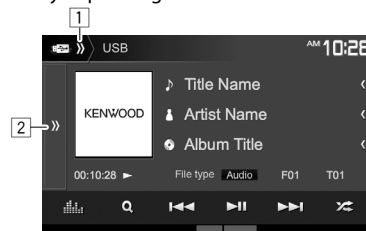

## BASICS

### Common operating buttons:

- 1 Displays/hides short-cut source selection buttons. (Page 13)
- 2 Displays the other operation button window.\*

\* Does not appear when there are no other operation buttons other than those currently shown on the source control screen.

### Home screen

Displays the source control screen and settings screen.

- To display the Home screen, press **HOME** on the monitor panel.
- You can arrange the items to display on the Home screen. (Page 68)




### Common operating buttons:

- 1 Displays all playback sources and items. (Page 12)
- 2 Displays the source currently played back.
- 3 Displays the **<Setup>** screen. (See the right column.)
- 4 Changes the playback source. (Page 12)
- 5 Displays the **<Clock>** setting screen. (Page 6)

### <Setup> screen


Changes the detailed settings. (Page 70)

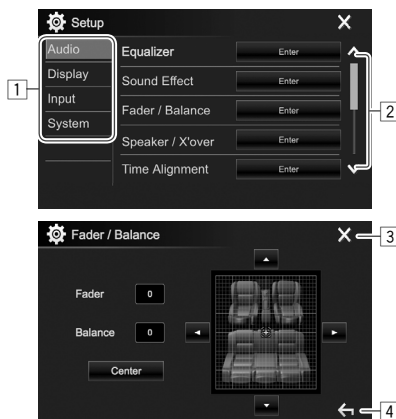


### Common operating buttons:

- 1 Selects the menu category.
- 2 Changes the page.
- 3 Closes the current setting screen and returns to the current source control screen.
- 4 Returns to the previous screen.


### Touch screen operations

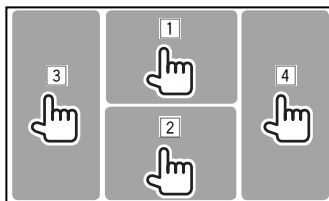

- 1 Displays the video control menu while playing a video.\*1

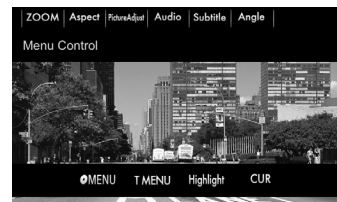

- 2 Displays the source control screen while playing a video.

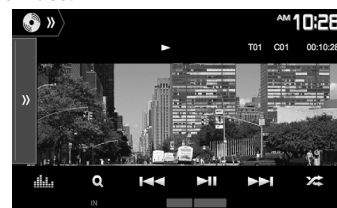

- The operation buttons disappear when the screen is touched or when no operation is done for about 5 seconds.
- 3 Goes to the previous chapter/track.\*2
- 4 Goes to the next chapter/track.\*2




\*1 The video control menu is not available when selecting **"Mirroring"** as the source. The video control menu is also not available for some devices connecting to the HDMI/MHL input terminal with **"APPs"** selected.

\*2 Not available for video from an external component.


## BASICS
 
### Selecting the playback source

On the Home screen:

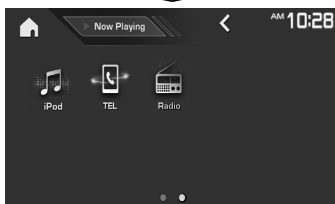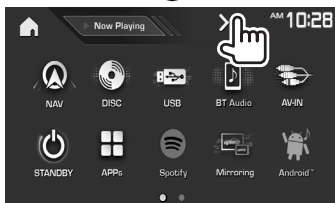

 - You can change the page to display more items by pressing [◀]/[▶].
  - The current page is indicated by the page indicator at the bottom of the screen.



[NAV]\*<sup>1</sup>

Displays the navigation screen when a navigation unit is connected. (Page 52)

[DISC]

Plays a disc. (Page 14)

[USB]

Plays files on a USB device. (Page 19)

[BT Audio]

Plays a Bluetooth audio player. (Page 59)

[AV-IN]\*<sup>2</sup>

Switches to an external component connected to the iPod/AV-IN input terminal. (Page 50)

[SiriusXM]\*<sup>3</sup>

Switches to the SiriusXM® radio broadcast. (Page 39)

[OEM Features]\*<sup>3</sup> Switches to the source connected via ADS adapter. (Page 51)

[STANDBY]

Puts the unit in standby. (Page 10)

[APPS]

Switches to the App screen from the connected iPod touch/iPhone/Android device. (Page 26)

[iHeartRadio]\*<sup>3</sup>

Switches to the iHeartRadio broadcast. (Page 29)

[Spotify]

Switches to the Spotify application. (Page 31)

[PANDORA]\*<sup>3</sup>

Switches to the Pandora broadcast. (Page 27)

[Mirroring]\*<sup>1</sup>

Plays a device connected to the HDMI/MHL input terminal. (Page 51)

[Android™]

Plays an Android device. (Page 21)

[iPod]

Plays an iPod/iPhone. (Page 22)

[TEL]

Displays the phone control screen. (Page 57)


[HD Radio]\*<sup>4</sup>

Switches to the HD Radio broadcast. (Page 33)

[Radio]\*<sup>5</sup>

Switches to the conventional radio broadcast. (Page 37)

### To return to the Home screen

 

\*<sup>1</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT.

\*<sup>2</sup> Selectable only when connection method other than [USB + AV-IN] is selected for <iPod Setup>. (Page 23)

\*<sup>3</sup> Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

\*<sup>4</sup> Only for DDX794/DDX774BH/DDX594/DDX574BH.

\*<sup>5</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT/DDX394.

### Selecting the playback source on the Home screen



- You can arrange the items to display on the Home screen. (Page 68)



## BASICS


### Using short-cut buttons

#### Using short-cut source selection buttons


While displaying the source control screen, you can use the short-cut buttons to go to the items on the Home screen indicated below.



**To display the short-cut source selection buttons**  
On the source control screen:

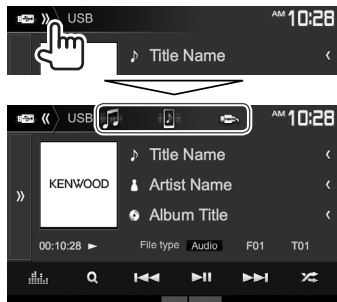

#### To hide the short-cut buttons

 

#### Using the pop-up short-cut menu

While displaying the source control screen, you can jump to another screen from the pop-up short-cut menu.

##### 1 Display the pop-up short-cut menu.

**DDX7051BT/DDX794/  
DDX774BH**

**DDX751WBTL**


**DDX594/DDX574BH/  
DDX394**

**DDX517BT**

**DDX417BT**



##### 2 Select an item to jump to.

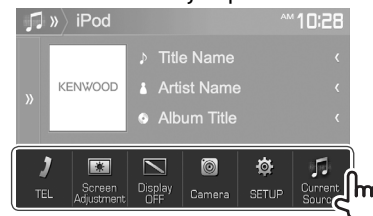

- |                            |   |
|----------------------------|---|
| <b>[TEL]</b>               | Displays the phone control screen. (Page 57)              |
| <b>[Screen Adjustment]</b> | Displays the picture adjustment screen. (Page 65)         |
| <b>[Display OFF]</b>       | Turns off the screen. (Page 10)                           |
| <b>[Camera]</b>            | Displays the picture from the connected camera. (Page 48) |
| <b>[SETUP]</b>             | Displays the <Setup> screen. (Page 70)                    |
| <b>[Current Source]</b>    | Displays the current source control screen.               |

**To close the pop-up menu:** Touch the screen anywhere other than the pop-up short-cut menu.

# DISCS


 
## Playing a disc

- If a disc does not have a disc menu, all tracks on it will be played repeatedly until you change the source or eject the disc.
- For playable disc types/file types, see page 86.



### ❑ Inserting a disc

Insert a disc with the label side facing up.


**DDX7051BT/  
DDX794/  
DDX774BH**

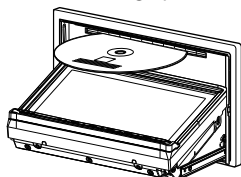


**DDX751WBTL**

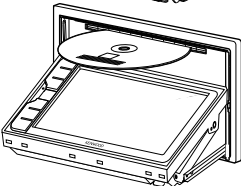 

**DDX594/DDX574BH/  
DDX394**


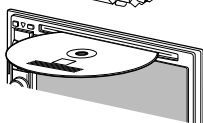


**DDX517BT/DDX417BT**

 

The source changes to “**DISC**” and playback starts.

 
 
- The IN indicator lights up while a disc is inserted.

- If “” appears on the screen, the unit cannot accept the operation you have tried to do.
  - In some cases, without showing “,” operations will not be accepted.
- When playing back a multi-channel encoded disc, the multi-channel signals are downmixed to stereo.

### ❑ Ejecting a disc

  **DDX7051BT/DDX794/  
DDX774BH**


**DDX751WBTL**



**DDX594/DDX574BH/  
DDX517BT/DDX417BT/  
DDX394**


- When removing a disc, pull it horizontally.
- You can eject a disc when playing another AV source.
- If the ejected disc is not removed within 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust.

### Closing the monitor panel (only for DDX7051BT/ DDX794/DDX774BH/DDX751WBTL)

 After removing the disc, press  on the monitor panel. The monitor panel closes.

## Playback operations

 - When the operation buttons are not displayed on the screen, touch the area shown on the illustration.
- To change settings for video playback, see page 65.



### ❑ Indications and buttons on the source control screen

For video playback



### Playback information

- The information displayed on the screen differs depending on the type of disc/file being played back.

- 1 Media type
- 2 Playback status
- 3 Current playback item information (title no./chapter no./folder no./file no./track no.)
- 4 Playing time
- 5 IN indicator
- 6 Playback mode (Page 17)
- 7 File type

## DISCS

### Operation buttons

- Available buttons on the screen and operations differ depending on the type of disc/file being played back.
- [>>] Displays the other operation button window.
- To hide the window, press [<<].
- [BALANCE] Displays the <Equalizer> screen. (Page 62)
- [Q] Displays the folder/track list. (Page 16)
- [<<<] [>>>]
  - Selects a chapter/track. (Press)
  - Reverse/forward search. (Hold)
  - Plays in slow-motion during pause. (Hold)
- [▶▶] Starts/pauses playback.
- [◀▶] Selects Random playback mode. (Page 17)
- [FOLDER] [FOLDER+] Selects a folder.
- [REPEAT] Selects Repeat playback mode. (Page 17)
- [STOP] Stops playback.
- [MODE] Changes the settings for disc playback on the <DISC Mode> screen. (Page 18)

### For audio playback



### Playback information

- The information displayed on the screen differs depending on the type of disc/file being played back.
- Media type
  - Track/file information
    - Pressing [<] scrolls the text if not all of the text is shown.
  - Playing time
  - IN indicator
  - Playback status
  - Playback mode (Page 17)
  - File type
  - Current playback item information (folder no./file no./track no.)


### Operation buttons

- Available buttons on the screen and operations differ depending on the type of disc/file being played back.
- [>>] Displays the other operation button window.
- To hide the window, press [<<].
- [BALANCE] Displays the <Equalizer> screen. (Page 62)
- [Q] Displays the folder/track list. (Page 16)
- [<<<] [>>>]
  - Selects a track. (Press)
  - Reverse/forward search. (Hold)
- [▶▶] Starts/pauses playback.
- [STOP] Stops playback.
- [◀▶] Selects Random playback mode. (Page 17)
- [FOLDER] [FOLDER+] Selects a folder.
- [REPEAT] Selects Repeat playback mode. (Page 17)
- [MODE] Changes the settings for disc playback on the <DISC Mode> screen. (Page 18)

## DISCS

### ❑ Selecting a folder/track on the list

1

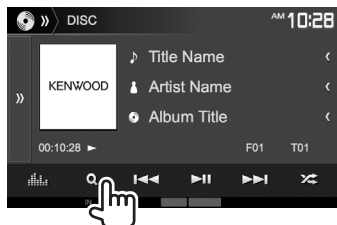

2 Select the folder (①), then the item in the selected folder (②).

- Repeat the procedure until you select the desired track.




- You can change the page to display more items by pressing [▲]/[▼].
- Press [⏮] to return to the root folder.
- Press [⏮] to return to the upper layer.

### ❑ Video menu operations

You can display the video control menu during video playback.

- The operation buttons disappear when the screen is touched or when no operation is done for about 5 seconds.

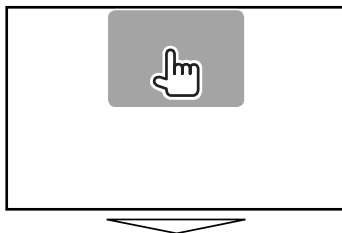

#### For video playback except VCD



- Available buttons on the screen and operations differ depending on the type of disc/file being played back.

[O MENU]

[T MENU]

[Highlight]

Displays the disc menu (DVD).

Displays the disc menu (DVD).

Switches to the direct disc menu mode. Touch the target item to select.

- To restore the screen, press [←].

[CUR]

Displays the menu/scene selection screen.

- [▲] [▼] [◀] [▶]: Selects an item.
- [Enter]: Confirms the selection.
- [Return]: Returns to the previous screen.

[ZOOM]

Displays the picture size selection screen. (Page 66)

[Aspect]

Selects the aspect ratio. (Page 65)

[PictureAdjust]

Displays the picture adjustment screen. (Page 65)

[Audio]

Selects the audio type.

[Subtitle]

Selects the subtitle type.

[Angle]

Selects the view angle.

## DISCS

### For VCD



**[MENU]**

Displays the disc menu.

**[Audio]**

Selects the audio channel (ST: stereo, L: left, R: right).

**[Direct]**

Displays/hides the direct selection buttons. (See the right column.)

**[Return]**

Displays the previous screen or menu.

**[ZOOM]**

Displays the picture size selection screen. (Page 66)

**[Aspect]**


Selects the aspect ratio. (Page 65)

**[PictureAdjust]**

Displays the picture adjustment screen. (Page 65)

### To select a track directly on a VCD


- When playing a VCD with PBC activated, stop playback to deactivate the PBC function, then use the direct selection buttons to select a track number.

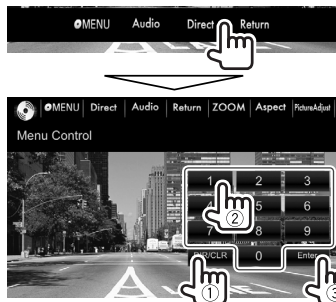

- When you enter a wrong number, press **[DIR/CLR]** to delete the last entry.

### ❑ Selecting playback mode

#### To select Repeat playback mode

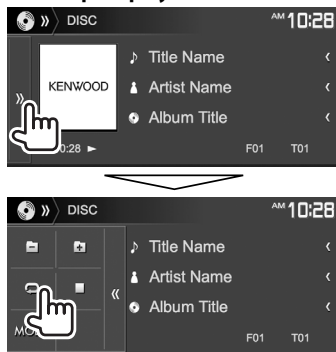

### To select Random playback mode



- The locations of the buttons differ depending on the type of disc/file being played back.
  - When **[PBC]** is not displayed, display the other operation button window by pressing **[>>]**.
- Available playback modes differ depending on the type of disc/file being played back.
- You cannot activate the repeat mode and the random mode at the same time.
- Each time you press the button, the playback mode changes. (The corresponding indicator lights up.)
  - Available items differ depending on the type of disc/file being played back.

**C-REP** Repeats current chapter.

**T-REP** Repeats current title/program.

**REP** Repeats current track.

**FO-REP** Repeats all tracks of the current folder.

**FO-RDM** Randomly plays all tracks of the current folder, then tracks of the next folders.



**RDM** Randomly plays all tracks.

**To cancel Repeat/Random playback:** Press the button repeatedly until the indicator disappears.

## DISCS

### Settings for disc playback—<DISC Mode>

1

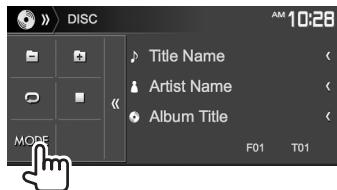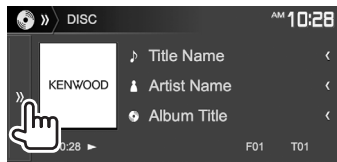


2



- You can change the page to display more items by pressing [**▲**]/[**▼**].
- Available items shown on the <DISC Mode> screen differ depending on the type of disc/file being played back.

### Setting items

<Menu Language>	Select the initial disc menu language. (Initial: <b>English</b> ) (Page 88)
<Subtitle Language>	Select the initial subtitle language or turn subtitles off ( <b>Off</b> ). (Initial: <b>English</b> ) (Page 88)
<Audio Language>	Select the initial audio language. (Initial: <b>English</b> ) (Page 88)
<Dynamic Range Control>	You can change the dynamic range while playing using Dolby Digital software. <ul style="list-style-type: none"> <li>• <b>Wide</b>: Select this to enjoy a powerful sound at a low volume level with its full dynamic range.</li> <li>• <b>Normal</b>: Select this to reduce the dynamic range a little.</li> <li>• <b>Dialog</b> (Initial): Select this to reproduce movie dialog more clearly.</li> </ul>

<Down Mix>	When playing back a multi-channel disc, this setting affects the signals reproduced through the front and/or rear speakers. <ul style="list-style-type: none"> <li>• <b>Dolby Surround</b>: Select this to enjoy multi-channel surround sound by connecting an amplifier compatible with Dolby Surround.</li> <li>• <b>Stereo</b> (initial): Normally select this.</li> </ul>
<Screen Ratio>	Select the monitor type to watch a wide screen picture on the external monitor. <p><b>16:9</b> (Initial)   <b>4:3 LB</b>   <b>4:3 PS</b></p> 
<File Type>*	Select the playback file type when a disc contains different types of files. <ul style="list-style-type: none"> <li>• <b>Audio</b>: Plays back audio files.</li> <li>• <b>Still Image</b>: Plays back picture files.</li> <li>• <b>Video</b>: Plays back video files.</li> <li>• <b>Audio&amp;Video</b> (initial): Plays back audio files and video files.</li> </ul>

\* For playable file types, see page 86.  
If the disc contains no files of the selected type, the existing files are played in the following priority: audio, video, then still picture. You can change these settings only while playback is stopped.

# USB

## Connecting a USB device

You can connect a USB mass storage class device such as a USB memory, Digital Audio Player etc. to the unit.

- For details about connecting USB devices, see page 82.
- You cannot connect a computer or portable HDD to the USB input terminal.
- You cannot connect a USB device via a USB hub.
- For playable file types and notes on using USB devices, see page 87.

### When a USB device is connected...

 
The source changes to “USB” and playback starts.

- All tracks in the USB device will be played repeatedly until you change the source.


## Playback operations

When the operation buttons are not displayed on the screen, touch the area shown on the illustration.

- To change settings for video playback, see page 65.



### Indications and buttons on the source control screen

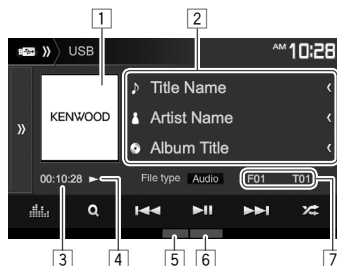

#### Playback information

- The information displayed on the screen differs depending on the type of file being played back.
- Jacket picture (Shown while playing if the file has tag data that includes the jacket picture)
  - Track/file information
    - Pressing [**<**] scrolls the text if not all of the text is shown.
  - Playing time
  - Playback status
  - Playback mode (See the right column.)
  - File type
  - Current playback item information (folder no./file no.)

## Operation buttons

- Available buttons on the screen and operations differ depending on the type of file being played back.

- [>>] Displays the other operation button window.
  - To hide the window, press [**<<<**].
- [Audio]/[Video]/[Photo] Selects the playback file type.\*1
  - **Audio**: Plays back audio files.
  - **Video**: Plays back video files.
  - **Photo**: Plays back picture files.
- [Bar Graph] Displays the **<Equalizer>** screen. (Page 62)
- [Q] Displays the folder/track list. (Page 20)
- [<<<] Selects a track. (Press)
- [>>>] Reverse/forward search. (Hold)
- [II] Starts/pauses playback.
- [Circular Arrow] Selects random playback mode.\*2 \*3
  - **FO-RDM**: Randomly plays all tracks/files in the folder.
  - **RDM**: Randomly plays all tracks/files.
- [Folder Icon] [Folder Icon] Selects a folder.
- [Repeat Icon] Selects repeat playback mode.\*2 \*3
  - **REP**: Repeats the current track/file.
  - **FO-REP**: Repeats all tracks/files in the current folder.
- [MODE] Changes the settings for USB playback on the **<USB Mode>** screen. (Page 20)

\*1 For playable file types, see page 87.

If the USB contains no files of the selected type, the existing files are played in the following priority: audio, video, then still picture. You can change these settings only while playback is stopped.



\*2 To cancel random or repeat mode, press the button repeatedly until the indicator disappears.

\*3 You cannot activate the repeat mode and the random mode at the same time.


## USB

### ❑ Settings for USB playback—<USB Mode>

1

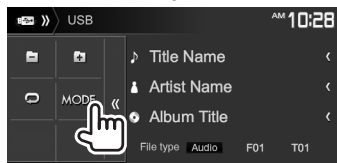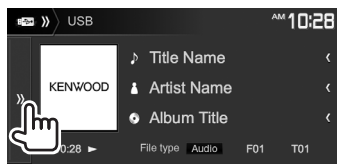

2

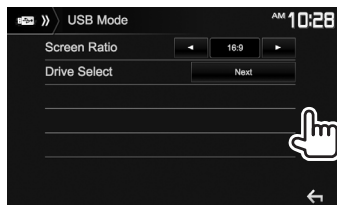

#### <Screen Ratio>

Select the monitor type to watch a wide screen picture on the external monitor.

16:9 (Initial) 4:3 LB 4:3 PS



#### <Drive Select>

Switches between internal memory and the memory source of the connected device (such as mobile phone). Press [Next].


### ❑ Selecting a folder/track on the list

1 Display the folder/track list during playback.



2 Select the folder (①), then the item in the selected folder (②).

- Repeat the procedure until you select the desired track.

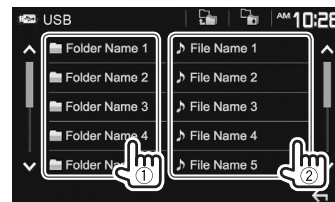

- You can change the page to display more items by pressing [▲]/[▼].
- Press [⏮] to return to the root folder.
- Press [⏪] to return to the upper layer.



# Android

## Preparation

### ❑ Installing KENWOOD Music Play

Install the Android™ application KENWOOD Music Play on your Android device beforehand.

- When a compatible Android device is connected, "Press [VIEW] to install KENWOOD MUSIC PLAY APP" is shown on the Android device. Follow the instructions to install the application. You can also install the latest version of the KENWOOD Music Play application on your Android device before connecting.

### About KENWOOD Music Play

- This unit supports the Android™ application KENWOOD Music Play.
- When you use KENWOOD Music Play, you can search for audio files by Genre, Artist, Album, Playlist, and Song.
- KENWOOD Music Play is available on the following web site: <[www.kenwood.com/cs/ce/](http://www.kenwood.com/cs/ce/)>

### ❑ Connecting an Android device

Connect an Android device with a cable.

- For details about connecting Android devices, see page 83.

### Compatible Android devices

- This unit supports Android OS 4.1 and above.
- Some Android devices (with OS 4.1 and above) may not fully support Android Open Accessory (AOA) 2.0.
- If the Android device supports both mass storage class device and AOA 2.0, this unit always plays back via AOA 2.0 as priority.
- For more information and the latest compatible list, see: <[www.kenwood.com/cs/ce/](http://www.kenwood.com/cs/ce/)>

### ❑ Starting playback

- 1 Start KENWOOD Music Play on your Android device.
- 2 Select "Android™" as the source. (Page 12)

## Playback operations

### ❑ Indications and buttons on the source control screen



### Playback information

- 1 Artwork (Shown if the song contains artwork)
- 2 Track information
  - Pressing [<] scrolls the text if not all of the text is shown.
- 3 Playing time
- 4 Playback status
- 5 Playback mode (See the right column.)
- 6 Track no./Total track number


### Operation buttons

- [>>]
- Displays the other operation button window.
- To hide the window, press [<<].
- [📊]
- Displays the <Equalizer> screen. (Page 62)
- [Q]
- Displays the audio menu. (Page 22)
- [⏮] [⏭]
- Selects a track. (Press)
  - Reverse/forward search. (Hold)
- ▶||
- Starts/pauses playback.
- [🔀]
- Selects random playback mode.\*
- 🔄: Randomly plays all tracks.
  - 🔄 **Album**: Randomly plays all tracks in the current album.
- [🔄]
- Selects repeat playback mode.
- 🔄 1: Repeats the current track.
  - 🔄 **All**: Repeats all tracks.
  - 🔄: Cancels the repeat mode.
- [MODE]
- Changes the settings for Android playback on the <Android Mode> screen. (Page 22)


\* To cancel random mode, press the button repeatedly until the indicator disappears.

Android



Selecting a track from the menu

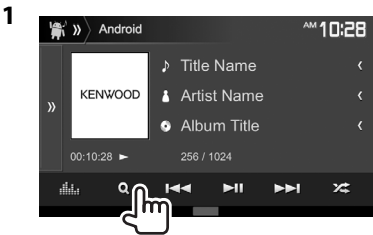

- 2 Select a category (①), then a desired item (②).
- To list the items in alphabetical order, press [Q A-Z], then select the first character on the keypad.
    - Alphabet search is not available when the playlist is selected.
  - Select an item in each layer until you reach and select the desired file.
  - You can change the page to display more items by pressing [▲]/[▼].
  - Press [⏮] to return to the top layer.
  - Press [⏮] to return to the upper layer.

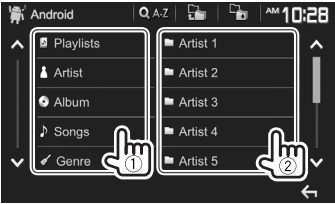

Settings for playback on the Android device—<Android Mode>

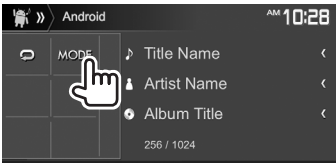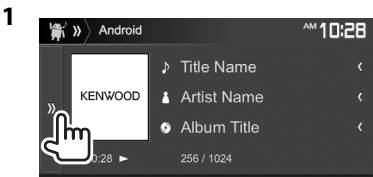

<Artwork>	Shows/hides artwork of the Android device.
<Android Setup>	<ul style="list-style-type: none"><li>• <b>BROWSE MODE:</b> Controls from the unit (using the KENWOOD Music Play application).</li><li>• <b>HAND MODE:</b> Controls other media player applications from the Android device (without using the KENWOOD Music Play application).<ul style="list-style-type: none"><li>– You can play/pause or skip files from the unit.</li></ul></li></ul>

iPod/iPhone

Preparation

Connecting iPod/iPhone

- For details about connecting iPod/iPhone, see page 82.
- For playable iPod/iPhone types, see page 87.

Connect your iPod/iPhone according to your purpose or the type of iPod/iPhone.

Wired connection

- **To listen to music:** Use USB Audio cable for iPod/iPhone.
  - For Lightning connector models: KCA-iP103 (optional accessory)
  - For 30-pin connector models: KCA-iP102 (optional accessory)
- **To watch video and listen to music:**
  - For Lightning connector models connected to DDX7051BT/DDX751WBT/DDX517BT: Use the HDMI cable KCA-HD100 (optional accessory) and KCA-iP103 (optional accessory) through a Lightning-Digital AV adapter (accessory of the iPod/iPhone).
  - For Lightning connector models connected to DDX794/DDX774BH/DDX594/DDX574BH/DDX417BT/DDX394: You cannot watch video.
  - For 30-pin connector models: Use USB Audio and Video cable for iPod/iPhone—KCA-iP202 (optional accessory).

## iPod/iPhone


### Bluetooth connection

Pair the iPod/iPhone through Bluetooth. (Page 53)


- For Lightning connector models connected to DDX7051BT/DDX751WBT/DDL517BT: To watch video, connect your iPod/iPhone to the HDMI/MHL input terminal using KCA-HD100 (optional accessory). (Page 82)
- For Lightning connector models connected to DDX794/DDX774BH/DDX594/DDX574BH/DDX417BT/DDX394 and 30-pin connector models: You cannot watch video with a Bluetooth connection.

### ❑ Selecting iPod/iPhone device to play and the connection method


- 1 Display the **<System>** setting screen. On the Home screen:

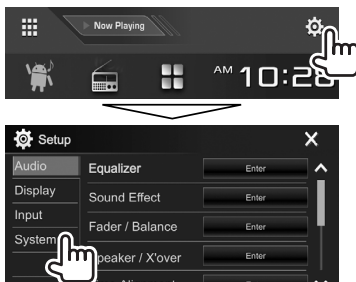

2

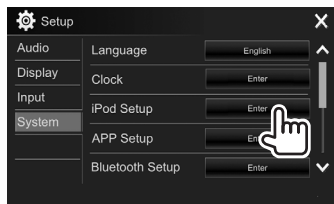

- 3 Select the connection method (①), then confirm the selection ([OK] or [Next]) (②).

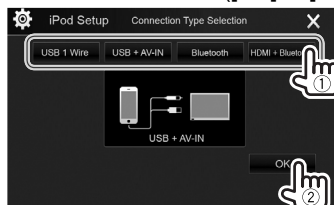

**[USB 1 Wire]** Select this when the iPod/iPhone is connected using KCA-iP102 or KCA-iP103 (optional accessory).


**[USB + AV-IN]** Select this when the iPod/iPhone is connected using KCA-iP202 (optional accessory).

**[Bluetooth]** Select this when the iPod/iPhone is connected via Bluetooth. (Go to step 4.)

### [HDMI + Bluetooth]\*

Select this when the iPod/iPhone is connected using HDMI cable KCA-HD100 (optional accessory) and KCA-iP103 (optional accessory) through a Lightning-Digital AV adapter (accessory of the iPod/iPhone). (Go to step 4.)

- 4 When selecting **[HDMI + Bluetooth]\*** or **[Bluetooth]** as the connection method: Select the device (①), then press [OK] to connect (②).



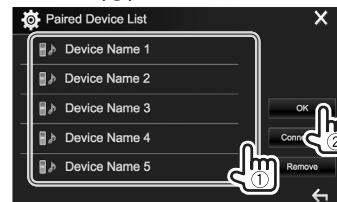


- If the device is already connected, skip step ①.

\* Appears only for DDX7051BT/DDX751WBT/DDL517BT.

## iPod/iPhone

### ❑ Displaying/hiding artwork of iPod/iPhone

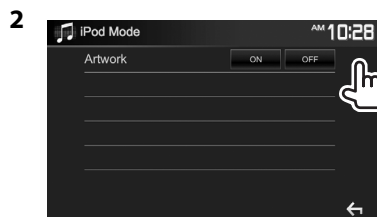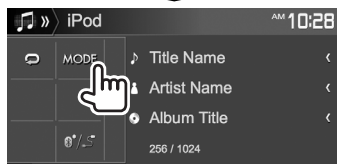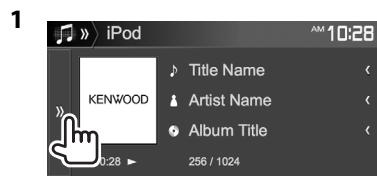


**[ON]** Shows artwork of iPod/iPhone.

**[OFF]** Hides artwork of iPod/iPhone.


### Playback operations

When the operation buttons are not displayed on the screen, touch the area shown on the illustration.

- To change settings for video playback, see page 65.

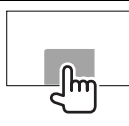

### ❑ Indications and buttons on the source control screen

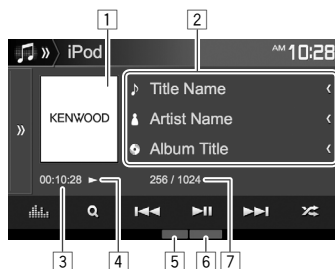

#### Playback information

- 1 Artwork (Shown if the song contains artwork)
- 2 Song/video information
  - Pressing [**<**] scrolls the text if not all of the text is shown.
- 3 Playing time
- 4 Playback status
- 5 Playback mode (See the right column.)
- 6 File type
- 7 Track no./Total track number

### Operation buttons


- [**>>**]
- Displays the other operation button window.
- To hide the window, press [**<<<**].
- [**||||**]
- Displays the **<Equalizer>** screen. (Page 62)
- [**Q**]
- Displays the audio/video file menu. (Page 25)
- [**⏮**] [**⏭**]
- Selects a track. (Press)
  - Reverse/forward search. (Hold)
- Starts/pauses playback.
- [**⏮**] [**⏭**]
- Selects random playback mode.\*
- **⏮**: Functions the same as Shuffle Songs.
  - **⏮** **Album**: Functions the same as Shuffle Albums.
- [**⏮**]
- Selects repeat playback mode.
- **⏮** ①: Functions the same as Repeat One.
  - **⏮** **All**: Functions the same as Repeat All.
  - **⏮**: Cancels the repeat mode.
- [**MODE**]
- Changes the settings for iPod/iPhone playback on the **<iPod Mode>** screen. (See the far left column.)
- [**⏮** / **⏭**]
- Switches the device on the **<iPod Setup>** screen. (Page 23)

\* To cancel random mode, press the button repeatedly until the indicator disappears.

## iPod/iPhone

### ❑ Selecting an audio/video file from the menu

1

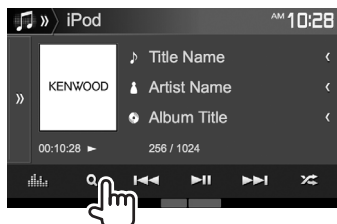


2 Select the menu (🎵): audio or (📺): video (①), a category (②), then a desired item (③).

- To list the items in alphabetical order, press [Q A-Z], then select the first character on the keypad.
  - Alphabet search is not available when the playlist is selected.
- Select an item in each layer until you reach and select the desired file.
- You can change the page to display more items by pressing [▲]/[▼].
- Press [⏮] to return to the top layer.
- Press [⏮] to return to the upper layer.

### Audio menu:



### Video menu:

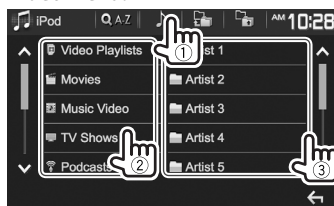

- Available categories differ depending on the type of your iPod/iPhone.

## APPs

### Using an App

You can use an App of the connected iPod touch/iPhone/Android on this unit.

- For Apps you can use on this unit, visit <<http://www.kenwood.com/cs/ce/>>.

### ❑ Preparation

1 Connect the iPod touch/iPhone/Android.

- **For Android:** Connect the Android device via Bluetooth. (Page 53)
  - **For iPod touch/iPhone:** Connect iPod touch/iPhone with a cable. (Page 82)
    - Be sure to select the appropriate connection method of iPod touch/iPhone on **<APP Setup>**. (Page 61)
    - You cannot watch video when connecting a Lightning connector model.
  - Only for DDX7051BT/DDX751WBTL/DDX517BT: When you connect iPod touch/iPhone/Android device using KCA-HD100 (optional accessory), touch panel operation is not available. See page 26 for mirroring the smartphone screen.
- 2 Select the iPod touch/iPhone/Android device to use on the **<APP Setup>** screen. (Page 61)

When connecting the device for the first time, the setup screen (for connection, etc.) appears. Follow the procedure on the setup screen to configure the settings.

## APPs


### ❑ Playback operations

When the operation buttons are not displayed on the screen, touch the screen to show them.

- To change settings for video playback, see page 65.

- 1 Start the App on your iPod touch/iPhone/Android.
- 2 Select **"APPs"** as the source. (Page 12)

### ❑ Operation buttons on the source control screen

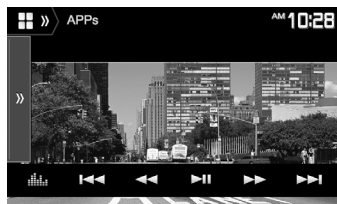

- [>>] Displays the other operation button window.
- To hide the window, press [⟨⟨].
- [📊] Displays the **<Equalizer>** screen. (Page 62)
- [◀◀] [▶▶]\* Selects an audio/video file.
- [◀◀] [▶▶]\* Reverse/forward search.
- ▶▶▶\* Starts/pauses playback.
- ▶]\* Starts playback.
- |||\* Pauses playback.
- [📺 / 📱] Switches the device on the **<APP Setup>** screen. (Page 61)

- You can operate some functions of the App on the touch panel.
  - You can control playback of the following:
    - Audio playback via iPod touch/iPhone/Android devices
    - Video playback via iPod touch/iPhone
- \* Applicable for iPod touch/iPhone only.

### Mirroring the smartphone screen

(Only for DDX7051BT/DDX751WBTL/DDX517BT)

You can use an App of the connected iPod touch\*/iPhone\*/Android on this unit.

- For Apps you can use on this unit, visit <http://www.kenwood.com/cs/ce>.
- For Android devices, you can use more functions with the KENWOOD Smartphone Control application. For details, visit <http://www.kenwood.com/cs/ce>.

\* Some iPod touch/iPhone 30-pin connector models cannot be used when shipped from the factory. You can use them after updating the software version of this unit.

### ❑ Preparation

 
- 1 Connect the iPod touch/iPhone/Android.
  - For wired connection, see page 82 for iPod touch/iPhone or page 83 for Android.
    - To view video, connect the device to the HDMI/MHL input terminal using KCA-HD100 (optional accessory).
  - For Bluetooth connection, see page 53.
- 2 Select the iPod touch/iPhone/Android device to use on the **<APP Setup>** screen. (Page 61)

### ❑ Playback operations

- 1 Start the App on your iPod touch/iPhone/Android.
  - 2 Select **"APPs"** as the source. (Page 12)  
The App screen is displayed.
    - When a caution message is displayed, operate by following the message.
- You can operate some functions of the App on the touch panel.
  - For some applications such as navigation applications, the operation buttons and information are not shown. You can perform the operations on the touch panel, such as scrolling the map.
    - If "⊘" appears on the screen, the unit cannot accept the touch operation you have tried to do.
  - You can also play back the audio/video using iPod/iPhone/Android itself instead of the unit.

### ❑ Switching to the App screen while listening to another source

DDX7051BT    DDX751WBTL    DDX517BT



**To return to the source control screen:** Press the same button again.

You can stream Pandora from iPod touch/iPhone or Android devices.

- Install the latest version of the Pandora application on your iPod touch/iPhone/Android.


## Preparation

- 1 Connect the device.
  - **For Android:** Connect the Android device via Bluetooth. (Page 53)
  - **For iPod touch/iPhone:** Connect iPod touch/iPhone with a cable (Page 82) or via Bluetooth (Page 53).
    - Be sure to select the appropriate connection method of iPod touch/iPhone on **<iPod Setup>**. (Page 23)
- 2 Select the device to use on the **<APP Setup>** screen. (Page 61)
- 3 Select **"PANDORA"** as the source. (Page 12)  
The Pandora application is started.
  - If the device selection screen is displayed, select the device to use. (Page 61)

## Playback operations

You can operate Pandora using the remote controller\*. Only playing, pausing, and skipping are available.

### Indications and buttons on the source control screen

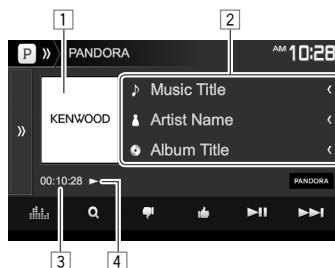

### Playback information

- 1 Picture data
- 2 Track information
  - Pressing [**<**] scrolls the text if not all of the text is shown.
- 3 Playing time
- 4 Playback status

## Operation buttons

- [>>] Displays the other operation button window.
  - To hide the window, press [**<<<**].
- [📶] Displays the **<Equalizer>** screen. (Page 62)
- [Q] Displays the list selection screen. (Page 28)
- [👍] Thumbs down to the current track and skips to the next track.
- [👎] Registers the current track as a favorite.
- [⏮] Starts/pauses playback.
- [⏭] Skips the current track.
  - Not available when the Pandora skip reaches its limit.
- [👤+] Adds the current artist to the Station List.
- [🎵+] Adds the current track to the Station List.
- [📌✓] Bookmarks the current track.
- [📱/📺] Switches the device on the **<APP Setup>** screen. (Page 61)

\* Purchase KNA-RCDV331 separately.

## ❑ Selecting a station from the list

### 1 Display the list selection screen.



### 2 Select the list type.




**<Station List>** Selects from the station names (Station List).

**<Genre List>** Selects from the genre names (Genre List).

### 3 Select a station from the list.

#### On the Station List

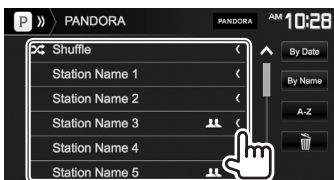

**[Shuffle]** Plays all the songs in the registered stations randomly.


**[By Date]** Sorts the list in reverse chronological order.

**[By Name]** Sorts the list in alphabetical order.

- You can change the page to display more items by pressing [▲]/[▼].
- The indicator appears on the left of the item when Shuffle is activated. (All songs in the registered stations are played randomly.)
- The indicator appears on the right of the item when the station is shared.

#### On the Genre List

Select a genre (①), then a station (②).

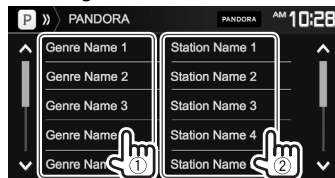

- You can change the page to display more items by pressing [▲]/[▼].
- The selected station is added to the Station List.

## Requirements for Pandora®

### iPhone or iPod touch

- Install the latest version of the Pandora application on your iPhone or iPod touch. (Search for “Pandora” in the Apple iTunes App Store to find and install the most recent version.)
- Connect iPod touch/iPhone to this unit with KCA-iP202, KCA-iP102 or KCA-iP103 (optional accessory).
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### Android™

- Visit Google play and search for “Pandora” to install.
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### NOTE

- Ensure you are logged in to your smartphone application. If you do not have a Pandora account, you can create one for free from your smartphone or at [www.pandora.com](http://www.pandora.com).
- Pandora is only available in certain countries. Please visit <http://www.pandora.com/legal> for more information.
- Because Pandora is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of Pandora cannot be operated from this unit.
- For issues using the application, contact Pandora at [pandora-support@pandora.com](mailto:pandora-support@pandora.com)
- Establish an Internet connection using LTE, 3G, EDGE, or WiFi.



# iHeartRadio (Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394)

iHeartRadio is a free, all-in-one digital radio service that lets you listen to your favorite Live Stations or create commercial-free, all-music Custom Stations featuring songs from the artists you select and similar music.

You can stream iHeartRadio from iPod touch/iPhone or Android devices.

- Install the latest version of the Pandora application on your iPod touch/iPhone/Android.

## Preparation

- 1 Connect the device.
    - **For Android:** Connect the Android device via Bluetooth. (Page 53)
    - **For iPod touch/iPhone:** Connect iPod touch/iPhone with a cable (Page 82) or via Bluetooth (Page 53).
      - Be sure to select the appropriate connection method of iPod touch/iPhone on **<iPod Setup>**. (Page 23)
  - 2 Select the device to use on the **<APP Setup>** screen. (Page 61)
  - 3 Select **"iHeartRadio"** as the source. (Page 12)
- iHeartRadio application is started.
- If the device selection screen is displayed, select the device to use. (Page 61)

## Playback operations

You can operate iHeartRadio using the remote controller<sup>\*1</sup>. Only playing, pausing, and skipping are available.

### Indications and buttons on the source control screen

Live station screen:



Custom station screen:



### Playback information

- 1 Picture data
- 2 Playback status
- 3 Track information
  - Pressing [**<**] scrolls the text if not all of the text is shown.

## Operation buttons

- [**>>**] Displays the other operation button window.
- [**||||**]
  - To hide the window, press [**<<<**]. Displays the **<Equalizer>** screen. (Page 62)
- [**Q**] Displays the **<Station Search>** screen or the station list. (Page 30)
- [**!**] Dislikes the currently playing content.
- [**👍**] Likes the currently playing content.
- [**▶■**]<sup>\*2</sup> Starts/stop playback.
- [**▶||**]<sup>\*3</sup> Starts/pauses playback.
- [**[SCAN]**]<sup>\*2</sup> Scans stations randomly.
- [**▶▶**]<sup>\*3</sup> Skips the current track.
- [**+🎵**] Creates a custom station from the currently playing track content information.
- [**♥**] Saves the current station to the **<Favorites>** list.
- [**🎛️**]<sup>\*3</sup> Displays the variety level selection screen. (Page 30)
- [**📱 / 📺**] Switches the device on the **<APP Setup>** screen. (Page 61)

<sup>\*1</sup> Purchase KNA-RCDV331 separately.


<sup>\*2</sup> Appears only for the live station screen.

<sup>\*3</sup> Appears only for the custom station screen.


## iHeartRadio

### ❑ Selecting the variety level for your custom station

- 1 Display the variety type selection screen.  
On the custom station screen:

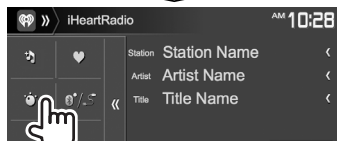

- 2 Select the variety type.

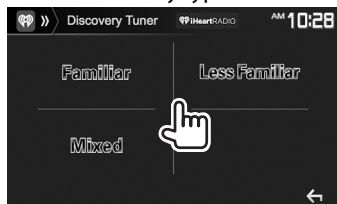


- <Familiar>** Distributes well-known tracks.
- <Mixed>** Distributes a mix of artists and track names.
- <Less Familiar>** Distributes a wide variety of tracks including lesser-known ones.

### ❑ Searching for a station

 - 1 Display the <Station Search> screen.




- 2 Select a station.



- Press [⏮] to return to the top layer.
- Press [⏭] to return to the upper layer.

### ❑ Editing the <Favorites> list

 - 1 Select <Favorites> on the <Station Search> screen. (See above.)
- 2 Display the <Station Edit> screen.



- 3 Select stations (①), then press [🗑] to delete the selected stations (②).



- Press [⏮] to return to the top layer.
- Press [⏭] to return to the upper layer.

## Requirements for iHeartRadio

### iPhone or iPod touch

- Install the latest version of the iHeartRadio application on your iPhone or iPod touch. (Search for "iHeartRadio for Auto" in the Apple iTunes App Store to find and install the most recent version.)
- Connect iPod touch/iPhone to this unit with KCA-iP202, KCA-iP102 or KCA-iP103 (optional accessory).
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### Android™

- Visit Google play and search for "iHeartRadio for Auto" to install.
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### NOTE

- Ensure you are logged in to your smartphone application. If you do not have an iHeartRadio account, you can create one for free from your smartphone or at <http://www.iheart.com/>.
- Because iHeartRadio is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of iHeartRadio cannot be operated from this unit.
- For issues using the application, contact iHeartRadio at <http://www.iheart.com/>.
- Establish an Internet connection using LTE, 3G, EDGE, or WiFi.

# Spotify

With Spotify, your music is everywhere. Working out, partying or relaxing, the right music is always at your fingertips. There are millions of songs on Spotify—from old favorites to the latest hits. Just choose the music you love, or let Spotify surprise you.

You can stream Spotify from connected iPod touch/iPhone or Android devices.

- Install the latest version of the Spotify application on your iPod touch/iPhone/Android and create an account.


## Preparation

- 1 Connect the device.
  - **For Android:** Connect the Android device via Bluetooth. (Page 53)
  - **For iPod touch/iPhone:** Connect iPod touch/iPhone with a cable (Page 82) or via Bluetooth (Page 53).
    - Be sure to select the appropriate connection method of iPod touch/iPhone on **<iPod Setup>**. (Page 23)
- 2 Select the device to use on the **<APP Setup>** screen. (Page 61)
- 3 Select **"Spotify"** as the source. (Page 12)  
The Spotify application is started.
  - If the device selection screen is displayed, select the device to use. (Page 61)

## Playback operations

You can operate Spotify using the remote controller\*1. Only playing, pausing, and skipping are available.

### Indications and buttons on the source control screen

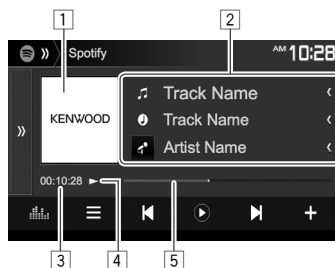

### Playback information

- 1 Picture data
- 2 Track information
  - Pressing [**<**] scrolls the text if not all of the text is shown.
- 3 Playing time
- 4 Playback status
- 5 Progress bar

### Operation buttons

- [**🔊**]/[**🔊**]: Changes the displayed information each time this button is pressed (🔊: artist/🔊: album).
- [**>>**]: Displays the other operation button window.
  - To hide the window, press [**<<**].

- [**🔊**]: Displays the **<Equalizer>** screen. (Page 62)
- [**☰**]: Displays the Spotify menu screen. (Page 32)
- [**⏮**]/[**⏭**]: Selects a track.
- [**▶**]\*2: Starts playback.
- [**⏸**]\*2: Pauses playback.
- [**+**]: Saves the current track/artist to **<Your Music>**.
- [**👍**]\*3: Thumbs down to the current track and skips to the next track.
- [**👍**]\*3: Registers the current track as a favorite.
- [**🔀**]: Activates/deactivates the shuffle playback mode.
- [**🔄**]: Repeats all tracks/cancels the repeat playback.
- [**🔁**]\*4: Repeats the current track/cancels the repeat playback.
- [**📶**]: Creates a new station. (Page 32)
- [**📶**]/[**📶**]: Switches the device on the **<APP Setup>** screen. (Page 61)

\*1 For DDX794/DDX774BH/DDX594/DDX574BH/DDX394: Purchase KNA-RCDV331 separately.

\*2 During playback, [**⏸**] is displayed, and when playback is paused, [**▶**] is displayed.



\*3 Not available for tracks in a playlist.

\*4 Appears only for premium account users.

# Spotify

## ❑ Creating your station (Start Radio)

1

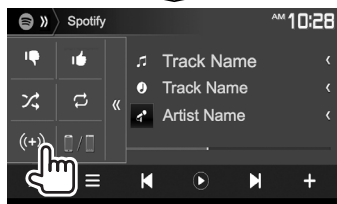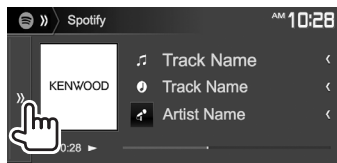

2 Enter a track/artist/playlist in the search box, then select the desired track.

The playback of your station starts with the selected track.

- You can personalize your station using thumb up ([👍]) or thumb down ([👎]).
  - You cannot thumb up or down while playing tracks in a playlist.


## ❑ Selecting a track

1 Display the Spotify menu screen.



2 Select the list type (<Your Music>/<Browse>/<Radio>/<Play Queue>), then select a desired item.

- The list types displayed differ depending on the information sent from Spotify.

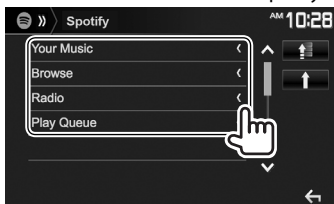

- Press [⏮] to return to the top layer.
- Press [⏭] to return to the upper layer.

## Requirements for Spotify

### iPhone or iPod touch

- Install the latest version of the Spotify application on your iPhone or iPod touch. (Search for “Spotify” in the Apple iTunes App Store to find and install the most recent version.)
- Connect iPod touch/iPhone to this unit with KCA-iP202, KCA-iP102 or KCA-iP103 (optional accessory).
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### Android™


- Visit Google Play™ and search for “Spotify” to install.
- Bluetooth must be built in and the following profiles must be supported.
  - SPP (Serial Port Profile)
  - A2DP (Advanced Audio Distribution Profile)

### NOTE

- Ensure you are logged in to your smartphone application. If you do not have a Spotify account, you can create one for free from your smartphone or at [www.spotify.com](http://www.spotify.com).
- Because Spotify is a third-party service, the specifications are subject to change without prior notice. Accordingly, compatibility may be impaired or some or all of the services may become unavailable.
- Some functions of Spotify cannot be operated from this unit.
- For issues using the application, contact Spotify at [www.spotify.com](http://www.spotify.com).
- Establish an Internet connection using LTE, 3G, EDGE, or WiFi.

# HD Radio™ tuner (Only for DDX794/DDX774BH/DDX594/DDX574BH)

## About HD Radio™ Technology

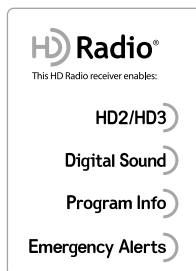

### HD2/HD3

- Adjacent to traditional main stations are HD2/HD3 Channels, providing new original programming on the FM dial

### Digital Sound

- Crystal clear, CD-like digital audio quality to consumers; eliminates background noise

### Program Info


- Provides song name, artist, station ID, and other relevant data to enrich the listening experience

### Emergency Alerts

- Delivers critical and life-saving messages to the public during emergency situations

## Listening to an HD Radio™ broadcast

### Indications and buttons on the source control screen

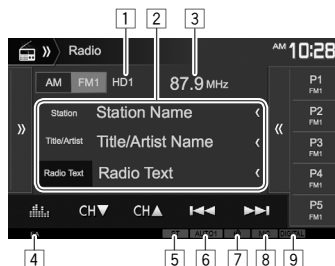

### HD Radio reception information

- 1 Channel no.
- 2 Text information
  - Pressing [**<**] scrolls the text if not all of the text is shown.
  - Pressing [**Radio Text**] switches the information between Radio Text, Message, PTY code and Station Name.
- 3 The station frequency currently tuned in
- 4 EA indicator (Page 36)

- 5 ST indicator: Lights up when receiving an FM stereo broadcast with sufficient signal strength.
- 6 Seek mode indicator
- 7 HD indicator: Lights up when receiving an HD Radio broadcast.
- 8 MC indicator: Lights up when receiving an HD Radio multicast channel.
- 9 HD Radio reception mode (Page 34)
  - When digital signals are emitted, the DIGITAL indicator lights up.
  - When analog signals are emitted, the ANALOG indicator lights up.

## HD Radio™ tuner

### Operation buttons

- [>>] Displays the other operation button window.
- To hide the window, press [<<].
- [AM] Selects the AM band.
- [FM] Selects the FM band.
- FM1 → FM2 → FM3
- [<<] Displays the preset station window . (Page 35)
- To hide the window, press [>>].
- [P1] – [P5]
  - Selects a stored station. (Press)
  - Stores the current station. (Hold)
- [ ] Displays the **<Equalizer>** screen. (Page 62)
- [CH▼] Selects a sub-channel when receiving an HD Radio multicast channel.
- [CH▲]
- [◀◀] [▶▶] Searches for a station.
  - The search method differs according to the selected seek mode. (See below.)
- [PTY]\* Enters PTY search mode. (Page 35)
- [SEEK] Changes the seek mode.
  - AUTO1**: Auto Search
  - AUTO2**: Tunes in stations in the memory one after another.
  - MANU**: Manual Search
- [AME ↓]\* Presets stations automatically. (Hold) (Page 35)
- [MODE] Changes the settings for HD Radio reception on the **<Radio Mode>** screen. (See the right column.)
- [Emergency Alert] Activates/deactivates the reception of the emergency alert message. (Page 36)

### [Alert Message Log]



Displays the received emergency alert message list. (Page 36)

\* Appears only when FM is selected as the source.


### Changing the HD Radio reception mode

While receiving an HD Radio broadcast, the unit tunes into digital or analog audio automatically according to the reception conditions.

1

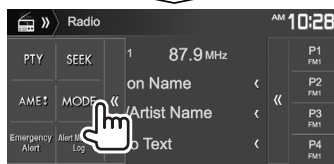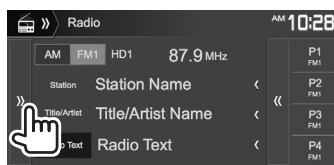

2 Select the HD Radio reception mode.

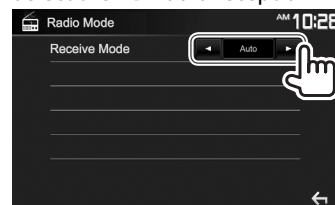



- <Auto>** Switch between digital and analog audio automatically.
- <Digital>** Select this to tune into digital audio only.
- <Analog>** Select this to tune into analog audio only.

## HD Radio™ tuner


### ❑ Searching for FM HD Radio programs— PTY Search

You can search for your favorite programs being broadcast by selecting the PTY code.

1

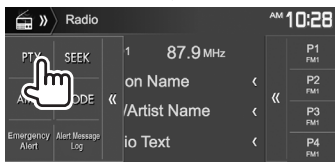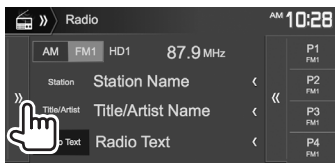

2 Select a PTY code.

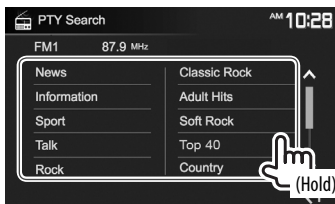

- You can change the page to display more items by pressing [**▲**]/[**▼**].

PTY Search starts.



If there is a station broadcasting a program of the same PTY code as you have selected, that station is tuned in.

### Presetting stations

#### ❑ Storing stations in the memory

You can preset 5 stations for each band.


**Automatic presetting—AME (Auto Memory) (for FM only)**

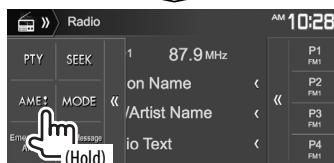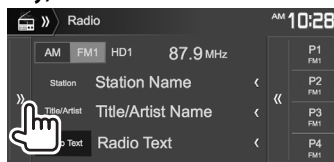

Local stations with the strongest signals are found and stored automatically.

#### Manual presetting


- Tune in to a station you want to preset. (Page 34)
- Select a preset number.

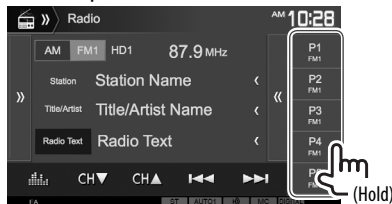

The station selected in step 1 is stored.


### ❑ Selecting a preset station from the list

- Select the band (①), then display the preset station window (②).

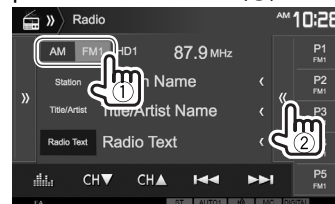

- You can also select a preset station by pressing [**P1**] – [**P5**].

- Select a preset station.


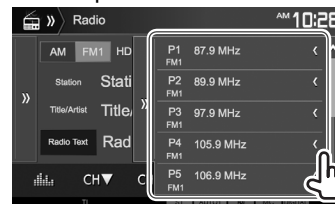


- Pressing [**<**] scrolls the text if not all of the text is shown.
  - To hide the window, press [**>>>**].

Receiving an emergency alert message

You can receive an emergency alert message while listening to another source.

❑ Activating emergency alert message reception

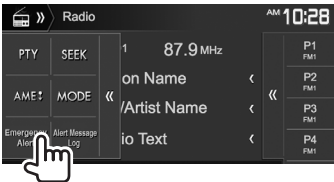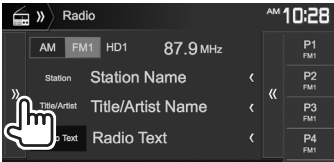

- The EA indicator lights in the following cases:
  - Lights in white: The current station supports the emergency alert.
  - Lights in orange: Emergency alert is not available.
  - Lights in red: Receives the emergency alert or snoozes the reception.

When receiving an emergency alert message

When you receive an emergency alert message, the following screen is displayed.




Check the message, select the interval time to receive the same emergency alert message, close the alert message screen.

- [Snooze]** The same emergency alert message will not interrupt again for 10 minutes.
- [Ignore]** The same emergency alert message will not interrupt again for 12 hours.


❑ Displaying received emergency alert messages

The received emergency alert messages are stored in the unit, and you can check them later.

1 Display the <Alert Message Log> screen.

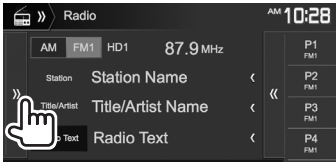

2 Select the desired emergency alert message.

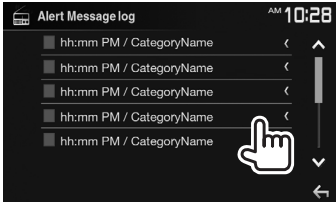


- Scroll the page to show more items. The selected message is displayed. To close the message window, press **[Close]**.



# RADIO (Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT/DDX394)

## Listening to the radio

### Indications and buttons on the source control screen

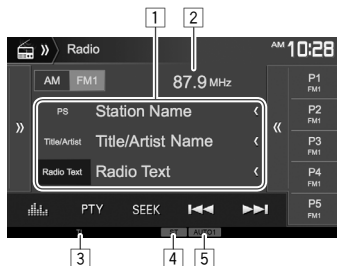

### Radio reception information

- 1 Text information
  - Pressing [**<**] scrolls the text if not all of the text is shown.
  - Pressing [**Radio Text**] switches the information between Radio Text, Radio Text Plus, and PTY code.
- 2 The station frequency currently tuned in
- 3 TI indicator
  - The ST indicator lights up when receiving an FM stereo broadcast with sufficient signal strength.
- 4 ST/MONO indicator
  - The ST indicator lights up when receiving an FM stereo broadcast with sufficient signal strength.
- 5 Seek mode indicator

### Operation buttons

- [**>>**]
- Displays the other operation button window.
- To hide the window, press [**<<**].
- [**AM**]
- Selects the AM band.

- [**FM**]
- Selects the FM band.
- FM1 → FM2 → FM3
- [**<<**]
- Displays the preset station window. (Page 38)
- To hide the window, press [**>>**].
  - Selects a stored station. (Press)
  - Stores the current station. (Hold)
- [**P1**] – [**P5**]
- [**Equalizer**]
- Displays the **<Equalizer>** screen. (Page 62)
- [**PTY**]\*
- Enters PTY search mode. (Page 38)
- [**SEEK**]
- Changes the seek mode.
- AUTO1**: Auto Search
  - AUTO2**: Tunes in stations in the memory one after another.
  - MANU**: Manual Search
- [**<<<**] [**>>>**]
- Searches for a station.
- The search method differs according to the selected seek mode. (See above.)
- [**AME** ↓]\*
- Presets stations automatically. (Hold) (See the right column.)
- [**MONO**]\*
- Activates/deactivates monaural mode for better FM reception. (Stereo effect will be lost.)
- The MONO indicator lights up while monaural mode is activated.
- [**TI**]\*
- Activates/deactivates TI standby reception mode. (Page 38)



\* Appears only when FM is selected as the source.

## Presetting stations

### Storing stations in the memory

You can preset 5 stations for each band.


**Automatic presetting—AME (Auto Memory) (for FM only)**

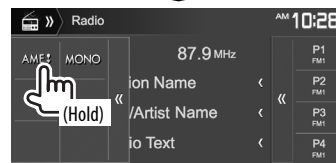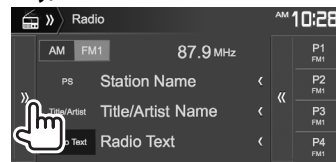

The local stations with the strongest signals are found and stored automatically.

### Manual presetting

- 1 Tune in to a station you want to preset. (See the left column.)
- 2 Select a preset number.

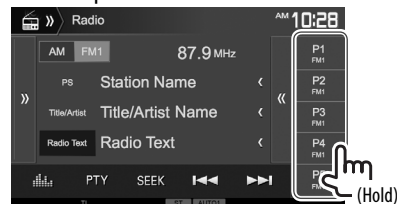


The station selected in step 1 is stored.

# RADIO


## ❑ Selecting a preset station

- 1 Select the band (①), then display the preset station window (②).

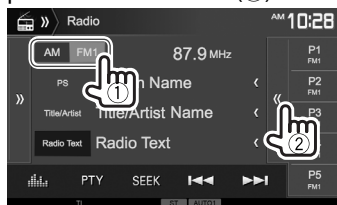

- You can also select a preset station by pressing [P1] – [P5].

- 2 Select a preset station.

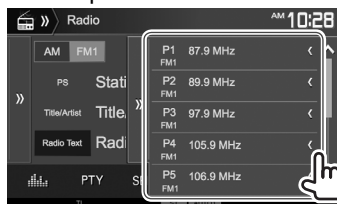

- Pressing [←] scrolls the text if not all of the text is shown.
- To hide the window list, press [>>>].

## FM RBDS features


### ❑ Searching for FM RBDS programs—PTY Search

You can search for your favorite programs being broadcast by selecting the PTY code.

- 1



- 2 Select a PTY code.


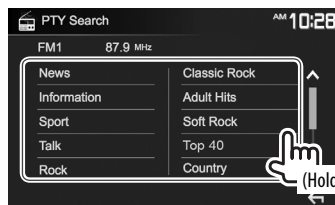


- You can change the page to display more items by pressing [▲]/[▼].

PTY Search starts.

If there is a station broadcasting a program of the same PTY code as you have selected, that station is tuned in.

## ❑ Activating/deactivating TI Standby Reception

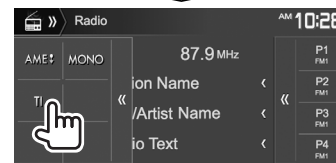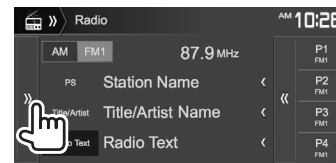

The unit is in standby to switch to Traffic Information (TI) if available. (The TI indicator lights up in white.)

- If the TI indicator is lit in orange, tune into another station providing RBDS signals.

**To deactivate TI Standby Reception:** Press [TI]. (The TI indicator turns off.)

- The volume adjustment for Traffic Information is automatically memorized. The next time the unit switches to Traffic Information, the volume is set to the previous level.

# SiriusXM® Satellite Radio (Only for DDX794/DDX7748H/DDX594/DDX5748H/DDX394)

Only SiriusXM® brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

## Activating subscription

- 1 Check your Radio ID.**  
 The SiriusXM Satellite Radio ID is required for activation and can be found by tuning to Channel 0 as well as on the label found on the SiriusXM Connect tuner and its packaging.
  - The Radio ID does not include the letters I, O, S or F.
- 2 Activate the SiriusXM Connect Vehicle Tuner using one of the two methods below:**
  - For users in the U.S.A:
    - Online:  
Visit [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow)
    - Phone: Call SiriusXM Listener Care at 1-866-635-2349
  - For users in Canada:
    - Online:  
Visit [www.siriusxm.ca/activatexm](http://www.siriusxm.ca/activatexm)
    - Phone: Call XM customer Care at 1-877-438-9677
- 3 When a confirmation message is displayed, press [Return].**

## Listening to the SiriusXM® Satellite Radio

### Indications and buttons on the source control screen



### SiriusXM® Satellite Radio reception information

- Band
- Channel number
- Text information
  - Pressing [◀] scrolls the text if not all of the text is shown.
- Signal strength indicator
- Seek mode indicator
- Information for the buffered data and the replay mode (Page 41)

### Operation buttons

- [SXM1] – [SXM4]** Selects the band.  
 ➔ SXM1 ➔ SXM2 ➔ SXM3 ➔ SXM4
- [>>]** Displays the other operation button window.
- To hide the window, press [◀◀].
- [Song Title]/[Info]/[Category]** Changes the displayed information each time this button is pressed.

- [◀◀]** Displays the preset channel window. (Page 40)
- To hide the window, press [>>].
- [Bar Graph]** Displays the **<Equalizer>** screen. (Page 62)
- [Q]** Displays the **<Channel List>** screen. (Page 40)
- [▶||]** Starts/pauses the content replay. (Page 41)
- [CH▼]/[CH▲]** Selects the channel.
- [MODE]** Changes the settings for SiriusXM Satellite Radio reception on the **<SiriusXM Mode>** screen. (Pages 42–46)
- [⦿+]** Registers the current artist to the alert contents. (Page 42)
- [♪+]** Registers the current song to the alert contents. (Page 42)
- [☀]** Activates/ deactivates the content alert for traffic and weather. (Page 44)
- [SEEK]** Changes the seek mode.
  - SEEK1:** Skip to another available channel.
  - SEEK2:** Skip to another preset channel.
- [SCAN]** Starts TuneScan™. (Page 42)
- [◀◀◀]/[▶▶▶]** Used while replaying content. (Page 41)
- [Live]** Changes the page of the operation button window to display other operation buttons.
- [• • •]**


# SiriusXM® Satellite Radio

## Presetting channels

### ❑ Storing channels in the memory

You can preset 5 channels for each band.


- 1 Tune in to a channel you want to preset.  
(Page 39)
- 2 Select a preset number.

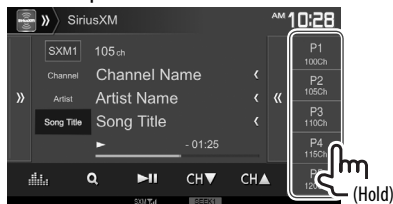

The channel selected in step 1 is stored.


### ❑ Selecting a preset channel

- 1 Select the band (①), then display the preset channel window (②).

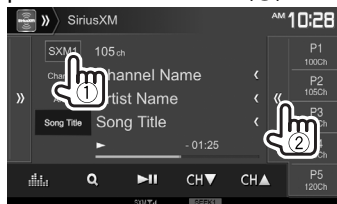


- You can also select a preset channel by pressing [P1] – [P5].

- 2 Select a preset channel.

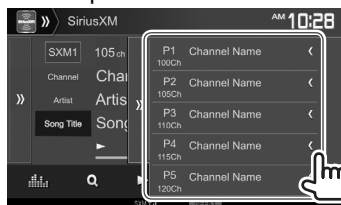

- Pressing [ < ] scrolls the text if not all of the text is shown.
- To hide the window list, press [ >> ].

- 3 Select "SEEK2" as the seek mode to jump to the selected preset channel.

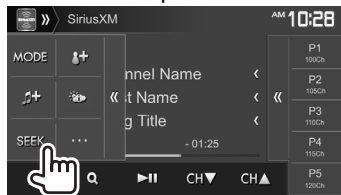

## Selecting a channel

### ❑ Selecting a channel on the list

You can obtain information on channels or select a category and then a channel.

- 1 Display the <Channel List> screen.



- 2 Select a category (①), and then select a channel (②).



- You can change the page to display more items by pressing [ ^ ]/[ v ].
- To list all the channels, select [All Channels].



- Pressing the info change button above the list displays information in the following order: Channel, Artist, Song Title, Content Info




# SiriusXM® Satellite Radio

## Replay

You can pause, rewind and replay content from the currently tuned channel.

- The SiriusXM Connect Vehicle Tuner continually buffers up to 60 minutes of audio.
- If you change to another channel during playback, the Replay buffer content will be lost.



## Indications on the source control screen

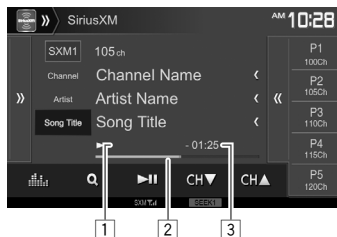


- 1 Playback status
- 2 Replay time bar  
Shows the remaining capacity (gray) and the amount of buffered content (blue). If the Replay buffer is full, the entire bar becomes blue.
  - Updated every second.
- 3 Time code  
Shows you the point in the Replay buffer you are listening to.
  - Example: -5:00
    - You are listening to audio that is 5 minutes behind the current broadcast.
  - Updated every second.

## Replaying content

### 1 Display operations buttons for replay.

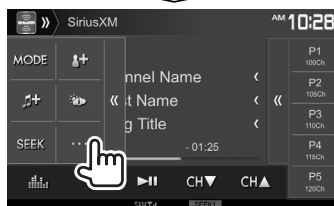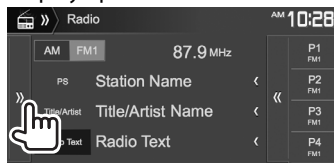

### 2 Perform the replay operations.

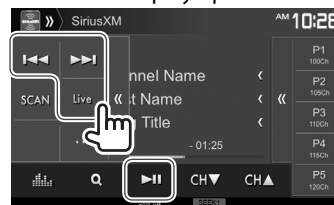

- To start/pause the playback, press [▶||].
- To skip the current track/segment, press [◀◀]/[▶▶].
  - Pressing [◀◀] within 2 seconds of the beginning of the current track/segment returns to the previous track.
  - Pressing [◀◀] after 2 seconds or more of the track have been replayed returns to the beginning of the current track/segment.
- To rewind/fast forward, press and hold [◀◀]/[▶▶].
- To return to the live position, press [Live].

## SmartFavorites

User stored channels (P1 to P5) of current band are recognized as SmartFavorites channels. SiriusXM Connect Vehicle Tuner automatically buffers their broadcast content in the background. When you select a SmartFavorite channel, you can rewind and replay up to 30 minutes of any of the missed news, talk, sports or music content.

- SmartFavorites is available only when you connect an SXV200 or later SiriusXM Connect Vehicle Tuner.
- If you change to another band, the buffered content is cleared and new channels in the current band will start buffering.



## SiriusXM® Satellite Radio

### TuneStart™


When you select a SmartFavorites channel, you can listen to the current song from the beginning.

#### Activating TuneStart™

- 1 Display the <SiriusXM Mode> screen.

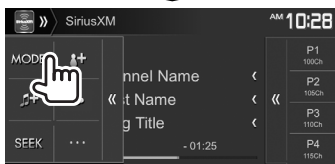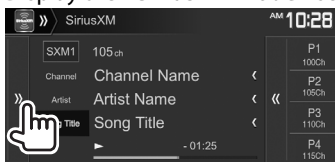




- 2

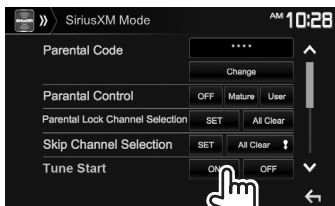

**To deactivate TuneStart:** Select [OFF] for <TuneStart>.

### TuneScan™

When you activate TuneScan™, you will hear 6 seconds of the songs, which have not been listened to, from each of the music channel presets on the current Band and the currently tuned channel.

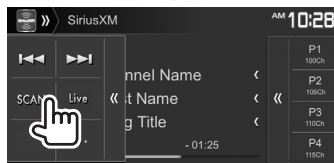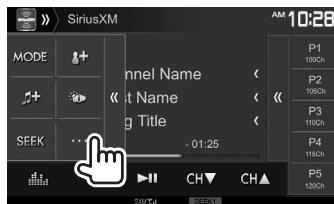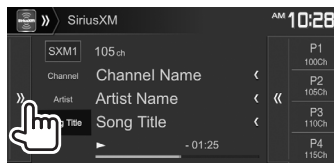

The unit starts scanning.

- To select the previous/next content, press [◀◀] or [▶▶].
- To end scanning and continue listening to the current song/content, press [SCAN].
- To exit scanning, press and hold [SCAN].



### Receiving alerts for desired content—Content Alert

The unit informs you when receiving the content you are interested in such as music, information about a sports team, weather and traffic information.

#### Registering content alerts

You can register your favorite artists, songs, or teams (up to 50 contents).

#### For artists/songs

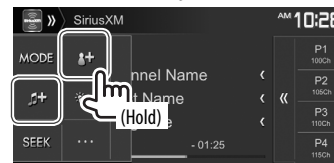
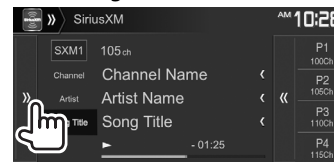


- [Artist] Registers the artist of the current song.
- [Song] Registers the current song.

# SiriusXM® Satellite Radio


## For teams

- 1 Display the <SiriusXM Mode> screen.

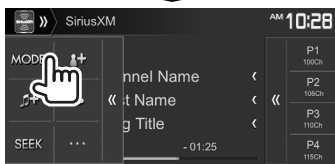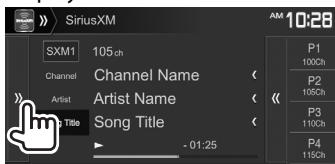

- You can change the page to display more items by pressing [▲]/[▼].

- 2

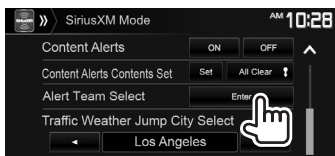


- 3 Select the league (①) and the team (②) then register the content alert (③).




## ❑ Selecting the content for the content alert

### For artists/songs/teams

- 1 Display the <SiriusXM Mode> screen. (See the left column.)
  - You can change the page to display more items by pressing [▲]/[▼].
- 2 Display <Content Alerts Contents Set> screen.

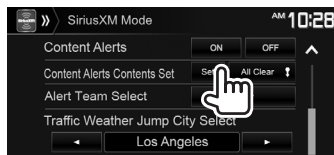


- 3 Select the category (①), then the item (②).

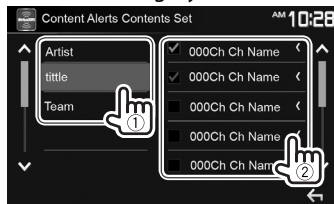

A checkmark appears beside the selected item.

- To show the details of the item, press [←].


**To delete the registered items:** Press and hold the item you want to delete (①) [🗑️] and a checkmark is shown beside the selected item), then press [🗑️] (②).

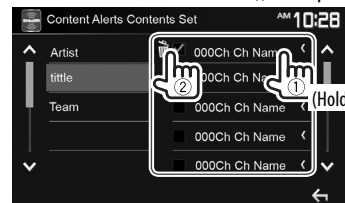

**To delete all registered contents:** Press and hold [All Clear ↓] in <Content Alerts Contents Set> on the <SiriusXM Mode> screen.

## For traffic and weather information

- 1 Display the <SiriusXM Mode> screen. (See the far left column.)
  - You can change the page to display more items by pressing [▲]/[▼].
- 2 Select the city for which you want receive traffic and weather information.

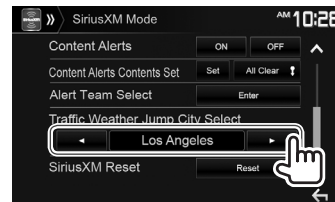



- When a traffic and weather broadcast is received, the unit automatically switches the channel.

## SiriusXM® Satellite Radio

### ❑ Activating content alert


For artists/songs/teams

1 Display the <SiriusXM Mode> screen.

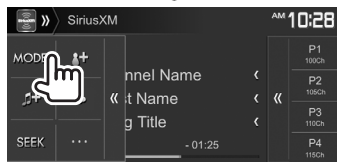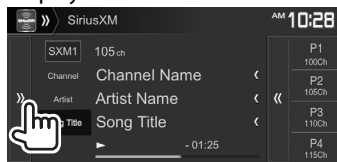



- You can change the page to display more items by pressing [**▲**]/[**▼**].

2 Select [ON] to activate the content alert.

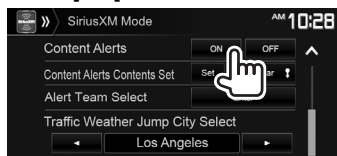

**To deactivate the content alert:** Select [OFF] for <Content Alerts>.


For traffic and weather information

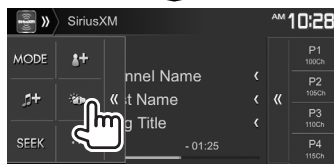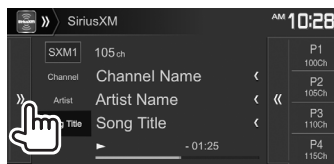

**To deactivate the content alert:** Press [**🔊**] again.

### ❑ Switching to registered content

When receiving the contents registered for content alerts, an alert appears on the screen. Press [**Jump**], then select the item to jump to on the <Content Alerts> screen.

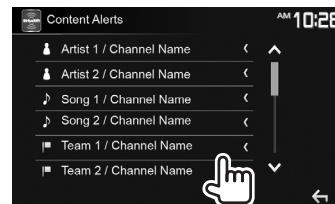

- You can change the page to display more items by pressing [**▲**]/[**▼**].
- To show the details of the item, press [**<**].



# SiriusXM® Satellite Radio

## Setting reception restrictions



### □ Setting the parental control

You can limit access to SiriusXM channels, such as those with mature content.


### Setting/changing the parental code

- The initial setting is "0000."
- Changing the code does not change the <Parental Control>/<Parental Lock Channel Selection> settings.


#### 1 Display the <SiriusXM Mode> screen.

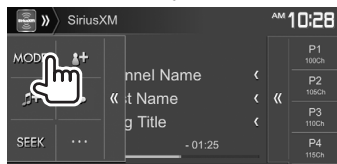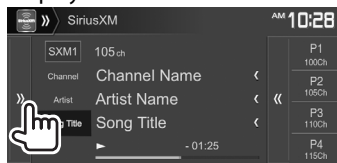

#### 2 Display the <Parental Code Check> screen.

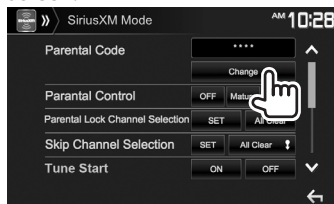


#### 3 Enter a four-digit code (①), and then confirm (②).

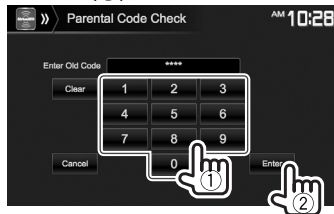

- To clear the entry, press **[Clear]**.
- To cancel setting the code, press **[Cancel]**.

#### 4 Enter a new four-digit code (①), and then confirm (②).

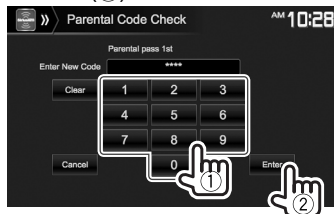

- To clear the entry, press **[Clear]**.
- To cancel setting the code, press **[Cancel]**.


#### 5 Enter the four-digit code and then press **[Enter]** again to confirm the code.

### Activating/deactivating the parental control

You can set the parental control feature to lock any SiriusXM channel(s) or automatically lock all channels classified as "mature" by SiriusXM®.

#### 1 Display the <SiriusXM Mode> screen. (See the far left column.)

#### 2 Select a parental control mode.

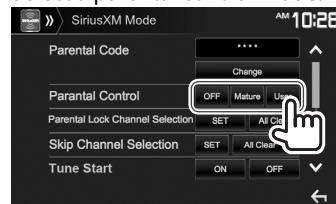

**[OFF]** Deactivates the parental mature and user lock.

**[Mature]** Locks channels classified as "mature" only.

**[User]** Locks only the selected channels.

#### 3 Enter the parental code to confirm your choice.

Continued on the next page...

## SiriusXM® Satellite Radio

### Selecting the channels to lock—Parental Lock Channel Selection

This parental control option allows you to pick the channels to be locked by the parental control feature.

- When **<Parental Control>** is set to **[Mature]** or **[OFF]**, you cannot change the **<Parental Lock Channel Selection>** setting.

- 1 Display the **<SiriusXM Mode>** screen. (Page 45)



- 3 Enter the parental code. The **<Parental Lock Channel Selection>** screen is displayed.
- 4 Select a category (①), and then a channel (②).



- You can change the page to display more items by pressing [**▲**]/[**▼**].
- To list all the channels, select **[All Channels]**.
- A check mark appears beside the selected channel.

Repeat this step if you want to set the lock on multiple channels.


**To deactivate the parental lock for all locked channels:** Select **[All Clear]** for **<Parental Lock Channel Selection>** on the **<SiriusXM Mode>** screen, then enter the parental code number.

### ☐ Skipping unwanted channels


If you do not want to receive some channels, you can skip them.

#### Activating the channel skipping

- 1 Display the **<SiriusXM Mode>** screen. (Page 45)
- 2 Display the **<Skip Channel Selection>** screen.

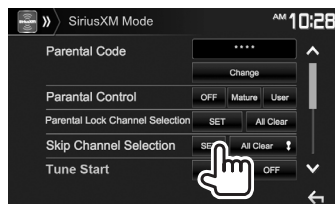

- 3 Select a category (①), and then select a channel (②).

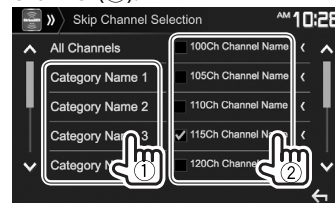


- You can change the page to display more items by pressing [**▲**]/[**▼**].
  - To list all the channels, select **[All Channels]**.
  - A check mark appears beside the selected channel.
- Repeat this step if you want to skip multiple channels.

**To clear the channel skipping for all skipped channels:** Press and hold **[All Clear ↓]** in **<Skip Channel Selection>** on the **<SiriusXM Mode>** screen.

### ☐ Resetting the SiriusXM Satellite Radio settings

You can reset the SiriusXM Satellite Radio settings you set up and restore the default settings.

- 1 Display the **<SiriusXM Mode>** screen. (Page 45)
  - You can change the page to display more items by pressing [**▲**]/[**▼**].

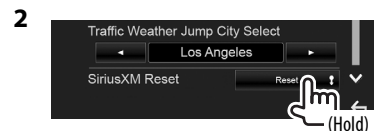

# OTHER EXTERNAL COMPONENTS


## Using camera

- To connect a camera, see page 83.
- To use a rear view camera, a REVERSE lead connection is required. (Pages 79 – 81)


### Settings for the camera

#### Rear view camera setting


- 1 Display the <Input> settings screen.  
On the Home screen:

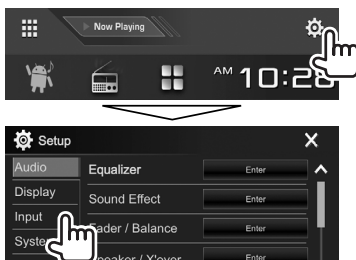

- 2 Display the <Rear Camera> screen.

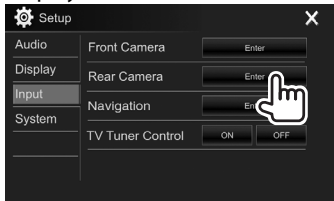


3

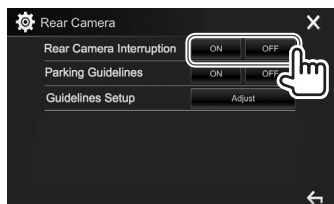


- [ON]** Displays the picture from the rear view camera when you shift the gear to the reverse (R) position.
- [OFF]** Select this when no camera is connected

#### Front view camera settings (Only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394)

- 1 Display the <Input> screen. (See the left column.)
- 2 Display the <Front Camera> screen.

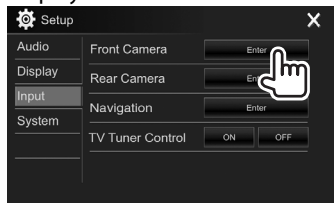

3

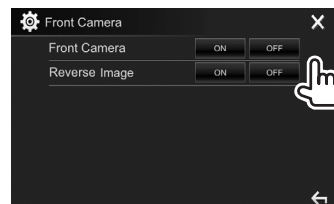

#### <Front Camera>

- **ON:** Activates the front view camera. Select this to use the front view camera.
- **OFF:** Select this when no camera is connected.

#### <Reverse Image>

- **ON:** Displays the picture from the front view camera horizontally reversed.
- **OFF:** Displays the picture from the front view camera as it is.

### Displaying the camera screen

**To display the picture from the rear view camera**  
The rear view screen is displayed when you shift the gear to the reverse (R) position.



- To remove the caution message, touch the screen.

Continued on the next page...

## OTHER EXTERNAL COMPONENTS

### To display the picture from the connected camera manually

- Only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394: When <**Front Camera**> is set to **[ON]**, the picture from the front view camera is displayed. When <**Front Camera**> is set to **[OFF]**, the picture from the rear view camera is displayed. (Page 47)

On the pop-up short-cut menu (Page 13):

Display the pop-up short-cut menu by pressing MENU on the monitor panel, then select **[Camera]**.



On the monitor panel (only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX417BT/DDX394):

 
**DDX7051BT**



**DDX794/DDX774BH**




**DDX751WBTL**




**DDX594/DDX574BH/DDX394**



 **DDX417BT**



### To switch the screen between the front view camera and the rear view camera (only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394)

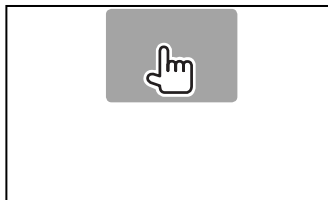


- Each time you touch the area shown above, the screen is switched between the rear view screen and the front view screen.

### To exit the camera screen

On the camera screen:

Touch the area shown below.

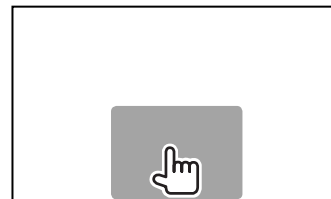

On the monitor panel (only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX417BT/DDX394):

**DDX7051BT**



**DDX794/DDX774BH**



 
**DDX751WBTL**



**DDX594/DDX574BH/DDX394**




**DDX417BT**



## OTHER EXTERNAL COMPONENTS

### To adjust the picture

While the camera screen is displayed...

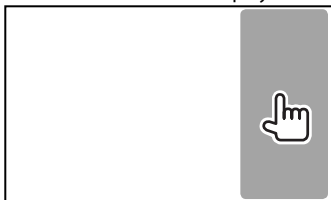



- The video control menu is displayed. (Page 65)  
To close the picture adjustment menu, touch the same area again.

### ❑ Using the parking guidelines on the rear view screen

 
You can display parking guidelines to enable easier parking when you shift the gear to the reverse (R) position.

#### Displaying the parking guidelines


- 1 Display the <Input> settings screen.  
On the Home screen:

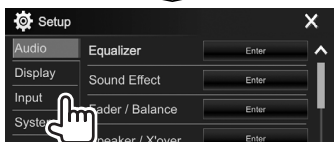

- 2 Display the <Rear Camera> screen.

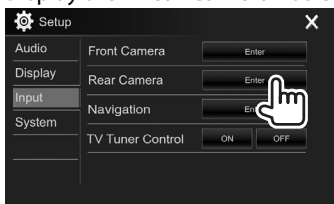


3

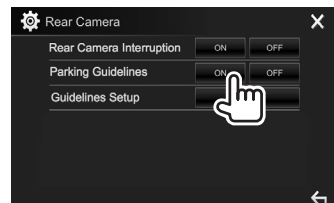

**To deactivate:** Select [OFF] for <Parking Guidelines>.

- You can also display the parking guidelines by touching the area shown below. To close the parking guidelines, touch the same area again.

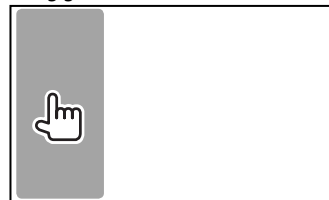


## OTHER EXTERNAL COMPONENTS

### Adjusting the parking guidelines


Adjust the parking guidelines according to the size of the car, parking space and so on.

- Install the rear view camera in the appropriate position according to the instructions supplied with the rear view camera.
- When adjusting the parking guidelines, make sure to use the parking brake to prevent the car from moving.

- 1 Display the <Rear Camera> screen. (Page 49)
- 2 Display the parking guidelines adjustment screen.

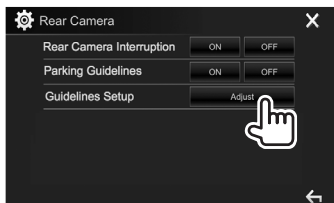

- 3 Adjust the parking guidelines by selecting the mark (①), then adjusting the position of the selected mark (②).

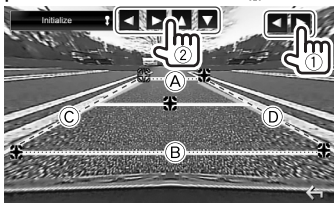


Make sure that ① and ② are horizontally parallel, and that ③ and ④ are the same length.

- Press and hold [Initialize ↓] for 2 seconds to set all the ⚙ marks to the initial default position.

### Using external audio/video players—AV-IN

 When the operation buttons are not displayed on the screen, touch the area shown on the illustration.

- To change settings for video playback, see page 65.




### Starting playback

#### Preparation:

“AV-IN” cannot be selected when <iPod Setup> is set to [USB+AV-IN]. Be sure to select other connection method for <iPod Setup> beforehand. (Page 23)


- 1 Connect an external component to the iPod/AV-IN input terminal. (Page 83)
- 2 Select “AV-IN” as the source. (Page 12)
- 3 Turn on the connected component and start playing the source.

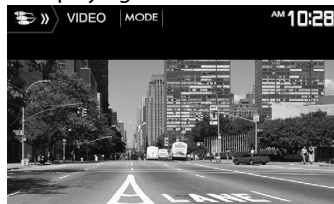


### Changing the AV-IN name

You can change the AV-IN name displayed on the “AV-IN” source control screen.

- 1 Display the <VIDEO Mode> screen.

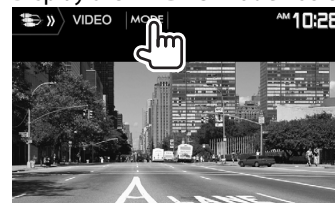

- 2 Select an AV-IN name.

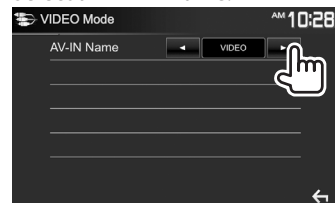

- This setting does not affect the source name displayed on the Home screen.

## OTHER EXTERNAL COMPONENTS

### Using an external component via ADS adapter—OEM Features (Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394)

You can control the sources from the component via ADS adapter.

#### Preparation:

 
Configure the settings on the <Parking Assist> (Page 72)/<OEM Setup> (Page 73) screens beforehand.

- 1 Connect the ADS adapter to the iDataLink input terminal. (Page 83)
- 2 Select **“OEM Features”** as the source. (Page 12)
- 3 Turn on the connected component and start playing the source.

### Using a smartphone—Mirroring (Only for DDX7051BT/DDX751WBTL/DDX517BT)

When the operation buttons are not displayed on the screen, touch the area shown on the illustration.

- To change settings for video playback, see page 65.



#### ❑ What is HDMI/MHL?

HDMI stands for High Definition Multi-media Interface. HDMI connections can transfer digital video source signals (such as from a DVD player) without converting them to analog.

A new feature that has been added to HDMI that extends its capabilities further is MHL, or Mobile High-definition Link. Both interfaces allow your smartphone to connect to the device. When it is connected, you can see your smartphone's screen on the monitor.

#### About Wireless Display Adapter

This unit is compatible with Wireless Display Adapters. Connecting a Wireless Display Adapter (KCA-WL100: optional accessory) to the HDMI/MHL input terminal (Page 82) enables you to enjoy listening to music, watching videos, or viewing pictures over a wireless connection.

- For details about Wireless Display Adapter settings, etc., refer to the instructions supplied with the Wireless Display Adapter.

#### ❑ Displaying the screen of the smartphone

 
You can display the screen of smartphones connected via the HDMI/MHL input terminal.

- 1 Connect your smartphone to the HDMI/MHL input terminal. (Page 83)
  - Use HDMI cable KCA-HD100 (optional accessory) or MHL cable KCA-MH100 (optional accessory).
- 2 Select **“Mirroring”** as the source. (Page 12)
- 3 Start an application or playback on your smartphone.

### Watching a TV (Only for DDX7051BT/DDX751WBTL/DDX517BT)

When the operation buttons are not displayed on the screen, touch the area shown on the illustration.

- To change settings for video playback, see page 65.



#### Preparation

- Connect the TV tuner box to the iPod/AV-IN terminal and the REMO OUT terminal. (Page 83)
- Select **[ON]** for **[TV Tuner Control]**. (Page 72)

#### ❑ Displaying the TV screen

- 1 Select **“AV-IN”** as the source. (Page 12)
- 2 Turn on the TV.



- To change the channels, press **[CH ▼]/[CH ▲]**.

## OTHER EXTERNAL COMPONENTS

### Using the external navigation unit (Only for DDX7051BT/DDX751WBTL/DDX517BT)

You can connect a navigation unit (KNA-G610 or KNA-G630: optional accessory) to the NAV input terminal so that you can view the navigation screen. (Page 83)

- The navigation guidance comes out of the front speakers even when you are listening to an audio source.

#### □ Viewing the navigation screen

On the Home screen:



- While the navigation screen is displayed, the touch panel operations are available only for navigation.
- The aspect ratio of the navigation screen is fixed to **<Full>** regardless of the **<Aspect>** setting (Page 65).

### When receiving a call during navigation guidance

The screen is switched automatically. To return to the navigation screen, press [A].



### To exit the navigation screen

On the pop-up short-cut menu (Page 13): Display the pop-up short-cut menu by pressing MENU on the monitor panel, then select **[Current Source]**.




#### □ Settings for the navigation unit

### 1 Display the <Input> setting screen.


On the Home screen:



### 2 Display the <Navigation> screen.

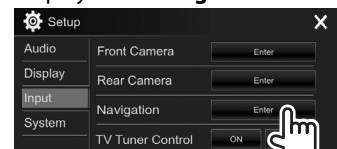

### 3

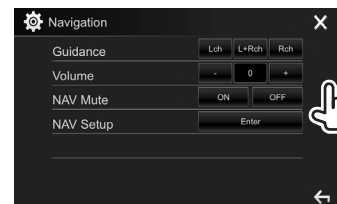

#### <Guidance>

Select which front speakers are used for the navigation guidance.

#### <Volume>

Adjust the volume of the navigation guidance. (0 to 35)

#### <NAV Mute>

Select **[ON]** to attenuate the sound coming out of speakers other than the front speakers during navigation guidance.

- To cancel the attenuation, select **[OFF]**.

#### <NAV Setup>

Press **[Enter]** to display the setup screen for the navigation unit. See the instruction manual supplied for the navigation unit.



# BLUETOOTH

## Information for using Bluetooth® devices



Bluetooth is a short-range wireless radio communication technology for mobile devices such as mobile phones, portable PCs, and other devices. Bluetooth devices can be connected without cables and communicate with each other.

### Notes

- While driving, do not perform complicated operations such as dialing numbers, using the phone book, etc. When you perform these operations, stop your car in a safe place.
- Some Bluetooth devices may not connect to this unit depending on the Bluetooth version of the device.
- This unit may not work for some Bluetooth devices.
- Connecting conditions may vary depending on your environment.
- For some Bluetooth devices, the device is disconnected when the unit is turned off.

### About mobile phones compatible with Phone Book Access Profile (PBAP)

If your mobile phone supports PBAP, you can display the following items on the touch panel screen when the mobile phone is connected.

- Phone book
- Dialed calls, received calls, and missed calls (up to 10 entries in total)

## Connecting Bluetooth devices

### ❑ Registering a new Bluetooth device

When you connect a Bluetooth device to the unit for the first time, pair the unit and the device. Pairing allows Bluetooth devices to communicate with each other.

- The pairing method differs depending on the Bluetooth version of the device.
  - For devices with Bluetooth 2.1: You can pair the device and the unit using SSP (Secure Simple Pairing) which only requires confirmation.
  - For devices with Bluetooth 2.0: You need to enter a PIN code both on the device and unit for pairing.
- Once the connection is established, it is registered in the unit even if you reset the unit. Up to five devices can be registered in total.
- Two devices for Bluetooth phone and one for Bluetooth audio can be connected at a time. However, when “BT Audio” is selected as the source, you can connect to five Bluetooth audio devices and switch between these five devices.
- To use the Bluetooth function, you need to turn on the Bluetooth function of the device.
- To use the registered device, you need to connect the device to the unit. (Page 55)


### Auto pairing

When <Auto Pairing> is set to [ON], iOS devices (such as iPhone) are automatically paired when connected via USB. (Page 60)

### Pairing a Bluetooth device using SSP (for Bluetooth 2.1)

When the Bluetooth device is compatible with Bluetooth 2.1, a pairing request is sent from an available device.

- 1 Search for the unit (“DDX\*\*\*\*”) from your Bluetooth device.
- 2 Confirm the request both on the device and the unit.



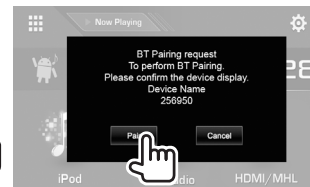


- Press [Cancel] to reject the request.


## BLUETOOTH
 
### Pairing a Bluetooth device using a PIN code (for Bluetooth 2.0)



- 1 Display the <Bluetooth Setup> screen.  
On the Home screen:

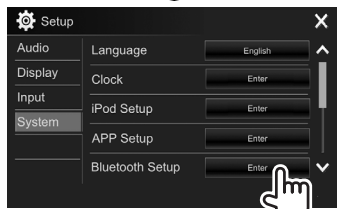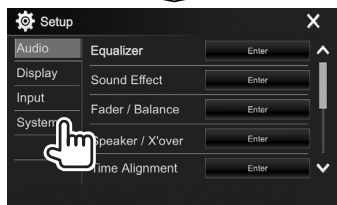

 - You can also display the <Bluetooth Setup> screen by pressing [📶] on the phone control screen. (Page 57)




- 2 Change the PIN code.
  - If you wish to skip changing the PIN code, go to step 3.
  - The PIN code is initially set to "0000".
  - The maximum number of digits in the PIN code is 15.

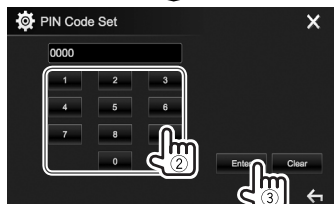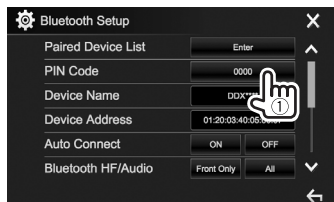

- Press [Clear] to delete the last entry.
  - Press and hold [Clear] to delete the PIN code.
- 3 Search for the unit ("DDX\*\*\*\*") from your Bluetooth device.

- 4 Select the unit ("DDX\*\*\*\*") on your Bluetooth device.
  - If a PIN code is required, enter "0000" (initial).

When pairing is complete, the device is listed on the <Paired Device List>.

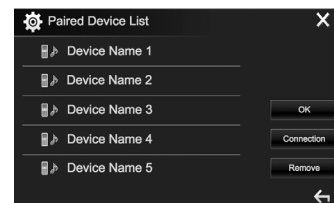


- To use the paired device, connect the device on the <Paired Device List> screen. (Page 55)

## BLUETOOTH

### ❑ Connecting/disconnecting a registered Bluetooth device

Two devices can be connected simultaneously.


1 Display the <Bluetooth Setup> screen.  
(Page 54)

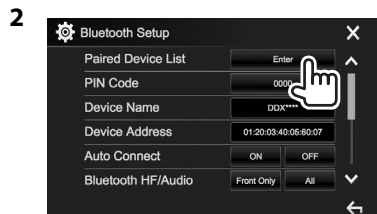

3 Select the device you want to connect (①), then press [Connection] (②).



4 Select [ON] (to connect) or [OFF] (to disconnect) for the target (①), then display the <Paired Device List> screen (②).

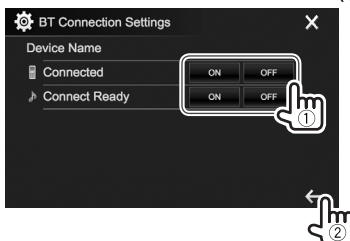


📱: Mobile phone

🎧: Audio device

- The status is shown as follows:
  - “Connecting”: Connection is in progress.
  - “Connected”: A connection has been established.
  - “Connect Ready”: A connection can be established.
  - “Disconnecting”: Disconnection is in progress.
  - “Disconnected”: No connection is established.


5 Connect the selected device.

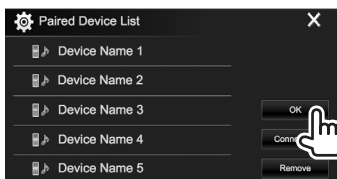


- When a Bluetooth mobile phone is connected, the signal strength and battery level are displayed when the information is acquired from the device.

### ❑ Deleting a registered Bluetooth device

1 Display the <Bluetooth Setup> screen.  
(Page 54)

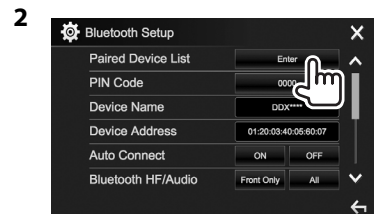

3 Select a device to delete (①), then press [Remove] (②).

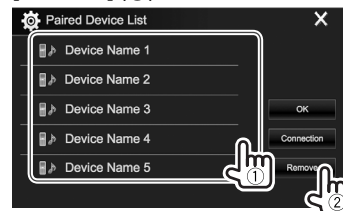


A confirmation message appears. Press [Yes].

## BLUETOOTH

### Using a Bluetooth mobile phone


#### ❑ Receiving a call

When a call comes in...

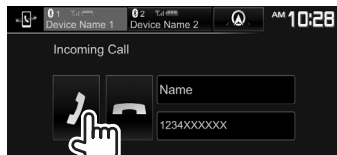

- Call information is displayed if acquired.
- Phone operation is not available while the picture from the connected camera is displayed. (Page 47)

#### To reject a call

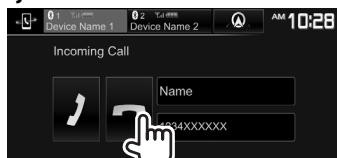

**When <Auto Response> is set to [ON]** (Page 60)  
The unit answers incoming calls automatically.

#### When receiving a call during navigation guidance (only for DDX7051BT/DDX751WBT/DDX517BT)

The screen is switched automatically. To return to the navigation screen, press [Q].



#### ❑ Ending a call

While talking...



#### ❑ Adjusting the volume of calls/earpiece/microphone

While talking...



- You can adjust the volume level between -10 to 10 (initial: -4).
- Use the monitor panel to adjust the call/earpiece volume. (Page 9)

#### ❑ Switching between handsfree mode and phone mode

While talking...



Each time you press the button, the talking method is switched (📞 ↔ 📱 : handsfree mode / 📞 ↔ 📱 : phone mode).

#### ❑ Adjusting the noise reduction/echo cancel level

While talking...





- To adjust the noise reduction volume (between -5 to 5, initial: 0) : Adjust <NR LEVEL>.
- To adjust the echo volume (between -5 to 5, initial: 0) : Adjust <EC LEVEL>.

## BLUETOOTH

### ❑ Sending text during a call

You can send text during a call using the DTMF (Dual Tone Multi Frequency) function.

While talking...

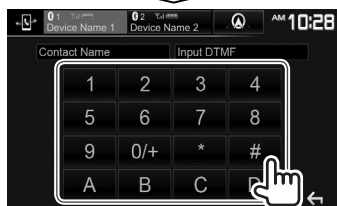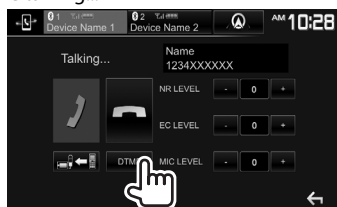

### ❑ Switching between two connected devices

You can change the device to use in the following situations:

- When 2 devices are connected
- While in phone control screen

 


- The active device is highlighted.

### ❑ Making a call

- 1 Display the phone control screen.  
On the Home screen:

- Press [ ] to change the page.



- You can also display the phone control screen:
  - By pressing TEL/VOICE on the monitor panel
  - By pressing [TEL] on the pop-up short-cut menu (Page 13)

- 2 Select a method to make a call.



- 1 From the call history\*
- 2 From the phone book\*
- 3 From the preset list
  - To preset, see page 59.
- 4 Direct number entry
- 5 Voice dialing

- You can display the <Bluetooth Setup> screen by pressing [ ].

- \* When the mobile phone is not compatible with Phone Book Access Profile (PBAP), the call history and the phone book are not displayed.

### From the call history/phone book/preset list

- 1



- [ ] From the call history (missed calls/received calls/dialed calls)
- [ ] From the phone book
- [ ] From the preset list

- 2 Select the target ①, then make a call ②.



- You can change the page to display more items by pressing [ ]/[ ].

Continued on the next page...

## BLUETOOTH

- To use the A to Z search in the phone book:

1



2 Select the initial.

- If the initial character is a number, press [1,2,3...] and then select the number.




3 Select a phone number from the list.



- To display other phone numbers:  
When the phone book list is displayed, you can switch between phone numbers if several phone numbers are registered for the same contact (up to 10 phone numbers per contact).

1 Switch the phone number.

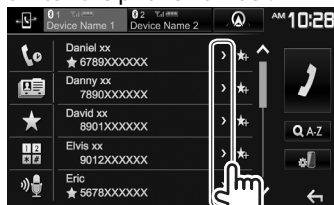

- The phone number switches each time [>] is pressed.

2 Select a phone number to call.



### Direct number entry

You can enter up to 31 numbers.



- Press [X] to delete the last entry.
- Press and hold [0/+] to add "+" to the phone number.

### Voice dialing

- Available only when the connected mobile phone has a voice recognition system.

1 Activate voice dialing.

On the phone control screen:



- You can also activate voice dialing by holding TEL/VOICE on the monitor panel.

2 Say the name of the person you want to call.

- If the unit cannot find the target, the following screen appears. Press [Start], then say the name again.



To cancel voice dialing: Press [Cancel].

## BLUETOOTH

### ❑ Presetting phone numbers

You can preset up to 5 phone numbers.

- 1 Display the phone control screen.  
(Page 57)
- 2 Select phone book or call history.



- 3 Select a phone number to preset.



The preset list is displayed.

- 4 Select a preset number to store into.



- To display the preset list, press [★] on the phone control screen. (Page 57)
- To delete preset phone number, press [🗑️] besides the phone number on the preset list.

### Using the Bluetooth audio player

- To register a new device, see page 53.
- To connect/disconnect a device, see page 55.
- When “BT Audio” is selected as the source, you can connect to five Bluetooth audio devices and switch between these five devices.

### ❑ Indications and buttons on the source control screen



- The operation buttons, indications and information displayed on the screen differ depending on the connected device.

### Playback information

- 1 Tag data (current track title/artist name/album title)\*1
  - Pressing [←] scrolls the text if not all of the text is shown.
- 2 The signal strength and battery level (Appear only when the information is acquired from the device.)
- 3 Playing time\*1
- 4 Playback status\*1
- 5 Connected device name
  - Pressing the button switches to another connected Bluetooth audio device.

### Operation buttons

- [>>]
- Displays the other operation button window.
- To hide the window, press [≪≪].
- [📶]
- Displays the <Equalizer> screen. (Page 62)
- [Q]
- Displays the audio menu. (Page 60)
- [⏮] [⏭]
- Selects a track. (Press)
  - Reverse/forward search.\*1 (Hold)
- [▶]
- Starts playback.
- [⏸]
- Pauses playback.
- [🔀]
- Selects random playback mode.\*2
- [🔄]
- Selects repeat playback mode.\*2
- [⚙️]
- Displays the <Bluetooth Setup> screen. (Page 60)

 
\*1 Available only for devices compatible with AVRCP 1.3.

\*2 The random and repeat functions vary depending on the Bluetooth audio device.



## BLUETOOTH

### ❑ Selecting an audio file from the menu

- 1
- 2 Select a category (①), then a desired item (②).




  - Select an item in each layer until you reach and select the desired file.
- You can change the page to display more items by pressing [**▲**]/[**▼**].
- Press [**⏮**] to return to the upper layer.



- You can also display the **<Bluetooth Setup>** screen by pressing [**⏮**] on the phone control screen (Page 57) or [**⏮**] on the **"BT Audio"** source control screen (Page 59).

### 2 Configure the Bluetooth settings.

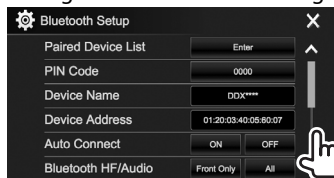

- You can change the page to display more items by pressing [**▲**]/[**▼**].

### ❑ Setting items

 
<b>&lt;Paired Device List&gt;</b>	Press [ <b>Enter</b> ] to show the list of registered devices. You can connect a device or delete registered devices. (Page 55)
<b>&lt;PIN Code&gt;</b>	Changes the PIN code of the unit. (Page 54)
<b>&lt;Device Name&gt;</b>	Shows the device name to be shown on the Bluetooth device — <b>DDX****</b> .

<b>&lt;Device Address&gt;</b>	Shows the device address of the unit.
<b>&lt;Auto Connect&gt;</b>	<ul style="list-style-type: none"> <li>• <b>ON</b> (Initial): A connection is automatically established with the last connected Bluetooth device when the unit is turned on.</li> <li>• <b>OFF</b>: Cancels.</li> </ul>
<b>&lt;Bluetooth HF/Audio&gt;</b>	Selects the speakers used for Bluetooth (both phone and audio player). <ul style="list-style-type: none"> <li>• <b>Front Only</b>: Front speakers only.</li> <li>• <b>All</b> (Initial): All speakers.</li> </ul>
<b>&lt;Auto Response&gt;</b>	<ul style="list-style-type: none"> <li>• <b>ON</b>: The unit answers the incoming calls automatically after 5 seconds.</li> <li>• <b>OFF</b> (Initial): The unit does not answer the calls automatically. Answer the calls manually.</li> </ul>
<b>&lt;Auto Pairing&gt;</b>	<ul style="list-style-type: none"> <li>• <b>ON</b> (Initial): Establishes pairing automatically with the connected iOS device (such as iPhone) even if the Bluetooth function is deactivated on the device. (Auto pairing may not work for some devices depending on the iOS version.)</li> <li>• <b>OFF</b>: Cancels.</li> </ul>
<b>&lt;Initialize&gt;</b>	Hold [ <b>Enter</b> ] to reset all settings you have made for using Bluetooth mobile phones and Bluetooth audio players.

## Settings for Bluetooth devices

You can change various settings for using Bluetooth devices on the **<Bluetooth Setup>** screen.

- 1 Display the **<Bluetooth Setup>** screen. On the Home screen:





# SETTINGS

## Settings for using applications of iPod touch/iPhone/Android


Before using applications of iPod touch /iPhone/ Android, select the device to use.

When connecting the device for the first time, the setup screen (for connection, etc.) appears. Follow the procedure on the setup screen to configure the settings.

### Preparation:

- **For Android:** Connect the Android device via Bluetooth. (Page 53)
- **For iPod touch/iPhone:**
  - Connect iPod touch/iPhone with a cable (Page 82) or via Bluetooth (Page 53).
  - Select the connection method of iPod touch/iPhone on **<iPod Setup>**. (Page 23)

- 1 Display the **<APP Setup>** screen.  
On the Home screen:

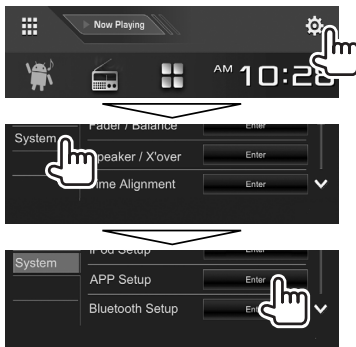


- If **[Enter]** for **<APP Setup>** cannot be selected, put the unit in standby. (Page 10)

- 2 Select the device type (①), then press **[Change]** (②).



- 3 Select the connection method (①), then confirm the selection (**[OK]** or **[Next]**) (②).

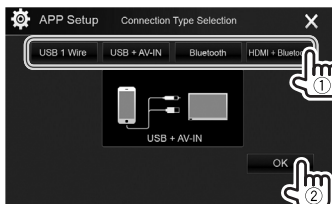

### For Android:

**[Bluetooth]** Select this when the device is connected via Bluetooth. (Go to step 4.)

**[HDMI/MHL+ Bluetooth]\*** Select this when the Android device is connected both by cable KCA-MH100 (optional accessory) or KCA-HD100 (optional accessory) to the HDMI/MHL input terminal and via Bluetooth. (Go to step 4.)

### For iPod/iPhone:


**[USB 1 Wire]** Select this when the iPod/iPhone is connected using KCA-iP102 (optional accessory) or KCA-iP103 (optional accessory).

**[USB + AV-IN]** Select this when the iPod/iPhone is connected using KCA-iP202 (optional accessory).

**[Bluetooth]** Select this when the iPod/iPhone is connected via Bluetooth. (Go to step 4.)

**[HDMI + Bluetooth]\*** Select this when the iPod/iPhone is connected using HDMI cable KCA-HD100 (optional accessory) and KCA-iP103 (optional accessory) through a Lightning-Digital AV adapter (accessory of the iPod/iPhone). (Go to step 4.)

- 4 When selecting **[HDMI + Bluetooth]\*** or **[Bluetooth]** as the connection method, the paired device list appears. Select the target device (①), then press **[OK]** to connect (②).

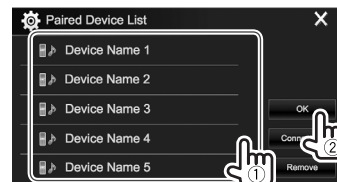

- If the device is already connected, skip step ①.

\* Appears only for DDX7051BT/DDX751WBT/DDX517BT.

## SETTINGS


 
### Sound adjustment

#### ❑ Using the sound equalization

- The adjustments are memorized for each source until you adjust the sound again. If the source is a disc, the adjustments are stored for each of the following categories.
  - DVD/VCD
  - CD
  - DivX\*/MPEG1/MPEG2/MP3/WMA/WAV/AAC/FLAC
- You cannot adjust the sound when the unit is in standby.

#### Selecting a preset sound mode

- Display the **<Equalizer>** screen.  
On the Home screen:

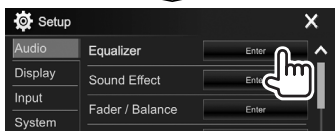

- Select a sound mode.




- You can also display the **<Equalizer>** screen by pressing [|||||] on the source control screen.

\* Only for DDX7051BT/DDX751WBT/DDX517BT/DDX417BT.

#### Storing your own adjustments—Adjusting the sound precisely

- Select a sound mode. (See the left column.)
- Select a band and adjust the level of the selected band.
  - You can adjust the level by dragging the slider or using [▲]/[▼].
  - Repeat this step to adjust the level of other bands.

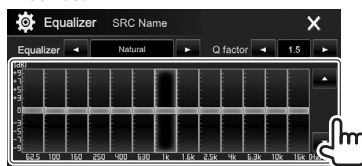

The adjustments are stored and **<User>** is activated.

- Adjust the sound.



- <Q factor>** Adjusts the width of the frequency.
- <Bass EXT>** Activates ([ON])//deactivates ([OFF]) bass.
- <SW LEVEL>** Adjusts the subwoofer level.\*



- To apply the adjusted equalizer to all playback sources, press **[ALL SRC]**, then press **[OK]** to confirm.
- To clear the adjustment, press **[EQ INIT]**.

\* Not adjustable when **<None>** is selected for subwoofer on the **<Speaker Select>** screen. (Page 63)


## SETTINGS
 
### ❑ Setting the speakers—car type, speaker size and crossover frequency


- 1 Display the **<Car Setting>** screen.  
On the Home screen:

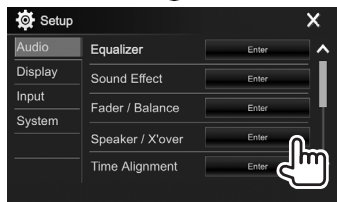

- 2 Select a car type (①), select the location of the speakers (②), then display the **<Speaker Select>** screen (③).

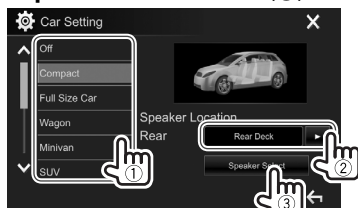


- 3 Select the speaker type (①), select the size of the selected speaker (②), then display the **<X'over>** screen (③).

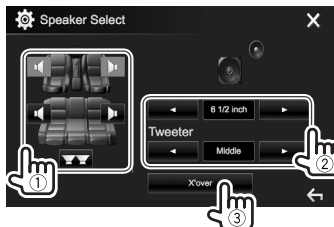

- When a speaker is not connected, select **<None>**.
- When setting the front speakers, also select the speaker size for **<Tweeter>**.

- 4 Adjust the crossover frequency of the selected speaker.

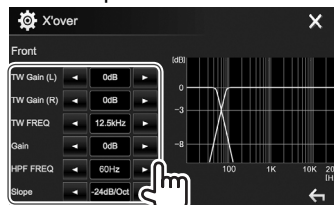

- <TW Gain (L)>/<TW Gain (R)>** Adjusts the output volume of the tweeter (left/right).<sup>\*1\*2</sup>
- <TW FREQ>** Adjusts the crossover frequency for the tweeter.<sup>\*1\*2</sup>
- <Gain>** Adjusts the output volume of the selected speaker.
- <HPF FREQ>** Adjusts the crossover frequency for the front or rear speakers (high pass filter).<sup>\*3</sup>
- <LPF FREQ>** Adjusts the crossover frequency for the subwoofer (low pass filter).<sup>\*4</sup>
- <Slope>** Adjusts the crossover slope.<sup>\*5</sup>
- <Phase>** Selects the phase for the subwoofer.<sup>\*4</sup>

<sup>\*1</sup> Appears only when the front speakers are selected.

<sup>\*2</sup> Adjustable only when **<Tweeter>** is set to **<Small>**, **<Middle>**, or **<Large>** on the **<Speaker Select>** screen.

<sup>\*3</sup> Appears only when the front or rear speakers are selected.

<sup>\*4</sup> Appears only when the subwoofer is selected.

<sup>\*5</sup> Not adjustable when **<HPF FREQ>** or **<LPF FREQ>** is set to **<Through>**.

# SETTINGS


## ❑ Adjusting the Digital Time Alignment (DTA)

Make fine adjustments to the delay time of the speaker output to create a more suitable environment for your vehicle.


- 1 Display the **<Time Alignment>** screen.  
On the Home screen:



- 2 Select the listening position (**<All>**, **<Front L>**, **<Front R>** or **<Front All>**).

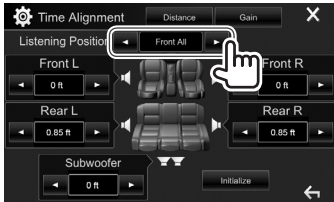


- 3 Select an item to make an adjustment.

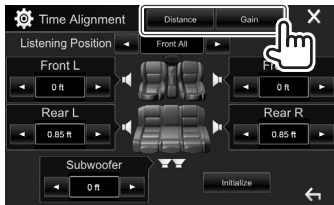

**[Distance]** Adjusts the Digital Time Alignment (DTA) value.  
**[Gain]** Adjusts the output volume of the selected speaker.

- 4 Adjust each speaker setting.

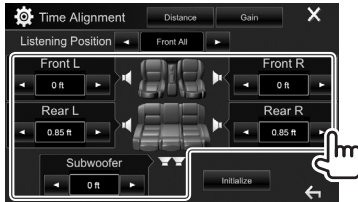


- To determine the adjustment value, see the right column.
- To initialize the setting value, press **[Initialize]**.

## Determining the value for **<Position DTA>** adjustment

If you specify the distance from the center of the currently set listening position to every speaker, the delay time will be automatically computed and set.

- ① Determine the center of the currently set listening position as the reference point.
- ② Measure the distances from the reference point to the speakers.
- ③ Calculate the differences between the distance of the furthest speaker and other speakers.
- ④ Set the DTA value calculated in step ③ for individual speakers.
- ⑤ Adjust gain for individual speakers.

Example: When **<Front All>** is selected as the listening position

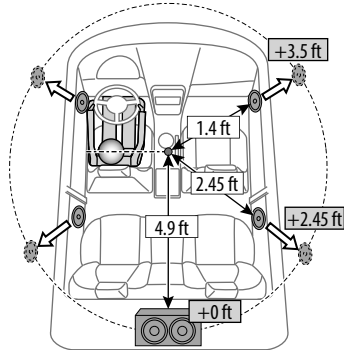

## SETTINGS

### Adjustment for video playback

#### Adjusting the picture

You can adjust the picture quality.

- 1 Display the picture adjustment screen.  
On the source control screen:



- 2 Select **[DIM ON]** (dimmer on) or **[DIM OFF]** (dimmer off) (①), then adjust the picture (②).



 
- <Bright>** Adjusts the brightness. (–15 to +15)
- <Contrast>** Adjusts the contrast. (–10 to +10)
- <Black>** Adjusts the blackness. (–10 to +10)
- <Color>** Adjusts the color. (–10 to +10)
- <Tint>** Adjusts the tint. (–10 to +10)
- <Sharpness>** Adjusts the sharpness. (–2 to +2)

- You can also display the picture adjustment screen by selecting **[Screen Adjustment]** on the pop-up short-cut menu (Page 13).

#### Changing the aspect ratio

You can change the aspect ratio for video playback.

- 1 Display the aspect ratio selection screen.  
On the source control screen:



- 2 Select the aspect ratio.



**<Full>\***

For 16:9 original pictures

4:3 signal



16:9 signal



**<Just>**

For viewing 4:3 pictures naturally on the wide screen

4:3 signal



16:9 signal



**<Normal>\***

For 4:3 original pictures

4:3 signal



16:9 signal



**<Auto>**

For "DISC"/"USB" only: The aspect ratio is automatically selected to match the incoming signals.

\* While DivX is played back with **<Screen Ratio>** set to **[16:9]** (Page 18 for discs/Page 20 for USB), the aspect ratio may not set correctly.

## SETTINGS


### ❑ Zooming the picture

You can zoom the picture (<Full>, <Zoom1> to <Zoom3>).

- When <Aspect> is set to <Just> or <Auto> (Page 65), the picture is zoomed with the aspect ratio of the <Full> setting.

- 1 Display the magnification level selecting screen.

On the source control screen:

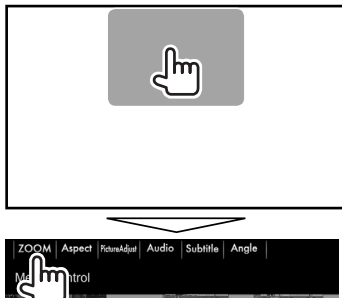

- 2 Change the magnification (①), then move the zooming frame (②).






- The zoom function cannot be used for some video sources.


### Changing the display design

 You can change the background and panel color.

- 1 Display the <User Customize> screen. On the Home screen:

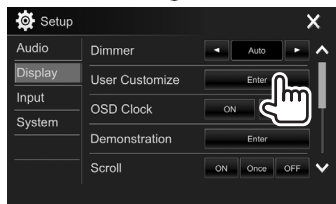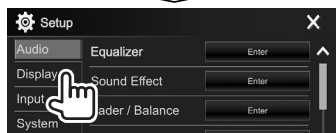


- 2 Select an item to change (background design: [Background]/panel color: [Panel Color]).

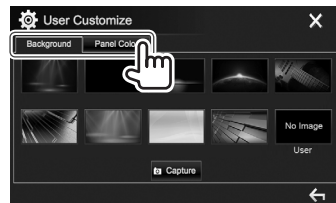


- 3 Select a background/panel color.

#### To select a background

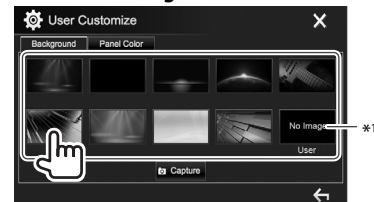

#### To select a panel color

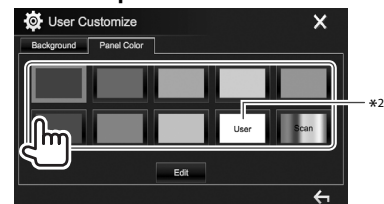

- Selecting [Scan] changes the illumination color gradually.


\*1 Store your own scene beforehand. (Page 67)

\*2 Store your own color adjustment beforehand. (Page 67)

## SETTINGS

### ❑ Making your own color adjustment

1 Select **[Panel Color]** on the **<User Customize>** screen. (Page 66)

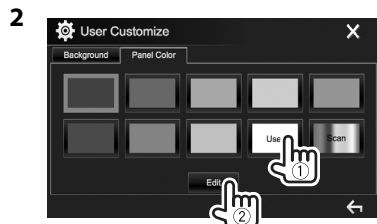

3 Select the dimmer setting for the color (①), then adjust the color (②).



### ❑ Storing your own scene for the background image


While playing a video or picture, you can capture an image and use the captured image as a background.

- You cannot capture copyrighted content and images from iPod/iPhone.
- When using a JPEG file as the background, make sure that the resolution is 800 x 480 pixels.
- The color of the captured image may look different from that of the actual scene.


1 Play a video or picture.

2 Display the **<User Customize>** screen. (Page 66)

3 Display the image adjustment screen.

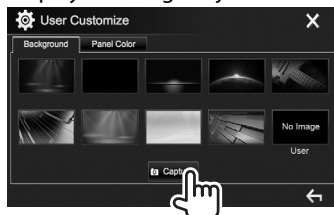

4 Adjust the image.

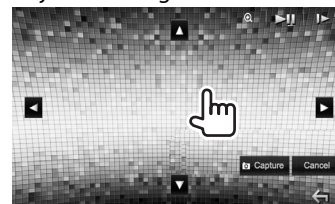


[▲][▼][◀][▶] Moves the zooming frame.  
[+] Magnifies the scene. (<OFF>, <Zoom1> – <Zoom3>)

[▶||]\* Starts/pauses playback.  
[|▶]\* Advances scenes frame-by-frame.

- To cancel the capture, press **[Cancel]**.

5 Capture the image displayed on the screen.

 

A confirmation message appears. Press **[Yes]** to store the newly captured image. (The existing image is replaced with the new one.)

- Press **[No]** to return to the previous screen.




\* Not displayed when playing an external component connected to the iPod/AV-IN input terminal.

## SETTINGS
  
### Customizing the Home screen

You can arrange the items to display on the Home screen.

- 1 Display the **<Home Customize>** screen.  
On the Home screen:
  - You can change the page to display more items by pressing [**▲**]/[**▼**].

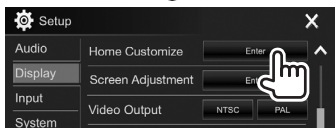

- 2 Select the position to place the icon (①), then select the item you want to display in the selected position (②).






Repeat this step to place icons for other items.

### Customizing the system settings

 
#### Memorizing/recalling the settings

- You can memorize the settings changed in the **<Setup>** menu and recall the memorized settings any time.
- The memorized settings are kept even when the unit is reset.

- 1 Display the **<SETUP Memory>** screen.  
On the Home screen:
  - You can change the page to display more items by pressing [**▲**]/[**▼**].

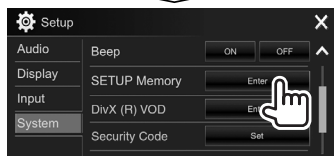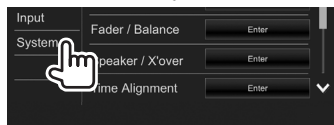


2

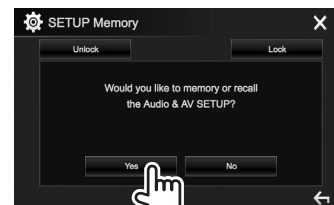

- To cancel, press [**No**].

- 3 Select an operation.

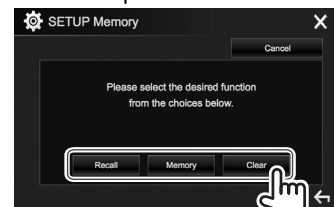

**[Recall]** Recalls the memorized settings.

**[Memory]** Memorizes the current settings.

**[Clear]** Clears the currently memorized settings.

- To cancel, press [**Cancel**].


A confirmation message appears. Press [**Yes**].



## SETTINGS

### ❑ Locking the settings

You can lock the settings to prevent them from being changed.

-  is shown beside the settings that can be locked.

- 1 Display the **<SETUP Memory>** screen.  
(Page 68)



**To unlock the setting:** Press [Unlock].

### ❑ Updating the system



You can update the system by connecting a USB device containing an update file.



 
- To update the system, visit <<http://www2.jvckenwood.com/cs/ce/>>.

- 1 Create an update file and copy it to a USB device.


- 2 Display the **<System Information>** screen.

On the Home screen:

- You can change the page to display more items by pressing []/[].

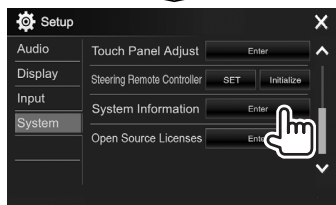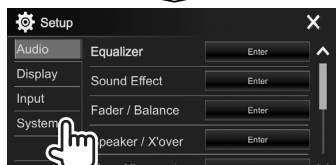

3

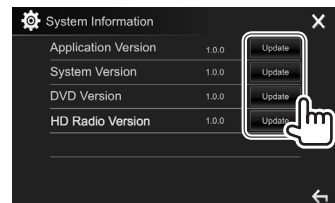

**<Application Version>**

Updates the system application.

**<System Version>**

Updates the system.

**<DVD Version>**

Updates the DVD system application.

**<HD Radio Version>\***

Updates the HD Radio module application.

- 4 Connect the USB device with the update file.

- To connect a USB device, see page 82.

The system update starts. It may take a while. If the update has been completed successfully, "Update Completed" appears. Reset the unit.

- Do not disconnect the USB device while updating.
- If the update has failed, turn the power off and then on, and retry the update.
- Even if you have turned off the power during the update, you can restart the update after the power is turned on. The update will be performed from the beginning.

\* Only for DDX794/DDX774BH/DDX594/DDX574BH.

## SETTINGS



 
### ❑ Adjusting the touch position

You can adjust the touch position on the touch panel if the position touched and the operation performed do not match.


#### 1 Display the <Touch Panel Adjust> screen.

On the Home screen:

- You can change the page to display more items by pressing [**▲**]/[**▼**].

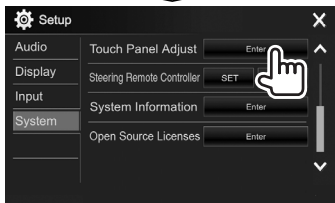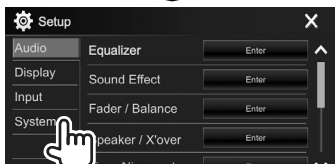



#### 2 Touch the center of the marks at the upper left (①), the lower center (②), then the upper right (③) as instructed.

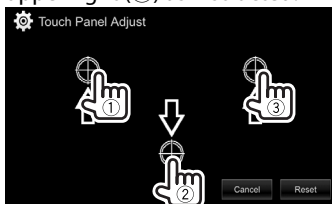

- To reset the touch position, press [**Reset**].
- To cancel the current operation, press [**Cancel**].

## Setting menu items
 
### ❑ Displaying the <Setup> menu screen

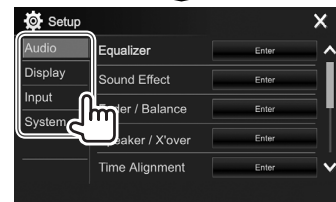

- You can change the page to display more items by pressing [**▲**]/[**▼**].
- You can also display the <Setup> screen by selecting [**SETUP**] on the pop-up short-cut menu (Page 13).
- You cannot change the <Audio> settings screen in the following situations:
  - When the unit is in standby (Page 10)
  - When the Bluetooth phone is used (making or receiving a call, during a call, or while voice dialing)
  - During navigation guidance\*

\* Only for DDX7051BT/DDX751W8TL/DDX517BT.

## SETTINGS

### ☐ <Audio> setting screen

#### <Equalizer>

Change the sound mode or adjust and store the equalization for each source. (Page 62)

- **Equalizer:** Selects the preset sound mode.
  - **Natural** (Initial)/**Rock/Pops/Easy/Top40/Jazz/Powerful/User**
- **Q factor:** Adjusts the width of the frequency.
  - **1.35/1.5** (Initial)/**2.0**
- **Bass EXT:** Activates/deactivates bass.
  - **ON/OFF** (Initial)
- **SW LEVEL:** Adjusts the subwoofer level.
  - **-50 to +10** (Initial: **0**)


#### <Sound Effect>

Adjust the sound effect.

- **Loudness:** Adjusts loudness.
  - **OFF** (Initial)/**Low/High**
- **Bass Boost:** Selects the bass boost level.
  - **OFF** (Initial)/**Level 1/Level 2/Level 3/Level 4/Level 5**
- **Drive Equalizer:** You can reduce the driving noise by raising the bandwidth.
  - **OFF** (Initial)/**ON**
- **Space Enhancer**<sup>\*1</sup>: Virtually enhances the sound space using the Digital Signal Processor (DSP) system. Select the enhance level.
  - **OFF** (Initial)/**Small/Medium/Large**

- **Supreme**<sup>\*2</sup>: Restores the sound lost due to audio compression to a realistic sound.
  - **OFF/ON** (Initial)
- **Realizer:** Virtually makes the sound more realistic using the Digital Signal Processor (DSP) system. Select the sound level.
  - **OFF** (Initial)/**Level 1/Level 2/Level 3**
- **Stage EQ:** You can move the center of the sound to the lower or higher point. Select the height.
  - **OFF** (Initial)/**Low/Middle/High**

#### <Fader/Balance>

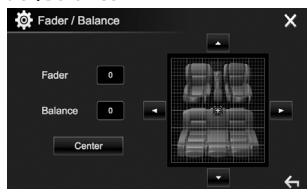

**Fader:** Adjusts the front and rear speaker output balance.

- **F15 to R15** (Initial: **0**)
  - When using a two-speaker system, set the fader to the center (**0**).

**Balance:** Adjusts the left and right speaker output balance.

- **L15 to R15** (Initial: **0**)

Press [▲]/[▼]/[◀]/[▶] or drag [🔄] to adjust.

- To clear the adjustment, press [**Center**].

#### <Speaker/X'over>

Select the car type/speaker size and adjust the crossover frequency. (Page 63)

#### <Time Alignment>

Select the listening position, then adjust the delay time of the speaker output to create a more suitable environment for your vehicle. (Page 64)

#### <Volume Offset>

Adjust and store the auto-adjustment volume level for each source. (For discs, the adjustment is stored for each of the following categories: DVD/VCD, CD, and DivX/MPEG1/MPEG2/MP3/WMA/WAV/AAC/FLAC.) The volume level will automatically increase or decrease when you change the source.

- **-15 to +6** (Initial: **00**)

<sup>\*1</sup> You cannot change the setting when “**Radio**” is selected as the source.

<sup>\*2</sup> This function works only when “**DISC**”/“**USB**”/“**iPod**”/“**Android**”<sup>™</sup> is selected as the source.

## SETTINGS

### <Display> setting screen

#### <Dimmer>

- **Auto** (Initial): Dims the screen and button illumination when you turn on the headlights.
  - The ILLUMI lead connection is required. (Page 79)
- **ON**: Activates dimmer.
- **OFF**: Cancels.
- **NAV**<sup>\*1</sup>: Activates or deactivates dimmer according to the day/night display setting of the connected navigation unit.

#### <User Customize>

Change the display design. (Page 66)

#### <OSD Clock>

- **ON**: Displays the clock while a video source is playing.
- **OFF** (Initial): Cancels.

#### <Demonstration>

- **ON** (Initial): Activates the demonstration on the screen.
- **OFF**: Cancels.

#### <Scroll>

- **ON** (Initial): Scrolls the displayed information repeatedly.
- **Once**: Scrolls the displayed information once.
- **OFF**: Cancels.

Pressing [**<**] scrolls the text regardless of this setting.

#### <Home Customize>

Change the items to display on the Home screen. (Page 68)

#### <Screen Adjustment>

Adjust the brightness and blackness of the screen. Press [**Enter**] to display the setting screen, select [**DIM ON**] (dimmer on)/[**DIM OFF**] (dimmer off), then change the following settings:

- **Bright**: Adjusts brightness.
  - **-15 to +15** (Initial: **0** for dimmer on/+**15** for dimmer off)
- **Black**: Adjusts blackness.
  - **-10 to +10** (Initial: **0**)

#### <Video Output><sup>\*2</sup>

Select the color system of the external monitor.

- **NTSC** (Initial)/**PAL**

#### <Panel Angle><sup>\*3</sup>

Adjust the panel angle. (Page 10)

#### <Viewing Angle>

Select the viewing angle in relation to the monitor panel to make the panel easier to see.

- **Under 0°** (Initial)/**5°/10°/15°/20°**

<sup>\*1</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT.

<sup>\*2</sup> "Please Power Off" appears when the setting is changed. Turn off the power, then turn on to enable the change.

<sup>\*3</sup> Only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL.

### <Input> setting screen

#### <Front Camera><sup>\*1</sup>

Configure the front view camera settings. (Page 47)

- **Front Camera**: Activates or deactivates the front view camera.
- **Reverse Image**: Selects whether to reverse the picture from the front view camera or not.

#### <Rear Camera>

Configure the rear view camera settings.

- **Rear Camera Interruption** (Page 47):
  - **ON**: Displays the picture from the rear view camera when you shift the gear to the reverse (R) position.
  - **OFF** (Initial): Select this when no camera is connected.
- **Parking Guidelines**: Displays (**ON**: Initial) or hides (**OFF**) the parking guidelines. (Page 49)
- **Guidelines Setup**: Adjusts the parking guidelines. (Page 49)

#### <Parking Assist><sup>\*2</sup>

Configure settings for using the ADS adapter.

- **Parking Assist Display**: When an ADS adapter is connected, you can display information about obstacles around the car.
  - **ON**: Always displays information.
  - **Dyn.** (Initial): Displays information when the sensor detects obstacles.
  - **OFF**: Cancels.
- **Parking Assist Position**: Selects where information about obstacles is displayed on the screen
  - **Left/Right** (Initial)

#### <Navigation><sup>\*3</sup>

Change the navigation settings. (Page 52)

#### <TV Tuner Control><sup>\*3</sup>

- **ON**: Enables to control TV operation on the "AV-IN".
- **OFF** (Initial): Select this to use "AV-IN" with the other component than TV Tuner.

<sup>\*1</sup> Only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394.

<sup>\*2</sup> Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

<sup>\*3</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT.

## SETTINGS

### <System> setting screen

#### <Language> <sup>\*1</sup>

Select the text language used for on-screen information.

- **English /Español/Français/Deutsch/Italiano/Nederlands/Ελληνικά/Português/Türkçe/Čeština/Polski/Magyar/Русский/עברית/فارسی/العربية/ไทย/ភាសាខ្មែរ/简体中文/繁體中文/Bahasa Indonesia/한국어**
  - For external monitors, only English/Spanish/French/German/Italian/Dutch/Russian/Portuguese are available. If another language has been selected, the text language for external monitors will be set to English.
- **GUI Language:** Selects the language used for displaying operation buttons and menu items.
  - **Local** (the language selected above)/**English** (Initial)

#### <Clock>

Adjust the clock time. (Page 6)

#### <iPod Setup>

Specify the connection method of iPod/iPhone. (Page 23)

#### <APP Setup>

Configure the App setup. (Page 61)

#### <Bluetooth Setup>

Configure settings for using a Bluetooth device, such as connection and other general operations. (Page 60)

#### <OEM Setup> <sup>\*2</sup>

Show information about, and change the settings for using the ADS adapter.

#### <Beep>

- **ON** (Initial): Activates the key-touch tone.
- **OFF:** Cancels.

#### <SETUP Memory>

You can memorize, recall, or clear the settings you have made. (Page 68)

#### <DivX(R) VOD> <sup>\*3</sup>

This unit has its own Registration Code. Once you have played back a file with the Registration Code recorded, this unit's Registration Code is overwritten for copyright protection.

- Press [**Enter**] to display the information.
- To return to the previous screen, press [**OK**].

#### <Security Code> <sup>\*3</sup>

Register the security code for the unit. (Page 4)

#### <SI> <sup>\*4</sup>

Activate or deactivate the security function. (Page 5)

#### <Serial Number> <sup>\*5</sup>

Displays the serial number.

#### <Touch Panel Adjust>

Adjust the touch positions of the buttons on the screen. (Page 70)

#### <Steering Remote Controller> <sup>\*3</sup>

Assign functions to the keys on the remote controller of the steering wheel. (Page 76)

#### <System Information>

Displays the version information of the software. You can update the software. (Page 69)

#### <Open Source Licenses>

Shows the Open Source Licenses.

<sup>\*1</sup> "Please Power Off" appears when the setting is changed. Turn off the power, then turn on to enable the change.

<sup>\*2</sup> Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

<sup>\*3</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

<sup>\*4</sup> Only for DDX594/DDX574BH/DDX517BT/DDX417BT/DDX394.

<sup>\*5</sup> Only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX517BT/DDX394.

# REMOTE CONTROLLER

## Overview

DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT:

This unit can be operated using the Remote Controller (RC-DV340) supplied with this unit.

DDX794/DDX774BH/DDX594/DDX574BH/DDX394:

Optional Remote Controller KNA-RCDV331 is designed for controlling this unit. Refer to the instruction manual that comes with the remote controller.

### ⚠ Caution:

- Put the Remote Controller in a place where it will not move during braking or other operations. A dangerous situation could result if the Remote Controller falls down and gets wedged under the pedals while driving.
- Do not leave the battery near fire or under direct sunlight. A fire, explosion or excessive heat generation may result.
- Do not recharge, short, break up or heat the battery, or place it in an open fire. Such actions may cause the battery to leak fluid. If spilled fluid comes in contact with your eyes or clothing, immediately rinse with water and consult a physician.
- Place the battery out of reach of children. In the unlikely event that a child swallows the battery, immediately consult a physician.


You can also operate this unit from Smartphone using KENWOOD Remote APP. For details, visit <http://www.kenwood.com/cs/ce/>>.

## ❑ Battery installation

Use two "AAA"/"R03"-size batteries.

Insert the batteries with the + and – poles aligned properly, following the illustration inside the case.


- Always insert batteries from – poles to avoid bending the springs.

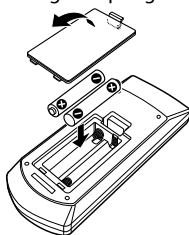

- If the Remote Controller operates only over shorter distances or does not operate at all, it is possible that the batteries are depleted. In such instances, replace both batteries with new ones.

## ❑ Remote Controller mode switch

 The functions operated from the remote controller differ depending on the position of the mode switch.



**AUD mode:** Switch to this mode when controlling a selected source or tuner source, etc.

**DVD mode:** Switch to this mode when playing DVDs or CDs etc. with the player integrated in this unit.

**TV mode:** Not used.

- The position of the remote control mode switch is indicated in the title of each mode, e.g., "AUD mode".

- When controlling a player that is not integrated in the unit, select "AUD" mode.

## Operations from the remote controller

### ❑ Common operations (AUD mode)

SRC	<ul style="list-style-type: none"> <li>• Selects the source.</li> <li>• Hangs up the incoming/current call.</li> </ul>
▲/▼ VOL	Adjusts the volume level.
ATT	Attenuates/restores the sound.
DISP/V.SEL	<p>For DDX7051BT/DDX751WBTL/DDX517BT: Switches between the current source control screen and the navigation screen.</p> <p>For DDX794/DDX774BH/DD594/DDX574BH/DDX417BT/DDX394: Switches to the current source control screen.</p>
ENTER	Enters options.
📞	Answers incoming calls.
FNC/PBC/MENU	Switches the control screen.
MODE/TOP MENU	<p>Changes the aspect ratio.</p> <ul style="list-style-type: none"> <li>• The aspect ratio changes each time you press this key.</li> </ul>
OPEN	<p>Adjusts the panel angle.*</p> <ul style="list-style-type: none"> <li>• The panel angle changes each time you press this key.</li> </ul>

\* Available for DDX7051BT/DDX794/DDX774BH/DDX751WBTL only.

## REMOTE CONTROLLER

### ❑ DVD/VCD (DVD mode)

▲▼◀▶	Moves the cursor when displaying a menu.
◀◀▶▶	Selects a track.
▶/	Starts/pauses playback.
■	Stops and memorizes the point where the disc stops.
0 – 9	<ul style="list-style-type: none"> <li>Specifies the number to search for in direct search.</li> <li>① ②<sub>SKIP</sub> : Fast forwards/backwards. <ul style="list-style-type: none"> <li>Fast forward/backward speed changes each time you press this key.</li> </ul> </li> <li>④<sub>SKIP</sub> ⑤<sub>SKIP</sub> : Slow forwards/backwards during pause.</li> </ul>
MODE/TOP MENU	Shows the disc top menu.
FNC/PBC/MENU	Shows the disc menu.
SUBTITLE	Changes the subtitle language.
ZOOM	Changes the zoom ratio. <ul style="list-style-type: none"> <li>The zoom ratio changes each time you press this key.</li> </ul>
ANGLE	Changes the picture angle. <ul style="list-style-type: none"> <li>The picture angle changes each time you press this key.</li> </ul>
AUDIO	Changes the voice language. <ul style="list-style-type: none"> <li>The voice language changes each time you press this key.</li> </ul>
DIRECT	Enters direct search mode. (See the far right column.)
CLEAR	Deletes a character while in direct search mode.

### ❑ Music Disc/Audio file/Video file/Picture file (AUD mode)

AM –/FM +	Selects a folder.
◀◀▶▶	Selects a track/file.
▶/	Starts/pauses playback.
0 – 9	Specifies the number to search for in direct search.
DIRECT	Enters direct search mode. (See the right column.)

### ❑ Radio/HD Radio\*1/SiriusXM\*2 (AUD mode)

AM –/FM +	Selects the band.
◀◀▶▶	Searches for stations.*3
▶/	Changes the seek mode (AUTO1, AUTO2, MANU).
0 – 9	<ul style="list-style-type: none"> <li>Specifies preset number. (① – ⑤<sub>SKIP</sub>)</li> <li>Specifies the frequency of the station to receive to search for in direct search.</li> </ul>
DIRECT	Enters direct search mode. (See the right column.)

\*1 Only for DDX794/DDX774BH/DDX594/DDX574BH.

\*2 Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

\*3 The search method differs according to the selected seek mode.

### ❑ iPod/Android (AUD mode)

◀◀▶▶	Selects music/videos.
▶/	Starts/pauses playback.

### ❑ USB (AUD mode)

AM –/FM +	Selects a folder.
◀◀▶▶	Selects a file.
▶/	Starts/pauses playback.

#### Searching for an item (chapter/title/folder/file/track) directly

- 1 Press DIRECT to enter the search mode.  
Each time you press DIRECT, the item to search for changes.
- 2 Press a number button to select a desired item.
- 3 Press ENTER to confirm the selection.

#### Searching for a tuner frequency directly

- 1 Press DIRECT to enter the search mode.
- 2 Press number buttons to enter a frequency.
- 3 Press ◀◀▶▶ to confirm the entry.

## REMOTE CONTROLLER


### Using the steering remote controller (Only for DDX7051BT/DDX751WBT/DDX517BT/DDX417BT)

You can assign functions to the keys of the remote controller on the steering wheel.

- This function is available only when your vehicle is equipped with the electrical steering remote controller.
- You can only register/change the functions while you are parked.
- If your steering remote controller is not compatible, learning may not be completed and an error message may appear.


#### □ Registering/changing the functions

- 1 Display the <System> setting screen. On the Home screen:

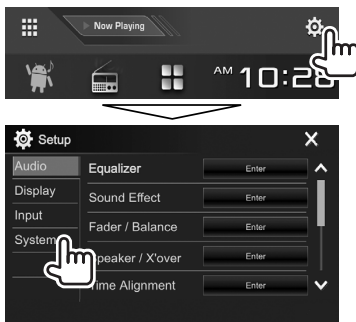


- 2 Display the <Steering Remote Control Setting> screen.

- You can change the page to display more items by pressing [▲]/[▼].

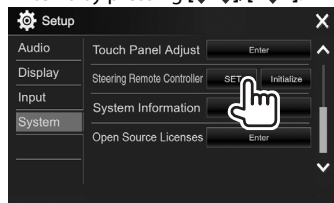

- 3 Press and hold a steering remote controller button to register/change.
- 4 Select a function to assign.

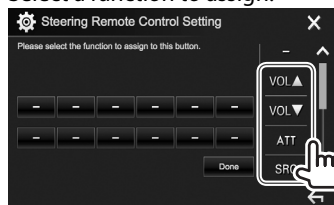

- You can change the page to display more items by pressing [▲]/[▼].


- 5 Repeat steps 3 and 4 as necessary.
- 6 Finish the procedure.



- The unit can register/change all of the buttons' functions at the same time. To do this, press each button in turn and after pressing all of them, press [Done] on the <Steering Remote Control Setting> screen. However, new functions cannot be learned after this operation.
- When changing the functions already learned, touch the button you want to change in step 3 and then touch to select the new function from the function list.
- Confirm the contents of the settable functions in the function list. You cannot edit the function list.

#### □ Initializing the settings

- 1 Display the <System> setting screen. (See the far left column.)
  - You can change the page to display more items by pressing [▲]/[▼].

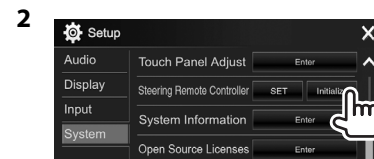

- To cancel the initialization, press [No].



# CONNECTION/INSTALLATION

## Before installing the unit

### ⚠ WARNING

- If you connect the ignition wire (red) and the battery wire (yellow) to the car chassis (ground), you may cause a short circuit, that in turn may start a fire. Always connect those wires to the power source running through the fuse box.
- Do not cut out the fuse from the ignition wire (red) and the battery wire (yellow). The power supply must be connected to the wires via the fuse.

### ⚠ Precautions on installation and connection

- Mounting and wiring this product requires skills and experience. For best safety, leave the mounting and wiring work to professionals.
- Make sure to ground the unit to a negative 12 V DC power supply.
- Do not install the unit in a location exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not use your own screws. Use only the screws provided. If you use the wrong screws, you could damage the unit.
- If the power is not turned on ("Miswiring DC Offset Error", "Warning DC Offset Error" is displayed), the speaker wire may have a short circuit or have touched the chassis of the vehicle and the protection function may have been activated. Therefore, the speaker wire should be checked.
- Keep all cables away from heat dissipating metal parts.

- If your car's ignition does not have an ACC position, connect the ignition wires to a power source that can be turned on and off with the ignition key. If you connect the ignition wire to a power source with a constant voltage supply, such as with battery wires, the battery may be drained.
- Only for DDX7051BT/DDX794/DDX774BH/DDX751WBTL:  
If the console has a lid, make sure to install the unit so that the monitor panel will not hit the lid when closing and opening.
- If the fuse blows, first make sure the wires are not touching to cause a short circuit, then replace the old fuse with one with the same rating.
- Insulate unconnected wires with vinyl tape or other similar material. To prevent a short circuit, do not remove the caps on the ends of the unconnected wires or the terminals.
- Connect the speaker wires correctly to the terminals to which they correspond. The unit may be damaged or fail to work if you share the ⊖ wires or ground them to any metal part in the car.
- When only two speakers are being connected to the system, connect both connectors either to the front output terminals or to the rear output terminals (do not mix front and rear). For example, if you connect the ⊕ connector of the left speaker to a front output terminal, do not connect the ⊖ connector to a rear output terminal.
- After the unit is installed, check whether the brake lamps, blinkers, wipers, etc. on the car are working properly.
- Mount the unit so that the mounting angle is 30° or less.
- Do not press hard on the panel surface when installing the unit to the vehicle. Otherwise scratches, damage, or failure may result.

### ⚠ CAUTION

- Install this unit in the console of your vehicle.  
Do not touch the metal parts of this unit during and shortly after the use of the unit. Metal parts such as the heat sink and enclosure become hot.
- Depending on the types of cars, the antenna will automatically extend when you turn on the unit with the antenna control wire (ANT CONT) connected (Pages 79 – 81). Turn off the unit when parking at a low ceiling area.

## ▣ Supplied accessories for installation

- ① Wiring harness x 1
- ② Trim plate x 1<sup>\*1</sup>
- ③ Extension wire (2 m) x 1
- ④ Extraction keys x 2<sup>\*2</sup>
- ⑤ Flat head screws (M5 x 8 mm) x 6
- ⑥ Round head screws (M5 x 8 mm) x 6
- ⑦ Antenna extension cable x 1<sup>\*3</sup>
- ⑧ Microphone (3 m) x 1
- ⑨ Steering Remote cable x 1<sup>\*4</sup>
- ⑩ Fixture for HDMI/MHL connector x 1<sup>\*5</sup>
- ⑪ Screws for the fixture (M2.6 x 6 mm) x 1<sup>\*5</sup>
- ⑫ RCA cable x 1<sup>\*4</sup>

<sup>\*1</sup> Only for DDX7051BT/DDX794/DDX774BH/DDX594/DDX574BH/DDX517BT/DDX417BT/DDX394.

<sup>\*2</sup> Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

<sup>\*3</sup> Only for DDX751WBTL.

<sup>\*4</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

<sup>\*5</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT.


## CONNECTION/INSTALLATION

### ❑ Installation procedure

- 1 To prevent a short circuit, remove the key from the ignition and disconnect the  $\ominus$  battery.
- 2 Make the proper input and output wire connections for each unit.
- 3 Connect the speaker wires of the wiring harness.
- 4 Connect the wiring harness wires in the following order: ground, battery, ignition.
- 5 Connect the wiring harness connector to the unit.
- 6 Install the unit in your car.
  - Make sure that the unit is installed securely in place. If the unit is unstable, it may malfunction (eg, the sound may skip).
- 7 Reconnect the  $\ominus$  battery.
- 8 Press the reset button. (Page 3)
- 9 Configure <Initial Setup>. (Page 4)


### Installing the unit

#### ❑ Installing the unit (only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394)

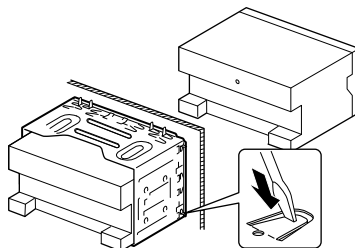

- Bend the tabs of the mounting sleeve with a screwdriver or similar utensil and attach it in place.


#### ❑ Installing the unit using the mounting bracket removed from the car

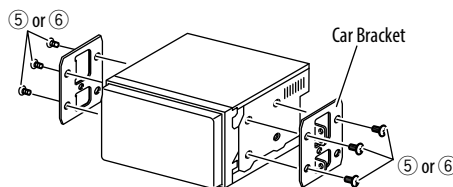

- Select the appropriate type of screw for the mounting bracket: flat head (5) or round head (6).

### ❑ Installing the trim plate


Attach the trim plate (2).

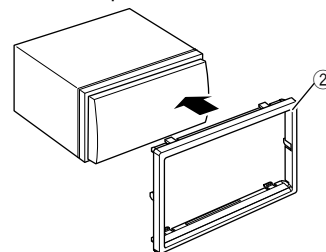

# CONNECTION/INSTALLATION


## Connection

### Connecting wires to terminals for DDX794/DDX774BH/DDX594/DDX574BH/DDX417BT/DDX394

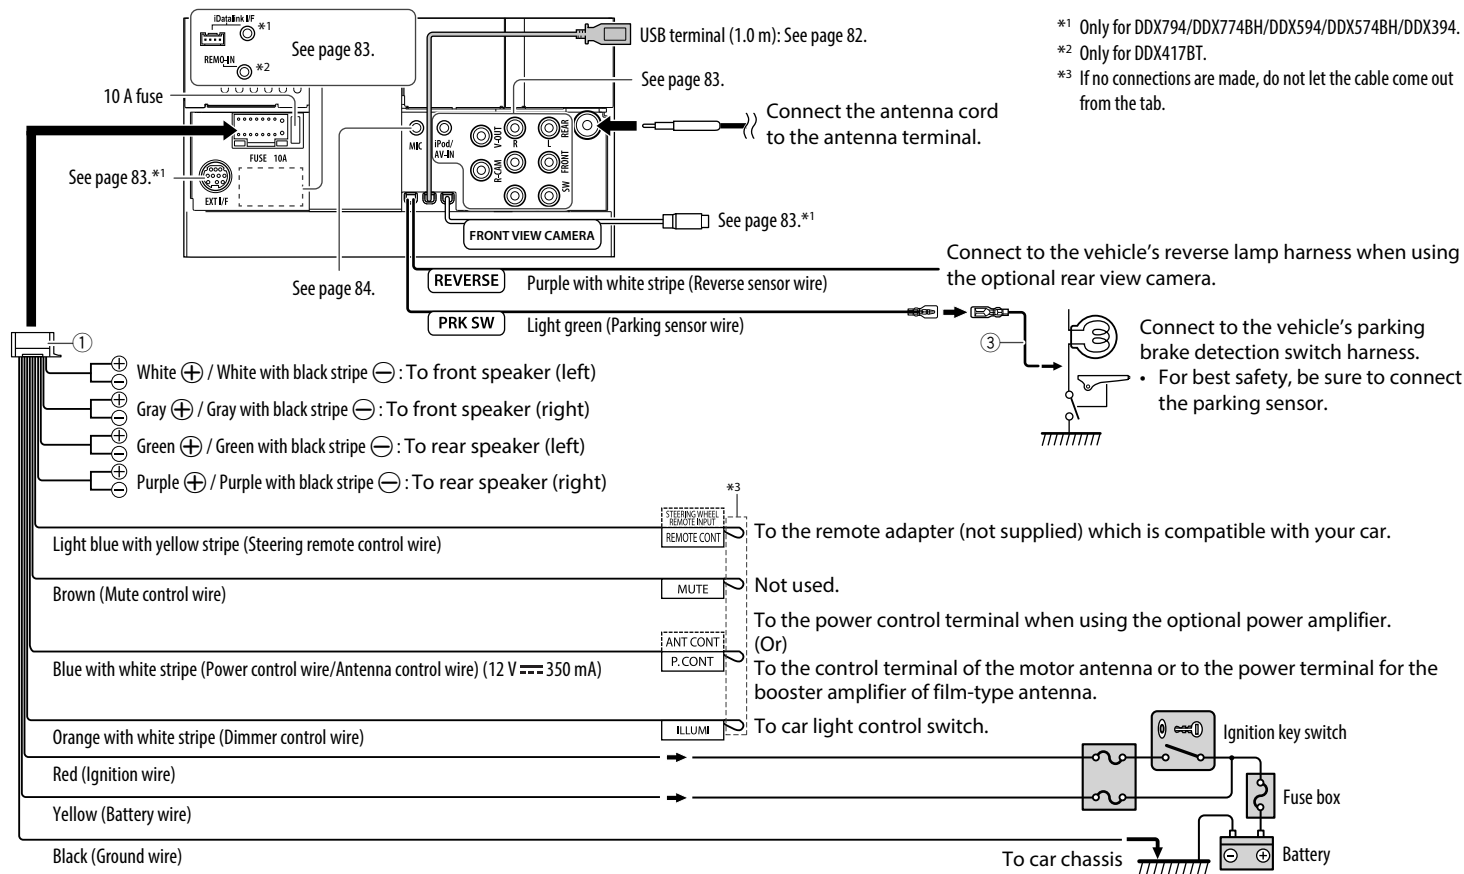


## CONNECTION/INSTALLATION

### Connecting wires to terminals for DDX7051BT/DDX517BT

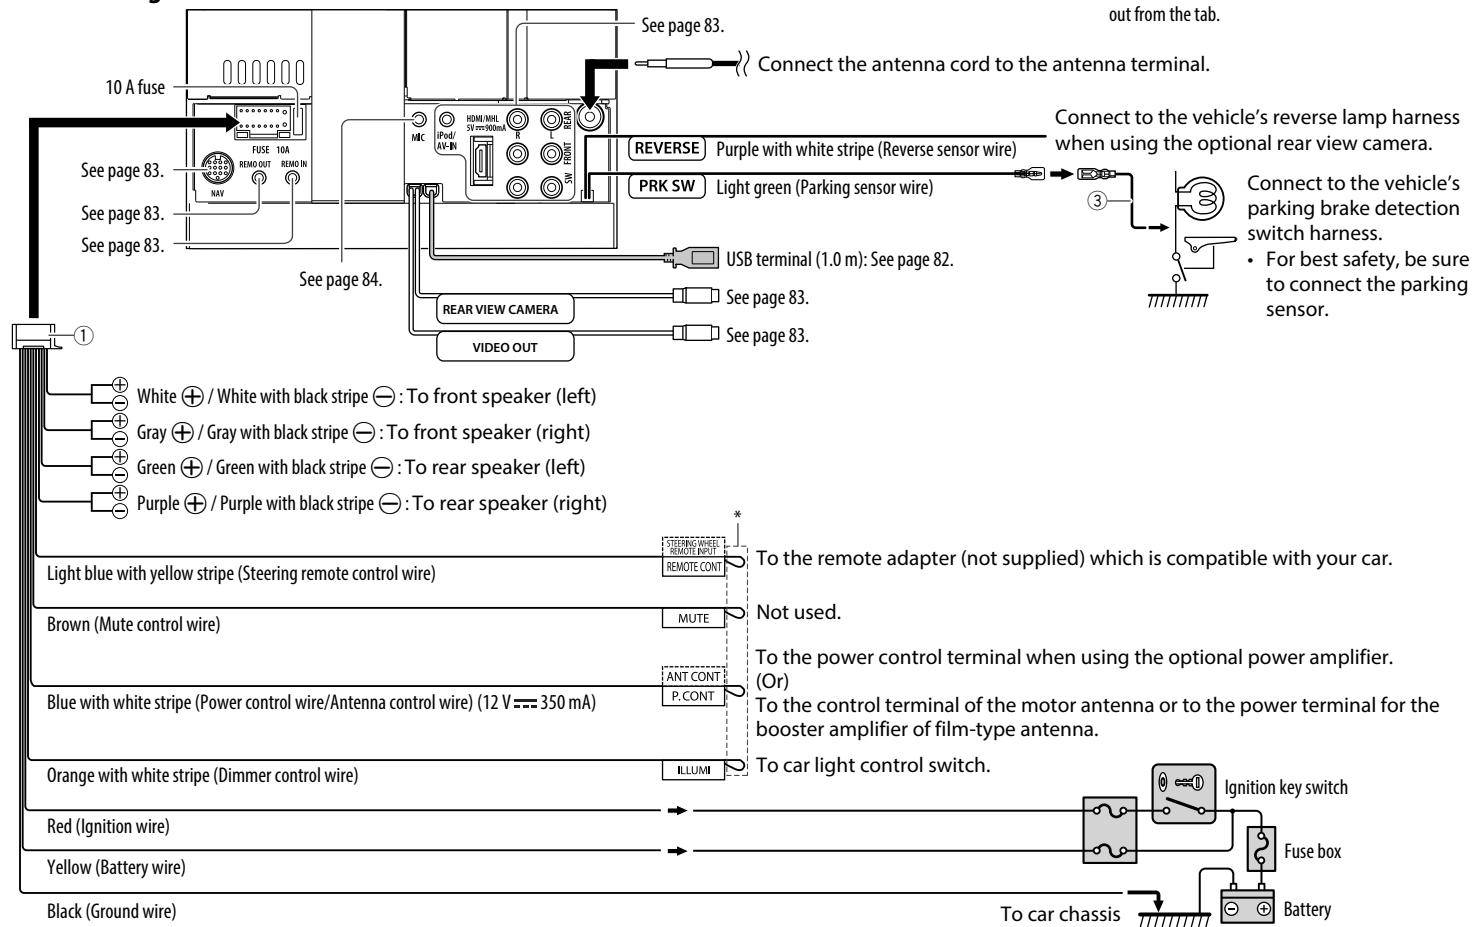

# CONNECTION/INSTALLATION


## Connecting wires to terminals for DDX751WBTL (for Toyota Cars)

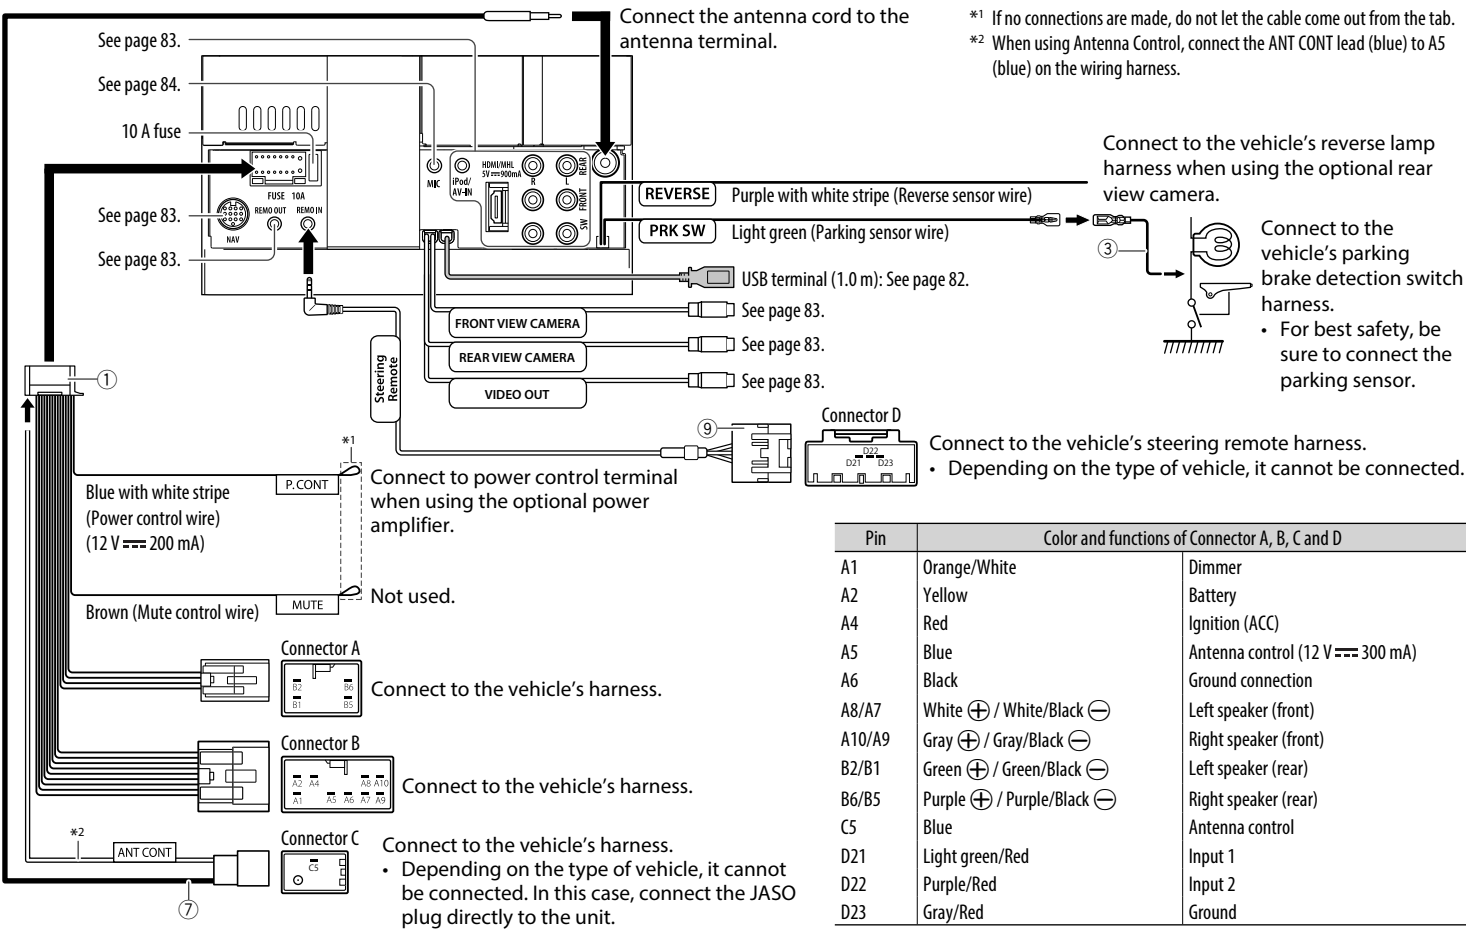

Pin	Color and functions of Connector A, B, C and D	
A1	Orange/White	Dimmer
A2	Yellow	Battery
A4	Red	Ignition (ACC)
A5	Blue	Antenna control (12 V $\approx$ 300 mA)
A6	Black	Ground connection
A8/A7	White $\oplus$ / White/Black $\ominus$	Left speaker (front)
A10/A9	Gray $\oplus$ / Gray/Black $\ominus$	Right speaker (front)
B2/B1	Green $\oplus$ / Green/Black $\ominus$	Left speaker (rear)
B6/B5	Purple $\oplus$ / Purple/Black $\ominus$	Right speaker (rear)
C5	Blue	Antenna control
D21	Light green/Red	Input 1
D22	Purple/Red	Input 2
D23	Gray/Red	Ground


## CONNECTION/INSTALLATION

### Connecting a USB device

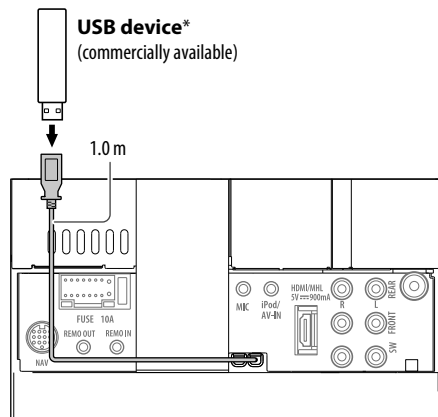

\* Use CA-U1EX for extending the cable if necessary. (Max 500 mA, 5V)


### Connecting the Wireless Display Adapter to use smartphone/iPod/iPhone over a wireless connection (only for DDX7051BT/DDX751WBTL/DDX517BT)

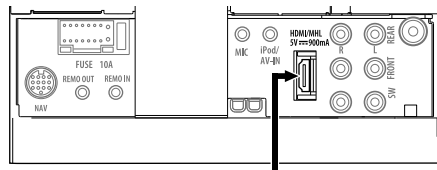


Wireless Display Adapter: KCA-WL100  
(optional accessory)

### Connecting iPod/iPhone

iPod/iPhone (Lightning connector models)  
(commercially available)

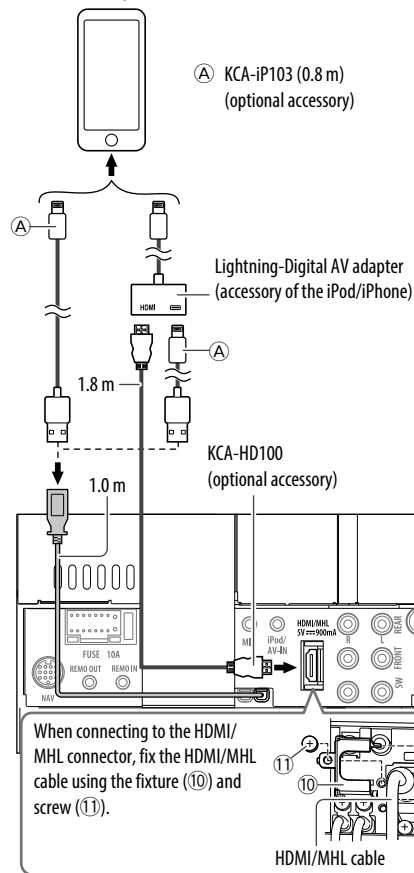


iPod/iPhone (30-pin connector models)  
(commercially available)

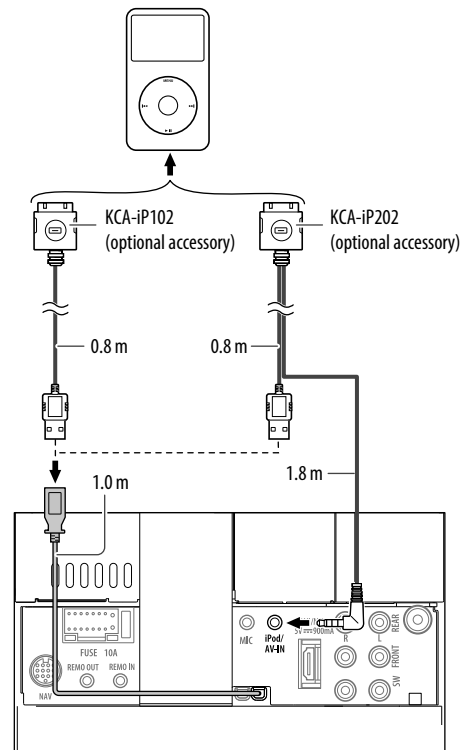

## CONNECTION/INSTALLATION


### Connecting a smartphone

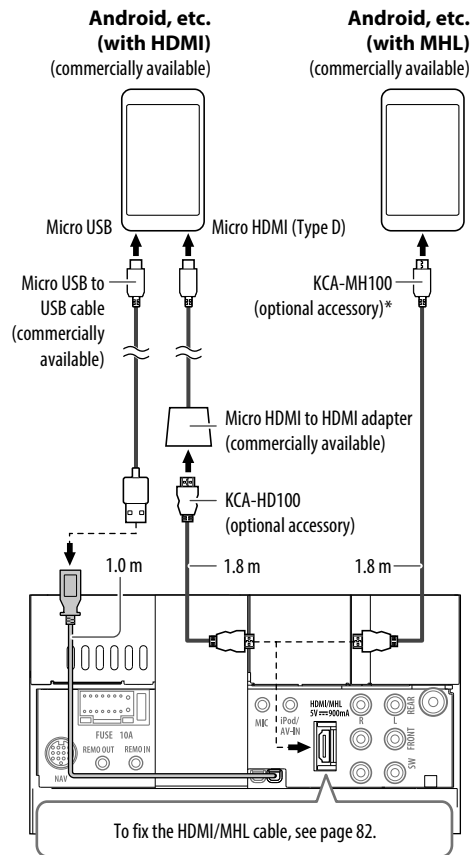


\* Use a conversion adapter to connect to smartphones if necessary.

### Connecting external components

For DDX7051BT/DDX751WBTL/DDX517BT

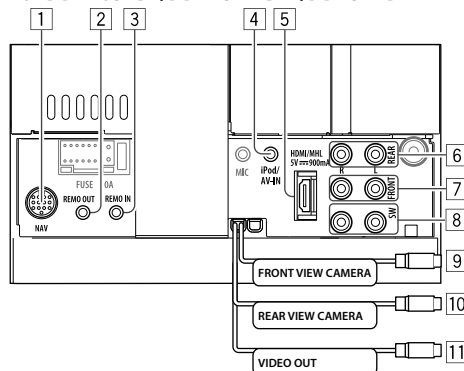

For DDX794/DDX774BH/DDX594/DDX574BH/  
DDX417BT/DDX394

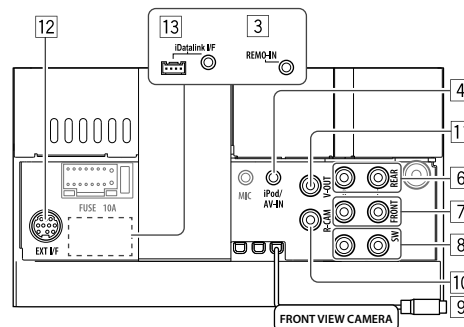

- 1 NAV I/F input\*1
- 2 3rd party TV terminal (REMO OUT)
- 3 Steering wheel remote controller input (REMO IN)\*2
  - Connect to the vehicle's steering remote harness using the Steering Remote cable (9).
  - Contact your Kenwood dealer for details.
- 4 iPod/Audio Video input (iPod/AV-IN)\*3
- 5 HDMI/MHL input\*1
- 6 Rear preout\*4
  - Audio left output (White)
  - Audio right output (Red)
- 7 Front preout\*4
  - Audio left output (White)
  - Audio right output (Red)
- 8 Subwoofer preout\*4
  - Subwoofer left output (White)
  - Subwoofer right output (Red)
- 9 Front view camera input\*5
- 10 Rear view camera input (R-CAM)
- 11 Video output (VIDEO OUT or V-OUT)
- 12 Expansion port for connecting SiriusXM Connect Vehicle Tuner (EXT I/F) (commercially available)\*6
- 13 iDatalink input for connecting ADS adapter (commercially available)\*6

\*1 Only for DDX7051BT/DDX751WBTL/DDX517BT.

\*2 Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

\*3 When connecting the component to play on "AV-IN", use the Audio and Video cable CA-C3AV (DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT: supplied (12), DDX794/DDX774BH/DDX594/DDX574BH/DDX394: optional accessory).

\*4 When connecting an external amplifier, connect its ground wire to the chassis of the car; otherwise the unit may be damaged.

\*5 Only for DDX794/DDX774BH/DDX751WBTL/DDX594/DDX574BH/DDX394.




\*6 Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

## CONNECTION/INSTALLATION
 
### ❑ Connecting microphone for Bluetooth

Connect the microphone (8) to the MIC terminal.


- To install the microphone, peel off the adhesive tape, fix on the installation position, then adjust the direction of the microphone to face the driver. After installing, fix the microphone cable to the car with clamps (commercially available).

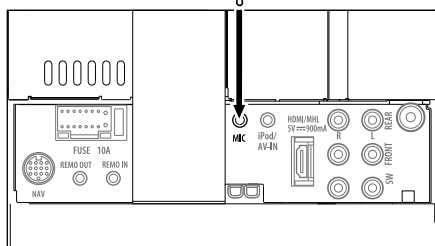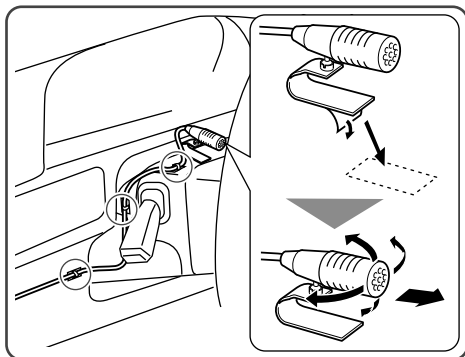


### Removing the unit (Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394)

#### ❑ Removing the trim plate

- Engage the catch pins on the extraction key (4) and remove the two locks on the lower part. Lower the frame and pull it forward.

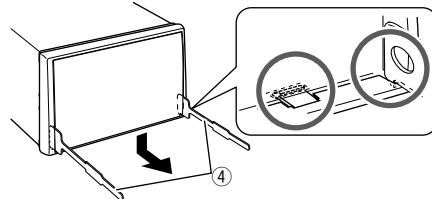


- Remove from the upper two catches.

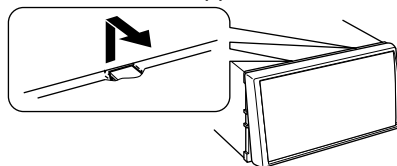

- The frame can be removed from the top side in the same manner.

#### ❑ Removing the unit

- Remove the trim plate. (See the left column.)
- Insert the two extraction keys (4), then pull them as illustrated so that the unit can be removed.

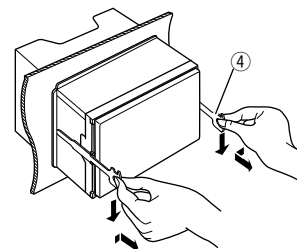

- Be careful to avoid injury from the catch pins on the extraction key.



# REFERENCES

## Maintenance

### ❑ Caution on cleaning the unit

Do not use any solvent (for example, thinner, benzine, etc.), detergent, or insecticide. This may damage the monitor or the unit.

### Recommended cleaning method:

Gently wipe the panel with a soft, dry cloth.

### ❑ Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

### ❑ How to handle discs

- When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.



- Always hold the disc by the edges. Do not touch its recording surface.
- When storing a disc in its case, gently insert the disc around the center holder (with the printed surface facing up).
  - Make sure to store discs in their cases after use.

### ❑ To keep discs clean

Dirty discs may not play correctly.

If a disc does become dirty, wipe it with a soft cloth in a straight line from the center to the edge.



- Do not use any solvents (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean discs.

### ❑ To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.



- To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

## More information

### ❑ File playback

#### Playing DivX files\*

- This unit can play back DivX files with the extension code <.divx>, <.div>, or <.avi> (regardless of the letter case—upper/lower).
- Audio streams should conform to MP3 or Dolby Digital.
- Files encoded in the interlaced scanning mode may not be played back correctly.
- The maximum bit rate for video signals (average) is 8 Mbps.

\* Only for DDx7051BT/DDx751WBTL/DDx517BT/DDx417BT.

#### Playing MPEG1/MPEG2 files

- This unit can play back MPEG1/MPEG2 files with the extension code <.mpg> or <.mpeg>.
- The stream format should conform to MPEG system/program stream.  
The file format should be MP@ML (Main Profile at Main Level)/SP@ML (Simple Profile at Main Level)/MP@LL (Main Profile at Low Level).
- Audio streams should conform to MPEG1 Audio Layer-2 or Dolby Digital.

#### Playing JPEG files

- This unit can play back picture files with the extension code <.jpg> or <.jpeg>.
- This unit can play back files that are at 32 x 32 to 8 192 x 7 680 resolution.  
It may take time to display the file depending on its resolution.
- This unit can play back baseline JPEG files.  
Progressive JPEG files or lossless JPEG files cannot be played.

## REFERENCES

### Playing audio files (MP3/WMA/WAV/AAC/FLAC)

- This unit can play back files with the extension code:
  - For disc: <.mp3>, <.wma>, <.wav>, <.m4a>
  - For USB mass storage class device: <.mp3>, <.wma>, <.wav>, <.aac>, <.m4a>, <.flac>
- This unit can play back files that meet the conditions below:
  - Bit rate:
    - MP3: 8 kbps – 320 kbps
    - WMA : For disc: 5 kbps – 320 kbps
    - For USB : 32 kbps – 192 kbps
  - AAC: 16 kbps – 320 kbps
  - Sampling frequency:
    - MP3/WMA: 8 kHz – 48 kHz
    - WAV: 44.1 kHz
    - AAC: 32 kHz – 48 kHz
    - FLAC: 8 kHz – 48 kHz
- This unit can show ID3 Tag Version 1.0/1.1/2.2/2.3/2.4 (for MP3).
- This unit can also show WMA/WAV/AAC/FLAC Tag.
- This unit can play back files recorded in VBR (variable bit rate).
- Files recorded in VBR have a discrepancy in elapsed time indication.
- This unit cannot play back the following files:
  - MP3 files encoded with MP3i and MP3 PRO format.
  - MP3 files encoded with Layer 1/2.
  - WMA files encoded with lossless, professional, and voice format.
  - WMA files which are not based upon Windows Media® Audio.
  - WMA/AAC files copy-protected with DRM.
  - AAC files copy-protected with FairPlay (except those stored on an iPod/iPhone).
  - Files which have data such as AIFF, ATRAC3, etc.

- This unit can display jacket pictures that meet the conditions below:
  - Picture size: 32 x 32 to 1 232 x 672 resolution
  - Data size: less than 500 KB
  - File type: JPEG

### Disc playback

#### Playable disc types

Disc type	Recording format, file type, etc.
<b>DVD</b> <ul style="list-style-type: none"> <li>DTS sound cannot be reproduced or emitted from this unit.</li> </ul>	DVD Video* <sup>1</sup>
<b>DVD Recordable/Rewritable (DVD-R/-RW*<sup>2</sup>, +R/+RW*<sup>3</sup>)</b> <ul style="list-style-type: none"> <li>DVD Video: UDF bridge</li> <li>DivX*<sup>4</sup>/MPEG1/MPEG2/MP3/WMA/WAV/AAC: ISO 9660 level 1, level 2, Romeo, Joliet</li> </ul>	<ul style="list-style-type: none"> <li>DVD Video</li> <li>DivX*<sup>4</sup>/MPEG1/MPEG2/JPEG</li> <li>MP3/WMA/WAV/AAC (.m4a)</li> </ul>
<b>Dual Disc</b>	DVD side
<b>CD/VCD</b>	<ul style="list-style-type: none"> <li>VCD (Video CD)</li> <li>Audio CD/CD Text (CD-DA)</li> </ul>
<b>CD Recordable/Rewritable (CD-R/-RW)</b> <ul style="list-style-type: none"> <li>ISO 9660 level 1, level 2, Romeo, Joliet</li> </ul>	<ul style="list-style-type: none"> <li>VCD (Video CD)</li> <li>CD-DA</li> <li>DivX*<sup>4</sup>/MPEG1/MPEG2/JPEG</li> <li>MP3/WMA/WAV/AAC (.m4a)</li> </ul>

\*<sup>1</sup> DVD Region code:

For DDX794/DDX774BH/DDX594/DDX574BH/DDX394: 1

For DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT: 4

If you insert a DVD Video disc of an incorrect Region Code, "Region Code Error" appears on the screen.

\*<sup>2</sup> DVD-R recorded in multi-border format are also playable (except for dual layer discs). DVD-RW dual layer discs are not playable.

\*<sup>3</sup> It is possible to play back finalized +R/+RW (Video format only) discs. "DVD" is selected as the disc type when a +R/+RW disc is loaded. +RW double layer discs are not playable.

\*<sup>4</sup> Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

### Unplayable discs

- Unplayable disc types and formats are as follows:
  - DVD-Audio/DVD-ROM discs
  - MPEG4/DivX\*/AAC (.aac)/FLAC/MKV/DVD–VR/DVD+VR/DVD-RAM recorded on DVD-R/RW or +R/+RW
  - SVCD (Super Video CD), CD-ROM, CD-I (CD-I Ready), DTS-CD
  - MPEG4/DivX\*/AAC (.aac)/FLAC/MKV recorded on CD-R/RW
- Discs that are not round.
- Discs with coloring on the recording surface or discs that are dirty.
- Recordable/Rewritable discs that have not been finalized.
- 3 inch discs. Attempting to insert these discs using an adapter may cause a malfunction.

\* Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

### DualDisc playback

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of the Non-DVD side of a DualDisc on this product cannot be recommended.

## REFERENCES

### Playing Recordable/Rewritable discs

- This unit can recognize a total of 5 000 files and 250 folders (a maximum of 999 files per folder).
- Use only “finalized” discs.
- This unit can play back multi-session discs; however, unclosed sessions will be skipped while playing.
- Some discs or files may not be played back due to their characteristics or recording conditions.

### ❑ About data stored in the connected USB device/iPod/iPhone/Android

- We bear no responsibility for any loss of data in iPod/iPhone, Android, and USB mass storage class devices while using this unit.

### ❑ USB playback

#### Playable files on a USB device

- This unit can play the following types of files stored in a USB mass storage class device.
  - JPEG/Divx\*/MPEG1/MPEG2/MP3/WMA/WAV/AAC (.aac/.m4a)/FLAC
- This unit can recognize:
  - A total of 5 000 files
  - 250 folders for video files and a maximum of 999 files per folder
  - 250 folders for photo files and a maximum of 999 files per folder
  - 999 folders for audio files and a maximum of 999 files per folder
- Make sure all important data has been backed up to avoid losing the data.

\* Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

### Notes on using a USB device:

- This unit may not play back files in a USB device properly when using a USB extension cable.
- USB devices equipped with special functions such as data security functions cannot be used with the unit.
- Do not use a USB device with 2 or more partitions.
- Depending on the shape of the USB devices and connection ports, some USB devices may not be attached properly or the connection might be loose.
- This unit may not recognize a memory card inserted into a USB card reader.
- When connecting with a USB cable, use a USB 2.0 cable.
- The maximum number of characters (when the characters are 1 byte):
  - Folder names: 50 characters
  - File names: 50 characters
- Avoid using the USB device if it might affect driving safety.
- Do not pull out and connect the USB device repeatedly while “Reading” is shown on the screen.
- Electrostatic shock at connecting a USB device may cause abnormal playback of the device. In this case, disconnect the USB device then reset this unit and the USB device.
- Operation and power supply may not work as intended for some USB devices.
- Do not leave a USB device in the car, or expose to direct sunlight or high temperatures to prevent deformation or damage to the device.

### ❑ Notes on playing iPod/iPhone

- iPod/iPhone that can be connected to this unit:  
Via the USB terminal:

Made for

- iPod nano (7th Generation)\*<sup>1</sup>
- iPod touch (6th Generation)\*<sup>1</sup>
- iPod touch (5th Generation)\*<sup>1</sup>
- iPhone SE\*<sup>1</sup>
- iPhone 6S Plus
- iPhone 6S\*<sup>1</sup>
- iPhone 6 Plus\*<sup>1</sup>
- iPhone 6\*<sup>1</sup>
- iPhone 5S\*<sup>1</sup>
- iPhone 5C\*<sup>1</sup>
- iPhone 5\*<sup>1</sup>
- iPhone 4S

Via Bluetooth\*<sup>2</sup>:

Made for

- iPod touch (6th Generation)
- iPod touch (5th Generation)
- iPhone SE
- iPhone 6S Plus
- iPhone 6S
- iPhone 6 Plus
- iPhone 6
- iPhone 5S
- iPhone 5C
- iPhone 5
- iPhone 4S

\*<sup>1</sup> For Lightning connector models connected to DDX794/DDX774BH/DDX594/DDX574BH/DDX417BT/DDX394: You cannot watch the video.

\*<sup>2</sup> Lightning connector models connected to DDX794/DDX774BH/DDX594/DDX574BH/DDX417BT/DDX394 and 30-pin models: You cannot watch the video with Bluetooth connection.

## REFERENCES

- When operating an iPod/iPhone, some operations may not be performed correctly or as intended. In this case, visit the following KENWOOD web site: <[www.kenwood.com/cs/ce/ipod](http://www.kenwood.com/cs/ce/ipod)>
- For some iPod/iPhone models, the performance may be abnormal or unstable during operation. In this case, disconnect the iPod/iPhone device, then check its condition.  
If the performance is not improved or slow, reset your iPod/iPhone.
- When you turn on this unit, the iPod/iPhone is charged through the unit.
- The text information may not be displayed correctly.

### Language codes (for DVD language selection)

AA	Afar	GL	Galician	MI	Maori	SO	Somali
AB	Abkhazian	GN	Guarani	MK	Macedonian	SQ	Albanian
AF	Afrikaans	GU	Gujarati	ML	Malayalam	SR	Serbian
AM	Ameharic	HA	Hausa	MN	Mongolian	SS	Siswati
AR	Arabic	HI	Hindi	MO	Moldavian	ST	Sesotho
AS	Assamese	HR	Croatian	MR	Marathi	SU	Sundanese
AY	Aymara	HU	Hungarian	MS	Malay (MAY)	SW	Swahili
AZ	Azerbaijani	HY	Armenian	MT	Maltese	TA	Tamil
BA	Bashkir	IA	Interlingua	MY	Burmese	TE	Telugu
BE	Byelorussian	IE	Interlingue	NA	Nauru	TG	Tajik
BG	Bulgarian	IK	Inupiak	NE	Nepali	TH	Thai
BH	Bihari	IN	Indonesian	NO	Norwegian	TI	Tigrinya
BI	Bislama	IS	Icelandic	OC	Occitan	TK	Turkmen
BN	Bengali, Bangla	IW	Hebrew	OM	(Afan) Oromo	TL	Tagalog
BO	Tibetan	JA	Japanese	OR	Oriya	TN	Setswana
BR	Breton	JL	Yiddish	PA	Panjabi	TO	Tonga
CA	Catalan	JW	Javanese	PL	Polish	TR	Turkish
CO	Corsican	KA	Georgian	PS	Pashto, Pushto	TS	Tsonga
CS	Czech	KK	Kazakh	QU	Quechua	TT	Tatar
CY	Welsh	KL	Greenlandic	RM	Rhaeto-Romance	TW	Twi
DZ	Bhutani	KM	Cambodian	RN	Kirundi	UK	Ukrainian
EL	Greek	KN	Kannada	RO	Rumanian	UR	Urdu
EO	Esperanto	KO	Korean (KOR)	RW	Kinyarwanda	UZ	Uzbek
ET	Estonian	KS	Kashmiri	SA	Sanskrit	VI	Vietnamese
EU	Basque	KU	Kurdish	SD	Sindhi	VO	Volapuk
FA	Persian	KY	Kirghiz	SG	Sangho	WO	Wolof
FI	Finnish	LA	Latin	SH	Serbo-Croatian	XH	Xhosa
FJ	Fiji	LN	Lingala	SI	Singhalese	YO	Yoruba
FO	Faroese	LO	Laothian	SK	Slovak	ZU	Zulu
FY	Frisian	LT	Lithuanian	SL	Slovenian		
GA	Irish	LV	Latvian, Lettish	SM	Samoan		
GD	Scots Gaelic	MG	Malagasy	SN	Shona		

## REFERENCES

### Error message list

If an error occurs while using the unit, a message appears. Take appropriate action according to the following message/remedy/cause list.

#### **“No Signal”/“No Video Signal”:**

- Start playback on the external component connected to the iPod/AV-IN input terminal or the HDMI/MHL input terminal.
- Check the cords and connections.
- Signal input is too weak.

#### **“Miswiring DC Offset Error”/“Warning DC Offset Error”:**

- A speaker cord has shorted or it has come into contact with the car chassis. Wire or insulate the speaker cord as appropriate, then reset the unit. (Pages 3 and 79 – 81)

#### **“Parking off”:**

- No playback picture is shown when the parking brake is not engaged.

#### **“Authorization Error”:**

- Check whether the connected iPod/iPhone is compatible with this unit. (Page 87)

#### **“USB Device Error”:**

- The USB power voltage is abnormal.
- Turn off and turn on the unit.
- Connect another USB device.

#### **“Panel Mecha Error”:**

- The panel does not work properly. Reset the unit.

#### **“Connection Error”:**

- The device is registered but the connection has failed. Connect the registered device. (Page 55)

#### **“Please Wait...”:**

- The unit is preparing to use the Bluetooth function. If the message does not disappear, turn off and turn on the unit, then connect the device again (or reset the unit).

#### **“No Voice Device”:**

- The connected mobile phone does not have a voice recognition system.

#### **“No Data”:**

- No phone book data is contained in the connected Bluetooth phone.

#### **“Initialize Error”:**

- The unit has failed to initialize the Bluetooth module. Try the operation again.

#### **“Dial Error”:**

- Dialing has failed. Try the operation again.

#### **“Hung Up Error”:**

- The call has not ended yet. Park your car, and use the connected mobile phone to end the call.

#### **“Pick Up Error”:**

- The unit has failed to receive a call.

#### **“Please update Pandora App”:**

- The Pandora application on your iPod touch/iPhone/Android is not the latest version. Update the application.

#### **“Please check device.”:**

- The Pandora application on your iPod touch/iPhone/Android is not started up.
- The Pandora application is not installed on the connected device.
- An error has occurred on the Pandora application.

#### **“Login Error”:**

- You have not been signed into Pandora.

#### **“No skips remaining”:**

- No more songs can be skipped.

#### **“Failed to save your thumb rating”:**

- Thumb-up/down is prohibited.

#### **“No Station”:**

- No station is available.

#### **“No Active Station”:**

- No station is being played.

#### **“Station limit reached”:**

- The Station List is full and no more stations can be registered.

#### **“Failed to save your bookmark”:**

- The unit has failed to save a bookmark. Try the operation again.

#### **“Limited Connectivity”:**

- The connection with the Pandora application cannot be established.

#### **“Pandora not available”:**

- You cannot use the Pandora application from the area where you are currently trying to access Pandora.

#### **“Try again later”:**

- The Pandora server is under maintenance.

#### **“Station does not exist”:**

- The selected station has been deleted by another device or has expired.

## REFERENCES

### “Cannot create a Station”:

- You cannot create a station during the read-only mode or when network connection is not established.

### “SXM No Signal”:

- Make sure the SiriusXM Satellite Radio antenna is mounted outside the vehicle. Move the vehicle to an area with a clear view of the sky.

### “SXM Check Antenna”:

- Check the SiriusXM Satellite Radio antenna connection, and make sure the antenna is firmly attached to the tuner.
- Check whether the SiriusXM Satellite Radio antenna cable is bent or broken. If it is damaged, replace the whole antenna unit.

### “SXM Check Tuner”:

- Make sure the SiriusXM Connect Vehicle Tuner is connected to the unit.

“SXM Chan Unavailable” (appears on the screen for about 5 seconds, then returns to the previous channel):

- The selected channel is no longer available. Select another channel or continue listening to the previous channel.

“SXM Ch Unsubscribed” (appears on the screen for about 5 seconds, then returns to the previous channel):

- The selected channel is not part of your current subscription plan. Call 1-866-635-2349 to subscribe.

### “SXM Subscription Updated – Press Return to Continue”:

- Your subscription has been updated. Press the appropriate button to continue.

### “SXM Channel Locked”

- The selected channel has been locked by the parental controls. Enter the unlock code when you are asked. (Page 46)

### “SXM Incorrect Lock Code”

- The selected channel is a mature or parental lock channel, and locked by the parental lock or user lock code. Enter the correct lock code.

## Troubleshooting

What appears to be trouble is not always serious. Check the following points before calling a service center.

- For operations with the external components, refer also to the instructions supplied with the adapters used for the connections (as well as the instructions supplied with the external components).

### ❑ General

#### No sound comes out of the speakers.

- Adjust the volume to the optimum level.
- Check the cords and connections.

#### No picture is displayed on the screen.

- Turn on the screen. (Page 10)

#### The unit does not work at all.

- Reset the unit. (Page 3)

#### The remote controller\* does not work.

- Replace the battery.

\* For DDX794/DDX774BH/DDX594/DDX574BH/DDX394: Purchase KNA-RCDV331 separately.

### ❑ Discs

#### Recordable/Rewritable discs cannot be played back.

- Insert a finalized disc.
- Finalize the discs with the component which you used for recording.

#### Tracks on the Recordable/Rewritable discs cannot be skipped.

- Insert a finalized disc.
- Finalize the discs with the component which you used for recording.

#### Playback does not start.

- The format of files is not supported by the unit.

#### No picture appears on the external monitor.

- Connect the video cord correctly.
- Select the correct input on the external monitor.

#### DivX\*/MPEG1/MPEG2/MP3/WMA/WAV/AAC discs cannot be played back.

- Record the tracks using a compatible application on the appropriate discs. (Page 86)
- Add appropriate extension codes to the file names.

#### Tracks on the Recordable/Rewritable discs are not played back as you have intended them to play.

- Playback order may differ from the one played back using other players.

\* Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

### ❑ USB

#### “Reading” does not disappear from the screen.

- Turn the power off and on again.

## REFERENCES

### **While playing a track, sound is sometimes interrupted.**

- The tracks are not properly copied into the USB device. Copy the tracks again, and try again.

### **Tracks are not played back as you have intended them to play.**

- Playback order may differ from the one played back using other players.

### **❑ Android**

#### **Sound cannot be heard during playback.**

- Reconnect the Android device.
- When **<Android Setup>** is set to **[HAND MODE]**, launch any media player application on the Android device and start playback.

#### **Sound output only from the Android device.**

- When **<Android Setup>** is set to **[HAND MODE]**, relaunch the current media player application or use another media player application.
- Restart the Android device.
- If this does not solve the problem, the connected Android device is unable to route the audio signal to unit.

#### **Cannot playback when <Android Setup> is set to [BROWSE MODE].**

- Make sure KENWOOD Music Play APP is installed on the Android device.
- Reconnect the Android device and select the appropriate control mode.
- If this does not solve the problem, the connected Android device does not support the Browse Mode.

### **"NO DEVICE" or "READING" keeps flashing.**

- Switch off the developer options on the Android device.
- Reconnect the Android device.
- If this does not solve the problem, the connected Android device does not support the Browse Mode.

### **❑ iPod/iPhone**

#### **No sound comes out of the speakers.**

- Disconnect the iPod/iPhone, then connect it again.
- Select another source, then reselect **"iPod"**.

#### **The iPod/iPhone does not turn on or does not work.**

- Check the connecting cable and its connection.
- Update the firmware version.
- Charge the battery.
- Reset the iPod/iPhone.

#### **Sound is distorted.**

- Deactivate the equalizer either on this unit or the iPod/iPhone.

#### **A lot of noise is generated.**

- Turn off (uncheck) "VoiceOver" on the iPod/iPhone. For details, visit <http://www.apple.com>.

#### **No operations are available when playing back a track containing artwork.**

- Operate the unit after the artwork has loaded.

#### **Videos cannot be played.**

- Connect with USB Audio and Video cable KCA-iP202 (optional accessory) to iPod/iPhone 30-pin connector model. Other cables cannot be used.
- Select **[USB + AV-IN]** for **<iPod Setup>**. (Page 23)

### **No sound of videos comes out.**

- Connect with USB Audio and Video cable KCA-iP202 (optional accessory) to iPod/iPhone 30-pin connector model. Other cables cannot be used.
- Select **[USB+AV-IN]** for **<iPod Setup>**. (Page 23)

### **❑ Radio**

#### **AME automatic presetting does not work.**

- Store stations manually. (Page 37)

#### **Static noise while listening to the radio.**

- Connect the antenna firmly.

### **❑ AV-IN**

#### **"AV-IN" cannot be selected on the Home screen.**

- Select connection method other than **[USB + AV-IN]** for **<iPod Setup>**. (Page 23)

#### **No picture appears on the screen.**

- Turn on the video component if it is not on.

### **❑ HD Radio reception (only for DDX794/DDX774BH/DDX594/DDX574BH)**

#### **Sound quality changes when receiving HD Radio stations.**

- Fix the reception mode either to **<Digital>** or **<Analog>**. (Page 34)

#### **No sound can be heard.**

- The HD Radio reception mode is not appropriate. Select the appropriate mode from **<Digital>**, **<Analog>** or **<Auto>**. (Page 34)

REFERENCES

❑ Pandora\*/iHeart Radio\*/Spotify

The application does not work.

- The connected device is not compatible with the Pandora/iHeartRadio/Spotify source.
- The application on your iPod touch/iPhone/Android is not the latest version. Update the application.

\* Only for DDX794/DDX774BH/DDX594/DDX574BH/DDX394.

❑ Bluetooth

Phone sound quality is poor.

- Reduce the distance between the unit and the Bluetooth mobile phone.
- Move the car to a place where you can get a better signal reception.

The sound is interrupted or skipped while using a Bluetooth audio player.

- Reduce the distance between the unit and the Bluetooth audio player.
- Disconnect the device connected for Bluetooth phone.
- Turn off, then turn on the unit.  
(When the sound is not yet restored) connect the player again.

The connected audio player cannot be controlled.

- Check whether the connected audio player supports AVRCP (Audio/Video Remote Control Profile).

The Bluetooth device does not detect the unit.

- Search from the Bluetooth device again.

The unit does not pair with the Bluetooth device.

- For devices compatible with Bluetooth 2.1:  
Register the device using a PIN code. (Page 54)
- For devices compatible with Bluetooth 2.0:  
Enter the same PIN code for both the unit and target device. If the PIN code of the device is not indicated in its instructions, try "0000" or "1234."
- Turn off, then turn on the Bluetooth device.

Echo or noise occurs.

- Adjust the microphone unit position.
- Adjust the echo volume or noise reduction volume. (Page 56)

The unit does not respond when you try to copy the phone book to the unit.

- You may have tried to copy the same entries (as stored) to the unit.

Specifications

❑ Monitor section

Picture Size (W x H)	
DDX7051BT/DDX794/DDX774BH/DDX751WBTL:	6.95 inches (diagonal) wide 156.6 mm × 81.6 mm (6-3/16" x 3-3/16")
DDX594/DDX574BH/DDX517BT/DDX417BT/ DDX394:	6.2 inches (diagonal) wide 137.5 mm × 77.2 mm (5-7/16" × 3-1/16")
Display System	Transparent TN LCD panel
Drive System	TFT active matrix system
Number of Pixels	1 152 000 (800H × 480V × RGB)
Effective Pixels	99.99%

Pixel Arrangement	
	RGB striped arrangement
Back Lighting	LED
❑ DVD player section	
D/A Converter	24 bit
Audio Decoder	Linear PCM/Dolby Digital/MP3/ WMA/WAV/AAC (.m4a)
Video Decoder	DivX*/MPEG1/MPEG2/JPEG
Wow & Flutter	Below Measurable Limit
Frequency Response	
96 kHz Sampling:	20 Hz to 22 000 Hz
48 kHz Sampling:	20 Hz to 22 000 Hz
44.1 kHz Sampling:	20 Hz to 20 000 Hz
Total Harmonic Distortion	
	0.010% (1 kHz)
Signal to Noise Ratio	
	99 dB (DVD-Video 96 kHz)
Dynamic Range	99 dB (DVD-Video 96 kHz)
Disc Format	DVD-Video/VIDEO-CD/CD-DA
Sampling Frequency	
	44.1 kHz/48 kHz/96 kHz

Quantifying Bit Number	
	16/20/24 bit

\* Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.



REFERENCES

❑ USB interface section

USB Standard	USB 2.0 Full Speed/High Speed
Compatible Devices	Mass Storage Class
File System	FAT 16/32
Maximum Power Supply Current	DC 5 V ≐ 1.5 A
D/A Converter	24 bit
Audio Decoder	MP3/WMA/AAC (.aac/.m4a)/WAV/FLAC
Video Decoder	DivX*/MPEG1/MPEG2/JPEG

\* Only for DDX7051BT/DDX751WBTL/DDX517BT/DDX417BT.

❑ HDMI interface section (only for DDX7051BT/DDX751WBTL/DDX517BT)

Connector Type	TYPE-A
Input Resolution	VGA (640 × 480p@59.94 Hz/60 Hz), 480p (720 × 480p@59.94 Hz/60 Hz)
Input Audio Type	32 kHz, 44.1 kHz, 48 kHz, 16-bit Linear PCM

❑ MHL interface section (only for DDX7051BT/DDX751WBTL/DDX517BT)

Supported Version	MHL2
Input Resolution	VGA (640 × 480p@59.94 Hz/60 Hz), 480p (720 × 480p@59.94 Hz/60 Hz)
Input Audio Type	32 kHz, 44.1 kHz, 48 kHz, 16-bit Linear PCM
Maximum Power Supply Current	DC 5 V ≐ 900 mA

❑ Bluetooth section

Technology	Bluetooth 3.0
Frequency	2.402 GHz to 2.480 GHz
Output Power	+4 dBm (MAX), 0 dBm (AVE), Power Class 2
Maximum Communication Range	Line of sight approx. 10 m (32.8 ft)
Audio Codec	SBC/AAC/aptX*1
Profile	HFP (Hands Free Profile) 1.6 A2DP (Advanced Audio Distribution Profile) 1.3 AVRCP (Audio/Video Remote Control Profile) 1.5 GAP (Generic Access Profile) HID (Human Interface Device Profile)*2 PBAP (PhoneBook Access Profile) 1.2 SDP (Service Discovery Profile) SPP (Serial Port Profile) 1.2

\*1 aptX is compatible only with DDX794/DDX774BH/DDX594/DDX574BH.

\*2 Only for DDX7051BT/DDX751WBTL/DDX517BT.

❑ DSP section

Equalizer	
BAND	13 Band
Frequency (Hz) (BAND1-13)	62.5/100/160/250/400/630/1k/1.6k/2.5k/4k/6.3k/10k/16k

Gain	-9/-8/-7/-6/-5/-4/-3/-2/-1/0/1/2/3/4/5/6/7/8/9 dB
Q factor	1.35/1.5/2.0
2 Way X'Over	
Tweeter:	
Frequency (Hz)	1k/1.6k/2.5k/4k/5k/6.3k/8k/10k/12.5k
Gain	-8/-7/-6/-5/-4/-3/-2/-1/0 dB
Front/Rear (HPF):	
Frequency (Hz)	Through/30/40/50/60/70/80/90/100/120/150/180/220/250
Slope	-6/-12/-18/-24 dB/Oct.
Gain	-8/-7/-6/-5/-4/-3/-2/-1/0 dB
Subwoofer (LPF):	
Frequency (Hz)	30/40/50/60/70/80/90/100/120/150/180/220/250/Through
Slope	-6/-12/-18/-24 dB/Oct.
Phase	Normal/Reverse
Gain	-8/-7/-6/-5/-4/-3/-2/-1/0 dB
Position	
Front/Rear/Subwoofer Delay	0 ft to 20.0 ft (0.07 ft Step)
Gain	-8 dB to 0 dB
Subwoofer Level	-50 dB to +10 dB

## REFERENCES

### FM radio section

Frequency Range	DDX794/DDX774BH/DDX594/DDX574BH/ DDX394: 87.9 MHz to 107.9 MHz (200 kHz) DDX7051BT/DDX751WBT/DDX517BT/DDX417BT: 87.5 MHz to 108.0 MHz (50 kHz)
Usable Sensitivity (S/N: 30 dB)	7.2 dBf (0.63 $\mu$ V/75 $\Omega$ )
Quieting Sensitivity (S/N: 50 dB)	15.2 dBf (1.58 $\mu$ V/75 $\Omega$ )
Frequency Response ( $\pm$ 3.0 dB)	Digital: 20 Hz to 20 kHz* Analog: 30 Hz to 15 kHz
Signal to Noise Ratio	Digital: 75 dB (STEREO)* Analog: 68 dB (MONO)
Selectivity ( $\pm$ 400 kHz)	$\geq$ 80 dB
Stereo Separation	40 dB (1 kHz)

\* Only for DDX794/DDX774BH/DDX594/DDX574BH.

### AM radio section

Frequency Range (10 kHz)	530 kHz to 1 700 kHz
Usable Sensitivity	29 dB $\mu$
Frequency Response ( $\pm$ 3.0 dB)	Digital: 40 Hz to 15 kHz*
Signal to Noise Ratio	Digital: 75 dB (STEREO)*

\* Only for DDX794/DDX774BH/DDX594/DDX574BH.

### Video section

Color System of External Video Input	NTSC/PAL
External Video Input Level (mini jack)	1 Vp-p/75 $\Omega$
External Audio Max Input Level (mini jack)	2 V/25 k $\Omega$
Video Input Level (RCA jack)	1 Vp-p/75 $\Omega$
Video Output Level (RCA jack)	1 Vp-p/75 $\Omega$
Analog RGB Input	0.7 Vp-p/75 $\Omega$ *

\* Only for DDX7051BT/DDX751WBT/DDX517BT.

### Audio section

Maximum Power (Front & Rear)	50 W $\times$ 4
Full Bandwidth Power (Front & Rear)	22 W $\times$ 4 (at less than 1%THD)
Preout Level	For DDX794/DDX594/DDX394: 5 V/10 k $\Omega$ For DDX7051BT/DDX774BH/DDX751WBT/ DDX574BH/DDX517BT: 4 V/10 k $\Omega$ For DDX417BT: 2.5 V/10 k $\Omega$
Preout Impedance	$\leq$ 600 $\Omega$
Speaker Impedance	4 $\Omega$ to 8 $\Omega$

### General

Operating Voltage	14.4 V (10.5 V to 16 V allowable)
Maximum Current Consumption	10 A
Installation Dimensions (W $\times$ H $\times$ D)	DDX7051BT/DDX517BT/DDX417BT: 178 mm $\times$ 100 mm $\times$ 162 mm (7" $\times$ 3-15/16" $\times$ 6-3/8") DDX794* <sup>1</sup> /DDX774BH* <sup>1</sup> : 182mm $\times$ 111mm $\times$ 165mm (7-3/16" $\times$ 4-3/8" $\times$ 6-1/2") DDX751WBT: 178mm $\times$ 100mm $\times$ 162mm (7" $\times$ 3-15/16" $\times$ 6-3/8") 206mm $\times$ 104mm $\times$ 162mm (8-1/8" $\times$ 4-1/8" $\times$ 6-3/8") (including the sub panel part) DDX594* <sup>1</sup> /DDX574BH* <sup>1</sup> /DDX394* <sup>1</sup> : 182mm $\times$ 111mm $\times$ 162mm (7-3/16" $\times$ 4-3/8" $\times$ 6-3/8")
Operational Temperature Range	-10°C to +60°C
Weight	DDX7051BT* <sup>2</sup> /DDX751WBT: 2.3 kg (5.1 lbs) DDX794* <sup>3</sup> /DDX774BH* <sup>3</sup> : 2.6 kg (5.7 lbs) DDX594* <sup>3</sup> /DDX574BH* <sup>3</sup> /DDX394* <sup>3</sup> : 2.0 kg (4.4 lbs) DDX517BT* <sup>2</sup> /DDX417BT* <sup>2</sup> : 1.7 kg (3.8 lbs)

\*<sup>1</sup> Dimensions with sleeve included.

\*<sup>2</sup> Weight with the trim plate included.

\*<sup>3</sup> Weight with the trim plate and sleeve included.

Design and specifications are subject to change without notice.

## REFERENCES

### ☐ Trademarks and licenses

- Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.
- “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation registered in the US, Japan and other countries.
- The “AAC” logo is a trademark of Dolby Laboratories.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- “Made for iPod,” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance. iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- Lightning is a trademark of Apple Inc.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- Font for this product is designed by Ricoh.
- THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL

BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

- Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.
- HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- Android is a trademark of Google Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVC KENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- SPOTIFY and the Spotify logo are among the registered trademarks of Spotify AB.
- iHeartRadio® and iHeartAuto™ are trademarks owned by iHeartMedia, Inc. All uses are authorized under license.
- Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission.
- aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.
- libFLAC Copyright (C) 2000,2001,2002,2003,2004,2005, 2006,2007,2008,2009 Josh Coalson Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:
  - Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
  - Redistributions in binary form must reproduce

the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.
- THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

### DIVX

- This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video. To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find your registration code in the DivX VOD section of your device setup menu. (Page 73)
- DivX Certified® to play DivX® video, including premium content.
- DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

---

KENWOOD