


Bed Frame

Instruction Manual

BF-WT01-Q


BF-WT01-F

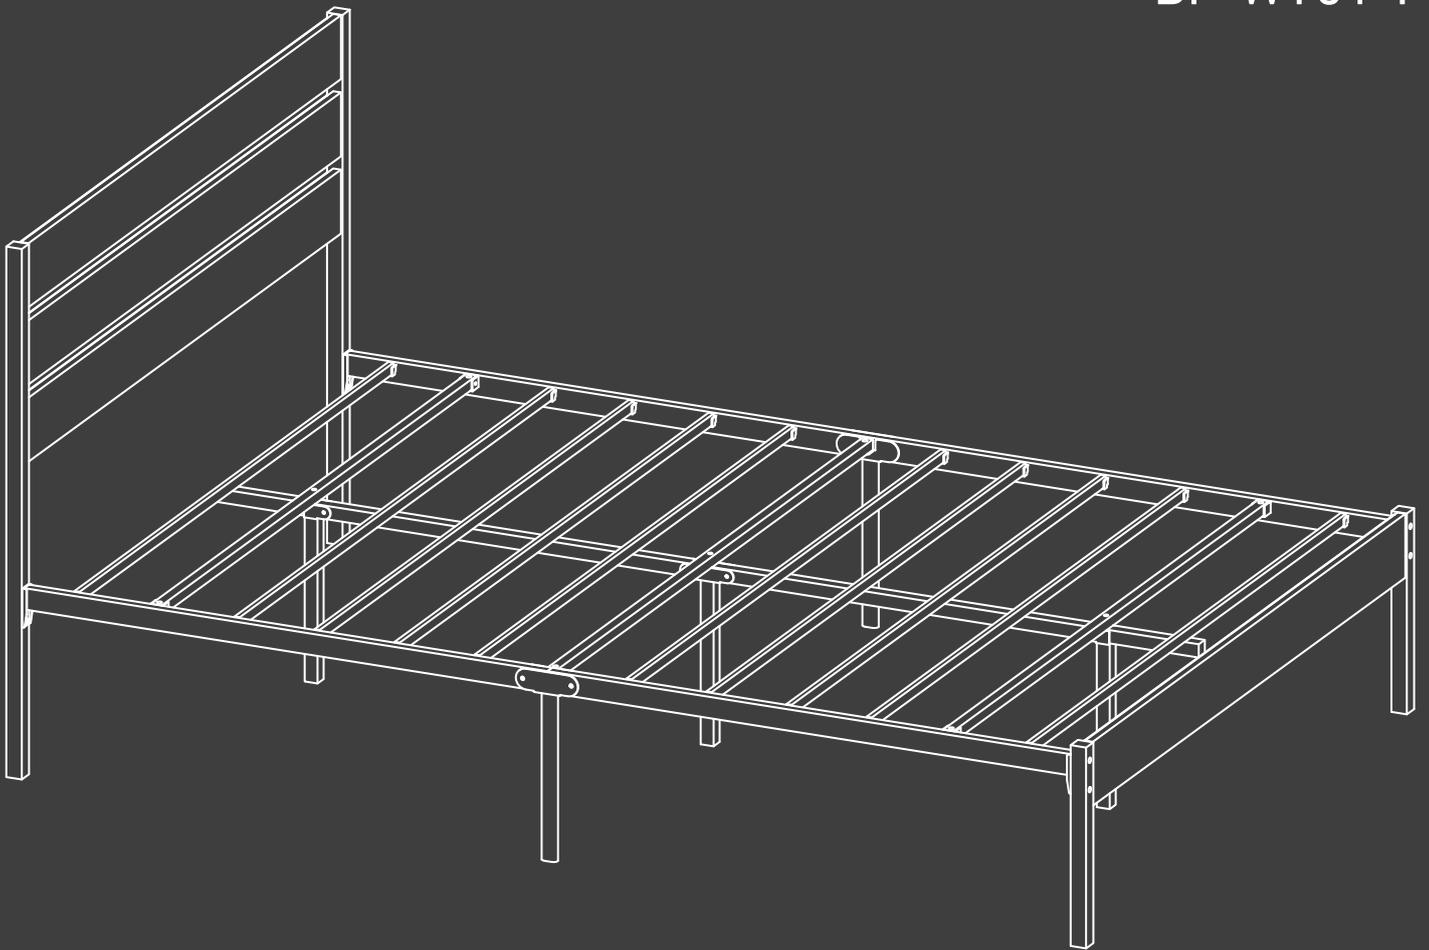

 EST 9:00AM--17:00PM

 HJ-Customer-Service@outlook.com

 (909)637-7665 | (909)637-7593

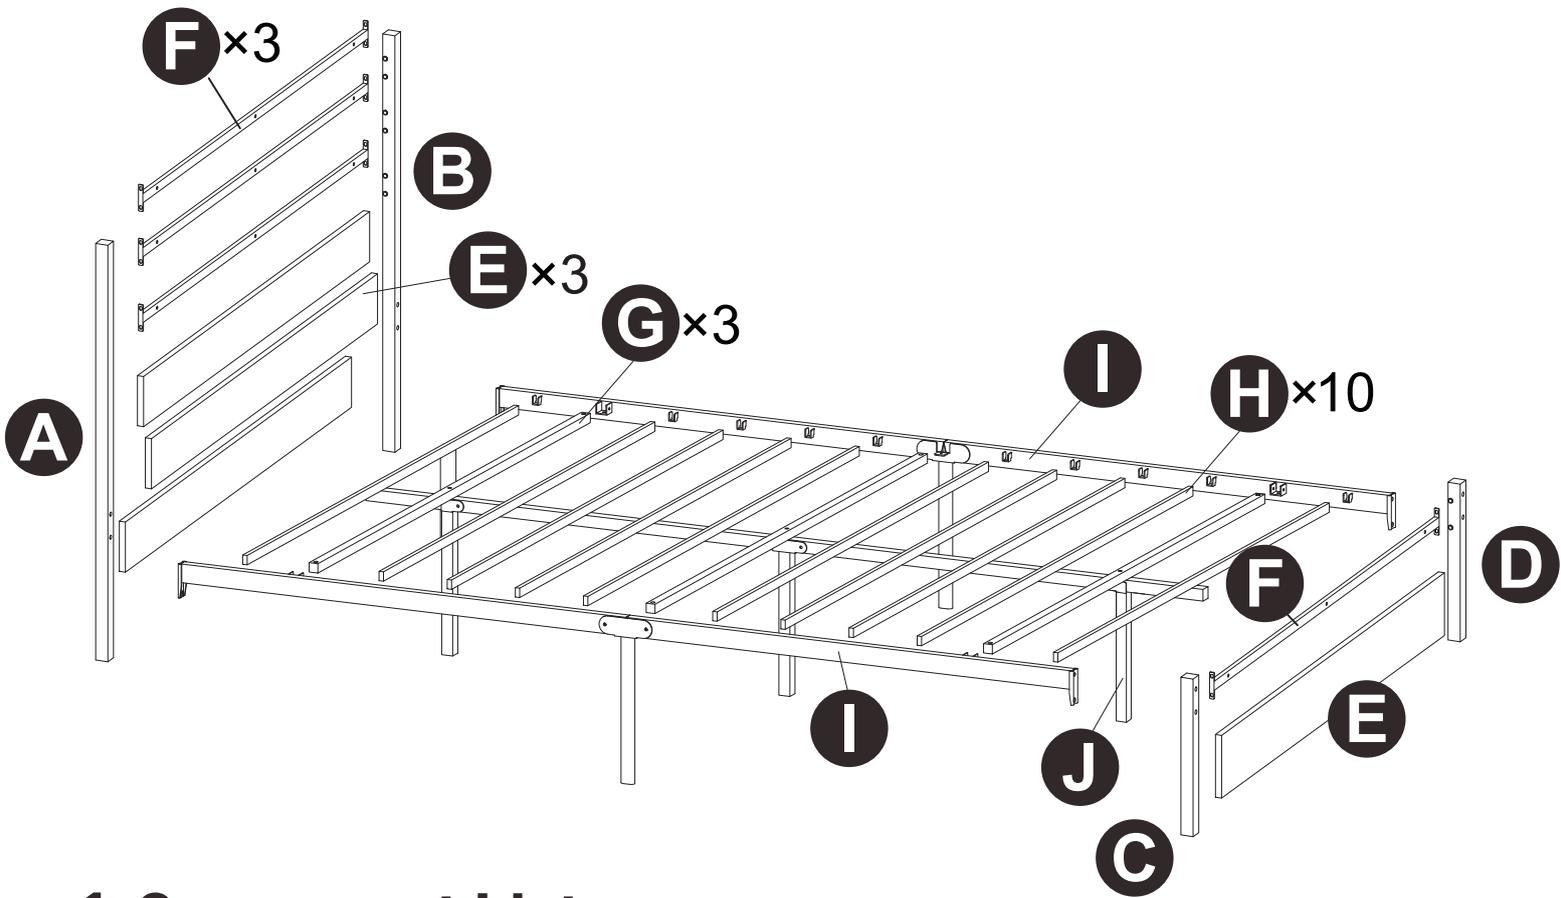

1 Component List

A



x1

Left bed leg

 
B



x1

Right bed leg


C



x1

Left bed tail leg

 D



x1

Right bed tail leg

E



x4

Head and tail board

F



x4

Head and tail rail

G



x3

link bar

H



x10

Ribs strip

I



x2

Side frame

J

 


x1

Middle frame

2 Hardware


1



x4

M8x50mm

 2



x3

M6x55mm

 
3



x4

M6x25mm


4



x12

M6x20mm

 5




x8

6



x4

 7



x16

 
M6x12mm

8



x2


9



x6


M6x30mm

 
10



x1

 
Step 1

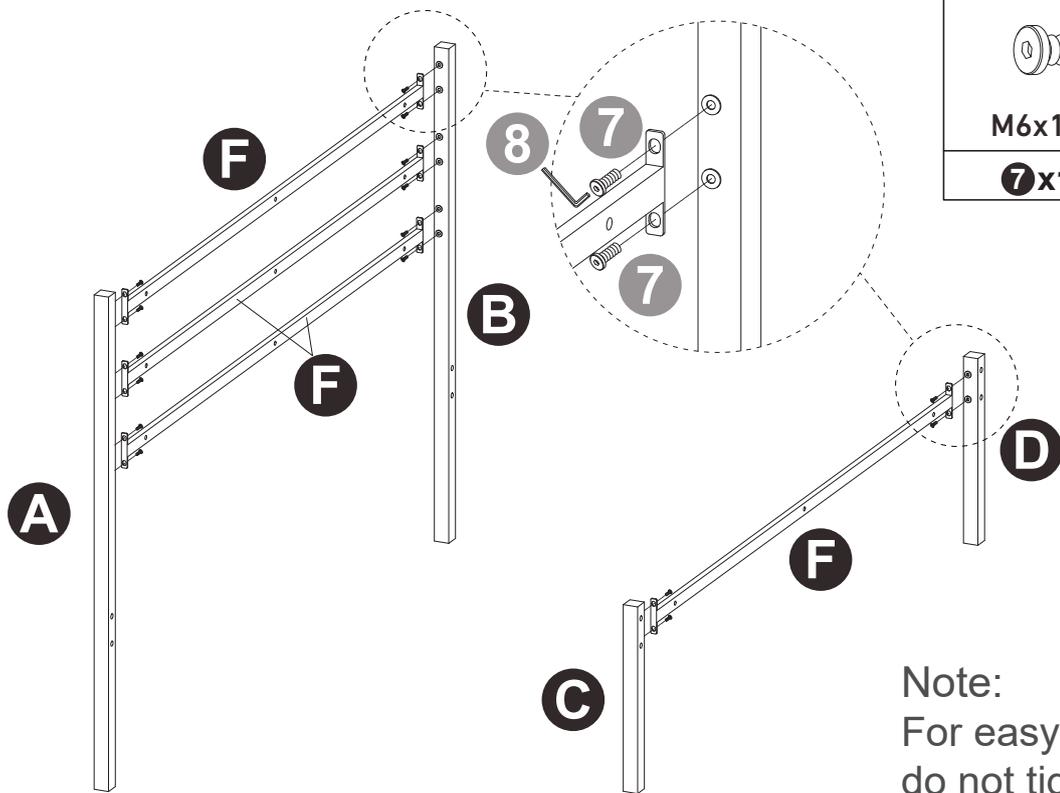

 M6x12mm	
7 x16pcs	8 x1pc


Note:
For easy setup intention
do not tighten screws during
the installation process,

Step 2


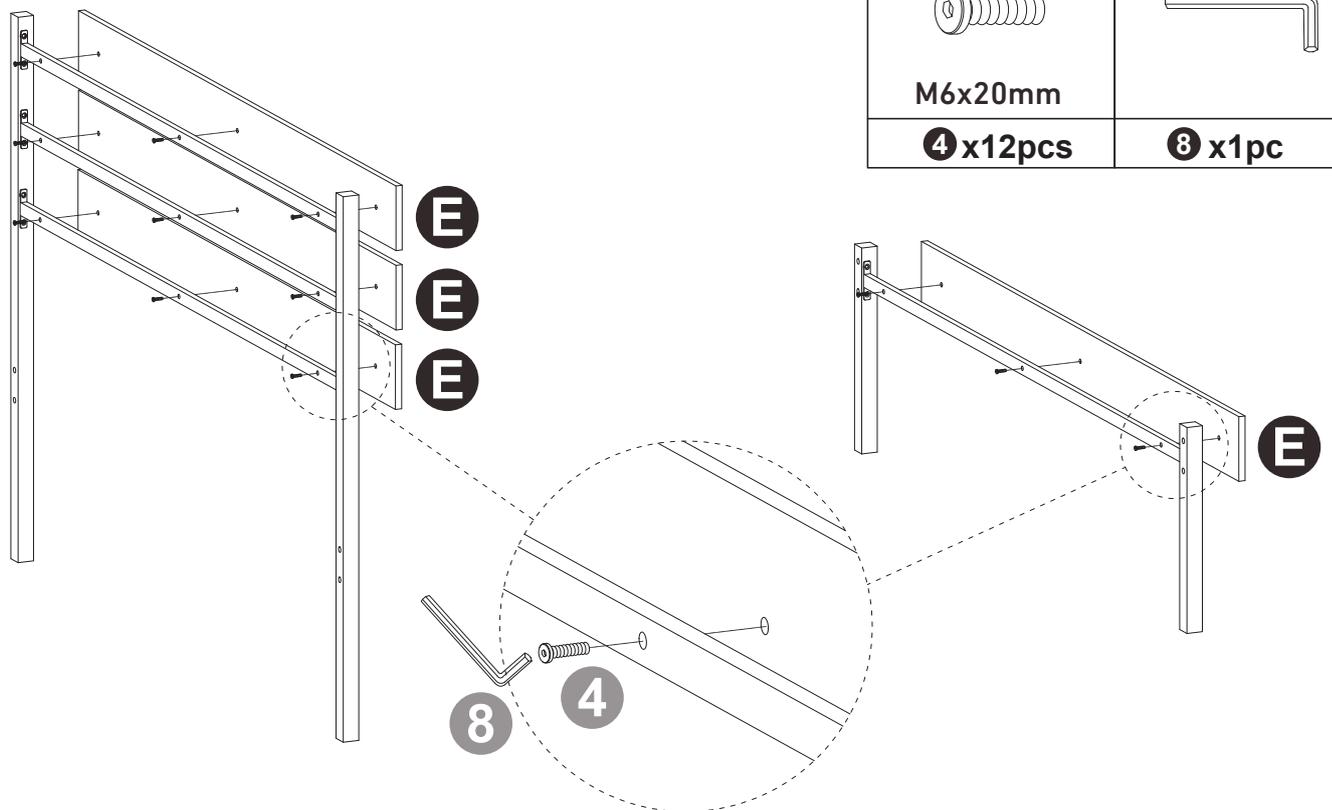



 M6x20mm	
4 x12pcs	8 x1pc

Step 3

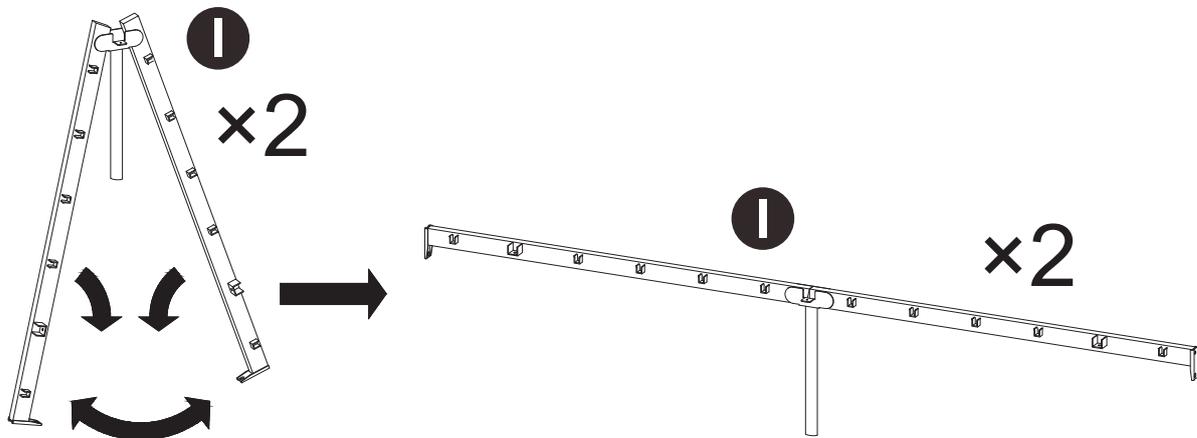


  Step 4


				
M8x50mm	M6x25mm			
1 x4pcs	3 x4pcs	5 x8pcs	6 x4pcs	8 x2pcs

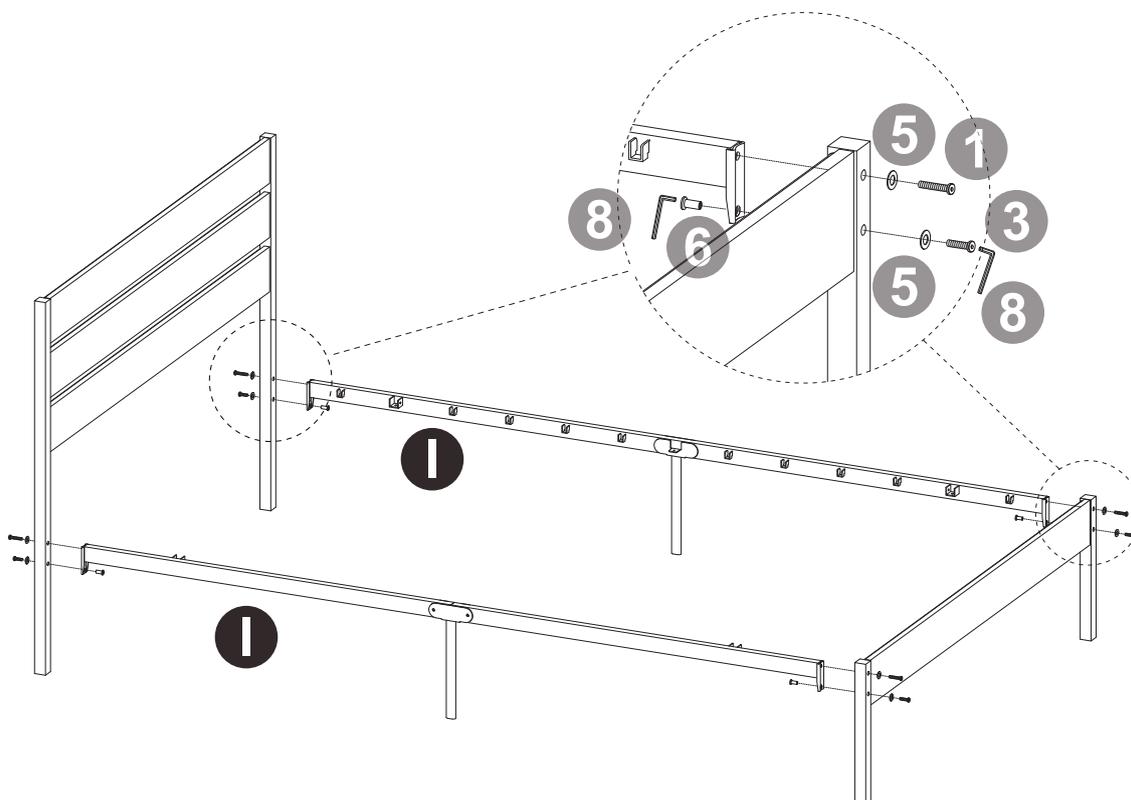



Step 5

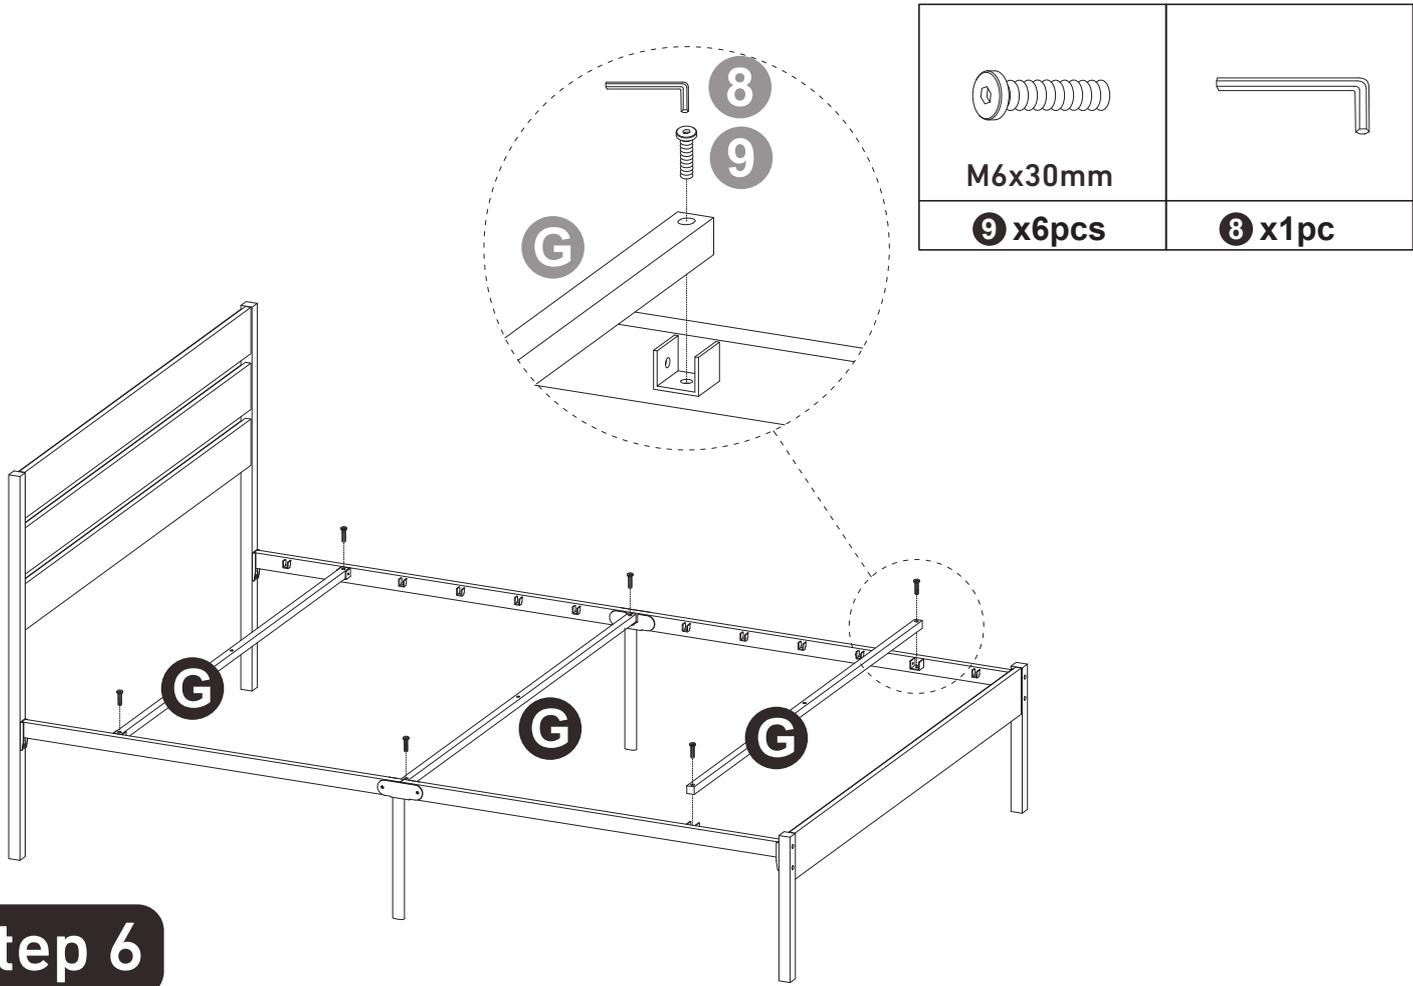


Step 6

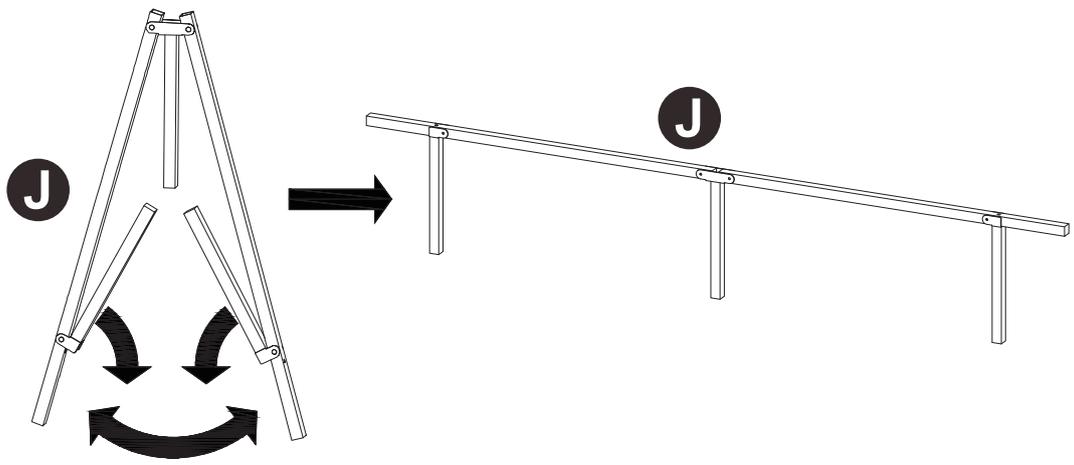


  Step 7

		
M6x55mm		
② x16pcs	⑩ x1pc	⑧ x1pc

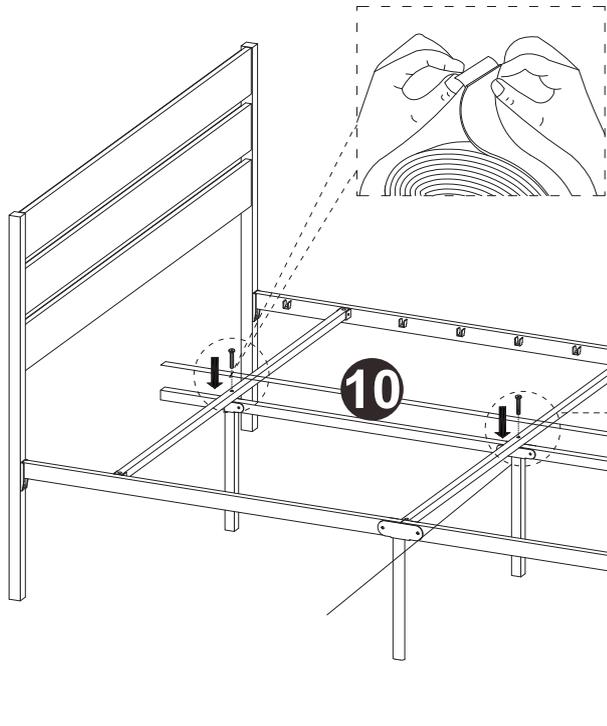


step2. To prevent friction noise, unroll part ⑩ and fit it on part ①, the length of part N can cut as you will.

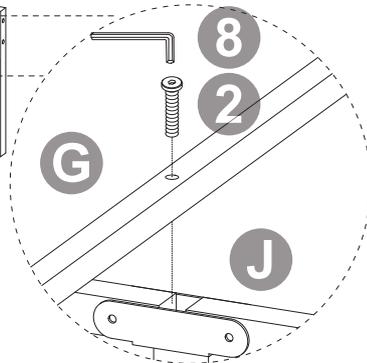


step1. Tighten screw ②

Step 8

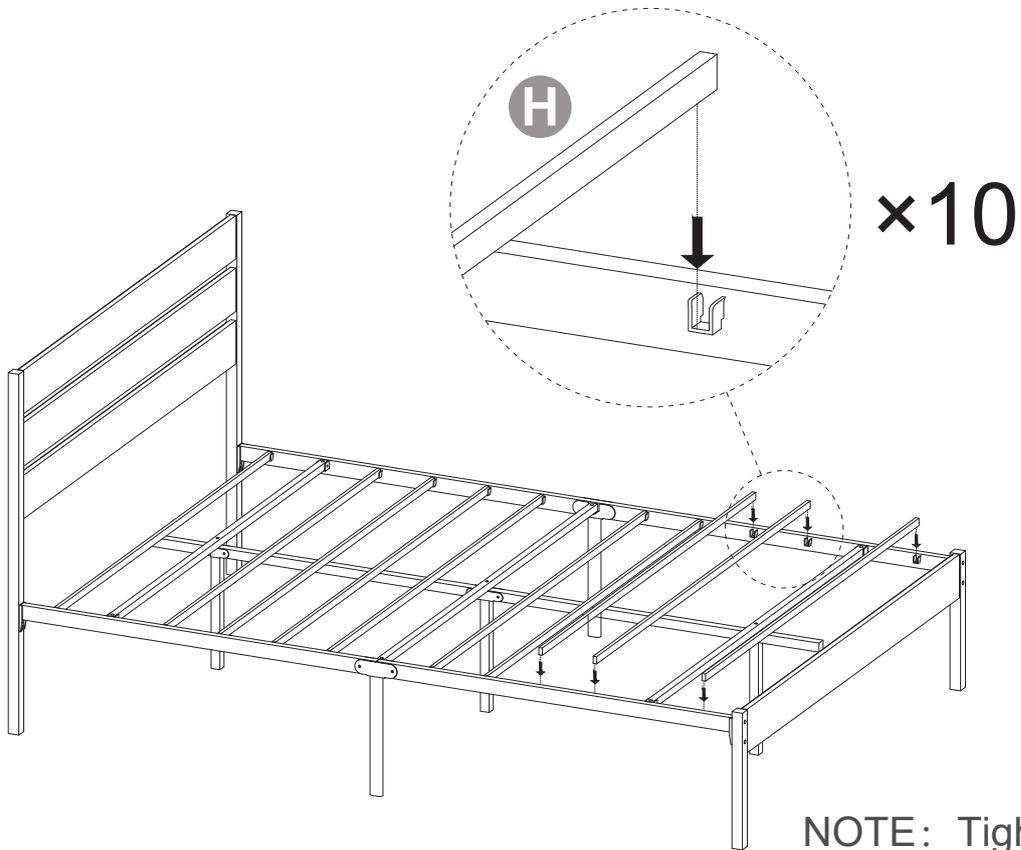

NOTE: Tighten all screws .

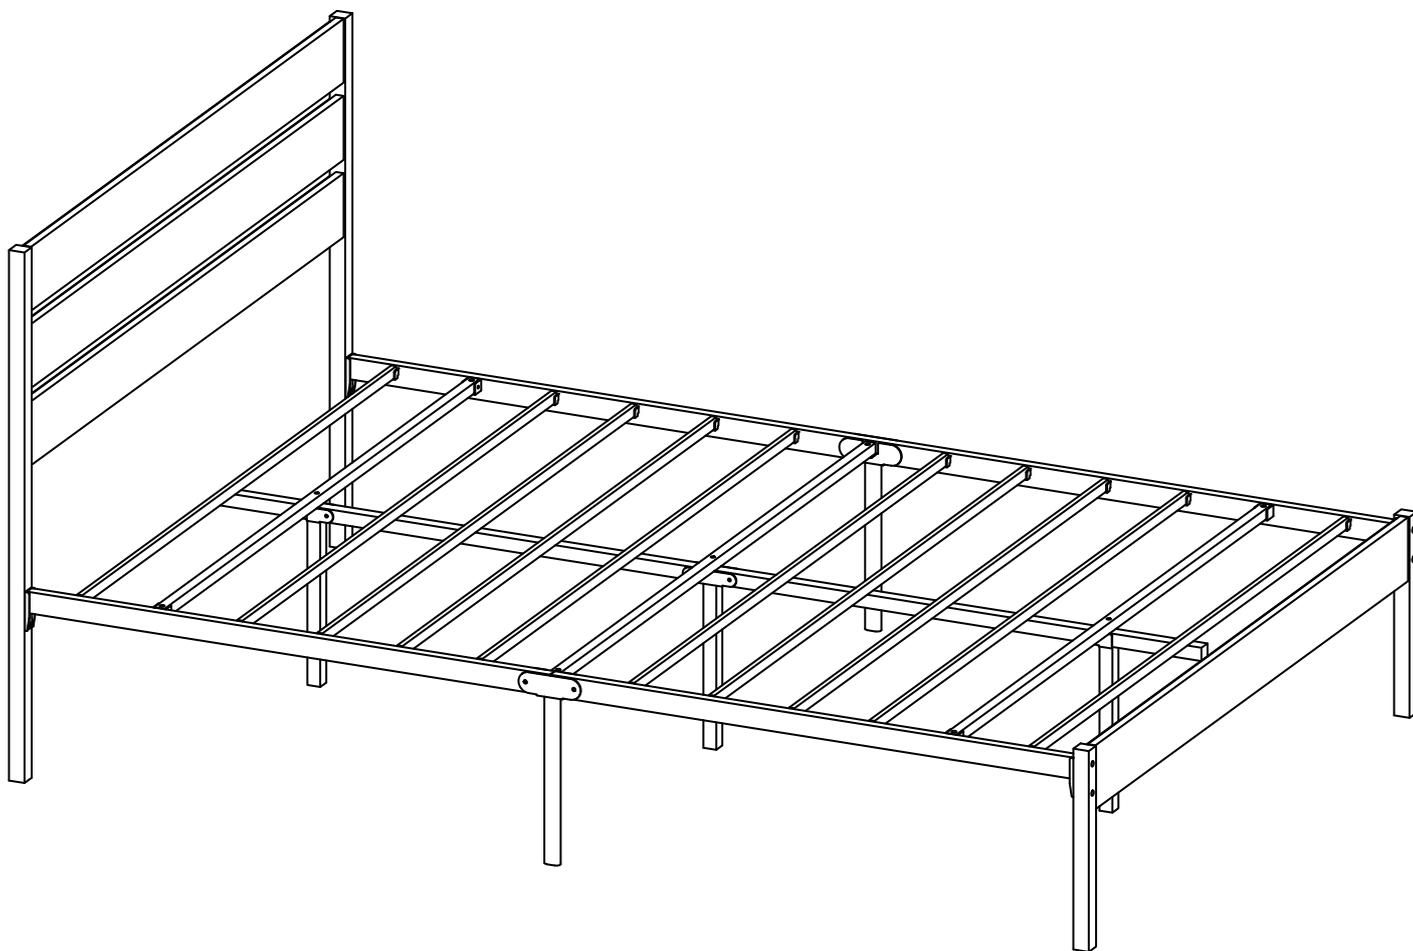

Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.