

Panasonic®

Integrated Telephone System

Model No. KX-TS208W

Pulse-or-tone dialing capability

Operating Instructions



2 LINE

PLEASE READ BEFORE USE AND SAVE.

For assistance, visit our Web site: <http://shop.panasonic.com/support> for customers in the U.S.A.

 
Please register your product: <http://shop.panasonic.com/support>

Preparation

Basic Operation

Advanced Operation

Useful Information



Before Initial Use

Please read **IMPORTANT SAFETY INSTRUCTIONS** on page 39 before use.
Read and understand all instructions.

Thank you for purchasing your new Panasonic integrated telephone.

 
 
 
Attach your purchase receipt here.

 
For your future reference

Serial No. _____
(found on the bottom of the unit)

Date of purchase _____

Name and address of dealer _____






Accessories (included)


For extra orders, call 1-800-332-5368.

Handset (p. 10)
Order No. PQJXC0102Z

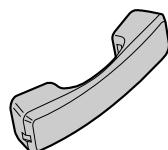

one

Handset Cord (p. 10)
Order No. PQJA212M

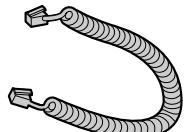


one

4-Wire Telephone Line Cord
with Green Plugs (p. 10, 11, 12)




one

2-Wire Telephone Line Cord
with Transparent Plugs (p. 11, 12)

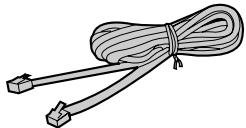


one

 Wall Mounting Adaptor (p. 17)
Order No. PQKL10035Z2



one

 

Contents

Preparation


Location of Controls	6
Display	8
Settings	9
Installing the Batteries	9
Connecting the Handset	10
Connecting the Telephone Line Cord	10
Connecting a Communication Device	12
Programming Summary	13
Dialing Mode	14
Time Adjustment	15
LCD Contrast	16
Ringer Volume	16
Wall Mounting	17


Basic Operation

Making Calls	18
Answering Calls	20

Advanced Operation

Using the Other Line During a Conversation	21
Conference call	22
Speed Dialer	23
Storing Phone Numbers	23
Dialing a Stored Number	24
One-Touch Dialer	25
Storing Phone Numbers	25
Dialing a Stored Number	27

 


 **Preparation****Basic Operation****Advanced Operation****Useful Information**


Special Features	28
For Call Waiting Service Users	28
Temporary Tone Dialing	
(For Rotary or Pulse Service Users)	28
How to Use the PAUSE Button	
(For Analog PBX Line/Long Distance Service Users)	29
Muting Your Conversation	29
FLASH Button	30
PIN Code	31
Dial Lock	32
Call Restriction	33

Useful Information


Optional Headset	34
Battery Replacement	36
Troubleshooting	37
Important Safety Instructions	39
FCC and Other Information	41
Index	44
Customer services	45
Limited Warranty (ONLY FOR U.S.A.)	46

 


Location of Controls

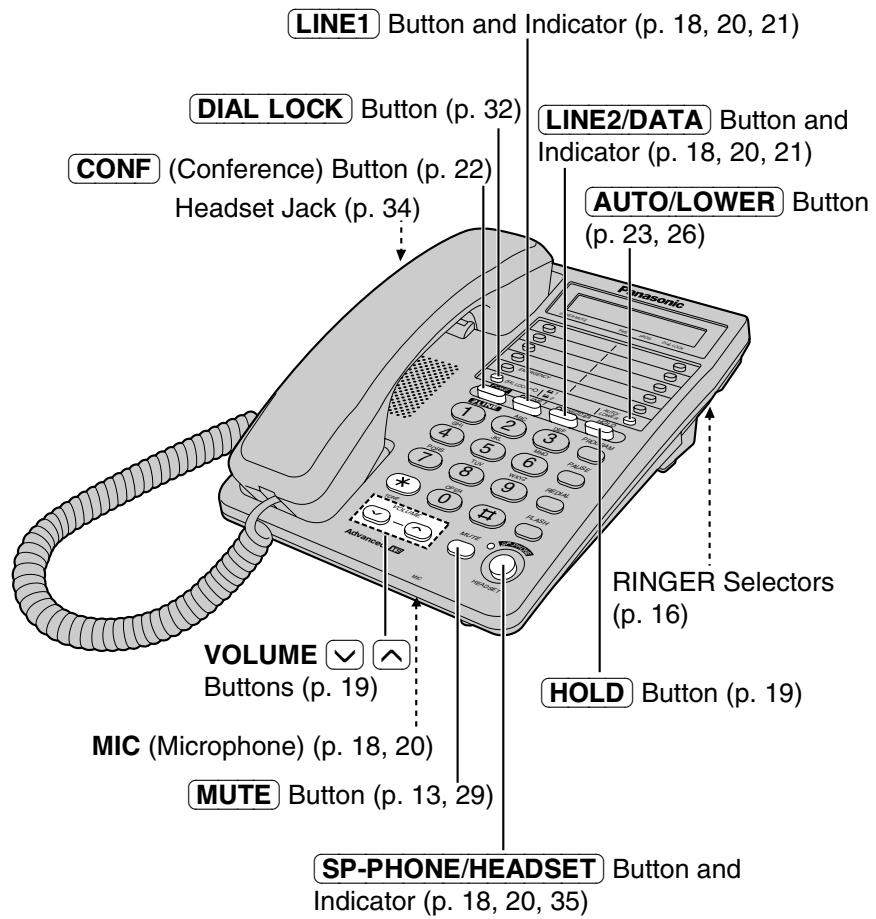

Preparation

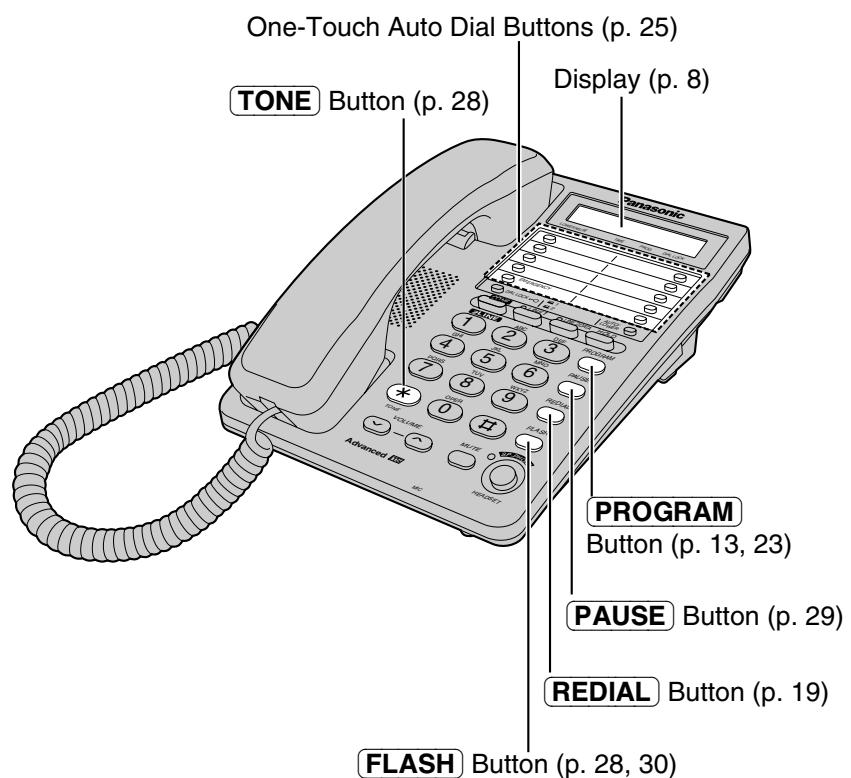

 

Display



(This display shows all of the possible configurations.)

12:00A : In the standby mode, the display shows the current time.
(Ex. 12:00AM)

02- 14-30 : During a conversation, the call duration is displayed.
(Ex. 2 hours, 14 minutes, 30 seconds)

F : **FLASH** was pressed.

P : **PAUSE** was pressed while storing phone numbers.

↳ : ***** was pressed while dialing.

三 : **#** was pressed while dialing.

 
— : **AUTO/LOWER** was pressed (p. 23, 26).

⊗ : **MUTE** was pressed during a conversation (p. 29).

⌚ ➔ ⟲ ➔ : The unit is in the clock setting mode (p. 15).

→ : The unit is in the programming mode (p. 13).

☞ : The dial lock mode is set. To cancel the mode, see page 32.



Settings




Installing the Batteries

1 Press down in the direction of the arrow and open the cover.

2 Install the batteries in the proper order as shown, matching the correct polarity.

3 Close the battery cover.

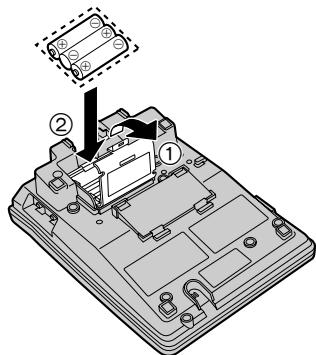


Preparation

- Batteries are not included in the unit.
- Install three high quality "AA" Alkaline or Manganese batteries. We recommend to use Alkaline batteries.
Battery life is:
 - about six months in use of Alkaline batteries.
 - about three months in use of Manganese batteries.Battery life may depend on usage conditions and ambient temperature.
- Make sure to install the batteries for the following features to operate properly:
 - Display (p. 8)
 - Buttons' function when the handset is on the cradle
 - Speakerphone (p. 18, 20)
 - Programming (p. 13)

▶ Settings

Connecting the Handset

Connect the handset as shown below.

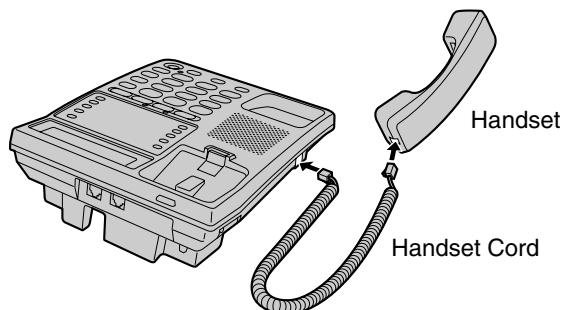


- Use only a Panasonic Handset for the KX-TS208W.


Connecting the Telephone Line Cord

Connect the telephone line cord(s) to the unit as follows.

To connect a two-line telephone jack

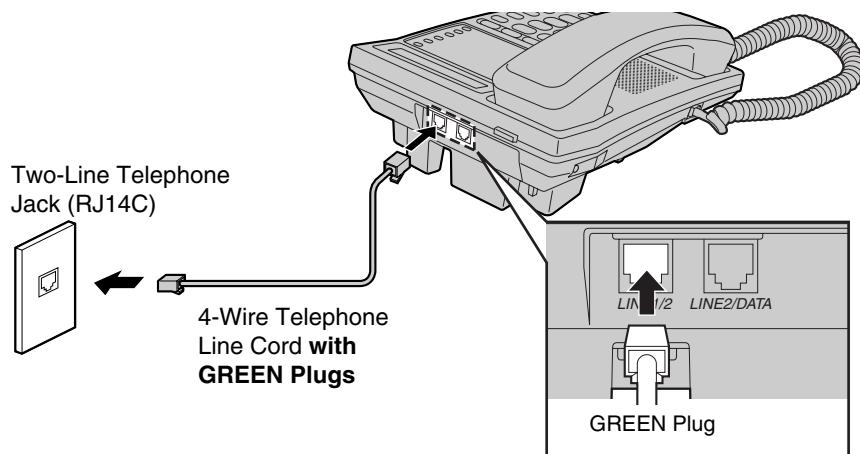


To connect two single-line telephone jacks

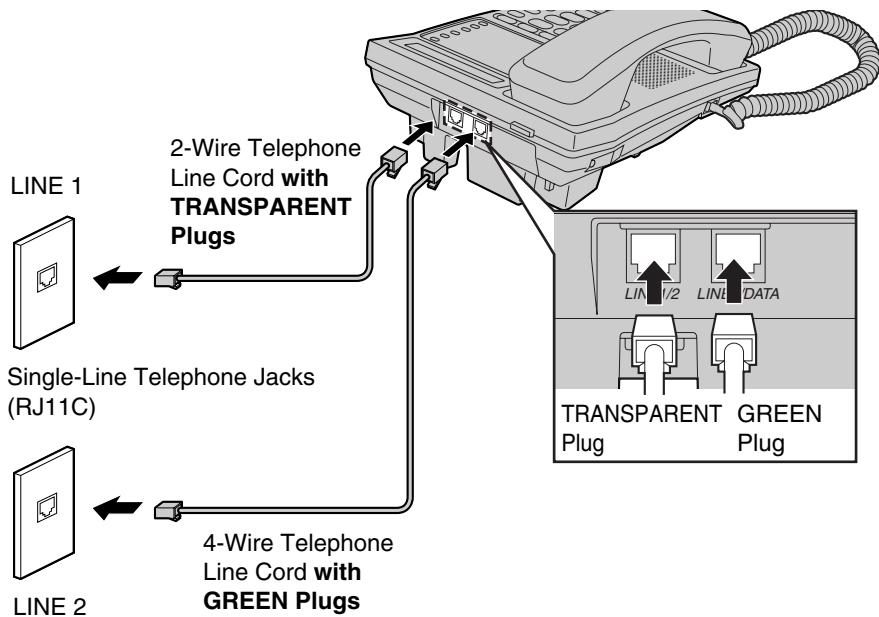

Preparation

If you use the unit only as a single-line telephone

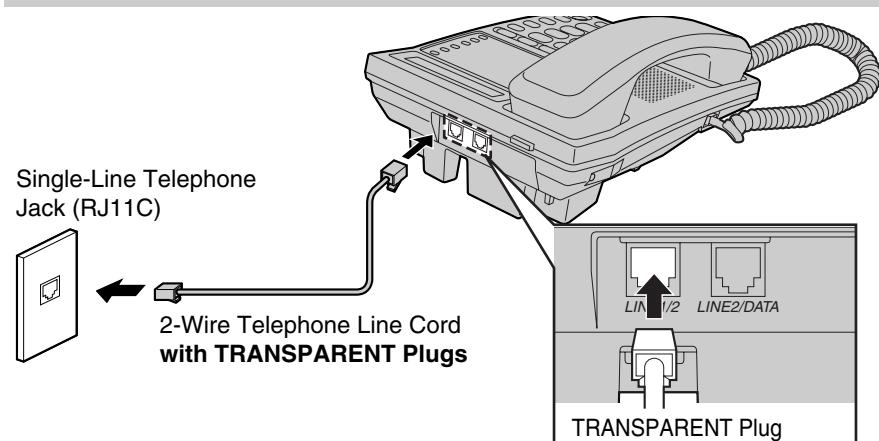


- For this connection, you can only use LINE 1.


▶ Settings

Connecting a Communication Device

After connecting the telephone line cord to a two-line telephone jack, you can connect a communication device (computer, modem, fax, answering machine, etc.) through this unit using the LINE2/DATA jack.

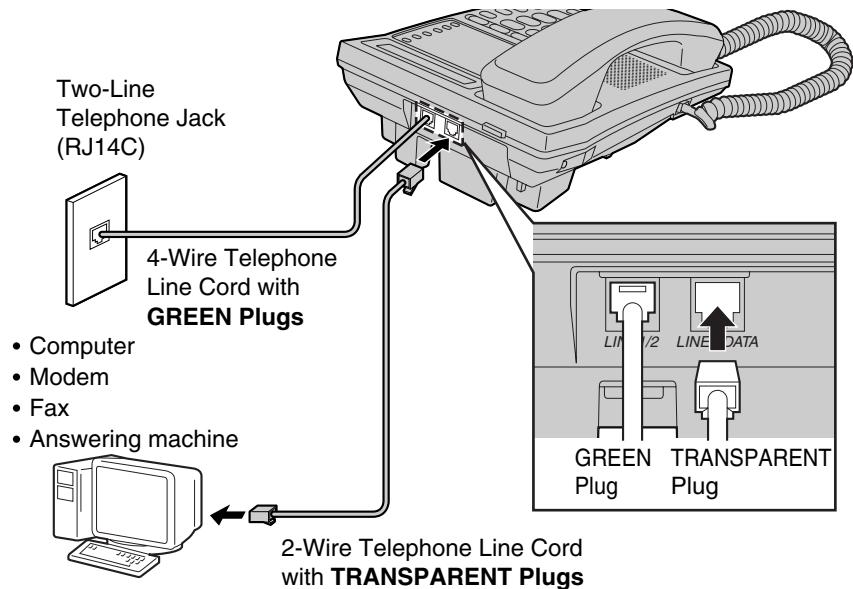

 - If the LINE2/DATA indicator lights red, the communication device is in use. Use LINE1 to make or answer other calls. Otherwise the communication device may not operate properly.



Programming Summary

You can program the following functions. The display shows the programming instructions. See the corresponding pages for function details.

Preparation

Press **PROGRAM**.



Press **MUTE**.

 


 
- **To set the call restriction**, press **1**. (page 33)
- **To change the flash time**, press **2**. (page 30)
- **To select the dialing mode**, press **3**. (page 14)
- **To change the PIN code for the dial lock and call restriction**, press **5**. (page 31)
- **To adjust the time**, press **6**. (page 15)
- **To change the LCD contrast setting**, press **7**. (page 16)



Press **PROGRAM** to store the setting.

- You can exit the programming mode any time by pressing **PROGRAM**.
- If you do not press any buttons for 60 seconds, the unit will return to the standby mode.





▶ Settings

Dialing Mode

You can select the dialing mode by programming. If you have touch tone service, set to "Tone". If rotary or pulse service is used, set to "Pulse". Your phone comes from the factory set to "Tone".

1 Press **PROGRAM**.



2 Press **MUTE**.



3 Press **3**.

- The current setting is displayed.



4 To select "Pulse", press **2**.
OR

To select "Tone", press **1**.



5 Press **PROGRAM**.

- A long beep sounds.
- The unit will return to the standby mode.

Time Adjustment

You can select AM/PM or military time by programming.

1 Press **PROGRAM**.

----- →

2 Press **MUTE**.

F- →

3 Press **6**.


12-00 Ⓛ →

4 Enter the current time (hour and minute) using a 4-digit number.
(Ex. To set 9:30, enter "0930".)

09-30 Ⓛ →

5 Press **#** to select AM, PM or military time.
(Ex. You select PM.)

09-30P Ⓛ →

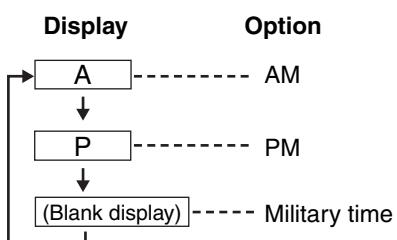

AM/PM	Military Time
12:00AM–11:59AM	0:00–11:59
12:00PM–11:59PM	12:00–23:59

- Each time you press **#**, the selection will change on the display.

6 Press **PROGRAM**.

- A long beep sounds.
- The clock starts working. “-” flashes on the display.
- If an alarm sound is heard when entering the time and pressing **PROGRAM**, the time entered are not correct. Enter the correct time and press **PROGRAM**.
- The unit will return to the standby mode.

If the batteries installed in the unit have expired, the time will be shown as “12-00” and “⌚” will flash. Readjust the time.

▶ Settings

LCD Contrast

You can select the LCD contrast level from 1 to 4 by programming. Your phone comes from the factory set to 3.

1 Press **PROGRAM**.

→

2 Press **MUTE**.

F-
→

3 Press **7**.

- The current setting is displayed.

F7
→ 3

4 Press **1** to **4**.


- Each time you press a button, the level will change on the display.

5 Press **PROGRAM**.


- A long beep sounds.
- The unit will return to the standby mode.

Ringer Volume

You can select the ringer volume of each line to HIGH, LOW or OFF. Your phone comes from the factory set to HIGH.

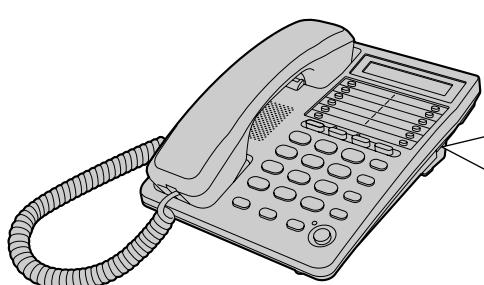

 
RINGER Selectors:
Set to HIGH, LOW or OFF.
• When set to OFF, the selected line(s) will not ring.



Wall Mounting


The unit can be mounted on a wall phone plate.

- 1 Pull down the handset hook until it locks, **so the tab holds the handset.**


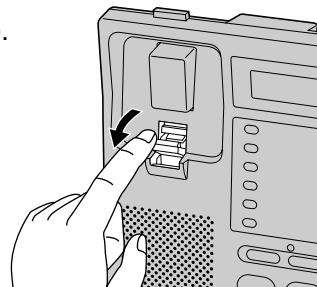


Preparation

- 2 Tuck the telephone line cord inside the wall mounting adaptor, and push it in the direction of the arrow.
•“UP” should be facing upward.

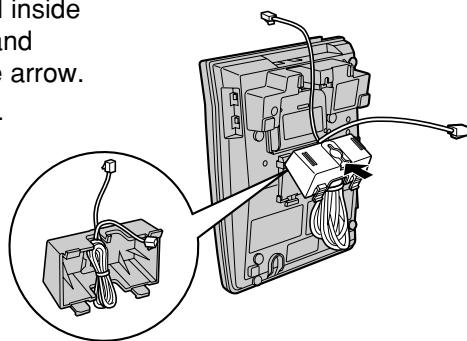


- 3 Connect the telephone line cord. Mount the unit, and slide down.

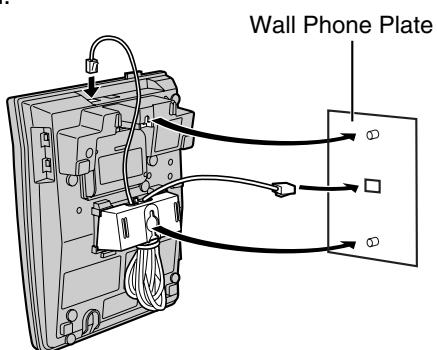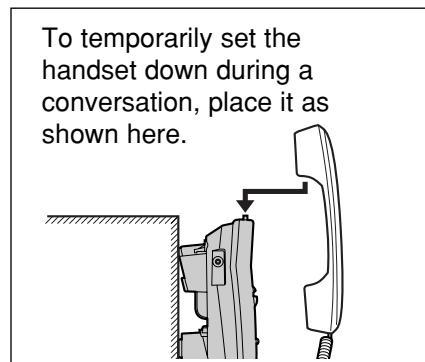

Making Calls

Using the handset

- 1 Press **LINE1** or **LINE2/DATA** to select a telephone line.
- 2 Lift the handset.
 - The line indicator lights red.
- 3 Dial a phone number.
 - The dialed number is displayed.
 - After a few seconds, the display will show the length of the call.
 - If you misdial, hang up and start again from step 1.
- 4 To hang up, place the handset on the cradle.
 - The line indicator light goes out.
 - The display will return to the standby mode.

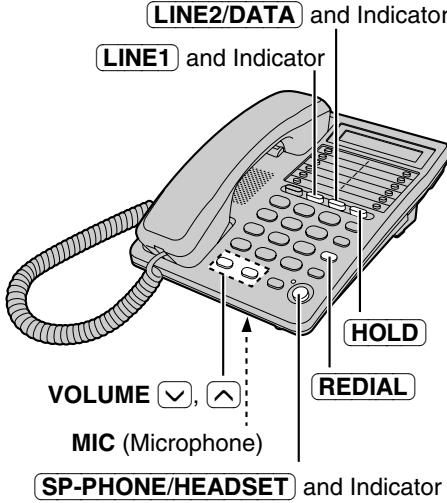

Using the speakerphone

- 1 Press **LINE1** or **LINE2/DATA** to select a telephone line.
- 2 Press **SP-PHONE/HEADSET**.
 - The line indicator lights red and the SP-PHONE/HEADSET indicator lights.
- 3 Dial a phone number.
 - The dialed number is displayed.
 - After a few seconds, the display will show the length of the call.
 - If you misdial, press **SP-PHONE/HEADSET** and start again from step 1.
- 4 When the other party answers, talk into the **MIC** (microphone).
- 5 To hang up, press **SP-PHONE/HEADSET**.
 - The indicator light goes out.
 - The display will return to the standby mode.

• Be sure that the **CONF** (Conference) button is released.

• If the LINE2/DATA jack is connected to a communication device (p. 12) and the LINE2/DATA indicator lights red, the communication device is in use. Use LINE1 to make or answer other calls. Otherwise the communication device may not operate properly.

To adjust the handset volume (4 levels) or the speaker volume (8 levels) while talking

To increase, press **VOLUME **. To decrease, press **VOLUME **.

Ex. Handset volume level: 2

0000-----

- One level of the handset volume is shown by “00”.
- The display shows the volume level for a few seconds.

Ex. Speaker volume level: 3

000-----

- One level of the speaker volume is shown by “0”.
- The display shows the volume level for a few seconds.

To redial the last number dialed

Press **LINE1** or **LINE2/DATA** →
→ lift the handset or press **SP-PHONE/HEADSET** → press **REDIAL**.

To put a call on hold

Press **HOLD**.

- The line indicator lights green.
- If using the handset, you can place it on the cradle.

To release the hold

Press the line button → lift the handset or press **SP-PHONE/HEADSET**.

- If another phone is connected on the same line, you can also release the hold by lifting its handset.

During speakerphone operation

For best performance, please note the following:

- Talk alternately with the other party in a quiet room.
- If the other party has difficulty hearing you, press **VOLUME ** to decrease the speaker volume.
- You can switch to the handset by lifting it up. To switch back to the speakerphone, press **SP-PHONE/HEADSET**.

What the line indicator means


Off	The line is free.
On (red)	You are using the line or someone else is using the line on a parallel connected telephone.
On (green)	A call is on hold.
Flashing (red)	A call is being received.

Answering Calls

While a call is being received, the unit rings and the called line indicator flashes red.

Using the handset

- 1 Press the line button whose indicator is flashing.
- 2 Lift the handset.
 - The line indicator lights red.
- 3 To hang up, place the handset on the cradle.
 - The indicator light goes out.

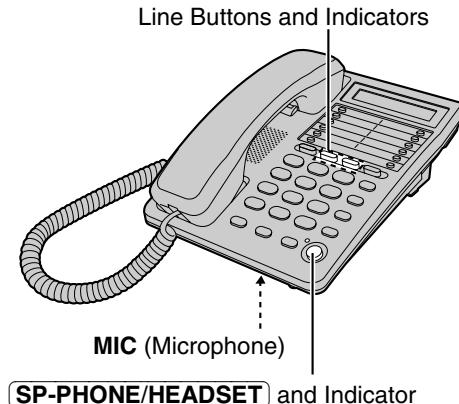

Using the speakerphone

- 1 Press the line button whose indicator is flashing.
- 2 Press **SP-PHONE/HEADSET**.
 - The line indicator lights red and the SP-PHONE/HEADSET indicator light.
- 3 Talk into the **MIC** (microphone).
- 4 To hang up, press **SP-PHONE/HEADSET**.
 - The indicator lights go out.

•When the RINGER selector(s) is/are set to OFF (p. 16), the selected line(s) will not ring.


•Be sure that the **CONF** (Conference) button is released.

Using the Other Line During a Conversation

During a conversation, if the other line indicator flashes red, an incoming call is being received on the line. You can answer the second call while holding the first call. You can also make a call without terminating the first call.

Ex: If you are using LINE1

- 1 Press **HOLD** to put the first call (LINE1) on hold.
 - The LINE1 indicator lights green.
 - If you are using the handset, place it on the cradle.
- 2 Press the other line button (LINE2/DATA) and either lift the handset or press **SP-PHONE/HEADSET** to make or answer a second call.
 - The LINE2/DATA indicator lights red.
- 3 To return to the first call (LINE1), press the line button for the first call (LINE1).
 - The second call is terminated.
 - To hold the second call in step 3, press **HOLD** before pressing the line button for the first call and either lift the handset or press **SP-PHONE/HEADSET**.

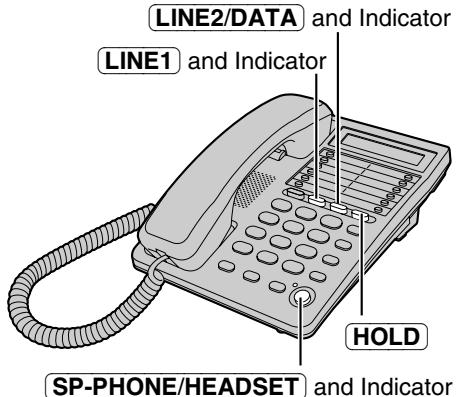

Advanced Operation

Conference Call


While having a conversation on one line, you can make or answer a second call on the other line and then combine both calls together to make a conference call.

Ex: If you are using LINE 1

- 1 Press **HOLD** to put the first call (LINE1) on hold.
 - The LINE 1 indicator lights green.
 - If you are using the handset, place it on the cradle.

- 2 Press the other line button (LINE2/DATA) and either lift the handset or press **SP-PHONE/HEADSET** to make or answer a second call.
 - The LINE2/DATA indicator lights red.

- 3 When the second call is connected, press **CONF** to make a conference call.
 - Both line indicators light red.

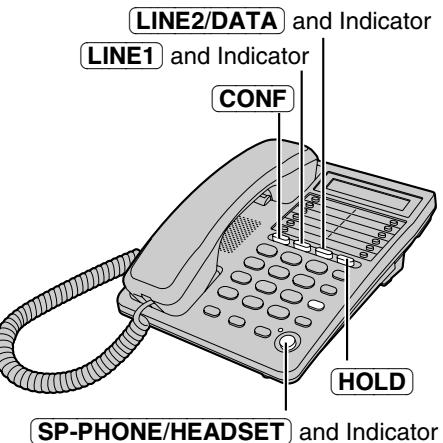


During a conference call:

- **To hang up both lines**, place the handset on the cradle or press **SP-PHONE/HEADSET**. Then press **CONF**.
- **To hang up only one line**, press the line button you want to continue talking with, then press **CONF**.

Speed Dialer

Storing Phone Numbers


You can store up to 10 phone numbers in memory. The dialing buttons (0 to 9) function as memory stations. Do not press any memory stations before storing to prevent misoperation.

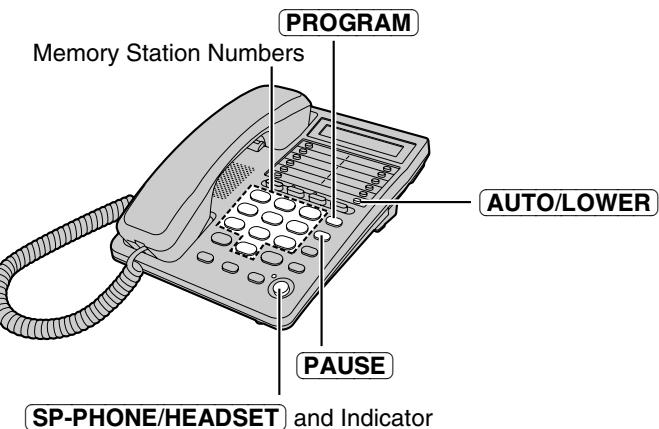

- 1 Press **PROGRAM**.
- 2 Enter a phone number, up to 22 digits.
 - If you enter a wrong number, press **PROGRAM** and start again from step 1.
- 3 Press **AUTO/LOWER**.
- 4 Press a memory station number (0 to 9).
 - A long beep sounds.
 - The unit will return to the standby mode.
 - If 3 beeps sound, the number entered in step 2 may be over 22 digits. Lift the handset and place it on the cradle to return to the standby mode, and start again from step 1.


- You can exit the programming mode in step 1 and 2 by pressing **PROGRAM**.
- If a pause is required for dialing, press **PAUSE** where needed. Pressing **PAUSE** counts as one digit (p. 29).

 Advanced Operation



► Speed Dialer

 
To erase a stored number

- 1 Press **PROGRAM**.

- 2 Press **AUTO/LOWER**.

- 3 Press a memory station number (**0** to **9**) for the phone number to be erased.
 - A long beep sounds.
 - The unit will return to the standby mode.

 Dialing a Stored Number

- 1 Press **LINE1** or **LINE2/DATA** to select a telephone line.
- 2 Lift the handset or press **SP-PHONE/HEADSET**.
- 3 Press **AUTO/LOWER**.
- 4 Press the memory station number (**0** to **9**).
 - The stored number is displayed and dialed.




One-Touch Dialer

Storing Phone Numbers

You can store up to 20 phone numbers in the one-touch auto dial buttons (10 numbers in UPPER memory locations, 10 numbers in LOWER memory locations).

Do not press any one-touch auto dial buttons before storing to prevent misoperation.

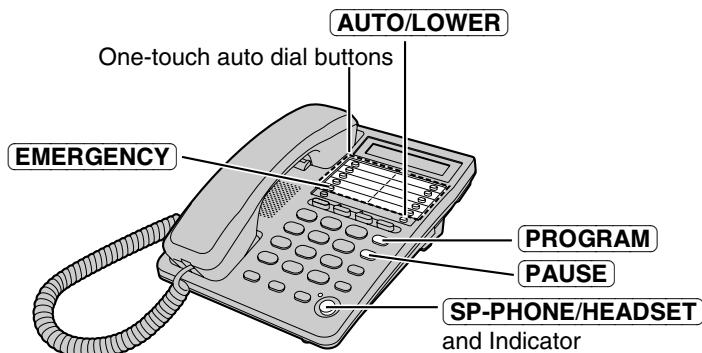


To store in an UPPER memory location

It is recommended that you program an emergency number in the EMERGENCY button.

- 1 Press **PROGRAM**.
- 2 Enter a phone number, up to 22 digits.
 - If you enter a wrong number, press **PROGRAM** and start again from step 1.
- 3 Press one of the one-touch auto dial buttons.
 - A long beep sounds.
 - The unit will return to the standby mode.
 - If 3 beeps sound, the number entered in step 2 may be over 22 digits. Press **PROGRAM** to return to the standby mode, and start again from step 1.
 - If a pause is required for dialing, press **PAUSE** where needed. Pressing **PAUSE** counts as one digit (p. 29).
 - When using the Dial Lock (p. 32) or Call Restriction feature (p. 33), you cannot store a phone number in the EMERGENCY button.

Advanced Operation

 For assistance, please visit <http://shop.panasonic.com/support>




► One-Touch Dialer

To store in a LOWER memory location

1 Press **PROGRAM**.



 2 Enter a phone number, up to 22 digits.
 • If you enter a wrong number, press **PROGRAM** and start again from step 1.



3 Press **AUTO/LOWER**.



4 Press one of the one-touch auto dial buttons.

- A long beep sounds.
- The unit will return to the standby mode.
- If 3 beeps sound, the number entered in step 2 may be over 22 digits. Lift the handset and place it on the cradle to return to the standby mode, and start again from step 1.
- If a pause is required for dialing, press **PAUSE** where needed. Pressing **PAUSE** counts as one digit (p. 29).

To erase a stored number

1 Press **PROGRAM**.



 
2 If the phone number is in an UPPER memory location, press the one-touch auto dial button for the phone number to be erased.

OR

If the phone number is in a LOWER memory location, press **AUTO/LOWER**, then press the one-touch auto dial button for the phone number to be erased.

- A long beep sounds.
- The unit will return to the standby mode.

- When using the Dial Lock (p. 32) or Call Restriction feature (p. 33), you cannot erase a phone number in the EMERGENCY button.



Dialing a Stored Number

From an UPPER memory location:

- 1 Press **LINE1** or **LINE2/DATA** to select a telephone line.
- 2 Lift the handset or press **SP-PHONE/HEADSET**.
- 3 Press the required one-touch auto dial button.
•The stored number is displayed and dialed.


OR

From a LOWER memory location:

- 1 Press **LINE1** or **LINE2/DATA** to select a telephone line.
- 2 Lift the handset or press **SP-PHONE/HEADSET**.
- 3 Press **AUTO/LOWER**.
- 4 Press the required one-touch auto dial button.
•The stored number is displayed and dialed.


Memory card

Remove the memory card and use it as a name or phone number index for the stored numbers.

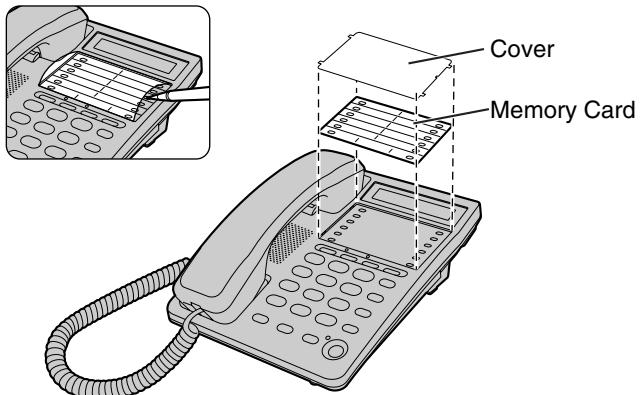

Advanced Operation

Special Features

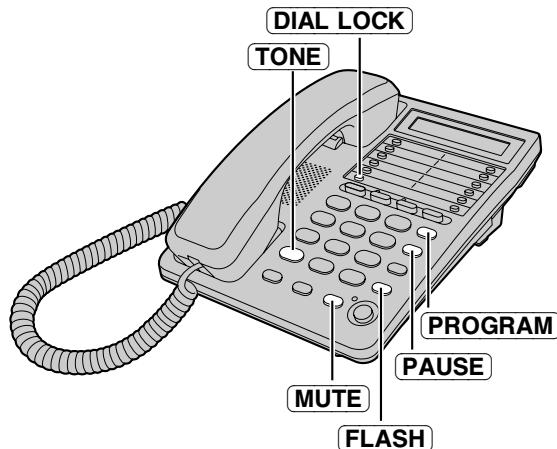

For Call Waiting Service Users

 
Press **FLASH** if you hear a call-waiting tone while talking.

- The first call is put on hold and you can answer the second call.
- “*F*” is displayed.
- To return to the first caller, press **FLASH** again.
- If this function does not operate properly, consult your telephone company.

Temporary Tone Dialing (For Rotary or Pulse Service Users)

Press **TONE** before entering access numbers which require tone dialing.

- “*T*” is displayed.
- The dialing mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.



How to Use the PAUSE Button (For Analog PBX Line/Long Distance Service Users)

We recommend you press **PAUSE** if a pause is required for dialing with a PBX or to access a long distance service.

Ex. Line access number **9** (PBX)

9 → **PAUSE** → **Phone number**

 
- Pressing **PAUSE** once creates a few seconds pause.
This prevents misdialing when you redial or dial a stored number.
- Pressing **PAUSE** more than once increases the length of the pause between numbers.

Muting Your Conversation

Press **MUTE** while talking.

- “” is displayed.
- The other party cannot hear you but you can hear them.
- To resume the conversation, press **MUTE** again.

Advanced Operation



► Special Features

FLASH Button

Pressing **FLASH** allows you to use special features of your host PBX such as transferring an extension call or accessing special telephone services (optional) such as call waiting.

Selecting the flash time

The flash time depends on your telephone exchange or host PBX. You can select the following flash times: "80, 90, 100, 110, 200, 250, 300, 400, 600, 700 ms (milliseconds)". Your phone comes from the factory set to "600 ms".

1 Press **PROGRAM**.

⇒

2 Press **MUTE**.

F -
⇒

3 Press **2**.

- The current setting is displayed.

F2
⇒ 600


4 Press a dialing button (**1** to **0**).

1	: 80 ms	2	: 90 ms	3	: 100 ms	4	: 110 ms
5	: 200 ms	6	: 250 ms	7	: 300 ms	8	: 400 ms
9	: 600 ms	0	: 700 ms				

5 Press **PROGRAM**.

- A long beep sounds.
- The unit will return to the standby mode.

 •If the unit is connected via a PBX, you may not use PBX functions (transferring a call, etc.) properly. Consult your PBX supplier for the correct setting.





PIN Code

A 4-digit PIN Code (Personal Identification Number) prevents unauthorized persons from using your unit. The PIN Code is required for the dial lock and call restriction to be set or canceled. The factory preset PIN code is “1111”.

1 Press **PROGRAM**.

→

2 Press **MUTE**.

F -
→

3 Press **5**.

F5 -----
→

4 Enter the current PIN code.
(Ex. “1111” is entered.)

F5 → 1111

5 Press **PROGRAM**.

- If a correct PIN code is entered, a beep will sound.
- If a wrong PIN code is entered, 3 beeps will sound. Enter the correct PIN code and press **PROGRAM**.
- To return to the standby mode, lift the handset and hang up.

F5 → -----
→

6 Enter a new PIN code using a 4-digit number.
(Ex. “1234” is entered.)

 
F5 → 1234
→

7 Press **PROGRAM**.

- A long beep sounds.
- The unit will return to the standby mode.

Advanced Operation

Please write down your PIN code. If you forget your PIN code, consult your nearest Panasonic service center.




► Special Features

Dial Lock

You can prevent others from making a call to any number except the one pre-programmed in the memory of the EMERGENCY button. Once you locked the dialing buttons, even emergency numbers cannot be dialed. Only incoming calls are accepted until the dial lock is canceled.

Before using this feature, we recommend storing an emergency number in the memory of the EMERGENCY button (p. 25). Even if the dialing buttons are locked, the number stored in the button can be dialed.

- If you choose not to program emergency numbers, but plan to use the dial lock, any number programmed into the EMERGENCY button can be accessed.

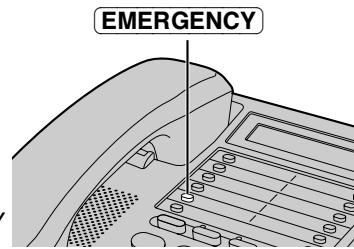

To set the dial lock

- 1 Press **DIAL LOCK**.
• “” flashes on the display.



- 2 Enter the PIN code (p. 31).

- 3 Press **PROGRAM**.
• “” is displayed.
• A long beep sounds.
• If a wrong PIN code is entered, 3 beeps will sound. Enter a correct PIN code and press **PROGRAM**.
• The unit will return to the standby mode.



 
You can use the following features while the dialing buttons are locked.

- Dialing a number you programmed into the memory of the EMERGENCY button (p. 27)
- Adjusting the handset and speakerphone volumes (p. 19)
- Muting the conversation (p. 29)
- Answering the second call by pressing **FLASH** (p. 28)

To cancel the dial lock

Follow steps 1 through 3 above again.

- “” will disappear, and the unit will return to the standby mode.





Call Restriction

You can prevent the unit from dialing phone numbers beginning with specified digit(s) (1 digit or 2 digits). Phone numbers with the restricted leading digits cannot be dialed out.

To set the call restriction

1 Press **PROGRAM**.

→

2 Press **MUTE**.

F -
→

3 Press **1**.

- If you use “1111” as a PIN code (factory set), the display on the right will be shown. There is no need to enter a PIN code. Go to step 6.
- After the PIN code is changed, “— — —” will be displayed.

F 1
→ - -

4 Enter the PIN code (p. 31).
(Ex. Your PIN code is “1234”.)

F 1 1234
→

5 Press **PROGRAM**.

- If a wrong PIN code is entered, 3 beeps will sound. Enter a correct PIN code and press **PROGRAM**.
- The current setting is displayed. (Ex. “67” is entered as the restricted digits.)

F 1 67
→

6 Enter the number(s) (1 digit or 2 digits) you want to restrict (**0** to **9**). (Ex. “12” is entered as the restricted digits.)

F 1 12
→

- If you enter a wrong number, enter a correct number.
- To change restricted digits from 2 digits to 1 digit, press ***** for 2 digits to change to “— —” and enter 1 digit.

7 Press **PROGRAM**.

- A long beep sounds.
- The unit will return to the standby mode.

- If your unit is connected to a PBX, this function may not operate. Contact your PBX supplier for more information.

When dialing a phone number with the restricted leading digit(s), the dialed number will flash on the display, but not dialed out.

Advanced Operation

► Special Features

To cancel the call restriction

Follow steps 1 through 5 on page 33. In step 6 on page 33, press ***** to cancel call restriction (“—” is displayed) and press **PROGRAM**.

- A long beep will sound and the unit will return to the standby mode.



Optional Headset

Plugging an optional headset into the unit allows a hands-free phone conversation. Please use only a Panasonic KX-TCA87 or KX-TCA90 headset. To order, call the accessories telephone number on page 3.

Connecting an Optional Headset to the Unit

Connect an optional headset to the headset jack as shown below.


The illustration
headset is a
KX-TCA90.

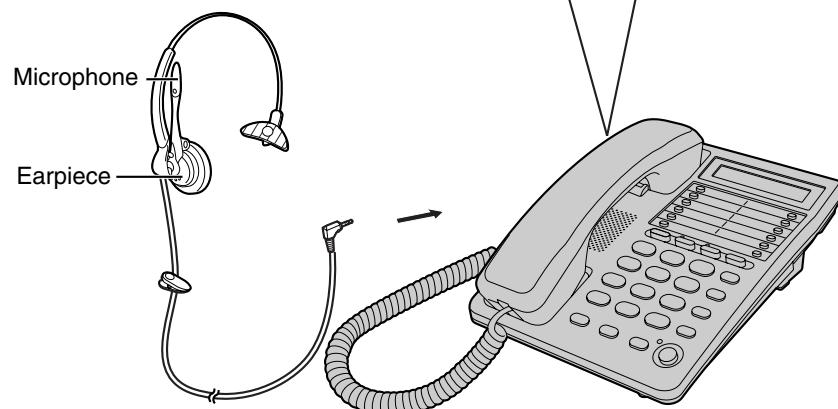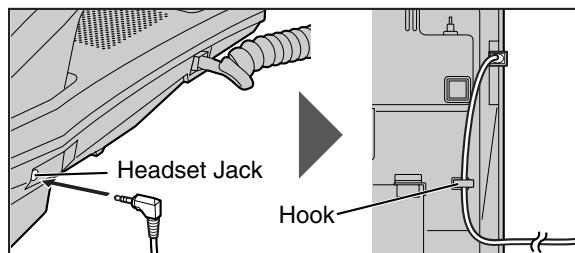

If you want to have a normal conversation, disconnect the headset.

Making/Answering Calls

Make sure to install the batteries.

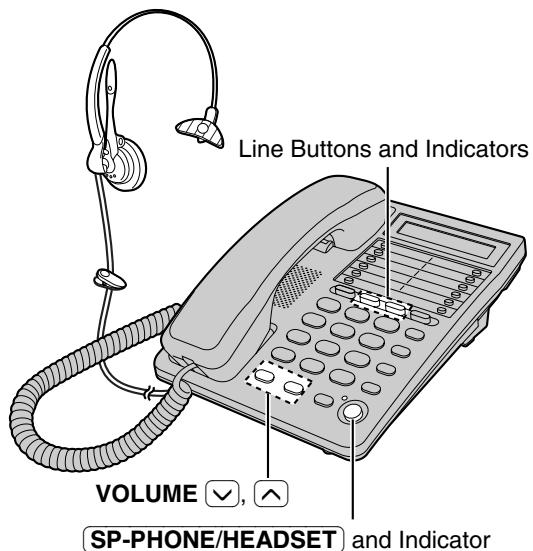

- 1 Press the line button to select the telephone line.
- 2 Press **SP-PHONE/HEADSET** to make or answer a call.
 - The line indicator lights red and SP-PHONE/HEADSET indicator flashes.
 - If you misdial when making a call, press **SP-PHONE/HEADSET** twice and dial again.
- 3 To hang up, press **SP-PHONE/HEADSET**.
 - The indicator light goes out.

To adjust the headset receiver volume (4 levels):

While using the headset, press **VOLUME ▾** or **▴**.

- Be sure that the **CONF** button is released.
- During a conversation using the headset, you cannot switch the call to the handset by lifting it off the cradle.
- If you disconnect the optional headset during a conversation with the handset on the cradle, the call will be switched to the speakerphone.
- During a conversation using the speakerphone, you can switch the call to the headset by connecting the headset.

Useful Information

Battery Replacement

If “” flashes, the battery power is low. Install new batteries. Replace the batteries within 1 minute to keep the programmed settings. But the programmed time setting will be cleared.


1 Disconnect the telephone line cord from the unit.

2 Press down in the direction of the arrow and open the cover.

3 Replace the batteries with new ones using correct polarity (+, -), and close the cover.

4 Connect the telephone line cord to the unit.

•If the time is shown as “12-00” and “” flashes after replacing the batteries, readjust the time.

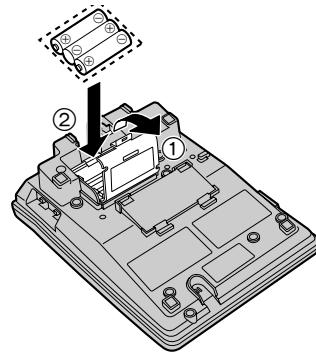


Battery Precautions:

The batteries should be used correctly, otherwise the unit may be damaged by battery leakage.

- Do not mix different types of batteries.
- Do not charge, short-circuit, disassemble, heat or dispose of in fire.
- Remove all the batteries when replacing.

Note:

 - If you do not install the batteries or if the battery power is low, the time will be shown as “12-00” and “” will flash. Readjust the time.
- Replace all the batteries once a half year in use of Alkaline batteries, or misoperation may occur. (When you use Manganese batteries, replace all of them once in three months.)
- Do not use nickel-cadmium batteries.




Troubleshooting



Problem	Remedy
The unit does not work.	<ul style="list-style-type: none"> Check the settings (p. 9–17). Remove the batteries and reinstall them to reset the unit.
The unit does not ring.	<ul style="list-style-type: none"> The RINGER selector(s) is/are set to OFF. Set to HIGH or LOW (p. 16).
The line indicators do not work properly.	<ul style="list-style-type: none"> Check the settings (p. 9–17). The batteries have become weak. Replace them with new ones (p. 36).
You cannot dial.	<ul style="list-style-type: none"> Check that the dialing mode selection is correct (p. 14). Dial lock mode is set. To cancel the mode, see page 32. The dialed number is restricted. To cancel, see page 34.
The other party suddenly cannot hear your voice during a conversation.	<ul style="list-style-type: none"> MUTE may have been pressed during the conversation. If “” is displayed, press MUTE.
You cannot program items such as the dialing mode.	<ul style="list-style-type: none"> Do not pause for over 60 seconds while programming.
You cannot store a phone number in memory.	<ul style="list-style-type: none"> Check that the batteries are installed in the unit and that the battery power is not low. Do not enter a phone number more than 22 digits long. When using the Dial Lock (p. 32) or Call Restriction feature (p. 33), you cannot store a phone number in the EMERGENCY button.
You cannot redial by pressing REDIAL .	<ul style="list-style-type: none"> If the last number dialed was more than 32 digits long, the number will not be redialed correctly.


Useful Information

 
For assistance, please visit <http://shop.panasonic.com/support>



► Troubleshooting

Problem	Remedy
Previously programmed information is erased.	<ul style="list-style-type: none">• If the batteries installed in the unit expire, programmed information may be erased. After the batteries are replaced, reprogram if necessary.
If you cannot solve your problem	<ul style="list-style-type: none">• Visit our website: http://www.panasonic.com/support• Contact us via the web at: http://www.panasonic.com/contactinfo

 

 

Important Safety Instructions ➤

 
When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from wall outlets before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bathtub, washbowl, kitchen sink, or the like.
5. Place this unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
6. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.
7. Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.
8. Do not overload wall outlets and extension cord. This can result in the risk of fire or electric shock.
9. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
10. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized Service Center when service is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
11. Unplug this unit from the wall outlet and refer servicing to an authorized Service Center when the following conditions occur:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized Service Center.
 - E. If the unit has been dropped or physically damaged.
 - F. If the unit exhibits a distinct change in performance.
12. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning.
13. Do not use this unit to report a gas leak, when in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

Useful Information

For assistance, please visit <http://shop.panasonic.com/support>



► Important Safety Instructions

 
WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

CAUTION:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) specified.
2. Do not dispose of the battery(ies) in a fire. It (they) may explode. Check with local waste management codes for special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
4. Exercise care in handling the battery(ies) in order not to short the battery(ies) to conductive materials such as rings, bracelets, and keys. The battery(ies) and/or conductor may overheat and cause burns.
5. Do not recharge the battery(ies) provided with or identified for use with this product. The battery(ies) may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating. Sudden release of battery electrolyte may occur causing burns or irritation to the eyes or skin.
7. Replace all batteries at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries. (Applies to products employing more than one separately replaceable primary battery.)
8. When installing batteries observe the proper polarity or direction. Incorrect installation can cause charging, and may result in leakage or explosion. (Applies to products employing more than one separately replaceable primary battery.)
9. Remove the battery(ies) from this product if the product will not be used for a long period of time (several months or more). During this time the battery(ies) could leak in the product.
10. Discard the "dead" battery(ies) as soon as possible. The "dead" battery(ies) may leak in the product.
11. Do not store this product, or the battery(ies) provided with or identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.



FCC and Other Information



If requested by the telephone company, inform them as follows:

Registration No.(found on the bottom of the unit)

Ringer Equivalence1.0B

The particular telephone lines to which the equipment is connected.

This unit must not be connected to a coin operated line.

If you are on a party line, check with your local telephone company.

Ringer Equivalence No. (REN):

The REN is useful in determining the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

In the event terminal equipment causes harm to the telephone network, the telephone company should notify the customer, if possible, that service may be stopped.

However, where prior notice is impractical, the company may temporarily cease service providing that they:

- (a) Promptly notify the customer.
- (b) Give the customer an opportunity to correct the problem with their equipment.
- (c) Inform the customer of the right to bring a complaint to the Federal Communication Commission pursuant to procedures set out in FCC Rules and Regulations Subpart E of Part 68.

The Telephone Company may make changes in its communications facilities, equipment, operations or procedures, where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations in 47 CFR Part 68.

 
If such changes can be reasonably expected to render any customer terminal equipment incompatible with telephone company communications facilities, or require modification or alteration of such terminal equipment, or otherwise materially affect its use or performance, the customer shall be given adequate notice in writing, to allow the customer an opportunity to maintain uninterrupted service.

When programming emergency numbers and/or making test calls to emergency numbers:

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities in the off-peak hours, such as early morning hours or late evenings.

Useful Information

For assistance, please visit <http://shop.panasonic.com/support>



► FCC and Other Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Note:

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment is hearing aid compatible.

A TIA/EIA-IS-968 compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack that is also TIA/EIA-IS-968 compliant.

- **Environment**—do not place the unit in a room where the temperature is less than 5°C (41°F) or greater than 40°C (104°F). Allow 10 cm (4") clearance around the unit for proper ventilation. Avoid excessive smoke, dust, mechanical vibration, shock, or direct sunlight.
- **Routine care**—wipe the unit with a soft cloth. Do not use benzine, thinner, or any abrasive powder.
- **If there is any trouble**—disconnect the unit from the telephone line and connect a known working phone. If the known working phone operates properly, have your unit repaired by one of the authorized Panasonic Factory Service Centers. If the known working phone does not operate properly, consult your telephone company.



Compliance with TIA-1083 standard



Telephone handsets identified with this logo have reduced noise and interference when used with T-Coil equipped hearing aids and cochlear implants.

Useful Information

For assistance, please visit <http://shop.panasonic.com/support>

Index

A

Accessories 3
Answering calls 20

B

Battery, Installing 9
Battery life 9
Battery replacement 36

C

Call on hold 19, 21
Call Restriction 33
Call waiting tone 28
Conference Call 22

D

Dial lock 32
Dialing mode 14
Display 8

F

FCC and other information 41
FLASH button 30
Flash time 30

H

Headset, optional 34

I

Installation,
Battery 9
Communication Device 12
Handset 10
Telephone line cord 10

L

LCD contrast 16
Location of controls 6

M

Making Calls 18
Mute 29

O

One-Touch Dialer 25
One-Touch Dialer,
dialing 27
storing 25

P

PAUSE 29
PIN code 31
Pulse service 28

R

Redial 19
Ringer Off 16
Ringer Volume 16
Rotary service, tone dialing 28

S

Safety Instructions 39
Speed Dialer 23

 
Speed Dialer,
dialing 24
storing 23

T

Time adjustment 15
Troubleshooting 37

V

Volume control 19



Customer services

Shop Accessories!

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of
your Panasonic products

Accessories & Parts for your Camera, Phone, A/V
products, TV, Computers & Networking, Personal
Care, Home Appliances, Headphones, Batteries,
Backup Chargers & more...

Customer Services Directory

For Product Information, Operating Assistance,
Parts, Owner's Manuals, Dealer and Service info
go to <http://shop.panasonic.com/support>

 
For the hearing or speech impaired TTY: 1- 877-833-8855

 
As of June 2015

Useful Information

For assistance, please visit <http://shop.panasonic.com/support>

45





Limited Warranty (ONLY FOR U.S.A.)

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Telephone	One (1) Year	One (1) Year

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

 

Mail-In Service--Online Repair Request

 
Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at <http://shop.panasonic.com/support>

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

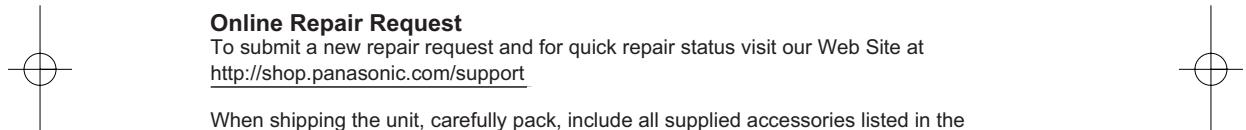



Limited Warranty Limits and Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

**THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER
"LIMITED WARRANTY COVERAGE".**

**THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL
DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT
OF ANY BREACH OF THIS WARRANTY.**

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content.

The items listed are not exclusive, but for illustration only.)

**ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF
MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America
Consumer Affairs Department 8th Fl.
Two Riverfront Plaza
Newark NJ 07102-5490

 
**PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY,
ARE YOUR RESPONSIBILITY.**

 
As of June 2015

Useful Information

For assistance, please visit <http://shop.panasonic.com/support>

47







IMPORTANT!

If your product is not working properly. . .

- ① Check if telephone line cord is connected.**
- ② Read troubleshooting page in the Operating Instructions.**



  Visit our Web site: <http://shop.panasonic.com/support>
• FAQ and troubleshooting hints are available.



Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490



PQQX13324TA

PQQX13324TA F1201NF6060

