

### IMPORTANT SAFEGUARDS

Before using the coffee maker, the following basic precautions should always be followed:

- 1 Read all instructions.
- 2 Do not operate the coffee maker without water.
- 3 Make sure that the power outlet voltage matches the voltage stated on the rating label of the coffee maker.
- 4 To protect against fire, electric shock, or injury, do not immerse the cord or plug in water or other liquid.
- 5 Only operate your coffee maker under close supervision. Do not let it sit for long periods without turning it off. Do not let children or persons with infirmities operate the coffee maker.
- 6 Unplug the power cord when the coffee maker is not in use and before cleaning. Allow it to cool before putting on or taking off parts and before cleaning the coffee maker.
- 7 The use of attachments that are not recommended by the coffee maker manufacturer may result in fire, electric shock, or personal injury.
- 8 Place the coffee maker on a sturdy, flat surface or table and do not let the cord hang over edge of a table or a countertop.
- 9 Do not use this coffee maker for other than its intended use and place it in a dry environment.
- 10 Plug in the power cord before using the coffee maker and turn it off before unplugging it.
- 11 Use the handle to avoid touching the hot surface of the coffee maker.
- 12 Do not clean the carafe with cleansers, steel wool pads, or any other abrasive material.
- 13 Never leave the empty carafe on the warming plate for long periods or it may be subject to cracking or breakage.
- 14 Never use the coffee maker if the carafe shows any signs of cracking or a loose or weakened handle. Use the carafe carefully and only with this coffee maker.
- 15 Do not set the carafe on a hot or cold surface.
- 16 The coffee maker is not a toy. Do not allow children play with it.
- 17 This coffee maker is intended for use in a household or similar environment.
- 18 Do not set a hot container on a hot or cold surface.

### SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Before using your new product, please read these instructions to prevent any damage.

### IMPORTANT SAFEGUARDS



 This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your coffee maker.

 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your coffee maker.

#### POWER CORD SAFETY

- This coffee maker has a polarized plug. Do not alter the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- A short power cord is provided to reduce the possibility of the cord becoming entangled or causing someone to trip.
- Longer, detachable power cords (extension cords) may be used if care is exercised in their use. If such a cord is used:
  - The marked electrical rating of the extension cord must be at least as great as the electrical rating of the coffee maker.
  - The extension cord should be arranged so that it will not drape over a counter or table top where it can be pulled on by children or tripped over.


#### PACKAGE CONTENTS

- Coffee maker
- Glass carafe
- Removable filter
- Coffee scoop
- Quick Setup Guide

### FEATURES

- Brews up to five cups of coffee
- Carafe holds up to 0.75L of coffee
- Anti-drip feature prevents spills when you remove the carafe
- Warming plate keeps coffee hot

#### Main features

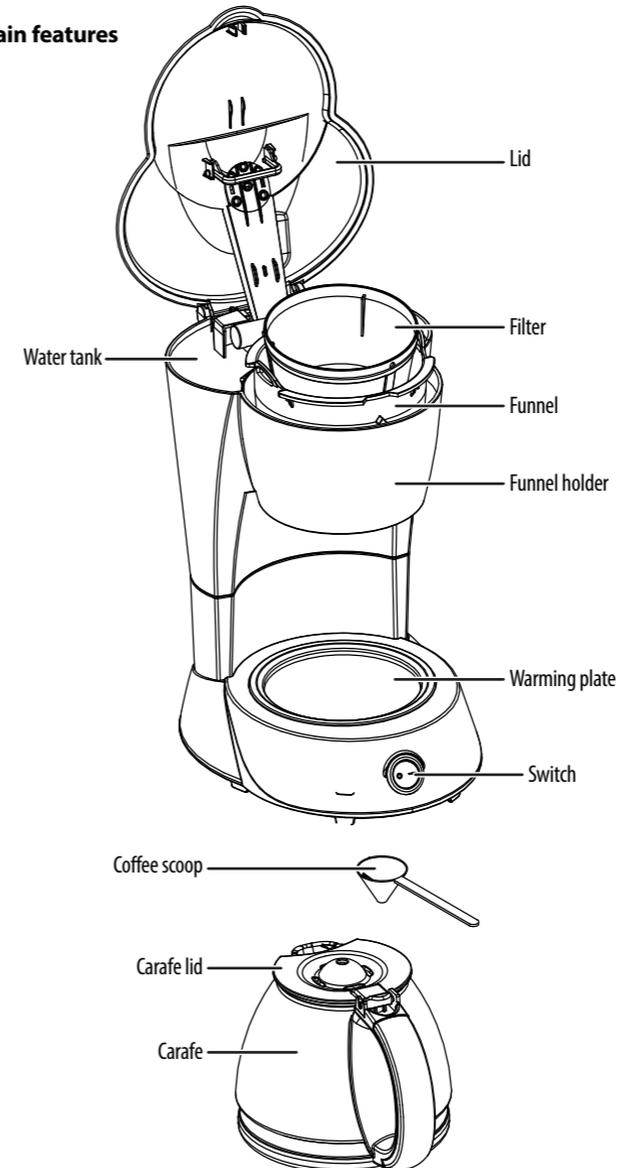

### BEFORE FIRST USE

- Make sure that all accessories are complete and the unit is not damaged.
- Add water into the water tank to the MAX level and brew water for several times without coffee, then discard the water.
- Clean all detachable parts thoroughly with warm, soapy water.

### USING YOUR COFFEE MAKER

- 1 Open the lid and fill the water tank with cold drinking water. Do not fill the water tank above the Max fill line.
- 2 Place the funnel into the funnel holder, then place the filter into the funnel. You can also use a #4, cone-style paper filter.
- 3 Add dry, ground coffee to the filter according to personal taste, then close the lid.
- 4 Place the carafe on the warming plate. Make sure that the center of the carafe lid aligns with the bottom of the funnel.
- 5 Plug the power cord into the outlet.
- 6 Plug in the coffee maker and turn it on. The light on the switch turns on and the water begins to heat. You can shut off the power at any time by turning off the switch.
 

**Note:** Your coffee maker is designed with a pause-and-serve feature that allows you to temporarily remove the carafe and serve a cup of coffee at any time during the brewing cycle. The brewing cycle is not interrupted and no coffee drips from the filter. Do not remove the carafe for more than 30 seconds and never return an empty carafe to the warming plate when it is still warm.
- 7 After the brewing cycle is complete, remove the carafe and serve the coffee.
 

**Note:** Some of the water you add to the water tank is absorbed by the dry coffee, so the coffee that results from the brewing cycle is always somewhat less.

**Caution:** Be careful and pour slowly when pouring hot coffee.

After brewing, your coffee maker automatically switches to warming mode. For the best taste, drink the coffee within one hour after brewing. Always turn the coffee maker off and unplug the power cord when the coffee maker is not in use.

## CLEANING AND MAINTENANCE

**Caution:** Be sure to unplug the coffee maker and let it cool down before cleaning. To protect against electrical shock, do not immerse the cord, plug, or unit in water or liquid.

- 1 Clean all detachable parts after each use in hot, soapy water.
- 2 Wipe external surfaces with a soft, damp cloth to remove stains.
- 3 Water droplets may buildup in the area above the funnel and drip onto the base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
- 4 Replace all parts and your coffee maker is ready for use.

## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should periodically remove the mineral deposits that normally occur in most areas.

- 1 Fill the tank with water and household descaler or vinegar (use a 4:1 solution) to the MAX level in coffee maker. You can also use citric acid to remove mineral deposits, at a ratio of 100 parts water to three parts citric acid.
- 2 Place the carafe on the warming plate. Make sure that the center of the carafe lid aligns with the bottom of the funnel. Also make sure that the funnel is in place and that there is no dry coffee in the filter.
- 3 Turn on the coffee maker and allow it to “brew” the descaling solution.
- 4 After brewing about one cup of the solution, turn off the coffee maker and let it sit for about 15 minutes, then repeat step 3.
- 5 Turn on the coffee maker again and brew the descaling solution until the water tank is dry.
- 6 Rinse the coffee maker by running clear water through the brewing cycle at least three times.

## TIPS FOR GREAT-TASTING COFFEE

- A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “Cleaning and Maintenance” section.
- Always use fresh, cold water in the coffee maker.
- Store unused coffee in a cool, dry place. After opening, reseal it tightly and store it in a refrigerator to maintain its freshness.
- For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- Do not reuse coffee grounds and do not reheat brewed coffee.
- Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee. Oiliness may occur more frequently if heavily roasted coffees are used.

## TROUBLESHOOTING

PROBLEM	SOLUTION
<b>Why is my coffee maker leaking?</b>	<ul style="list-style-type: none"><li>• Make sure that the filter is properly positioned in the funnel holder and that the water tank cover is fully closed.</li><li>• Avoid overfilling the water tank.</li><li>• If you have checked all of these items and the coffee maker is still leaking, contact our service center.</li></ul>
<b>Why does my coffee maker brew slower than it used to?</b>	Your coffee maker may require cleaning to remove mineral deposits that build up over time. This is normal.
<b>Why would my coffee maker overflow?</b>	<ul style="list-style-type: none"><li>• If the carafe is removed for more than 30 seconds while the coffee maker is brewing it may cause it to overflow. Make sure that the carafe is replaced promptly after removing.</li><li>• The carafe may not have been properly positioned under the funnel. Be sure the carafe is centered directly under the funnel.</li><li>• Using too much coffee may cause the coffee maker to overflow.</li><li>• The filter may have become folded over. Make sure that the filter is properly centered in the funnel. Try wetting the edges to prevent filter collapse.</li><li>• Using coffee that is too finely ground can sometimes result in overflow. Use only coffee that is ground for automatic drip coffeemakers.</li></ul>
<b>Why isn't my coffee maker brewing coffee?</b>	<ul style="list-style-type: none"><li>• Make sure that your coffee maker is plugged into a working 120V electrical outlet.</li><li>• Make sure that the power switch is turned on.</li><li>• Make sure that the water tank has water in it.</li><li>• The coffee maker may require cleaning to remove mineral deposits that build up over time.</li></ul>
<b>Why does my coffee taste bad?</b>	<p>The coffee may taste bad due to one of the following reasons:</p> <ul style="list-style-type: none"><li>• The age of coffee beans affects the taste. Old coffee may taste stale. Coffee tastes best if you use fresh beans.</li><li>• Quality of coffee beans and type of water you use affect the coffee taste. Use good beans and fresh, clean water.</li><li>• The cleanliness of your coffee maker affects the coffee taste. Make sure to clean the coffee maker every 40-80 brews.</li></ul>

## SPECIFICATIONS

- Dimensions: 8.9 × 6.8 × 10 in (22.6 × 17.2 × 25.5 cm)
- Weight: 2.6 lb (1.2 kg)
- Wattage: 700W
- Voltage: 120V
- Capacity: 0.75L

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico) or [www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A. ©2015 Best Buy. All rights reserved. Made in China