

SC-570DC User Manual



1

Product Structure



1. Power button
3. Menu
5. UP button
7. Mode
9. Night light
11. Micro SD card slot
12. LCD screen
2. OK button
4. Down button
6. Park monitor button
8. Lens
10. USB

1. Power button

Function A: switch machine function

Long press this button can start / shut down the machine

Function 2: night lights

In standby, short video and take photos mode according to the [power] can be opened / closed night lights

2. OK button

Function 1: open / close video recording

In standby mode, short press [OK] open video, short press [OK] again to stop video

Function 2: Camera

In photo mode, short press [OK] to perform taking pictures

Function 3: file playback function

In playback mode, short press [OK] can perform the play / pause video files.

Function 4: confirm the function

Menu, set menu, pictures, the video playback menu option to set the operation to save to perform an action.

2

3. Menu button

press menu button to enter video menu setting under standby mode, under setting mode, you can select the options by UP and Down button, press OK to enter the options, short press menu will exit.

press menu button to enter video menu setting under photo mode, under photo setting mode, you can select the options by UP and Down button, press OK to enter the options, short press menu will exit.

Press mode button to switch model of capture.
Press menu button to choose delete/protect files.

4. Down button

Function 1: in the menu choose function according to [DOWN]

5. Up button

Function 1: in the menu choose function according to [UP]

Function 2: in video mode, short press UP to open / close microphone

6. Park monitor button

Function 1: press this button before shutdown the camera, then the P will display in the top right of the screen, the camera will enter into park monitor mode, after the camera is off, if there is something crash the car, the camera will turn on and begin recording automatically. And it will keep recording 28 seconds then turn off automatically again.

If you want to close this function, just need short press this button under standby mode, the P in the upper right will disappear.

7. Mode button

In video mode, short press mode button to enter into camera mode

In camera mode, short press mode button to enter playback mode

In playback mode, short press mode button to enter video mode.

In record mode, short press mode button to lock the video in recording.

8. Micro SD card slot

(1)TF card request a card above class 6.

(2)Install and remove TF card:

1. Put the card in to slot according to the right direction, until the card is fixed by the slot.

2. When remove the card, press the card slightly, then take it out.

Attention:

(1)please do not insert or remove the card when the machine is working

(2)Please notice insert direction of the card, if the direction is wrong, it will damage the machine and card

(3)After you insert the card, the machine will set the card to a default storage device, original data in the card may not be read.

(4)If the card can not compatible with the machine, please try to insert the card again.

3

(5)Biggest support capacity 32GB

System settings

1. Time and date:

Under standby mode, short press [menu] button enter into system setting menu, short press[up] / [down], move the cursor to setting date option. Short press [OK] button enter menu to set.

2. **Automatic shutdown:** open / close (In MENU camera will not auto off, when camera is not in recording and other operations, camera will off in 1minute.

Park Monitor: off/ high / medium / low

Screen timeout: off / 1 / 2 / 3 minutes

Beep sound: 0/1/2/3

Language: English, Traditional Chinese, Simplified Chinese, Japanese, Russian, Arabic, German, Korean, Portuguese (default Portuguese)

Frequency: 50 Hz/ 60Hz

Formatting: cancel / OK

Factory Reset:cancel / OK

Version: the version number

Video mode option:

Video Resolution: FHD 1080P, HD720P, VGA480P

Loop recording: 1 / 2 / 3 minutes

Exposure:-/2.0

Motion Detection: Off / ON

Record Audio: on/off

G-sensor: off/ high / medium / low

Capture mode menu

Photo quality: 12M / 10M/ 8M / 5M / 3M / 2M / 1.3 M

White balance:automatic, daylight, cloudy, tungsten filament , fluorescent

ISO: Auto , 100, 200

Exposure:-/2.0

Anti- shaking: on / off

Playback modes

1. Browse the file:

Playback is browse by document type, respectively, when the file type is video, simply look at the video file, for the image, can only view pictures.

2. Remove and protection

In playback mode, press M button to turn into menu, and choose to lock to delete and protect option, press ok to enter delete current delete all option,

4


press ok to enter, press ok to determine again. Before you can enter the lock to a file, unlock can not delete, protect some important information.

Installation

Plug the bracket into bracket hole on the top of device to lock.



As shown in the picture, this is considered the most appropriate installation. It does not block the driver's field of view, will not distract the driver's attention. Please clear the windshield before installation.

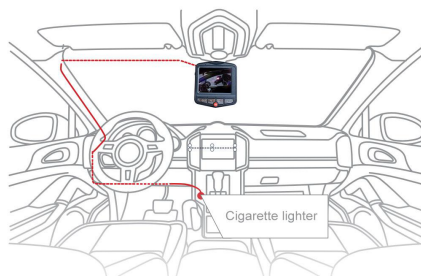

5

Whole Package

- 1*Dashcam
- 1*Mounting bracket
- 1*Car charger
- 1*Manual

Specification

Language for options	English, Traditional Chinese, Simplified Chinese, Japanese, Russian, Arabic, German, Korean, Portuguese (default Portuguese)
Video format	AVI
TF card slot	Micro SD maximum 32GB
Microphone	Built-in
Car power DC input	12V-24V
Battery	Lithium polymer batteries
Image sensor	1.0MP sensor
LCD	2.4 -inch TFT
Lens	120 degree
Video specification	AVI
Image format	JPEG
Transmission speed	USB2.0
Power interface	5V-500MA

WARRANTY

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.

6