

Wii Remote Induction Charge Kit

 


Package contents

- Wii remote induction charge base
- Rechargeable induction batteries (2)
- AC adapter
- *Quick Setup Guide*

Features


Remote induction charge base (front)




#	Description
1	Charge indicator
2	DC IN connector

#	Description
3	On/Off switch
4	Charge indicator

Remote induction charge base (top)

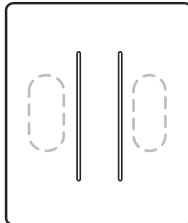


Battery packs and AC adapter

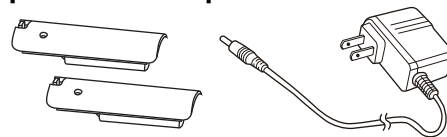


Installing the battery pack


- 1 Remove the Wii remote jacket, if applicable, then remove the battery compartment cover.

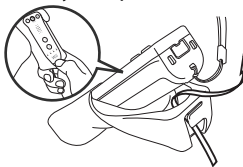

- 2 Install the battery pack into the remote.

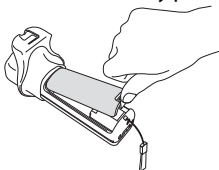


- 3 Put the Wii remote jacket, if applicable, back on the remote.

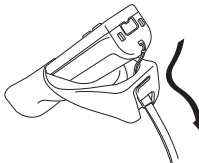


Using the charger

- 1 Insert the plug into the **DC IN** connector, then plug the AC adapter into a power outlet.

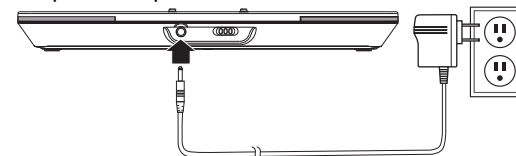

- 2 Turn on the charger, then place the remote with the battery pack installed on the charger. Your battery can be recharged without removing the silicone sleeve and without removing the Wii MotionPlus™ module.

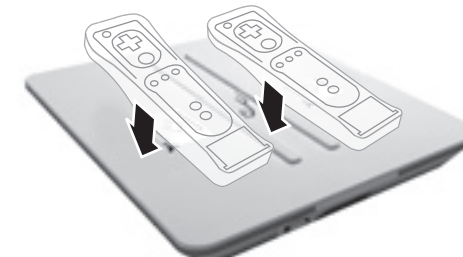

Note: You should place the remote parallel with the center bar and the battery pack should be near the center position.

Charging starts if the charger detects the battery pack and the glow bar lights red. There may be a brief delay before you see the light. When the battery pack is fully charged, the glow bar changes to green.

Notes:

- The supplied rechargeable battery packs must be fully charged before being used for the first time. It may take up to 4 hours to fully charge a new battery.



- Rechargeable battery packs only attain maximum charging capacity after they have been charged and discharged several times.
- The battery packs have a limited service life, and playing time is reduced after many charging cycles.

Warnings

- To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- Use the supplied AC adapter only. If you use other types, it may cause a fire, electrical shock, or malfunction.
- The Remote Induction Charge Kit can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.
 - Do not operate the Remote Induction Charge Kit within 9 inches (23 cm) of a pacemaker.
 - If you have a pacemaker or other implanted medical device, do not use the Remote Induction Charge Kit without first consulting your doctor or the manufacturer of your medical device.
- Follow all regulations regarding use of wireless devices in locations such as hospitals, airports, and on board aircraft. Operation in those locations may interfere with or cause malfunctions of equipment, with resulting injuries to persons or damage to property.
- Do not use in crowded areas or areas near fire alarms, automatic doors, or other types of automated equipment.

Safety information

- Observe all warnings, precautions, and instructions.
- Regularly inspect the AC adapter and AC power cord for damage and dust build-up around the power plug or power outlet.
- If your charger functions in an abnormal manner, produces unusual sounds or smells, or becomes too hot to touch, stop use, unplug the AC power cord from the electrical outlet, and disconnect any other cables immediately.

Battery warnings:

Do not handle a damaged or leaking battery pack. Contact with the material can result in injury or burns to the eyes or skin. Even if foreign



substances are not immediately visible, chemical changes in the material can result in injuries occurring at a later time. If you come into contact with material from a leaking battery pack, take the following actions:

- If the material gets into the eyes, do not rub. Immediately flush the eyes with clean water and seek medical attention.
- If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.
- Do not allow the battery pack to come into contact with fire or subject it to extreme temperatures such as in direct sunlight, in a vehicle exposed to the sun, or near a heat source.
- Do not cause the battery pack to short-circuit.
- Do not disassemble or tamper with the battery pack.
- Prevent damage to the battery pack. Do not carry or store the battery pack with metal items such as coins or keys. If damaged, discontinue use.
- Do not throw or drop the battery pack or subject it to strong physical shock.
- Do not put heavy objects on or apply pressure to the battery pack.
- Do not allow the battery pack to come into contact with liquids. If it becomes wet, discontinue use until it is completely dry.
- Keep the battery pack out of reach of small children.
- Dispose of batteries in accordance with local and national disposal regulations (if any).
- If the Wii remote will not be used for an extended period of time, remove the battery pack and store it in a cool, dry place.
- Use only the supplied AC adapter to charge the battery pack.

Legal notices

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any



interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

90-day limited warranty

Visit www.rocketfishproducts.com for details

Wii is a trademark of Nintendo of America, Inc.

© 2009 Best Buy Enterprise Services, Inc. All rights reserved. ROCKETFISH is a trademark of Best Buy Enterprise Services, Inc.

ENGLISH 09-0479

