



Betty Crocker™

MINI Warmer



HOUSEHOLD USE ONLY

BC-2555R

Table of Contents

Important Safeguards	3
Before Your First Use.....	6
Know the Parts of Your Mini Warmer	7
Using Your Mini Warmer	8
Tips for Warming	9
Cleaning and Maintenance.....	9
Maintenance of Ceramic Pot.....	10
Limited Warranty.....	11
To Return for Service.....	12
Replacement Parts.....	13

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury.

1. **Read all instructions carefully.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or heating unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch heated surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not use appliance for other than intended use.
13. Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.

14. Do not use a cracked container. Do not set hot container on a wet or cold surface.
15. To reduce the risk of electric shock, cook only in removable container.
16. Use extreme caution when removing hot container with food.
17. Carefully tilt lid away from you when uncovering to avoid scalding and allow water to drip into pot.
18. Do not twist, kink or wrap the power cord around the appliance as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
19. **Do not leave appliance unattended while in use.**

SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.


Before Your First Use

Carefully unpack the Mini Warmer and remove all packaging materials. To remove any dust that may have accumulated during packaging, wash the Glass Cover and Removable Ceramic Pot in warm, soapy water. Rinse and dry thoroughly. Do not immerse the Mini Warmer in water or any other liquid. Wipe the exterior of the Mini Warmer with a clean, damp cloth. Allow to dry thoroughly.

NOTE: When you turn on your new Mini Warmer for the first time, it may emit a slight odour for approximately 10 minutes. This is normal on first use. The odour is harmless, and should not reoccur after initial heating.

WARNING: Do not immerse the Mini Warmer Heating Base, Cord, or Plug in water or any other liquid. Do not use harsh detergents or abrasive cleansers.

Know the Parts of Your Mini Warmer

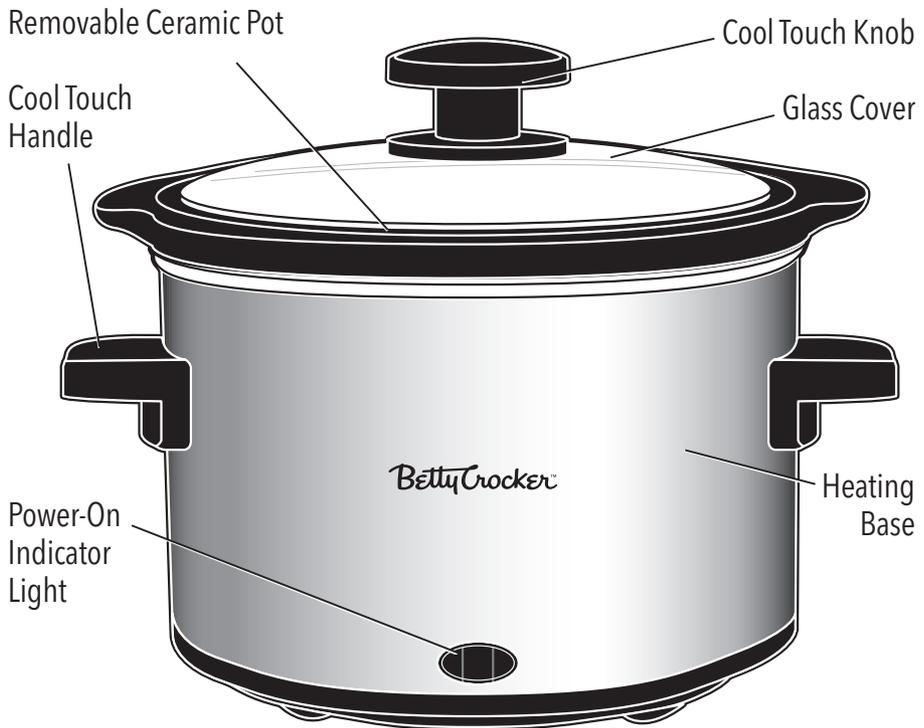

RATING: 120 V, 60 Hz, 70 W, AC ONLY

Using Your Mini Warmer

1. Your Mini Warmer is ideal for heating dips and sauces or melting butter and chocolate.


NOTE: This unit is not for use with uncooked meats. Ensure food is fully cooked before placing it in the Mini Warmer. This unit is recommended for warming or melting gravies, sauces, dips and fondues. We do not recommend cooking in this unit.

1. Place the Mini Warmer on a clean, dry, level surface such as a table or countertop.
2. Prepare ingredients to be cooked as per your recipe. Fill the Removable Ceramic Pot with gravy, sauce, dip etc. and cover with the Glass Cover.
3. Do not fill the unit with more than 300ml of ingredients.
4. Plug the Mini Warmer into a 120V 60 Hz AC only outlet. The red Indicator Light will illuminate indicating that the unit is on.
5. Allow the Mini Warmer to heat the ingredients in the Removable Ceramic Pot.
Be sure to stir the contents often while heating or melting.

WARNING: Do not use your Mini Warmer for longer than 2 hours consecutively.

6. Serve your gravy, sauce, dip, fondue, etc. directly from your Mini Warmer.
7. Allow the Removable Pot, Glass Cover and Heating Base to cool completely before cleaning.

CAUTION: Always wear oven mitts when handling the Glass Cover or Ceramic Pot. When removing the Glass Cover, tilt it so that the opening faces away from you to avoid being burnt by steam.

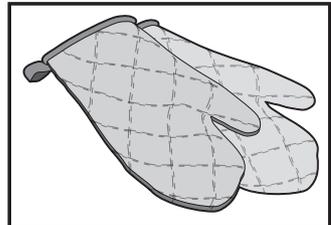

CAUTION: Do not set hot Removable Ceramic Pot on table without a hot pad, as this could cause damage to the table.

Tips For Warming

- For best results when melting chocolate: Chop up chocolate and add to the Removable Ceramic Pot in 100ml increments. This will assist in speeding up the melting process. Do not exceed 300ml of chocolate.
- Do not add water to thin the chocolate. If you are wanting a smoother consistency, add 1 tablespoon of vegetable oil to chocolate.
- If the chocolate becomes too thick, remove some of the melted chocolate as there may be too much in the Removable Ceramic Pot.
- **Spray your Removable Ceramic Pot with vegetable oil for easy release of dips, fondues and sauces. Spraying will also help prevent scorching.**

CAUTION: Stir sauces regularly to prevent them from burning or hardening.

Cleaning and Maintenance

Always ensure the Mini Warmer is unplugged and cool before cleaning.

Once the Mini Warmer has cooled, remove all excess contents from the Removable Ceramic Pot. Fill the Removable Ceramic Pot with warm, soapy water and allow to soak for 20–30 minutes to loosen any remaining food particles. Use a cloth, sponge or rubber spatula to scrape away any remaining food residue. Pour out the soapy water and carefully wash the Removable Ceramic Pot with a soft sponge or cloth. Rinse and dry thoroughly. Wash the Glass Cover in warm, soapy water or place on the top rack of the dishwasher only.

The outside of the Mini Warmer housing can be wiped with a clean damp cloth or sponge. A non-abrasive liquid detergent may be used to remove stubborn stains.

Never immerse the Mini Warmer housing, cord, base or plug in water or any other liquid while cleaning.

Maintenance of Ceramic Pot

1. The Removable Ceramic Pot will not withstand the shock of sudden temperature changes.
2. The Removable Ceramic Pot should be at room temperature before adding hot foods.
3. Do not preheat Mini Warmer before using unless specified in the recipe.
4. If the Removable Ceramic Pot has been preheated or is hot to the touch, do not put in cold foods.
5. To wash your Removable Ceramic Pot right after cooking, use HOT WATER.

User Maintenance Instructions

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed. Always unplug the unit and allow it to cool before cleaning.

LIMITED WARRANTY ONE (1) YEAR

This warranty is the only warranty for this product. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase, as evidenced by the receipt of purchase, and provided it is used for the purpose for which the product is intended. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option. If the product should become defective within the warranty period, we will repair it or replace it free of charge. If the product or component is no longer available, we will replace with a similar one of equal or greater value. We will return your product, transportation charges prepaid provided it is delivered prepaid to Formula Brands Inc. Any and all remedies relating to this warranty are limited to the amount of the purchase price of the product. This warranty extends only to the original purchaser, consumer or gift recipient.

This warranty does not cover failure caused by food build-up, water deposits, normal cosmetic discoloration, and inadequate maintenance of the product. This warranty will not cover damage or failure to function if the product has been dismantled or tampered with, if it has been damaged due to exposure to water or any other liquid, if it is not used in conformity with the printed directions of this product or if it has been accidentally or intentionally damaged.

This warranty does not cover the following parts which may be supplied with the appliance: plastic parts, glass parts, glass containers, ceramic containers, cutter/strainer, filters or non-stick surfaces.

This product is intended for use in a single-family household. This warranty will become null and void if the product is used for commercial purposes or any other purpose other than for single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of any express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

BC-2555R
06/2025

TO RETURN FOR SERVICE:

1. Securely package and return the product PREPAID to:
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NOTE: We recommend you insure your parcel for your protection.


2. Please enclose your name, return address, postal code, telephone number and a description of the defect.
3. To ensure prompt 'In-Warranty' service, be sure to include a proof of purchase (a copy of your store receipt).
4. For repairs not covered under warranty, you will be advised of the cost of the repair in advance, and upon receipt of your cheque or money order the repairs will be completed and the product returned to you.

If at any time you order parts or inquire about service, please quote the "MODEL NUMBER" stamped on the appliance nameplate.

For assistance regarding this appliance, please call
1-877-244-1110
between 9:00 am and 5:00 pm (EST) Monday to Friday
Or write
FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

© General Mills. Betty Crocker and designs are trademarks of General Mills used under license.

REPLACEMENT PARTS

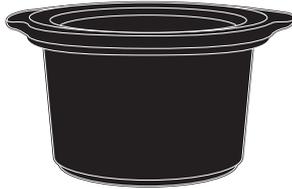

Ceramic Pot



Glass Cover

PLEASE WRITE MODEL NUMBER HERE:

PART	QTY	PRICE	TOTAL
Ceramic Pot*		\$19.99	
Glass Cover		\$12.99	
TOTAL			
SHIPPING AND HANDLING TO CANADA:			\$9.00*
SHIPPING AND HANDLING TO USA:			\$15.00*
SUBTOTAL			
ADD 13% H.S.T. - CANADA ONLY			
		TOTAL	

If you would like to order replacement or spare parts for this appliance, please complete and mail this form, along with a cheque or money order made payable to:

FORMULA BRANDS INC.
45 Mural Street, Unit #7, Richmond Hill, Ontario, Canada L4B 1J4

NAME _____

ADDRESS _____

CITY _____

PROVINCE/STATE _____

POSTAL/ZIP CODE _____

Prices are subject to change without notice.

PLEASE NOTE: WHEN ORDERING FROM USA, AN 'INTERNATIONAL' MONEY ORDER MUST BE USED.

*Shipping costs may vary based on fuel surcharges and postage rates. Please call toll-free 1-877-244-1110 or email customerservice@formulabrands.com to confirm shipping and handling charges.



Allow 3 to 6 weeks for delivery.

BC-2555R
06/25

