

QUICK START GUIDE



ENGLISH

- (1) CONTROL KNOB
- I. POWER ON/OFF
 Push and hold for 2 seconds
- II. PLAY/PAUSE Push once
- III. SKIP FORWARD/BACK
 Push to the right or left
- IV. FAST FORWARD/REWIND

 Push and hold to the right or left

- V. TURN UP/DOWN THE VOLUME
 Push upwards or downwards
- VI. ANSWER OR END A CALL Push once
- VII. REJECT AN INCOMING CALL
 Push two times
- VIII. BLUETOOTH PAIRING

 Push and hold for 4 seconds
- IX. ACTIVATE VOICE ASSISTANT
 Push two times

2) CHARGING

Place the headphones with the right ear cap facing down on a wireless charger or connect them to a power source via the included USB cable to charge the battery.

3 LED INDICATOR

The LED shows the battery level while charging, red through orange to green (0–100%). It blinks blue while in Bluetooth pairing mode and white while paused or searching for a device. The LED is steady white while playing.

(4) 3.5 mm INPUT/OUTPUT SOCKET

Share your audio by plugging in another pair of headphones.

GETTING STARTED

- Push and hold the control knob until the LED indicator blinks blue.
- 02. Select Major IV from your sound device's Bluetooth® list.