

TAPER CONTROL

- The taper control provides a variety of total settings for custom cuts.
- To increase the cutting length, push the lever down.
- To reduce the cutting length, push the lever up.

PREPARATION FOR USE

- Always inspect the appliance before use to ensure the clipper blades are free from hair, debris etc.
- For best performance, use on clean, dry hair that has been combed until tangle-free.
- Ensure the appliance is sufficiently charged or plugged into an outlet.

NOTE: The appliance should not be used for longer than 20 minutes when operated from an outlet.

Modelo HC1100

CONAIR®

Para su seguridad y para distribuir mercancías de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Manual de instrucciones

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation
www.conair.com/registration

12PG129346

IB-11227

Modelo HC1100

CONAIR®

Para su seguridad y para distribuir mercancías de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Manual de instrucciones

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2012 Conair Corporation
www.conair.com/registration

12PG129346

IB-11227

CLIPPING

FOR AN ALL OVER EVEN CUT:

- Attach a comb guide as required – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Starting at the nape of the neck, hold the clipper with the teeth of the clipper pointing upwards, ensuring that the comb guide is resting flat against the head.
- Slowly move the clipper upwards and outwards through the hair towards your crown, against the direction of the hair growth. The comb guide will help to lift the hair and the blades will cut the hair at the desired length.
- Once the desired length is achieved at the back of the hair, start clipping the top and sides.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- You should achieve an even length cut all over your head.

FOR A SHORTER BACK AND SIDES, WITH LENGTH ON THE TOP

- Attach the longer comb guide as required for the top of your hair – your clipper is supplied with 8 comb guides (grades 1-8). Each comb guide is labelled.
- Switch the clipper on and the blades will start to move.
- Hold the clipper to the front of your hair with the teeth pointing towards the back of your head and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.
- If you then wish to take the back and sides of your hair to a shorter length, switch off the appliance and attach a shorter comb guide.
- Starting at the nape of the neck, with the comb guide flat against the head, move the clipper upwards and outwards over the area you want to take shorter.
- Repeat on the sides of the hair, starting with the teeth, and move the clipper towards your crown. Repeat as necessary, moving in rows from the front and the sides of your head to the back.

OUTLINING

- To tidy up the edges around your cut e.g. neckline and sideburns, detach the comb guides.
- Hold the appliance upside down, so the front of the clipper is facing towards your head.
- Hold the clipper straight on your sideburns or neckline and move the clipper downwards. This will give you a clean, smooth finish.

CLEANING & MAINTENANCE

- Regular cleaning will maintain the high performance of your appliance.
- Switch off and remove the power cord if connected.
- Use the cleaning brush supplied to brush away any hair and debris. Do not use a sharp object to clean the trimmer blade.
- Gently blow away any hair trapped beneath the blades.
- Ensure you clean the blades after each use and before storing away.
- It is highly recommended to oil the blades from time to time with the oil provided. This ensures optimum cutting performance. For the first use you will need to use the oil supplied with the product, unscrew the cap and cut off the very end of the plastic tube with a pair of scissors to release the oil.
- To oil the blades ensure the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil onto the blades. Leave the unit on for a further few seconds to allow the oil to thoroughly spread the length of the blades.
- Switch off the unit and remove any excess oil by gently dabbing with a cloth.

BATTERY DISPOSAL

This appliance contains Lithium Ion batteries. To protect the environment this appliance and its batteries must be disposed of safely. At the end of its life, please take this appliance to a recycling center, where the internal rechargeable battery should be removed by a professional and recycled separately. For more information about the recycling of electrical and battery operated appliances please contact your local council office or your household waste disposal service. For specific enquiries regarding the replacement of batteries in this product please contact our Conair Customer Care Line.



LIMITED THREE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at: www.conair.com/registration

©2012 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Full Power
Cord-Free
Cutting

LITHIUM ION
CORD/CORDLESS CLIPPER

Model HC1100

CONAIR®

Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.