

# User Guide



42"/46"/55" LCD HDTV, 120 Hz 1080p

**NS-42L780A12/NS-46L780A12/NS-55L780A12**



## Contents

---

CHILD SAFETY .....	1
Important safety instructions .....	2
Warnings .....	2
Cautions .....	3
Introduction .....	5
Installing the stand or wall-mount bracket .....	6
Installing the stand .....	6
Installing a wall-mount bracket .....	6
TV components .....	7
Package contents .....	7
Front .....	7
Back .....	8
Side .....	8
Remote control .....	9
Making connections .....	10
What connection should I use? .....	10
Connecting power .....	11
Connecting a cable or satellite box .....	11
Connecting an antenna or cable TV (no box) .....	14
Connecting a DVD or Blu-ray player .....	14
Connecting a VCR .....	16
Connecting a camcorder or game console .....	17
Connecting a computer .....	17
Connecting a USB flash drive .....	18
Connecting headphones .....	19
Connecting a basic home theater system .....	19
Connecting a home theater system with multiple devices .....	20
Using the remote control .....	20
Installing remote control batteries .....	20
Aiming the remote control .....	20
Turning on your TV for the first time .....	21
Understanding the basics .....	22
Turning your TV on or off .....	22
Selecting the video input source .....	22
On-screen menu overview .....	23
Navigating the menus .....	23
Selecting a channel .....	24
Adjusting the volume .....	24
Viewing channel information .....	24
Viewing system information .....	24
Adjusting the picture .....	24
Adjusting the TV picture .....	24
Adjusting the computer image .....	26
Adjusting component video settings .....	26

Adjusting the sound .....	27
Adjusting sound settings .....	27
Playing TV audio only .....	28
Changing channel settings .....	28
Automatically scanning for channels .....	28
Hiding channels .....	29
Setting up a favorite channel list .....	29
Viewing a favorite channel .....	30
Adding or changing a channel label .....	30
Checking the digital signal strength .....	31
Turning Auto Zoom on or off .....	31
Setting parental controls .....	32
Setting or changing the password .....	32
Locking control buttons .....	32
Blocking unrated TV .....	33
Setting parental control levels .....	34
Downloading rating information .....	35
Using closed captioning .....	36
Turning closed captioning on or off .....	36
Selecting the analog closed captioning mode .....	37
Customizing digital closed captioning styles .....	37
Adjusting time settings .....	38
Setting the clock .....	38
Setting the sleep timer .....	39
Adjusting menu settings .....	39
Selecting the menu language .....	39
Turning Input Sensor on or off .....	40
Labeling an input source .....	40
Restoring settings to the defaults .....	41
Using INlink .....	41
Turning INlink on or off .....	41
Turning Device Auto Power Off on or off .....	42
Turning TV Auto Power On on or off .....	42
Turning Audio Receiver on or off .....	43
Displaying a list of INlink-compatible (HDMI CEC) devices .....	43
Using a USB flash drive .....	44
Switching to USB mode .....	44
Browsing photos .....	44
Viewing favorite photos .....	45
Viewing photos in a slideshow .....	45
Customizing slideshow settings .....	46
Maintaining .....	47
Cleaning the TV cabinet .....	47
Cleaning the TV screen .....	47
Troubleshooting .....	48
Video and audio .....	48
Remote control .....	49
General .....	49
Specifications .....	50
Programming universal remote controls .....	52
Programming a different universal remote control .....	52

Common universal remote control codes ..... 52

Legal notices ..... 53

Two-year limited warranty - Insignia Televisions ..... 54

US and Canada Markets ..... 54

# CHILD SAFETY

**It makes a difference how and where you use your flat panel display**

**As you enjoy your new product, keep these safety tips in mind**

## The issue

The home theater entertainment experience is a growing trend, and larger TVs are popular purchases. However, TVs are not always supported on the proper stands or installed according to the manufacturer's recommendations. We and the consumer electronics industry are committed to making home entertainment enjoyable and safe.

*TVs that are inappropriately placed on dressers, bookcases, shelves, desks, speakers, chests, or carts may fall over and cause injury.*

## Tune into safety

- One size of TV stand does **not** fit all. Use only a TV stand rated for the weight of your TV.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't let children climb on or play with entertainment system furniture and TVs.
- Don't place TVs on furniture that can easily be used as steps, such as a crate or chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger-than-life" TV. Make sure that you place or install the TV where it cannot be pushed, pulled over, or knocked down.
- Make sure that you route all cords and cables so that they cannot be pulled or grabbed by curious children.



## Wall mounting

If you decide to wall mount your TV, always remember:

- One size of wall mount does **not** fit all. Use only a wall mount rated for the weight of your TV and that has been recommended by this TV manufacturer, listed in this manual, or otherwise listed by an independent laboratory as suitable for your TV.
- Follow all instructions supplied by the TV and wall mount manufacturers.
- If you have any doubts about your ability to safely wall mount your TV, get help from a professional installer.
- Make sure that the wall where you are mounting the TV is appropriate. Some wall mounts are not designed to be mounted to walls backed with steel studs or cinder blocks. If you are unsure, ask a professional installer.
- TVs can be heavy. At least two people are required for safe wall mount installation.



## Important safety instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your TV. This label is located on the back of your TV.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your TV.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.



S3125A

- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 The *wall plug* is the disconnecting device. The plug must remain readily operable.
- 16 An apparatus with three-prong, grounding-type plug is a Class I apparatus. Class I apparatus which needs to be grounded to prevent possible electric shock. Make sure that you connect the Class I apparatus to a grounding-type, three-prong outlet.
- 17 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
- 18 The apparatus should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on the apparatus.

### Warnings

#### Electric shock hazard

To reduce the risk of fire or electric shock, do not remove any cover or expose the device to rain or moisture. No user-serviceable parts are inside. Refer servicing to qualified service technicians.

#### Lightning

For added protection for your device receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the power outlet and disconnect any antenna or cable system. This helps prevent property damage and personal injury from lightning and power line surges.

#### Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

#### Handling the LCD panel

- Your TV's screen is made of glass. Do not drop your TV or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

## Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

## Safety check

After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your TV is in correct operating condition.

## Power source

Operate your TV only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult an electrician or your local power company.


## Cautions

### Damage requiring service

- Unplug this TV from the power outlet and refer servicing to qualified service personnel under the following conditions:
- When the power supply cord or plug is damaged or frayed.
  - If liquid has been spilled or objects have fallen into your TV.
  - If your TV has been exposed to rain or water.
  - If your TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because incorrect adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore your TV to its normal operation.
  - If your TV has been dropped or damaged in any way.
  - When your TV exhibits a distinct change in performance.

## Outdoor antenna grounding

If an outside antenna or cable system is connected to your TV, make sure that the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to correct grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of the antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

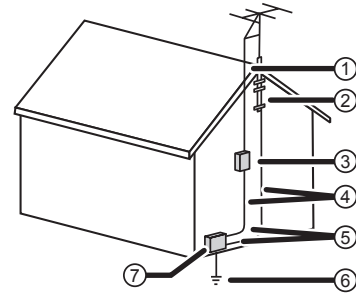

- ① Antenna lead-in wire
- ② Grounding clamp
- ③ Antenna discharge unit
- ④ Grounding conductors
- ⑤ Ground clamps
- ⑥ Power service grounding electrode system
- ⑦ Electric service equipment

### Note to CATV system installer

Article 820 of the National Electrical Code, ANSI/NFPA No. 40 provides guidance for correct grounding. Specifically, it states that the cable ground must be connected to the grounding system of the building as close to the point of cable entry as practical.

## Condensation

Moisture will form on the TV if the TV is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, the TV's performance may be impaired. To prevent this, let the TV stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the TV is exposed to the breeze from an air conditioner. In such cases, change the location of the TV.

## Mobile telephone warning

To avoid interference with your TV picture and sound, operating problems, or even damage, keep your cordless and cellular telephones away from the TV.

**End of life directives**

Your TV contains tin-lead solder and a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated for environmental reasons. Your TV also contains material that can be recycled and reused. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance at [www.eia.org](http://www.eia.org) to find a recycler in your area.

**Non-active pixels**

The LCD panel contains almost 3 million thin film transistors, which provide exceptionally sharp video quality. Occasionally, a few non-active pixels may appear on the screen as a fixed blue, green, or red point. These non-active pixels do not adversely affect the performance of your TV, and are not considered defects.

# Insignia 42"/46"/55" LCD HDTV, 1080p

---

## Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-42L780A12, NS-46L780A12, or NS-55L780A12 represents the state of the art in LCD HDTV design and is designed for reliable and trouble-free performance.

### **SRS TruSurround HD™**

At Insignia, providing you with superior audio quality is just as important as exceptional picture quality. That's why we added SRS TruSurround HD, which provides you with a theater-like surround-sound experience, with the clearer dialog and the enhanced bass sounds that movie viewers and gamers crave.

### **Insignia Motion 120Hz**

With a 120 Hz screen refresh rate twice the rate of a 60 Hz screen, a screen with 1,080 lines of resolution (up from 720 lines in the last generation of HDTVs), and special motion-detection technology, you will be experiencing a picture with clearer detail and brightness, smoother transitions, and reduced motion blurring, particularly when watching fast-motion sports and action scenes. (See page 24 for instructions on how to adjust the TV picture.)

### **Game mode**

Video games generally require adjustments to the television picture settings to get the maximum experience. By simply pressing a button on your remote control, your television settings will automatically adjust for video games. It couldn't be easier. (See page 24 for instructions on how to turn Game Mode on and off.)

### **INlink**

Enjoy the benefit of having HDMI CEC compatible products plug and play! No setup is needed! CEC technology lets different components discover and communicate with each other. (See page 41 for instructions on how to use INlink.)

## Installing the stand or wall-mount bracket


### Notes

If you plan to wall-mount your TV, do not install the stand.  
Store the stand and stand screws in case you decide to use the stand in the future.

### Installing the stand


#### To install the stand:

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.

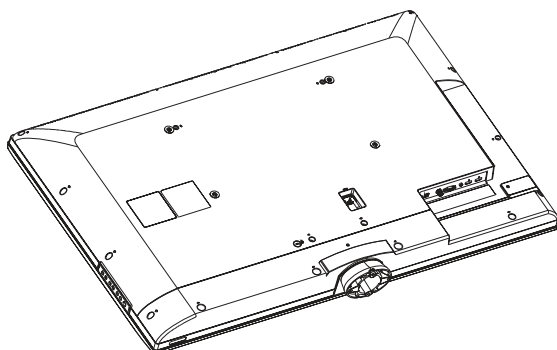

- 2 Secure the stand to the TV with the four provided screws.

Model	Screw type	Screw length
All models	M6 type	12 mm

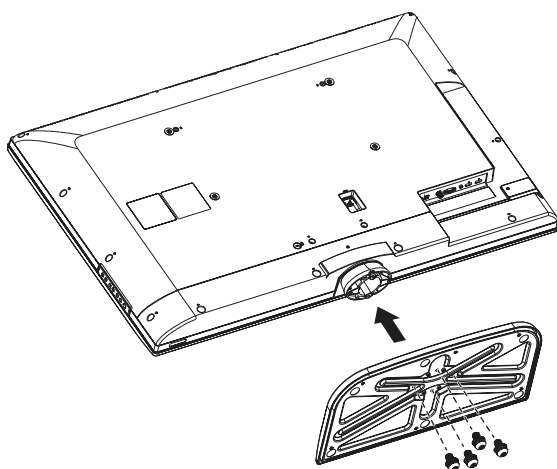


### Installing a wall-mount bracket

#### Warning


This TV is intended to be supported by a UL Listed wall mount bracket with suitable weight/load. (See "Miscellaneous" on page 51.)

#### To attach your TV to a wall-mount bracket:

- 1 Carefully place your TV screen face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- 2 Remove the four screws that secure the base, then remove the base.

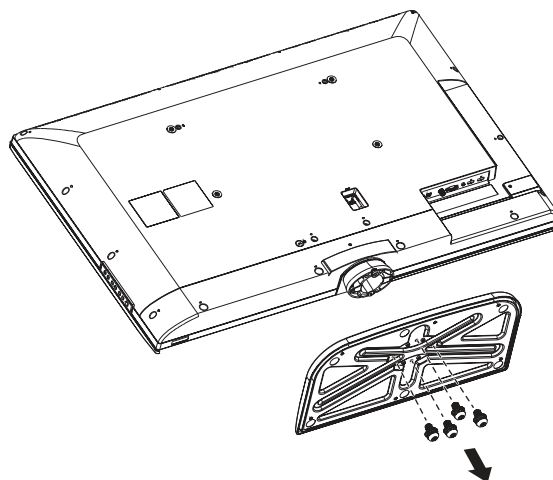




- 3 Remove the four screws that secure the stand column, then remove the column.

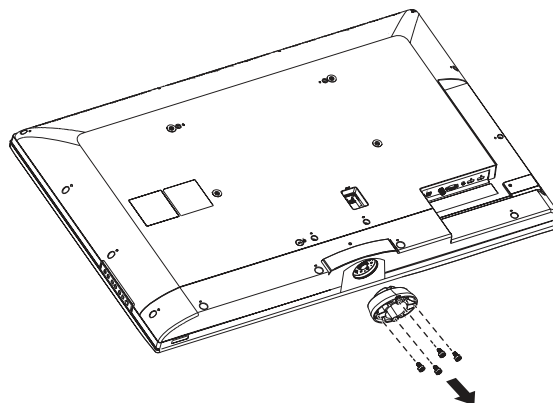

- 4 Attach the wall-mount bracket to your TV using the mounting holes on the back of your TV. See the instructions that came with the wall-mount bracket for information about how to correctly hang your TV.

#### Note

The length of the wall-mount screws vary depending on the wall-mount bracket you purchased. See the instructions that came with the wall-mount bracket for screw lengths.

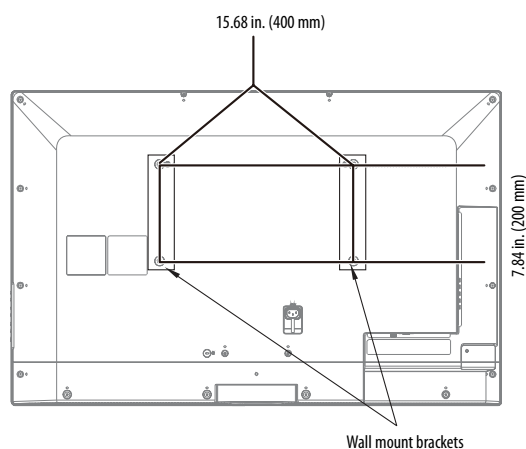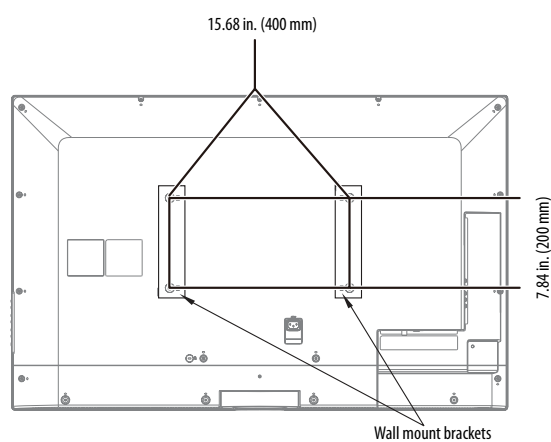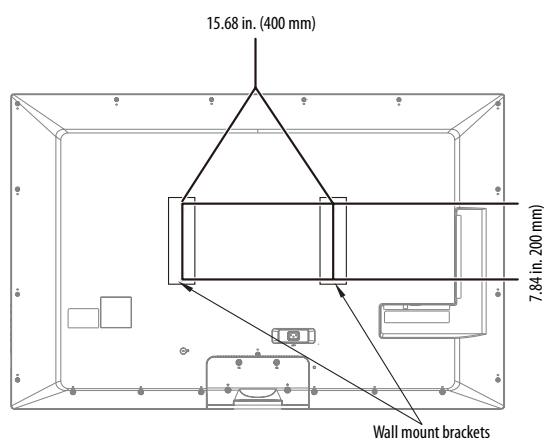
**NS-42L780A12 (42-inch)****NS-46L780A12 (46-inch)****NS-55L780A12 (55-inch)**

## TV components

### Package contents


Remote control and batteries (2 AAA)  
 Stand with screws  
 Component cable  
 Audio cable  
 Power cord  
 Cleaning cloth  
*Quick Setup Guide*

### Front

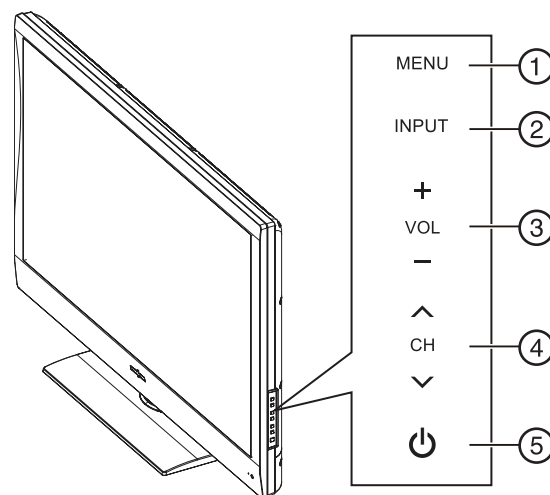


#	Item	Description
①	MENU	Press to open the on-screen menu. For more information, see "Navigating the menus" on page 23.
②	INPUT	Press to open the <i>Input Source</i> list, press ▲ or ▼ to select a video input source. In menu mode, press to confirm selections.
③	VOL+/VOL-	Press to increase or decrease the volume.
④	CH ▼/CH ▲	Press to go to the next or previous channel in the channel list. For more information, see "Selecting a channel" on page 24.
⑤	⏻ (power)	Press to turn your TV on or off (Standby mode). When your TV is off, power still flows through it. To disconnect power, unplug the power cord.

## Back

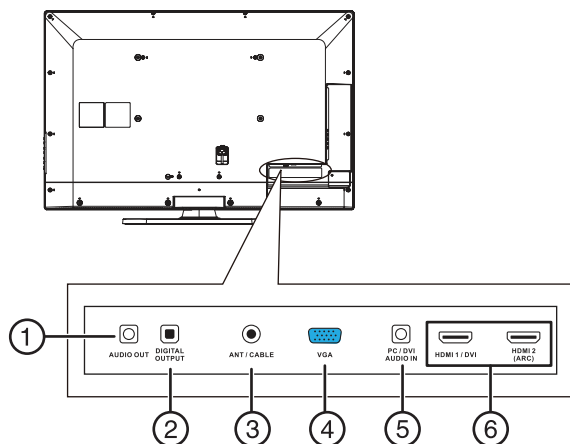


#	Item	Description
①	AUDIO OUT	Connect an external sound system to these jacks. For more information, see "Using analog audio output" on page 19.
②	DIGITAL OUTPUT	Connect an audio amplifier to this jack. For more information, see "Using digital audio output" on page 19.
③	ANT/CABLE	Connect an antenna or cable TV to this jack. For more information, see "Connecting an antenna or cable TV (no box)" on page 14.
④	VGA	Connect the video (VGA) for a computer to this jack. For more information, see "Using VGA" on page 17.
⑤	PC/DVI AUDIO IN	Connect the audio for a computer or a DVI device to this jack. For more information, see "Using VGA" on page 17 or "Using DVI (same as HDMI but requires a sound connection)" on page 12 or 15.
⑥	HDMI 1/DVI HDMI 2 (ARC)	Connect HDMI devices to these jacks. An HDMI cable carries both video and sound. You do not need to make an audio connection for an HDMI device. For more information, see "Using HDMI (best)" on page 11, 14, or 18. When connecting a DVI device using an HDMI-DVI adapter, connect the device to the HDMI1 jack.

## Side

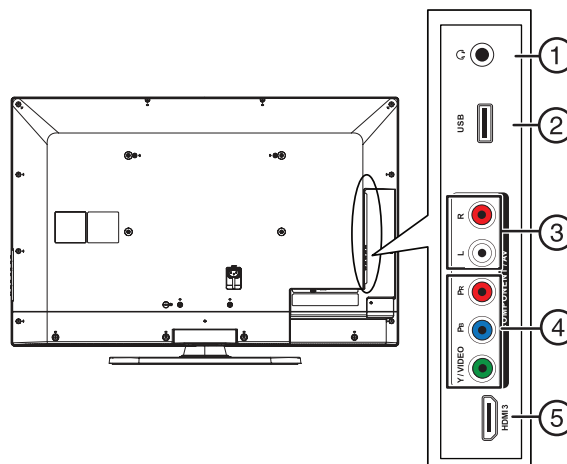

#	Item	Description
①	⌂ (headphone)	Connect headphones to this jack. For more information, see "Connecting headphones" on page 19.
②	USB	Connect a USB flash drive to this jack.
③	COMPONENT/AV L/R audio	The component video jacks (Y-VIDEO/Pb/Pr) share these audio jacks with the composite video jack (Y-VIDEO). Connect the audio for a component video device to these jacks. For more information, see "Using component video (better)" on page 12 or 15. OR Connect the audio for a composite video device to these jacks. For more information, see "Using composite video (good)" on page 13 or 16.
④	COMPONENT Y-VIDEO/Pb/Pr	Connect the video for a component video device to these jacks. For more information, see "Using component video (better)" on page 12 or 15. OR Connect the video for a composite video device to the Y-VIDEO jack. For more information, see "Using composite video (good)" on page 13 or 16.
⑤	HDMI3	Connect an HDMI device to this jack. An HDMI cable carries both video and sound. You do not need to make an audio connection for an HDMI device. For more information, see "Using HDMI (best)" on page 11, 14, or 18. When connecting a DVI device using an HDMI-DVI adapter, connect the device to the HDMI1 jack.

## Remote control

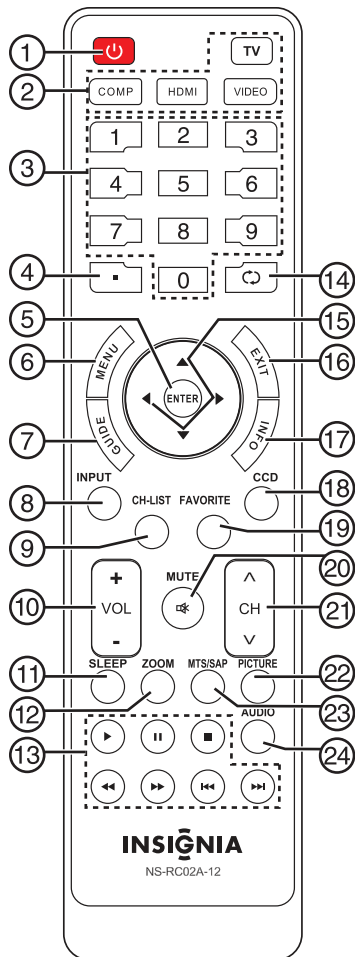

 




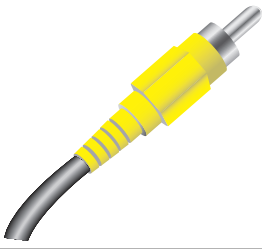


#	Button	Description
①	⏻ (power)	Press to turn your TV on or off (Standby mode). When your TV is off, power still flows through it. To disconnect power, unplug the power cord.
②	Quick Launch Inputs	<b>TV</b> —Press to select your TV as the input source. <b>COMP</b> —Press to select the device connected to the <b>COMPONENT</b> video jacks. <b>HDMI</b> —Press one or more times to select the device connected to the <b>HDMI 1</b> , <b>HDMI 2</b> , or <b>HDMI 3</b> jack. <b>VIDEO</b> —Press to select the device connected to the <b>Y-VIDEO</b> jack.
③	Numbers	Press to enter channel numbers and the parental control password.
④	●	Press to enter a digital sub-channel number. For more information, see "Selecting a channel" on page 24.
⑤	ENTER	Press to confirm selections or changes.
⑥	MENU	Press to open the on-screen menu.
⑦	GUIDE	Press to display the program guide. For more information, see "Viewing channel information" on page 24.
⑧	INPUT	Press to open the <i>Input Source</i> list, then press ▲ or ▼ to cycle through the available input sources. For more information, see "Selecting the video input source" on page 22.
⑨	CH-LIST	Press to open the channel list.
⑩	VOL+/-	Press to increase or decrease the volume.






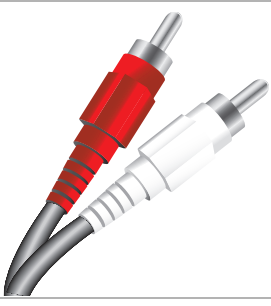

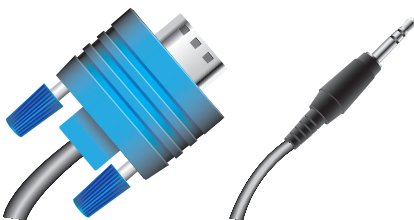
#	Button	Description
⑪	SLEEP	Press to set the sleep timer. You can select <b>Off</b> , <b>5</b> , <b>10</b> , <b>15</b> , <b>30</b> , <b>60</b> , <b>90</b> , <b>120</b> , <b>180</b> , or <b>240</b> minutes. For more information, see "Setting the sleep timer" on page 39.
⑫	ZOOM	Press to select the aspect ratio. For more information, see "Adjusting the TV picture" on page 24.
⑬	Media control	Press these buttons to control the playback from an HDMI-CEC compatible device. For more information about HDMI-CEC compatible devices, see "Using INlink" on page 41.
⑭	○/RECALL	In TV mode, press to return to the previous channel.
⑮	▲▼◀▶	Press to move up, down, left, or right in on-screen menus.
⑯	EXIT	Press to close the on-screen menu.
⑰	INFO	Press to display TV status information, such as the channel number, channel name (if available), or signal source. For more information, see "Viewing channel information" on page 24.
⑱	CCD	Press to turn closed captioning on or off. You can select <b>CC Off</b> , <b>CC On</b> , or <b>CC on When Mute</b> . For more information, see "Turning closed captioning on or off" on page 36.
⑲	FAVORITE	Press to open the Favorite Channel list. For more information, see "Setting up a favorite channel list" on page 29 and "Viewing a favorite channel" on page 30.
⑳	🔇/MUTE	Press to mute the sound. Press again to restore the sound.
㉑	CH ▲/▼	Press to change TV channels. For more information, see "Selecting a channel" on page 24.
㉒	PICTURE	Press to select the video modes. You can select <b>Vivid</b> , <b>Standard</b> , <b>Energy Savings</b> , <b>Theater</b> , <b>Game</b> , or <b>Custom</b> . For more information, see "Adjusting the TV picture" on page 24.
		Press to select the audio mode for an analog program. You can select:
㉓	MTS/SAP	<ul style="list-style-type: none"> <li><b>MONO</b>—Select this option if there is noise or static on weak stereo broadcasts.</li> <li><b>STEREO</b>—Select this option for programs broadcast in stereo.</li> <li><b>SAP</b>—Select this option to listen to a secondary audio program, if available.</li> </ul>
㉔	AUDIO	Press to adjust sound settings. For more information, see "Adjusting sound settings" on page 27.
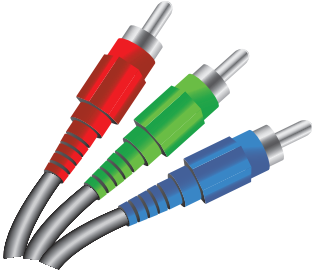
## Making connections

### What connection should I use?

Your TV has several connection types for connecting devices to your TV.  
For the best video quality, you should connect a device to the best available connection.  
Use the following tables to identify cables:

Connection type and jack	Video quality	Cable connector
<b>HDMI video/audio</b> 	<b>Best (use this if your devices have HDMI)</b>	
<b>Component video (requires an audio connection)</b> 	<b>Better than composite or coaxial</b>	
<b>Composite video (requires an audio connection)</b> 	<b>Better than coaxial</b>	
<b>Coaxial video/audio</b> 	<b>Good</b>	

Connection type and jack	Cable connectors
<b>Digital out</b> 	
<b>Audio out</b> 	
<b>Analog audio</b> 	
<b>VGA (computer) video and audio</b> 	

You can use the **HDMI 1** jack on the back of your TV to connect a DVI device to your TV. You need to attach an HDMI-to-DVI adapter to the end of the HDMI cable that connects to the DVI device.


#### Cautions

- Check the jacks for position and type before making any connections.
- Loose connections can result in image or color problems. Make sure that all connections are tight and secure.
- The external audio/video equipment shown may be different from your equipment. If you have questions, refer to the documentation that came with your equipment.
- Always unplug the power cord when connecting external equipment.

## Connecting power

### To connect the power:

- Connect the AC power cord to the AC connector on the back of your TV, then plug the other end into a power outlet.

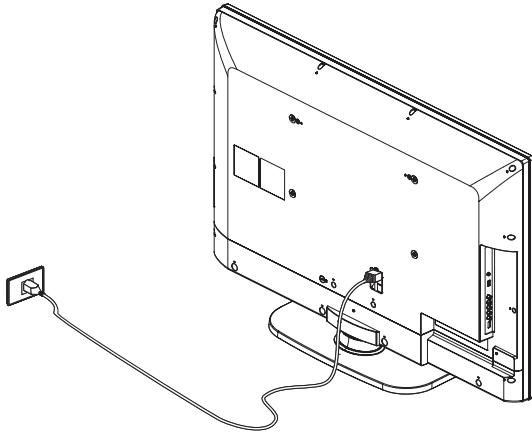

#### Notes

- Your TV should only be operated from the power source indicated on the label.
- Always unplug the AC power cord from the power outlet when you will not be using your TV for an extended period of time.


## Connecting a cable or satellite box

Many cable or satellite TV boxes have more than one connection type. To get the best video, you should use the best connection type available. For more information, see "What connection should I use?" on page 10.

### Using HDMI (best)

#### To connect a cable or satellite box using HDMI:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box.
- 3 Connect an HDMI cable (not included) to one of the **HDMI** jacks on the back of your TV and to the HDMI jack on the cable or satellite box.

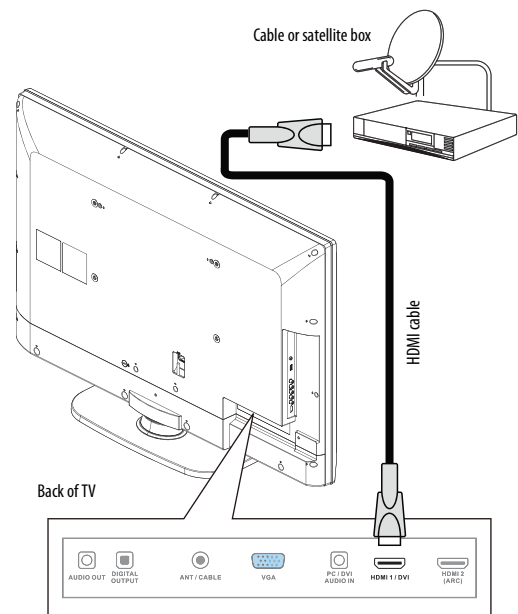

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the setup wizard on page 21.

#### Note

An HDMI cable carries both audio and video. You do not need to use any audio cables.


## Using DVI (same as HDMI but requires a sound connection)

### Note

A DVI device must be connected to the **HDMI 1** jack. If you connect a DVI device to another **HDMI** jack, you will not hear audio.

### To connect a cable or satellite box using DVI:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
- 3 Connect an HDMI-DVI adapter (not included) to one end of an HDMI cable (not included).
- 4 Connect the HDMI-DVI adapter to the **HDMI 1** jack on the back of your TV and to the **DVI OUT** jack on the cable or satellite box.

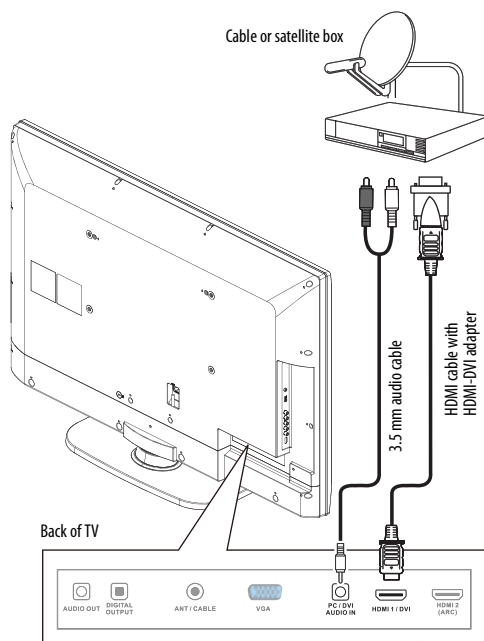

- 5 Connect a 3.5 mm audio cable (not included) to the **PC/DVI AUDIO IN** jack on the back of your TV and to the **AUDIO OUT** jack on the cable or satellite box.

### Note


When you connect the audio using the **PC/DVI AUDIO IN** jack, the audio output is analog.

- 6 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 7 Go through the setup wizard on page 21.

## Using component video (better)

### To connect a cable or satellite box using component video:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
- 3 Connect a component video cable (included) to the **Y-VIDEO**, **PB**, and **PR** jacks on the side of your TV and the component video out jacks on the cable or satellite box.

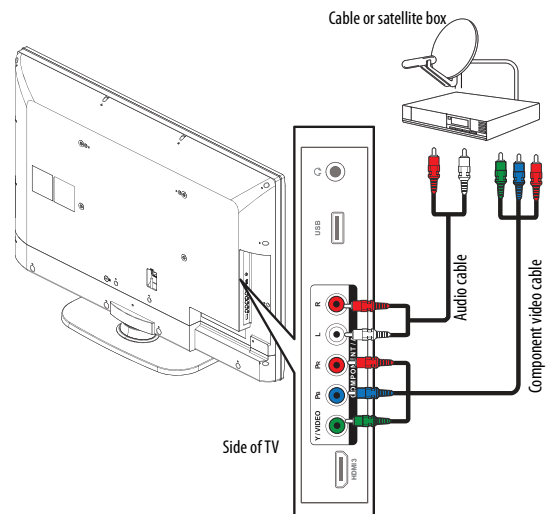

- 4 Connect an audio cable (included) to the **L** and **R** audio jacks on the side of your TV and to the audio out jack on the cable or satellite TV box.

### Note

When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.


You can connect the video to the component video jacks and connect the audio to the digital audio jack to get digital audio output.

- 5 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 6 Go through the setup wizard on page 21.

### Using composite video (good)

#### To connect a cable or satellite box using composite video:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable box.
- 3 Connect an A/V cable (not included) to the **Y-VIDEO** and **L/R** (audio in) jacks on the side of your TV and to the composite video and audio out jacks on the cable or satellite box.

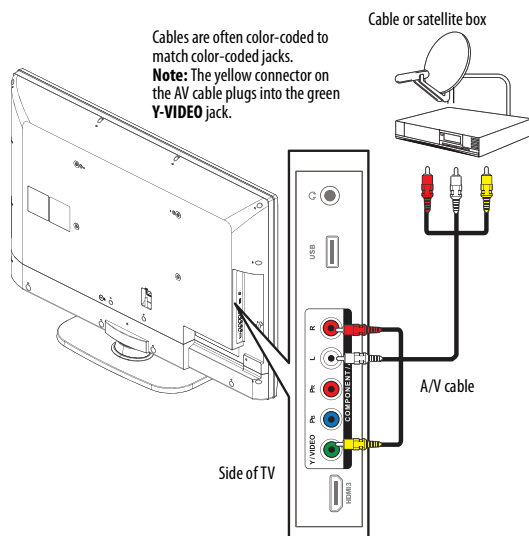


- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the setup wizard on page 21.

### Using coaxial (good)

#### To connect a cable or satellite box using coaxial:

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect the incoming cable from the cable wall jack to the cable-in jack on the cable or satellite box.
- 3 Connect a coaxial cable (not included) to the **ANT/CABLE** jack on the back of your TV and to the coaxial out jack on the cable or satellite box.

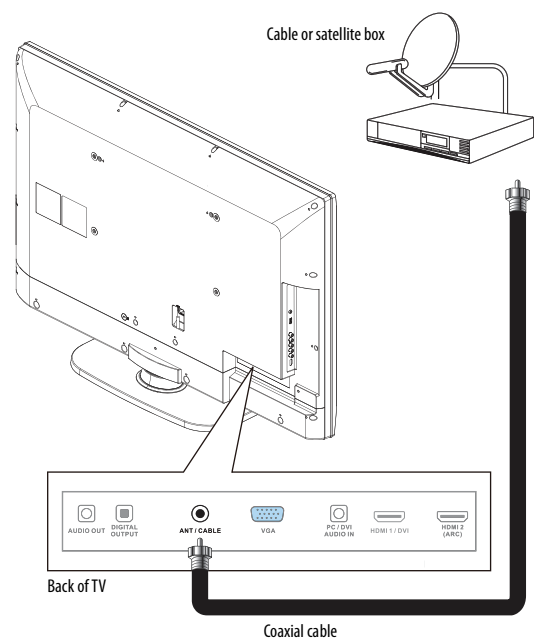

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the cable or satellite box.
- 5 Go through the setup wizard on page 21.


#### Notes

- Use a coaxial cable to eliminate interference and noise from radio waves.
- Do not bundle the coaxial cable with the power cord or other cables.

## Connecting an antenna or cable TV (no box)

### To connect an antenna or cable TV (no box):

- 1 Make sure that your TV's power cord is unplugged, and all connected equipment is turned off.
- 2 Connect a coaxial cable to the **ANT/CABLE** jack on the back of your TV and to the antenna or cable TV wall jack.

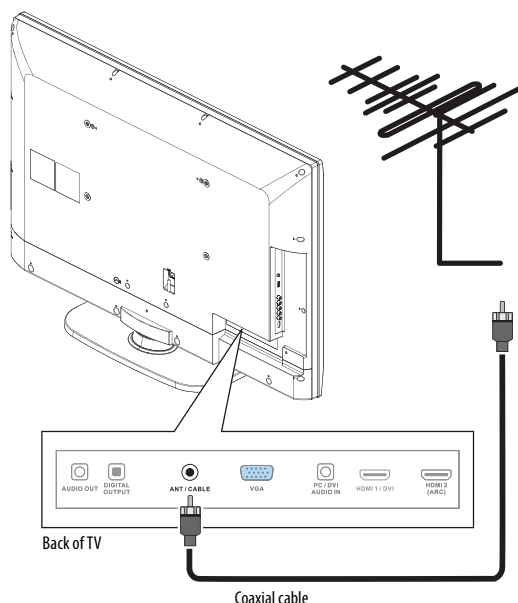

- 3 Plug your TV's power cord into a power outlet, then turn on your TV.
- 4 Go through the setup wizard on page 21.

#### Notes


- Use a coaxial cable to eliminate interference and noise from radio waves.
- Do not bundle the coaxial cable with the power cord or other cables.
- If the antenna is not installed correctly, contact qualified service personnel to correct the problem.

## Connecting a DVD or Blu-ray player

### Using HDMI (best)

### To connect a DVD or Blu-ray player using HDMI:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an HDMI cable (not included) to an **HDMI** jack on the back or side of your TV and to the **HDMI OUT** jack on the DVD or Blu-ray player.

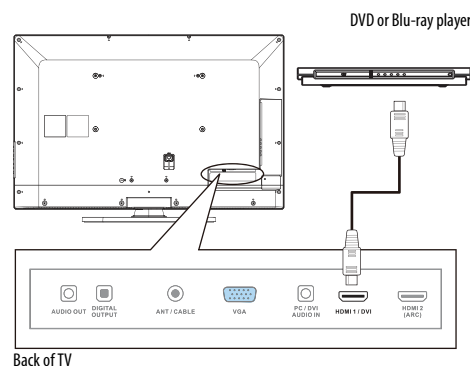

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 4 Press **INPUT** to open the *Input Source* list.
- 5 Press **▲** or **▼** to highlight **HDMI 1**, **HDMI 2**, or **HDMI 3**, then press **ENTER**.

#### Note

You can also press **HDMI** repeatedly to select the DVD or Blu-ray player.


### Using DVI (same as HDMI but requires a sound connection)

#### Note

A DVI device must be connected to the **HDMI 1** jack. If you connect a DVI device to another **HDMI** jack, you will not hear audio.

#### To connect a DVD or Blu-ray player using DVI:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an HDMI-DVI adapter (not included) to one end of an HDMI cable (not included).
- 3 Connect the HDMI-DVI adapter to the **HDMI 1** jack on the back of your TV and to the **DVI OUT** jack on the DVD or Blu-ray player.

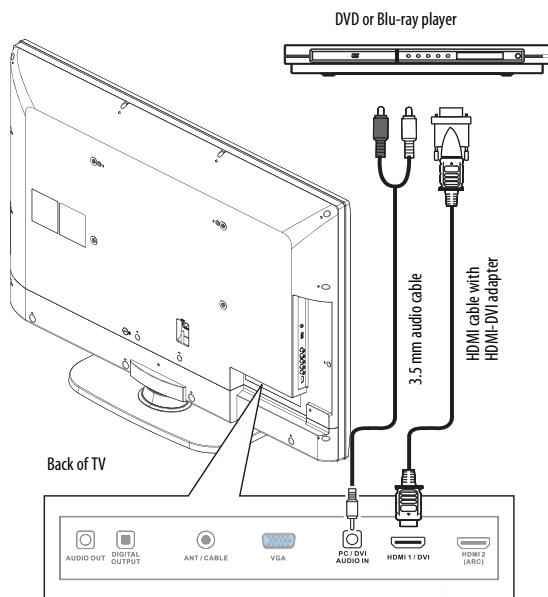

- 4 Connect a 3.5 mm audio cable (not included) to the **PC/DVI AUDIO IN** jack on the back of your TV and to the **AUDIO OUT** jack on the DVD or Blu-ray player.

#### Note

When you connect the audio using the **PC/DVI AUDIO IN** jacks, the audio output is analog. If your TV has a digital audio jack (optical or coaxial), you can connect the video to the component video jacks and connect the audio to the digital audio jack to get digital audio output.

- 5 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 6 Press **INPUT** to open the *Input Source* list.
- 7 Press **▲** or **▼** to select **HDMI 1**, then press **ENTER**.


#### Note

You can also press **HDMI** repeatedly to select the **HDMI 1**.

### Using component video (better)

#### To connect a DVD or Blu-ray player using component video:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect a component video cable (provided) to the **Y/PB/PR** (component video) jacks on the side of your TV and to the **COMPONENT OUT** jacks on the component video device.

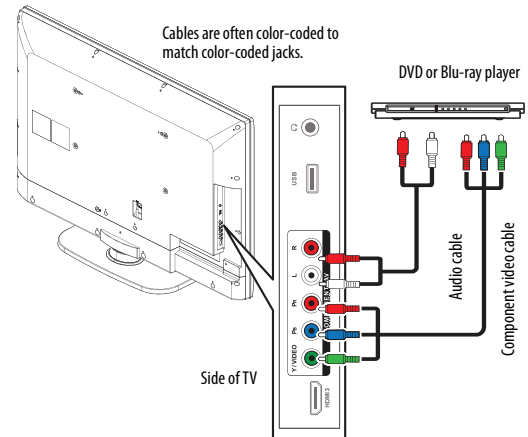

- 3 Connect an audio cable to the **L/R** (audio in) jacks on the side of your TV and to the **L/R AUDIO OUT** jacks on the component video device.

#### Notes

The **Y-VIDEO/PB/PR** (component video) jacks share the audio jacks with the **Y-VIDEO** (composite video) jack.

When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.

You can connect the video to the component video jacks and connect the audio to the digital audio jack to get digital audio output.

- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 5 Press **INPUT** to open the *Input Source* list.
- 6 Press **▲** or **▼** to select **Component/AV**, then press **ENTER**.

#### Note

You can also press **COMP** to select the component DVD or Blu-ray player.


## Using composite video (good)

### To connect a DVD or Blu-ray player using composite video:

- 1 Make sure that your TV's power cord is unplugged and the DVD or Blu-ray player is turned off.
- 2 Connect an AV cable (not provided) to the **Y-VIDEO** and **L/R** (audio in) jacks on the side of your TV and to the **AV OUT** jacks on the DVD or Blu-ray player.

#### Note

When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.

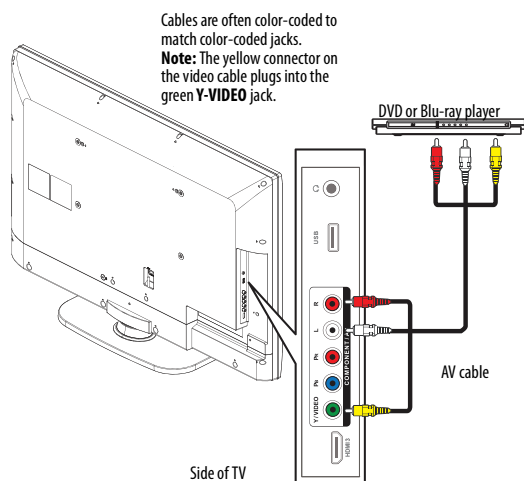

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the DVD or Blu-ray player.
- 4 Press **INPUT** to open the *Input Source* list.
- 5 Press **▲** or **▼** to select **Component/AV**, then press **ENTER**.

#### Notes

- You can also press **VIDEO** to select the DVD or Blu-ray player.
- If you are not using the included audio cable for another device, you can use it and a standard one-plug video cable instead of the three-plug cable shown in this task.
- The **Y-VIDEO** (composite video) jack shares the audio jacks with the **Y-VIDEO/Pb/Pr** (component video) jacks.


## Connecting a VCR

### To connect a VCR:

- 1 Make sure that your TV's power cord is unplugged and the VCR is turned off.
- 2 Connect an AV cable (not provided) to the **Y-VIDEO** and **L/R** (audio in) jacks on the side of your TV and to the **AV OUT** jacks on the VCR.

#### Note

When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.

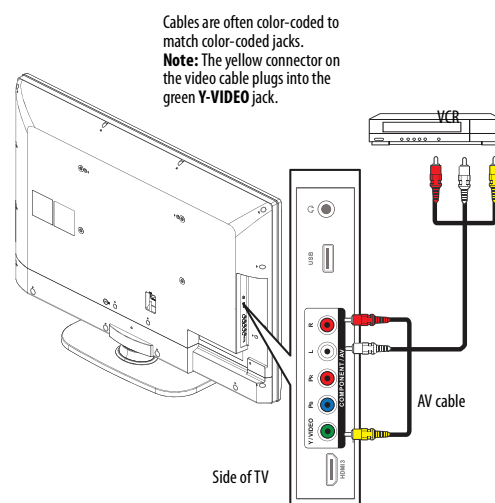

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the VCR.
- 4 Press **INPUT** to open the *Input Source* list.
- 5 Press **▲** or **▼** to select **Component/AV**, then press **ENTER**.

#### Note

You can also press **VIDEO** to select the VCR.

- 6 Insert a videotape, then press **PLAY** on the VCR.

#### Note

The **Y-VIDEO** (composite) jack shares the audio jacks with the **Y-VIDEO/Pb/Pr** (component video) jacks.

## Connecting a camcorder or game console

### Note


If your camcorder or game console has an HDMI connection, we recommend that you use the HDMI connection to get the best quality possible.

### To connect a camcorder or game console:

- 1 Make sure that your TV's power cord is unplugged and the camcorder or game console is turned off.
- 2 Connect an AV cable (not provided) to the **Y-VIDEO** and **L/R** (audio in) jacks on the side of your TV and to the **AV OUT** jacks on the camcorder or game console.

### Note

When you connect the audio using the **L** and **R** audio jacks, the audio output is analog.

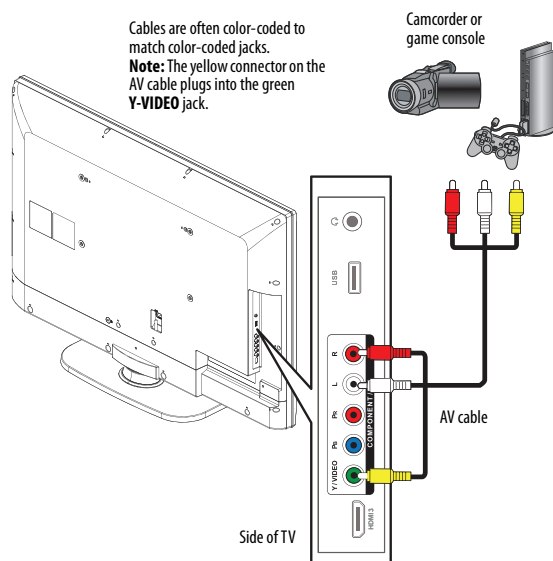

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the camcorder or game console.
- 4 Press **INPUT** to open the *Input Source* list.
- 5 Press **▲** or **▼** to select **Component/AV**, then press **ENTER**.

### Notes

- You can also press **VIDEO** to select the camcorder or game console.
- The **Y-VIDEO/Pb/Pr** (component video) jacks share the audio jacks with the **Y-VIDEO** (composite video) jack.

## Connecting a computer


### Tip

Some computers have an HDMI jack. You can use an HDMI cable to connect the computer for a better picture.

### Using VGA

### To connect a computer using VGA:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect a VGA cable (not provided) to the **VGA** jack on the back of your TV and to the **VGA** jack on the computer.

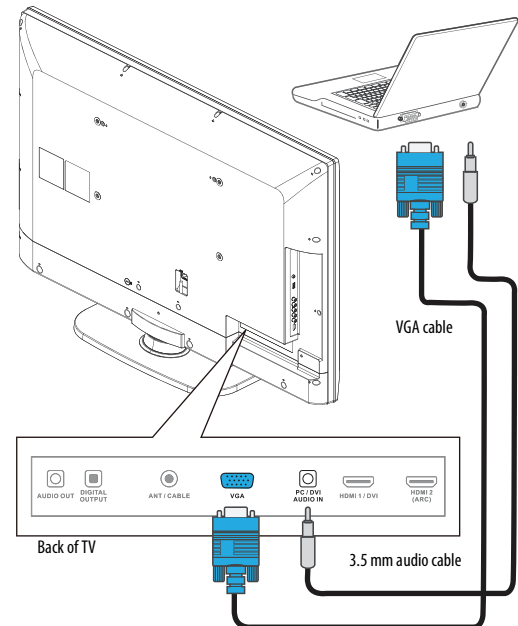


- 3 Connect a 3.5 mm audio cable to the **PC/DVI AUDIO IN** jack on the back of your TV and to the **LINE OUT** or **AUDIO OUT** jack on the computer.
- 4 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the computer.
- 5 Press **INPUT** to open the *Input Source* list.
- 6 Press **▲** or **▼** to select **VGA**, then press **ENTER**.
- 7 Adjust the display properties on the computer if necessary.

## Using HDMI

### To connect a computer using HDMI:

- 1 Make sure that your TV's power cord is unplugged and the computer is turned off.
- 2 Connect an HDMI cable (not included) to an **HDMI** jack on the back or side of your TV and to the **HDMI OUT** jack on the computer.

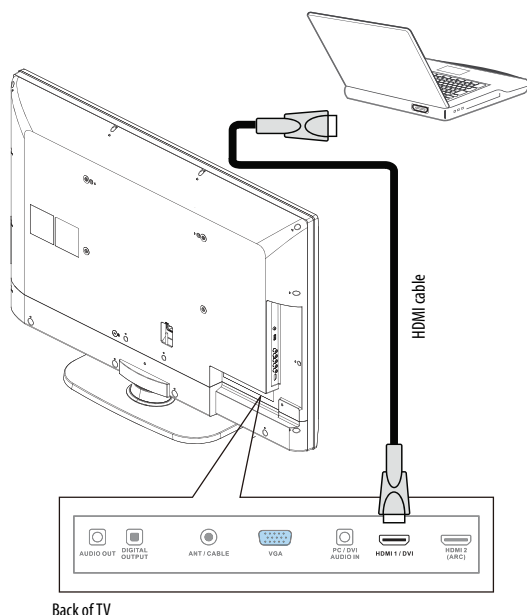

- 3 Plug your TV's power cord into a power outlet, turn on your TV, then turn on the computer.
- 4 Press **INPUT** to open the *Input Source* list.
- 5 Press **▲** or **▼** to highlight **HDMI 1**, **HDMI 2**, or **HDMI 3**, then press **ENTER**.


#### Note

You can also press **HDMI** repeatedly to select the computer.

## Connecting a USB flash drive

### To connect a USB flash drive:

- Plug a USB flash drive into the **USB** port on the side of your TV.

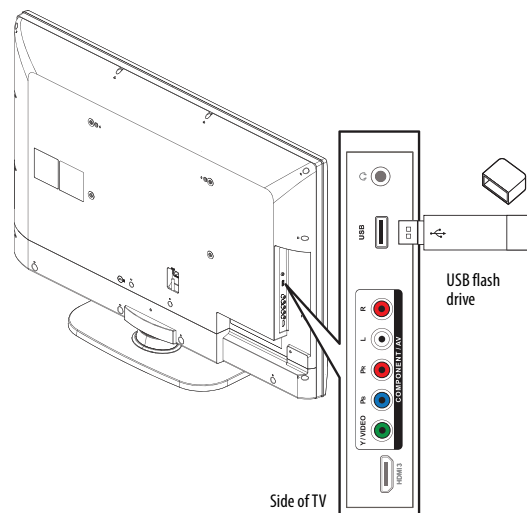

#### Caution

Do not remove the USB flash drive or turn off the TV while using the USB flash drive. You may lose data or damage the USB flash drive.

### To play from a USB flash drive:

- 1 When you see the message "Show Photos with USB Flash Drive?", press **◀** or **▶** to select **Yes** or wait 30 seconds. Your TV displays the first picture.

### To switch to USB mode from another video mode:

- 1 Press **INPUT** to open the *Input Source* list.
- 2 Press **▲** or **▼** to select **USB**, then press **ENTER**.

#### Notes

- Never remove the USB flash drive or turn off your TV while viewing JPEG pictures.
- The JPEG picture viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with your TV. For more information, see "Using a USB flash drive" on page 44.

 
## Connecting headphones


The TV speakers are muted when headphones are attached.

### Warning

Loud noise can damage your hearing. When using headphones, use the lowest volume setting on your headphones that still lets you hear the sound.

### To connect headphones:


- Connect headphones to the  (headphone) jack on the side of your TV.

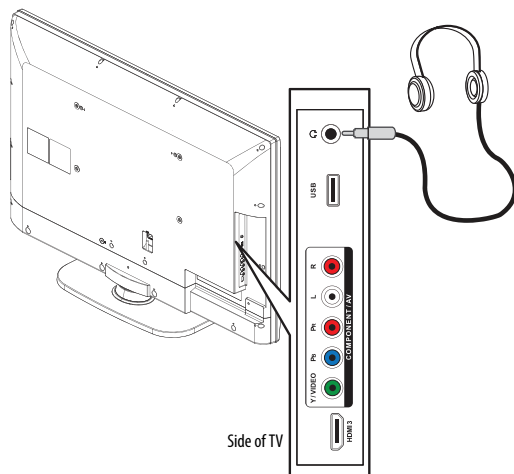

## Using analog audio output

### To connect a basic home theater system using analog audio output:

- 1 Make sure that your TV's power cord is unplugged and the home system is turned off.
- 2 Connect an audio cable to the **AUDIO OUT** jack on the back of your TV and to the **AUDIO IN** jacks on the home theater system.

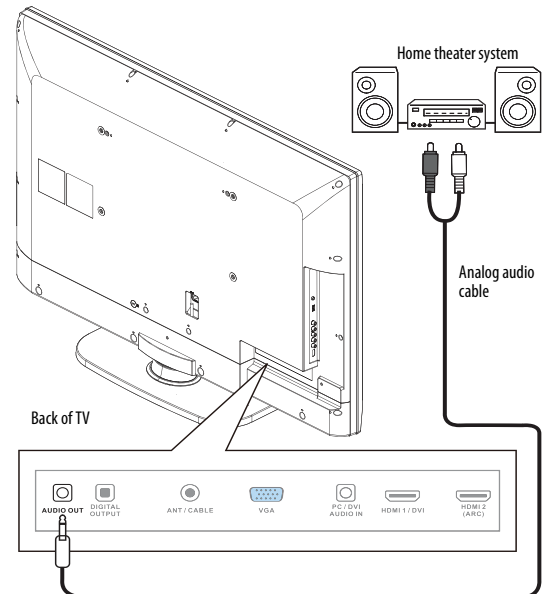


## Connecting a basic home theater system

### Using digital audio output

### To connect a basic home theater system using digital audio output:

- 1 Make sure that your TV's power cord is unplugged and the home theater system is turned off.
- 2 Connect a digital optical audio cable to the **DIGITAL OUTPUT** jack on the back of your TV and to the digital optical audio jack on the digital home theater system.

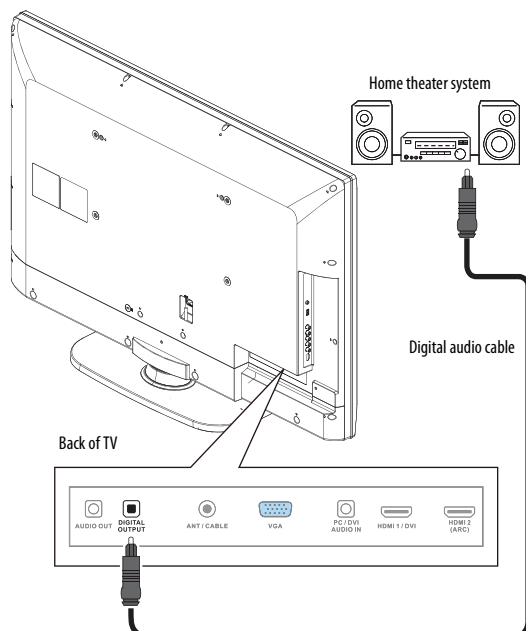


## Connecting a home theater system with multiple devices

### Notes

When connecting an AV receiver with the ARC function, we recommend that you connect the AV receiver's **HDMI OUT** jack to your TV's **HDMI2 (ARC)** jack by using an HDMI-ARC compliant cable.

In the following situations, the HDMI cable will route Dolby Digital audio to the AV receiver, so you do not need to connect a separate digital audio cable:

- Have a game console connected to your TV's **HDMI 1** or **HDMI 3** jacks.
- When you watch a program through an antenna or cable TV connected to the **ANT/CABLE** jack.

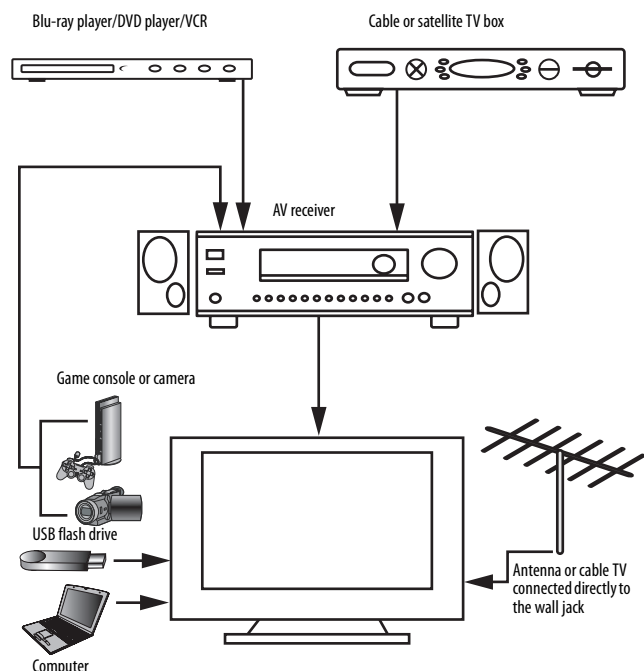

The connections you make depend on the video and audio jacks available on your devices. Refer to the documentation that came with your devices for connection information.


Just remember to use the best connection types available for the best picture and sound. For information about connection types, see "What connection should I use?" on page 10.

## Using the remote control


### Installing remote control batteries

#### To install the remote control batteries:

- 1 Remove the battery cover.

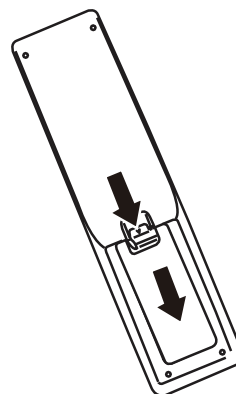

- 2 Insert two AAA batteries into the battery compartment. Make sure that you match the + and - symbols on the batteries with the + and - symbols in the battery compartment.

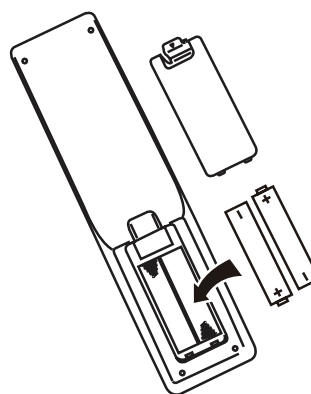

- 3 Replace the battery cover.

### Cautions

- Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.

### Aiming the remote control


#### To aim the remote control:


- Point the remote control towards the remote sensor on the front of your TV.



# Turning on your TV for the first time


The first time you turn on your TV, the Setup Wizard opens. The Setup Wizard guides you through setting up basic settings including the menu language, time setting, picture mode, TV signal source, and the channel list.



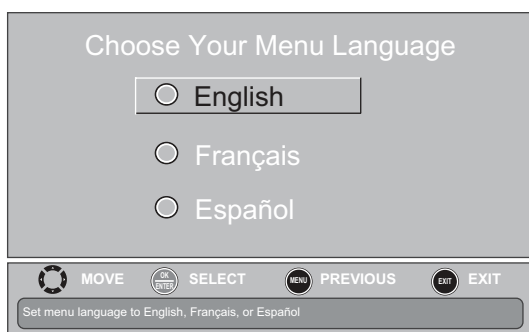

## To set up your TV:

- 1 Make sure that you have:
  - Installed the remote control batteries. (See page 20 for details.)
  - Connected an antenna, cable TV, or satellite TV. (See page 11 or 14 for details.)
  - Connected the power cord. (See page 11 for details.)
- 2 Press  (power) to turn on your TV. The *Choose Your Menu Language* screen opens.

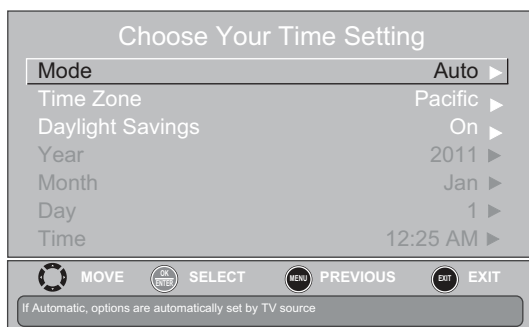





- 3 Press  or  to highlight the language you want, then press **ENTER**. The *Choose Your Time Setting* screen opens.


















- 4 Press  or  to highlight **Mode**, then press  or  to select **Manual** (to set the date and time manually) or **Auto** (to set the date and time automatically from a TV signal source based on the time zone you select).

### Note

If you select **Auto**, the displayed time will be incorrect until your TV gets the correct time from a TV signal source.

- 5 Press  or  to highlight **Time Zone**, then press  or  to select your time zone. You can select **Newfoundland, Atlantic, Eastern, Central, Mountain, Pacific, Alaska, or Hawaii**.


- 6 Press  or  to highlight **Daylight Savings**, then press  or  to select **On** (if your viewing area observes Daylight Savings Time) or **Off** (if your viewing area does not observe Daylight Savings Time).
- 7 If you selected **Manual** for **Mode**, set the date by pressing  or  to highlight **Year**, **Month**, or **Day**, then press  or  to adjust the setting.
- 8 If you selected **Manual** for **Mode**, set the time by pressing  or  to highlight **Time**, then pressing  or  to select the hour, minute, or AM/PM field. Press  or  to adjust the setting.
- 9 Press **ENTER**. The *Choose Your Picture Mode* screen opens.

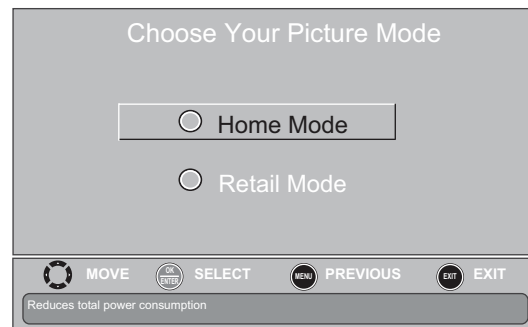



- 10 Press  or  to highlight **Home Mode** or **Retail Mode**, then press **ENTER**.

If you selected **Retail Mode**, a message appears "Are you sure you want retail mode?" Select **Yes** to continue, or select **No** to change your selection.

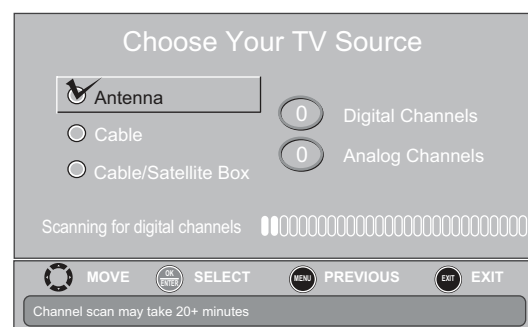The *Choose Your TV Source* screen opens.



- 11 Press  or  to highlight **Antenna**, **Cable**, or **Cable/Satellite Box** (if your cable TV uses a box, select **Cable/Satellite Box**), then press **ENTER**. If you chose **Antenna** or **Cable**, your TV automatically starts scanning for channels available in your viewing area. If you chose **Cable/Satellite box**, your TV does not need to scan for channels.

During auto channel search, your TV searches for digital channels first. When the digital channel search is complete, a message appears asking if you want to search for analog channels. Select **Yes** to continue searching for analog channels, or select **No** to stop searching for channels.

#### Note

You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

- 12 To watch TV, press **INPUT**, press **▲** or **▼** to highlight the video input source for your TV in the *Input Source* list, then press **ENTER**.
  - If your TV is connected to an antenna, cable TV (no box), or cable or satellite TV box using a coaxial cable, select **TV**.
  - If your TV is connected to a cable or satellite box using an HDMI cable or HDMI cable with a DVI adapter, select **HDMI**, **HDMI2**, or **HDMI3**.
  - If your TV is connected to a cable or satellite box using a component video cable, select **Component**.
  - If your TV is connected to a cable or satellite box using a composite video cable, select **AV**.

## Understanding the basics

### Turning your TV on or off

#### To turn your TV on or off:

- 1 Make sure that the power cord is connected to your TV and to a power outlet.
- 2 Press **⏻** (power) to turn on your TV. The power indicator LED turns blue.
- 3 Press **⏻** (power) again to turn off your TV. Your TV enters Standby mode and the power indicator LED turns red.


### Selecting the video input source

#### To select the video input source:

- 1 Turn on your TV, then press **INPUT**. The *Input Source* list opens.

#### Note

If the **Input Sensor** feature is turned on (default setting), the device connected to the video jack must be turned on to select it in the *Input Source* list. For more information, see "Turning Input Sensor on or off" on page 40.

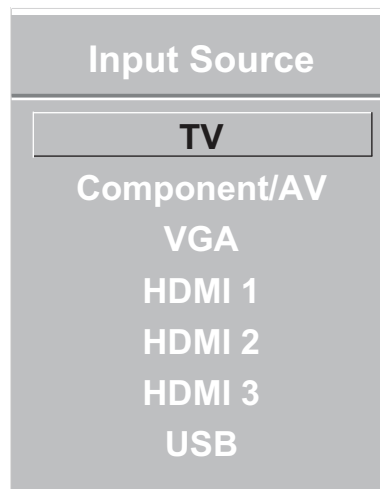

- 2 Press **▲** or **▼** to highlight a video input source, then press **ENTER**.

You can also press a Quick Launch input button to select the video input source.


- Press **TV** to select **TV**.
- Press **COMP** or **VIDEO** to select **Component/AV**.
- Press **HDMI** once to select **HDMI 1**. Press twice to select **HDMI 2**. Press three times to select **HDMI 3**.

## On-screen menu overview


### Notes

- Depending on the signal source selected, you may see different options on your screen. The following menus are shown in TV mode (except the USB menu).
- Menu items that are not selectable are grayed out.
- Menus in this manual are described in TV mode, unless otherwise indicated.
- The screens shown in this manual are for explanation purposes and may vary from the actual screens on your TV.


### PICTURE menu (TV mode)

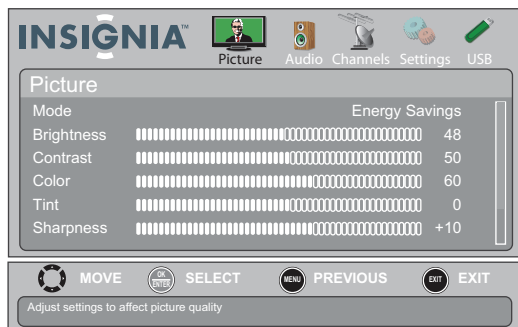

### AUDIO menu (TV mode)

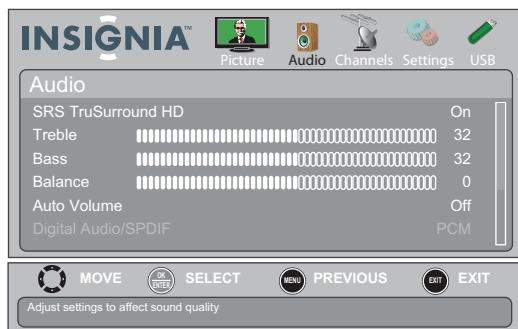

### CHANNELS menu (TV mode)

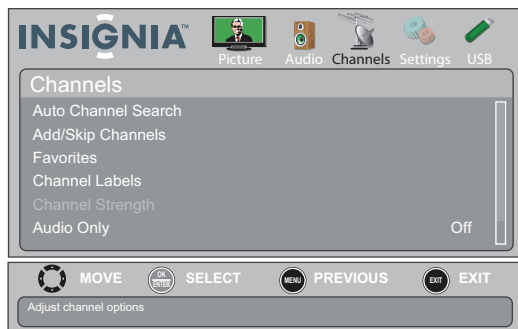


### SETTINGS menu (TV mode)



### USB menu (USB mode)



## Navigating the menus

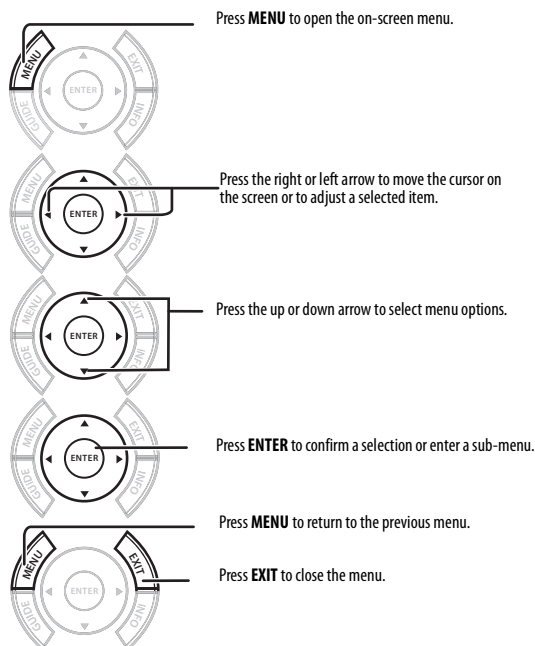

## Selecting a channel

### To select a channel:

- Press **CH**  $\wedge$  or **CH**  $\vee$  to go to the next or previous channel on the memorized channel list.
- Press the number buttons to enter the channel number you want, then wait for the channel to change or press **ENTER** to immediately change the channel.
- To select a digital sub-channel, press the number buttons to select the main digital channel, press  $\bullet$  (dot), then press the number button for the sub-channel. Wait for the channel to change, or press **ENTER** to immediately change the channel. For example, to tune to channel 5.1, press **5**,  $\bullet$  (dot), then **1**.
- Press  $\circ$  **RECALL** to go to the last viewed channel.
- Press **CH-LIST** to open the channel list, press  $\blacktriangle$  or  $\blacktriangledown$  to highlight a channel, then press **ENTER**. Hidden channels are grayed and cannot be selected. See "Hiding channels" on page 29.
- Press **FAVORITE** to open the favorite channel list, press  $\blacktriangle$  or  $\blacktriangledown$  to highlight a channel, then press **ENTER**.

#### Note

If a list has more than one page, press  $\blacktriangle$  or  $\blacktriangledown$  to scroll through the pages.

## Adjusting the volume

### To adjust the volume:

- Press **VOL +** or **VOL -** to increase or decrease the volume.
- Press **MUTE** to turn off the sound. Press **MUTE** again to turn the sound back on.

## Viewing channel information


### To view channel information:

- Press **INFO** to view an information banner. The information banner shows the current program information such as channel number, video input source, and resolution.
  - Digital channel information—Displays the channel number, station name, channel label, broadcast program name, TV rating, signal type, audio information, resolution, CC mode, current time, and current program start and end times.
  - Analog channel information—Displays channel number, channel label (if preset), signal type, audio information, and resolution.
- Press **GUIDE** to show the digital program guide, which may view a list of available programs, program times, and program summaries, depending on the information provided by the broadcaster.


## Viewing system information

### To view system information:

- 1 Press **MENU**. The on-screen menu opens.

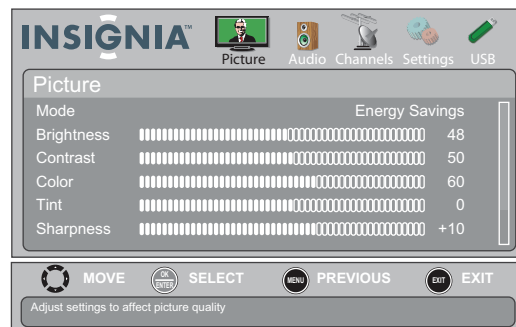

- 2 Press  $\blacktriangleleft$  or  $\blacktriangleright$  to highlight **SETTINGS**, then press  $\blacktriangledown$  or **ENTER**. The **SETTINGS** menu opens.

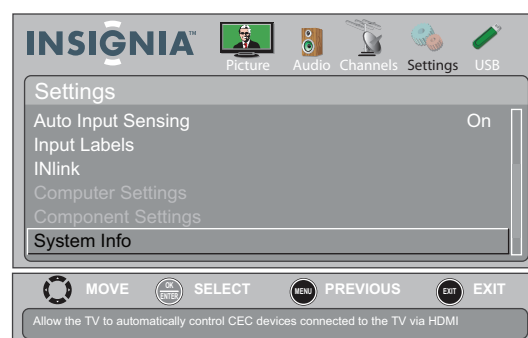


- 3 Press  $\blacktriangle$  or  $\blacktriangledown$  to highlight **System Info**, then press **ENTER**. A screen opens that displays your TV's Model Name, Firmware Version, and Open Source Notice.
- 4 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

# Adjusting the picture

## Adjusting the TV picture

### To adjust the TV picture:

- 1 Press **MENU**. The on-screen menu opens with the **PICTURE** menu displayed.

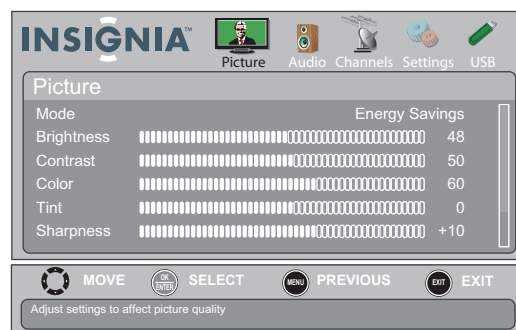

- 2 Press  $\blacktriangledown$  or **ENTER** to access the menu.


- 3 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:

- **Mode**—Selects the picture mode. You can select:
  - **Vivid**—(a bright and vivid picture). Significantly increases the contrast, brightness, and sharpness. This selection is good for video games, animation, and in bright light environments.
  - **Standard**—(a standard picture). Moderately increase the contrast, brightness, and sharpness. This selection is good for standard TV broadcasts.
  - **Energy Savings**—(the backlight brightness is decreased). Your TV has a backlight that provides light for displaying a picture. By reducing the amount of light, your TV uses less energy.
  - **Theater**—(a finely detailed picture). Adjusts the brightness and contrast and lowers the sharpness for a more realistic picture. This selection is good for watching the highest quality video such as Blu-ray Discs, DVDs, and HDTV.
  - **Game Mode**—Provides optimal performance while playing games.
  - **Custom**—(customized picture). Lets you manually adjust picture settings such as brightness, contrast, and sharpness.

#### Note

You can also press **PICTURE** to select the picture mode.

- **Brightness**—Adjusts the brightness of the dark areas of the picture.
- **Contrast**—Adjusts the brightness of the light areas of the picture.
- **Color**—Adjusts the color intensity of the picture. A low setting may make the color look faded. A high setting may make the color look artificial.
- **Tint**—Adjusts the color balance of the picture. Use this control to make skin tones look more natural.
- **Sharpness**—Adjusts the color detail of images. If you set this control too high, dark images may appear with light or white edges.
- **Advanced Video**—Opens the *PICTURE-Advanced Video* menu where you can adjust additional video options.

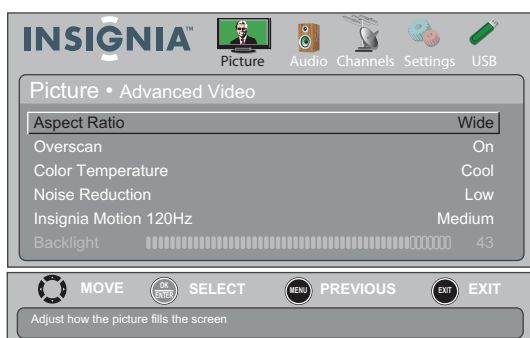

- **Aspect Ratio**—Selects the aspect ratio of the picture.

#### Aspect ratio option

#### Example

##### Normal:

Displays the original aspect ratio with vertical black bars on the left and right of the image.



##### Zoom:

Expands the image to fill the screen. The top and bottom of the image may be cropped.



##### Wide:

Use this option to view content recorded in a 16:9 (wide-screen) aspect ratio.



##### Cinema:

Stretches the image at the edges, but keeps a clear image in the center.



##### Auto:

Automatically adjusts the image based on the screen size and the TV program.




**Note:** **Auto** is only available when **Auto Zoom** in the *CHANNELS* menu is set to **On**.

#### Note

You can also press **ZOOM** to select the aspect ratio.

- **Overscan**—Adjusts the picture's reproduction rate. You can select **On** or **Off**.
- **Color Temperature**—Selects the color temperature. You can select **Cool** (to enhance the blues), **Normal**, or **Warm** (to enhance the reds).
- **Noise Reduction**—Selects the noise reduction mode to reduce picture noise (snow). You can select **Low**, **Middle**, **High**, or **Off**.
- **Insignia Motion 120Hz**—Eliminates motion blur with clear detail and smooth motion. You can select **Low** (to set the effect to minimum), **Medium** (to provide smooth and clear picture motion for normal use), **High** (to eliminate motion blur with clear detail and smooth motion), **24p Film Mode** (to provide smooth and clear picture motion from film based video), and **Off** (to disable Insignia Motion 120Hz). You cannot change this option if **Mode** is set to **Custom** or **Game**.

- **Backlight**—Sets the overall brilliance of the screen. You cannot adjust the backlight if the **Mode** is set to **Vivid**, **Energy Savings**, or **Theater**.

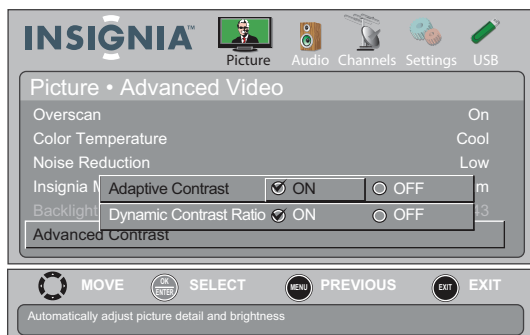


- **Advanced Contrast**—Adjusts advanced contrast options. You can select:
  - **Adaptive Contrast**—Automatically adjusts picture detail and brightness. You can select **On** or **Off**.
  - **Dynamic Contrast Ratio**—Enhances the contrast ratio between light and dark areas of the picture. You can select **On** or **Off**.

- **Reset Picture Settings**—Resets all picture settings to factory mode.
- 4 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
  - 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the computer image

### To adjust the computer image:


- 1 Make sure that your TV is in VGA mode. For more information, see “Selecting the video input source” on page 22.
- 2 Press **MENU**. The on-screen menu opens.

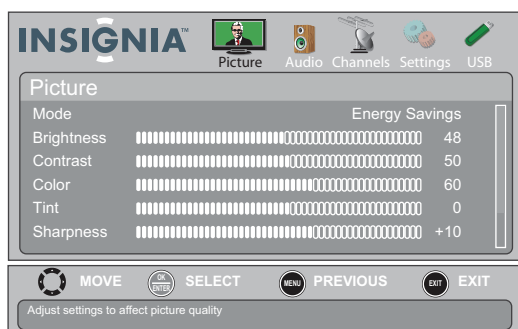

- 3 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.



- 4 Press **▲** or **▼** to highlight **Computer Settings**, then press **ENTER**. The **SETTINGS-Computer Settings** menu opens.

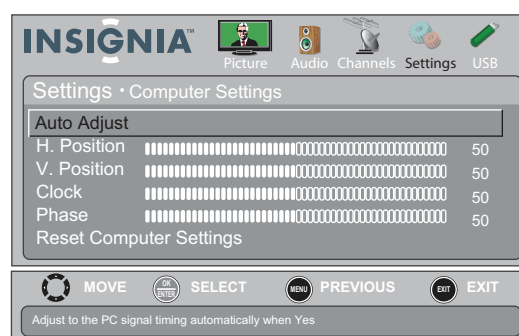

- 5 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:
  - **Auto Adjust**—Automatically adjusts the image settings such as position and phase.
  - **H. Position**—Moves the image right or left.
  - **V. Position**—Moves the image up or down.
  - **Clock**—Adjusts the sample frequency.
  - **Phase**—Adjusts the focus of stable images.
  - **Reset Computer Settings**—Resets all computer settings to factory mode.
- 6 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Adjusting component video settings

You can adjust the horizontal distortion that may occur when watching video from a component video device.


### To adjust component video settings:

- 1 Make sure you have a device connected to the **Y/Pb/Pr** (component video) jacks on the side of your TV.
- 2 Press **COMP** to select the component video device.

- 3 Press **MENU**. The on-screen menu opens.

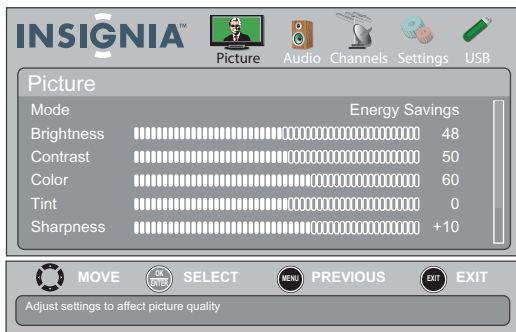

- 4 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

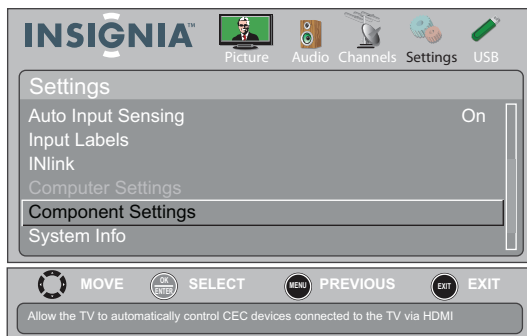


- 5 Press **▲** or **▼** to highlight **Component Settings**, then press **ENTER**.
- 6 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:
- **Phase**—Minimizes horizontal distortion.
  - **Reset Component Settings**—Resets all component video settings to factory mode.
- 7 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
- 8 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting the sound


### Adjusting sound settings

To adjust sound settings:

- 1 Press **MENU**. The on-screen menu opens.

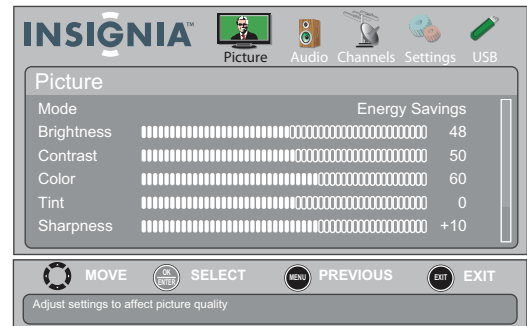

- 2 Press **◀** or **▶** to highlight **AUDIO**, then press **▼** or **ENTER**. The **AUDIO** menu opens.

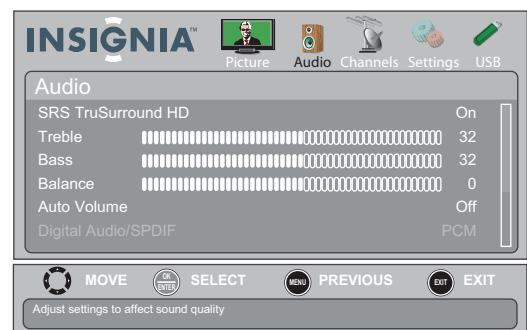

- 3 Press **▲** or **▼** to highlight an option, then press **ENTER** to access the option. You can select:
- **SRS TruSurround HD**—Creates an impressive, feature-rich surround sound experience from two speakers, complete with rich bass, high frequency detail and clear dialog.
  - **Treble**—Adjusts the high sounds.
  - **Bass**—Adjusts the low sounds.
  - **Balance**—Adjusts the balance between the left and right audio channels.

#### Note

You can quickly adjust **SRS TruSurround HD**, **Bass**, **Treble**, or **Balance** or **Reset Audio Settings** by using the **AUDIO** and **◀** or **▶** buttons on the remote control. Press **AUDIO** repeatedly to toggle between the **SRS TruSurround HD**, **Bass**, **Treble**, **Balance**, and **Reset Audio Settings** screens, then press **◀** or **▶** to adjust the option.

- **Auto Volume**—Automatically adjusts the volume so it is consistent across programs and channels.
- **Digital Audio/SPDIF**—Sends digital audio to an external audio system. You can select **PCM** (to select to output audio in 2-channel stereo), or **RAW** (to pass through the original digital audio sound).

- **Audio Language**—(Digital channels only) Selects an alternate audio language, if available.
  - **MTS/SAP**—(Analog channels only) Selects the audio mode. You can select:
    - **Mono**—Select this option if there is noise or static on weak stereo broadcasts.
    - **Stereo**—Select this option for programs broadcast in stereo.
    - **SAP**—Select this option to listen to a secondary audio program, if available.

#### Note

You can also press **MTS/SAP** one or more times to select the audio mode.


- **Reset Audio Settings**— Resets all audio settings to factory defaults.
- 4 Press **◀** or **▶** to adjust the option, or press **▲** or **▼** to select a setting.
  - 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Playing TV audio only

You can turn off the picture on your TV and listen to the program audio only.

### To play TV audio only:

- 1 Press **MENU**. The on-screen menu opens.

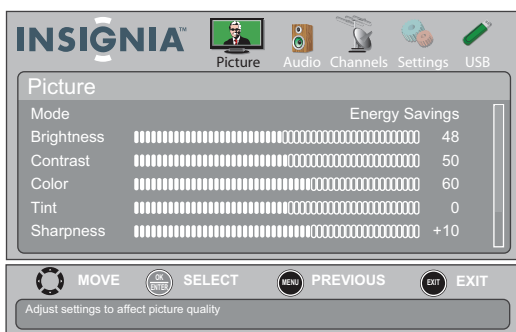

- 2 Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.



- 3 Press **▲** or **▼** to highlight **Audio Only**, then press **ENTER**.
- 4 Press **▲** or **▼** to select **On**.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

# Changing channel settings


## Automatically scanning for channels

When you scan for channels, your TV searches for channels with signals and stores the channel information in the channel list. When you press **CH ▲** or **CH ▼**, your TV goes to the next or previous channel in the channel list.


If the TV signal source changes, for example you change from an outdoor antenna to cable TV (no box), you need to scan for channels.

### To automatically scan for channels:


- 1 Press **MENU**. The on-screen menu opens.

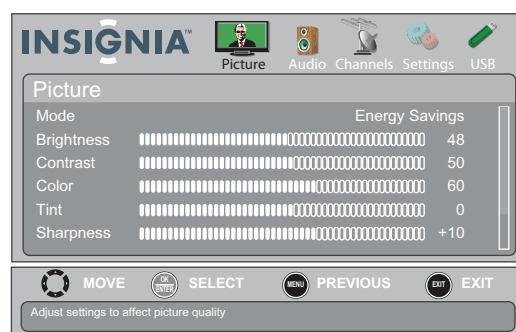

- 2 Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.

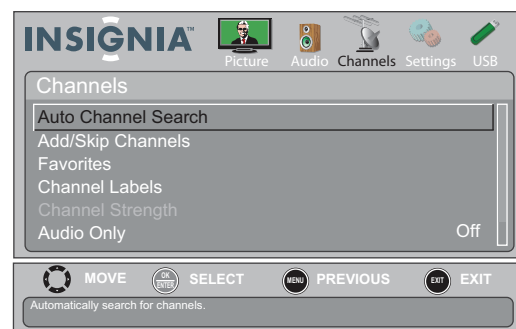

- 3 Press **▲** or **▼** to highlight **Auto Channel Search**, then press **ENTER**. The **CHANNELS-Auto Channel Search** screen opens.

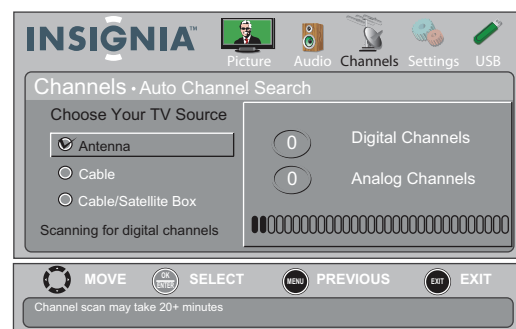

- 4 Press **▲** or **▼** to highlight **Antenna, Cable**, or **Cable/Satellite Box**, then press **ENTER**.
- If you are using an antenna for a standard or HD TV signal, select **Antenna**.
  - If your cable is connected directly to the TV (using no tuner box), select **Cable**.
  - If your cable is connected to your TV through a tuner box, select **Cable/Satellite Box**.

If you selected **Antenna** or **Cable**, your TV searches automatically for available channels in your area and stores the channel information in the channel list. This may take several minutes. While searching, the TV displays a progress report.

**Or,**

If you selected **Cable/Satellite Box**, the channel search is not necessary.

#### Note


You can press **EXIT** to stop the auto channel search, but you will need to run the auto channel search again to create a channel list.

## Hiding channels

You can hide channels in the channel list. When you press **CH ▲** or **CH ▼**, your TV skips the hidden channels. You can still tune to a hidden channel by pressing the number buttons for the channel.

### To hide channels:

- 1 Press **MENU**. The on-screen menu opens.

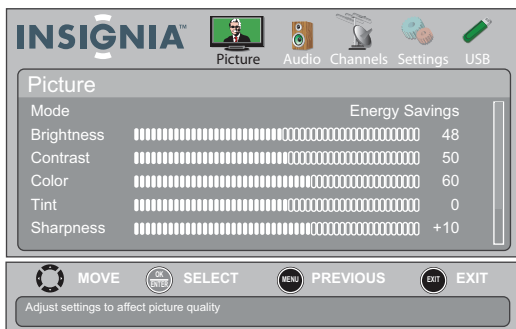

- 2 Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.



- 3 Press **▲** or **▼** to highlight **Add/Skip Channels**, then press **ENTER**. The **CHANNELS-Add/Skip Channels** screen opens.



- 4 Press **▲** **▼** **◀** or **▶** to highlight the channel you want to hide, then press **ENTER**. The check mark disappears.

#### Notes

- A channel with a check mark is not hidden. A channel with no check mark is hidden.
- If the list has more than one page, press **▲** or **▼** to scroll through the pages.
- When you press **CH-LIST**, hidden channels are grayed in the channel list and cannot be selected.


- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting up a favorite channel list


You can create a favorite channel list so you can quickly browse through your favorite channels by pressing **FAVORITE**, then selecting a channel from the favorite channel list.

### To set up a favorite channel list:

- 1 Press **MENU**. The on-screen menu opens.

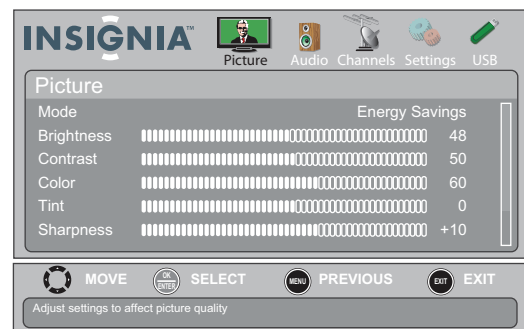

- Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.

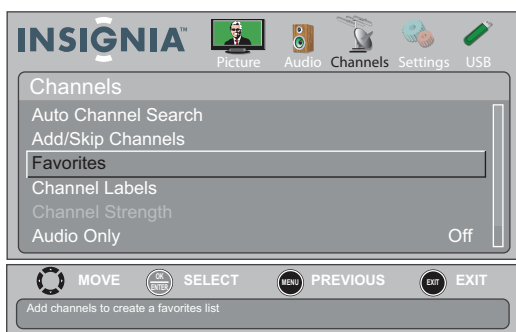

- Press **▲** or **▼** to highlight **Favorites**, then press **ENTER**. The **CHANNELS-Favorites** screen opens.



- Press **▲** **▼** **◀** or **▶** to highlight the channel you want to add to the favorites list, then press **ENTER**. A check mark appears next to the channel.

#### Notes

- To remove a channel from the favorites list, highlight the channel, then press **ENTER**. The check mark disappears and the channel is removed from the list.
- If the list has more than one page, press **▲** or **▼** to scroll through the pages.

- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Viewing a favorite channel

### To view a favorite channel:


- Press **FAVORITE**. The favorite channel list opens.
- Press **▲** or **▼** to highlight a channel, then press **ENTER**.

## Adding or changing a channel label


If a channel is not already labeled, you can label the channel to make it easier to identify. You can also relabel a channel that is already labeled.

### To add or change a channel label:

- Press **MENU**. The on-screen menu opens.

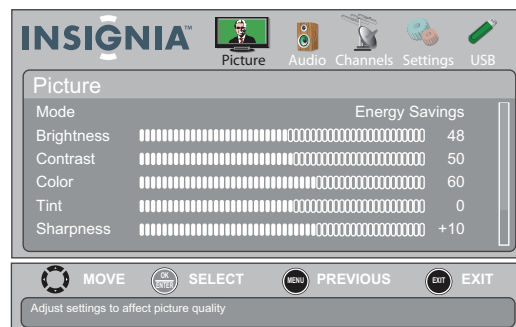

- Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.

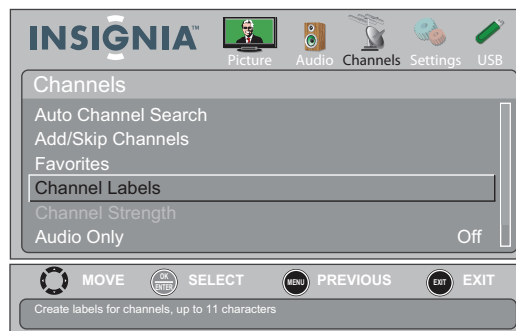

- Press **▲** or **▼** to highlight **Channel Labels**, then press **ENTER**. The **CHANNELS-Channel Labels** screen opens with the channel number field highlighted.



- Press **▲** or **▼** to select the channel you want to label, then press **►** to move to the channel label field.




- Press **◀** or **▶** to highlight a character position, then press **▲** or **▼** to change the character. If you want to enter a space, select the blank. Repeat this step to enter additional characters. You can enter as many as 11 characters.
- When you have completed the label, press **ENTER**.
- When a message appears, press **◀** or **▶** to select **Yes** (saves the label) or **No** (does not save the label), then press **ENTER**.
- Press **EXIT** to close the menu.

## Checking the digital signal strength


You can check the digital signal strength to determine if you need to adjust your antenna or digital cable input. The higher the signal strength, the less likely you are to experience picture degradation.

### To check the digital signal strength:

- Press **MENU**. The on-screen menu opens.

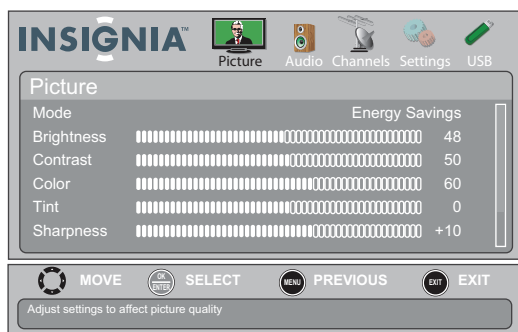

- Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.

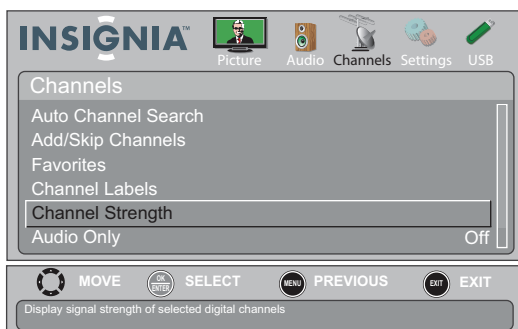

- Press **▲** or **▼** to highlight **Channel Strength**, then press **ENTER**. The **Channel Strength** screen opens showing the signal strength meter.




- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Auto Zoom on or off

When Auto Zoom is turned on, your TV automatically adjusts the aspect ratio based on the screen size and the aspect ratio of the TV program.

### To turn Auto Zoom on or off:

- Press **MENU**. The on-screen menu opens.

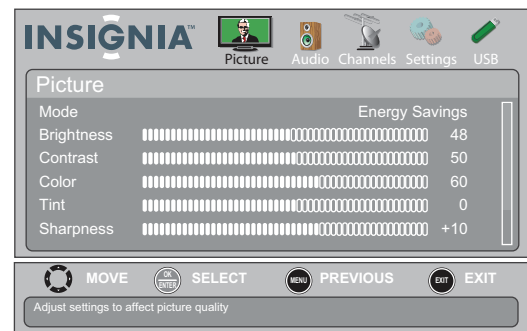

- Press **◀** or **▶** to highlight **CHANNELS**, then press **▼** or **ENTER**. The **CHANNELS** menu opens.



- Press **▲** or **▼** to highlight **Auto Zoom**, then press **ENTER**.
- Press **▲** or **▼** to select **On** or **Off**.
- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Setting parental controls

### Setting or changing the password

Parental controls let you prevent your children from watching inappropriate material on TV. When set, parental controls read the rating of the program (with some exceptions, such as news and sports) and deny access to programs that exceed the ratings level you select. To watch programs that exceed the selected rating, you must enter a password.

#### To set or change the password:


- 1 Press **MENU**. The on-screen menu opens.

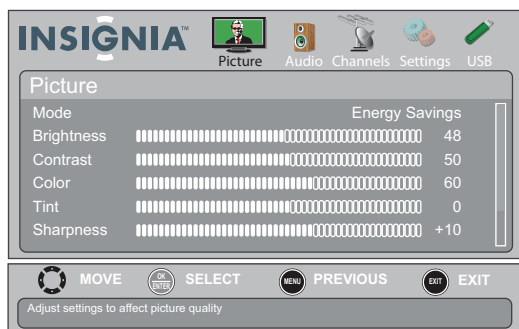

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens with **Parental Controls** highlighted.



- 3 Press **ENTER**. The **Enter Password** screen opens.

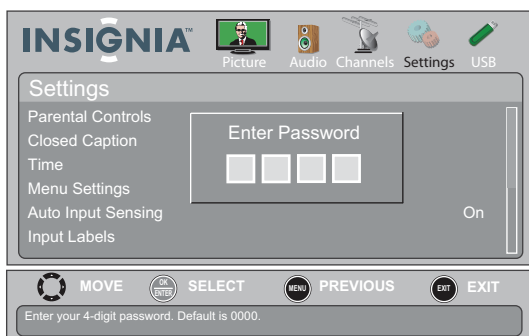

- 4 Press the number buttons to enter the four-digit password. The default password is **0000**. You should change the password to a number you can remember. The **Parental Controls** menu opens.



- 5 Press **▲** or **▼** to highlight **Change Password**, then press **ENTER**. The password entry screen opens.
- 6 Press the number buttons to enter a password, then enter the password again. The **Parental Controls** menu opens again.

#### Note

If you forget your password, enter **9999**.


- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

### Locking control buttons

When the button lock is turned **On**, the buttons on the side of your TV are locked and you can only operate your TV using the remote control.

#### To lock control buttons:


- 1 Press **MENU**. The on-screen menu opens.

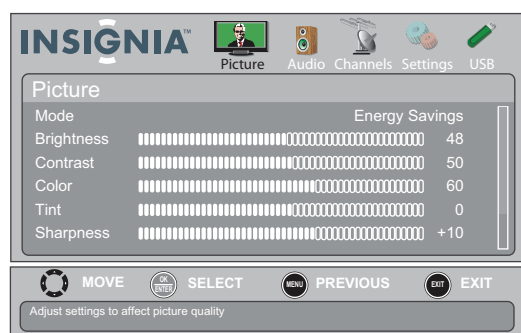


- Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens with **Parental Controls** highlighted.



- Press **ENTER**. The *Enter Password* screen opens.

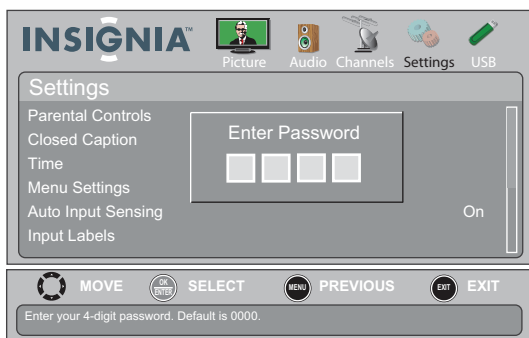

- Press the number buttons to enter the four-digit password. The **SETTINGS-Parental Controls** menu opens with **Button Lock** highlighted.

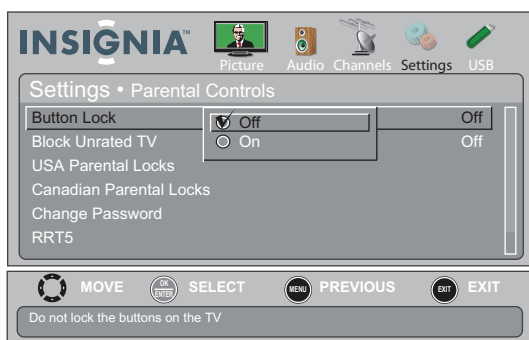


- Press **ENTER**.
- Press **▲** or **▼** to select **On** (locks the buttons) or **Off** (unlocks the buttons).
- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Blocking unrated TV

To block unrated TV:


- Press **MENU**. The on-screen menu opens.

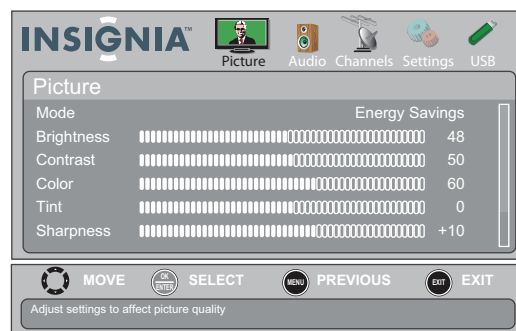


- Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens with **Parental Controls** highlighted.



- Press **ENTER**. The *Enter Password* screen opens.

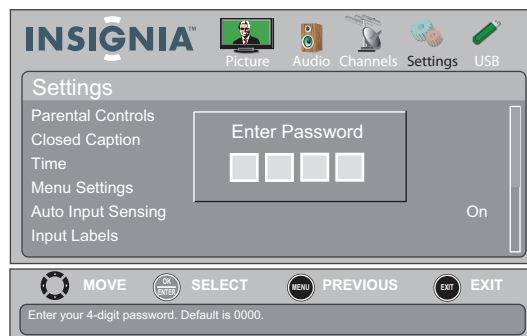

- Press the number buttons to enter the four-digit password. The **SETTINGS-Parental Controls** menu opens.

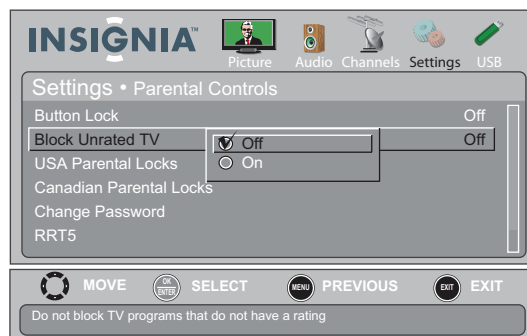


- 5 Press **▲** or **▼** to highlight **Block Unrated TV**, then press **ENTER**.
- 6 Press **▲** or **▼** to select **On** (to block unrated TV) or **Off** (to unblock unrated TV).
- 7 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Setting parental control levels

You can set parental controls for the U.S. and Canada.

### To set parental control levels:


- 1 Press **MENU**. The on-screen menu opens.

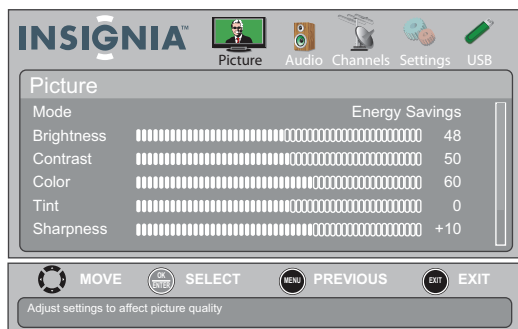

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens with **Parental Controls** highlighted.



- 3 Press **ENTER**. The *Enter Password* screen opens.

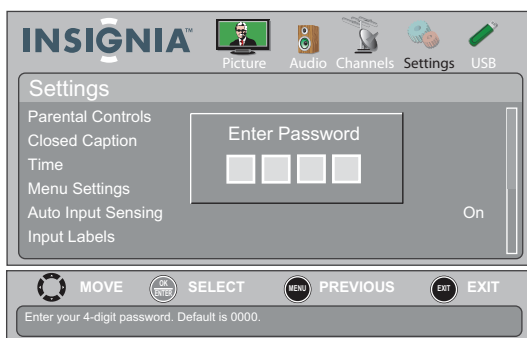


- 4 Press the number buttons to enter the four-digit password. The **SETTINGS-Parental Controls** menu opens.



- 5 Press **▲** or **▼** to highlight **USA Parental Locks**, then press **ENTER**. (To set Canadian ratings, select **Canadian Parental Locks**.)

### USA Parental Locks

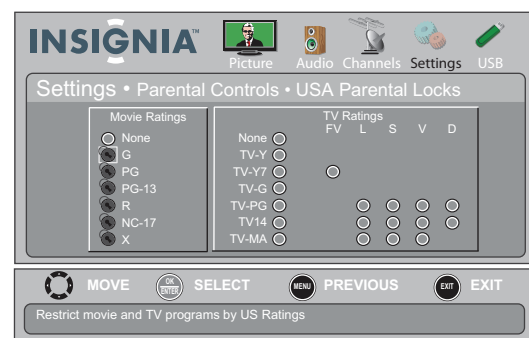

### Canadian Parental Locks



- 6 Press **◀** or **▶** to highlight:
  - **Movie Ratings** or **TV Ratings** for USA ratings.
  - **English Rating** or **French Rating** for Canadian ratings.
- 7 Press **▲** or **▼** to select the rating. If a rating has sub-ratings, press **◀** or **▶** to highlight a sub-rating.

### Note

When you block a rating, that rating and all higher ratings are blocked.

- 8 Press **ENTER** to confirm. A lock symbol appears when a rating is blocked.

- 9 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

#### U.S. TV ratings

NONE	Not rated
TV-Y	All children
TV-Y7	Children over seven years of age
TV-G	General audiences
TV-PG	Parental guidance suggested
TV-14	Parents strongly cautioned
TV-MA	Mature audiences only

Some of the age-based TV Parental Guidelines ratings also have content-based ratings.

#### U.S. TV content ratings

FV	Fantasy violence
L	Adult language
S	Sexual situations
V	Violence
D	Sexually suggestive dialog

#### U.S. movie (MPAA) ratings

None	Movie not rated
G	General audiences
PG	Parental guidance suggested
PG-13	Suitable for children 13 and older
R	Parental guidance suggested for children under 17
NC-17	Not suitable for children under 17
X	Adults only

#### Canadian English ratings

E	Exempt programming
C	Children
C8+	Children over 8 years old
G	General audiences
PG	Parental guidance
14+	Over 14 years old
18+	Adult programming

#### Canadian French ratings


E	Exempt programming
G	General audiences
8ans+	Over 8 years old
13ans+	Over 13 years old
16ans+	Over 16 years old
18ans+	Adult programming

## Downloading rating information

You can download rating information to use when setting parental controls.

### To download rating information:


- 1 Press **MENU**. The on-screen menu opens.

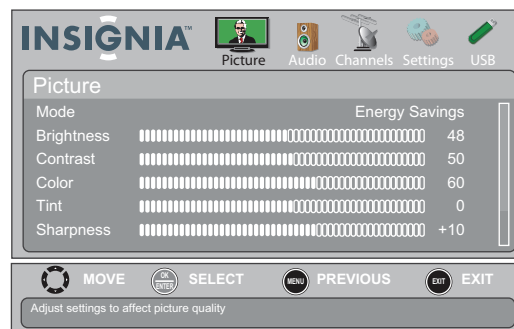

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens with **Parental Controls** highlighted.



- 3 Press **ENTER**. The *Enter Password* screen opens.

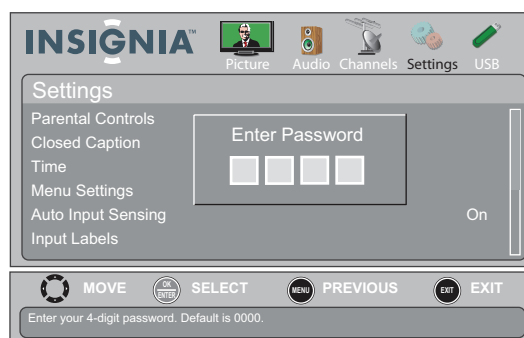

- Press the number buttons to enter the four-digit password. The *SETTINGS-Parental Controls* menu opens.



- Press **▲** or **▼** to highlight **RRT5**, then press **ENTER**.

If the program is broadcast with RRT5 rating information, the information is downloaded automatically and can be used for parental controls.


- To reset RRT5 information to factory mode, press **▲** or **▼** to highlight **Reset RRT5**, then press **ENTER**. A box opens. Follow the on-screen instructions.
- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using closed captioning


### Turning closed captioning on or off

To turn closed captioning on or off:


- Press **MENU**. The on-screen menu opens.

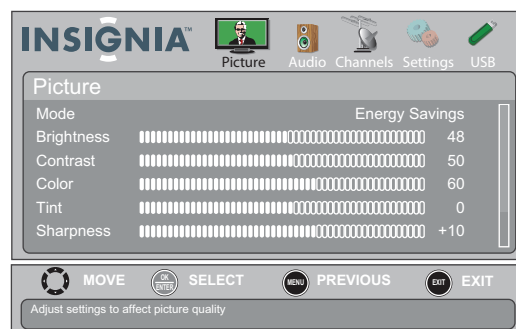

- Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The *SETTINGS* menu opens.

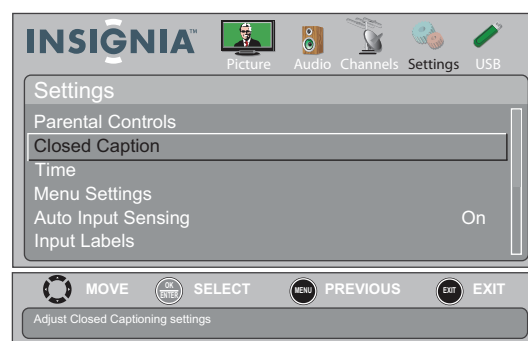

- Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The *SETTINGS-Closed Caption* menu opens.

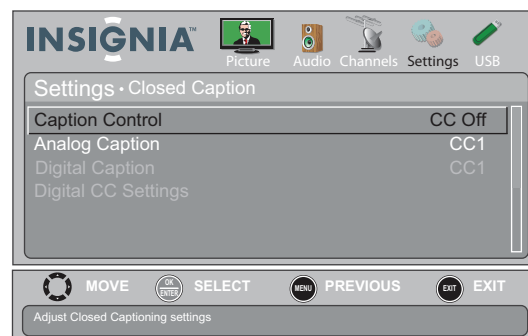

- Press **▲** or **▼** to highlight **Caption Control**, then press **ENTER**. A menu opens.
- Press **▲** or **▼** to select **CC Off** (turns off closed captioning), **CC On** (turns on closed captioning), or **CC on When Mute** (turns on closed captioning when the sound is muted).
- Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


#### Note

You can also press **CCD** to turn closed captioning on or off.


## Selecting the analog closed captioning mode

To select the analog closed captioning mode:


- 1 Press **MENU**. The on-screen menu opens.

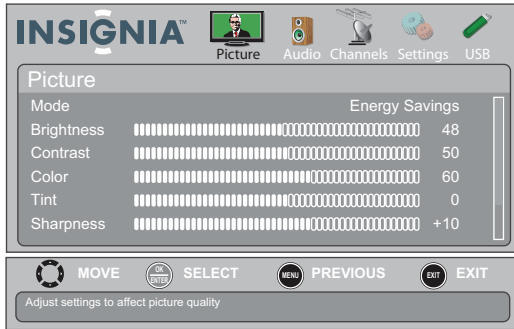

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

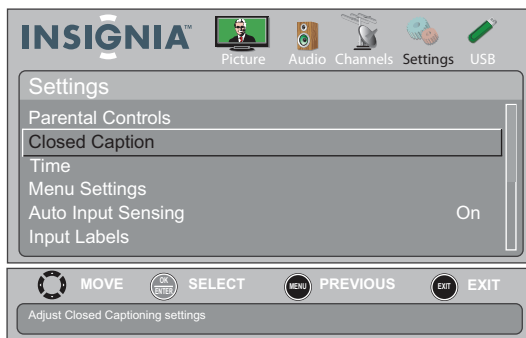

- 3 Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The **SETTINGS-Closed Caption** menu opens.

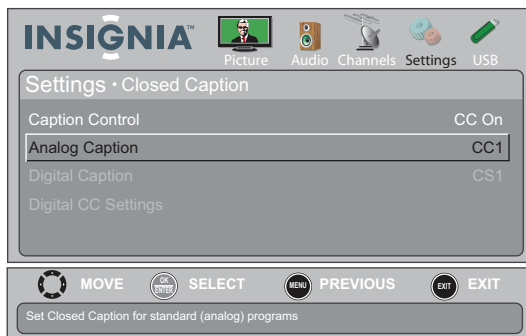

- 4 Press **▲** or **▼** to highlight **Analog Caption**, then press **ENTER**. A menu opens.

- 5 Press **▲** or **▼** to select an analog caption setting. You can select:


- **CC1** through **CC4**—Closed captioning appears in a small banner across the bottom of the screen. **CC1** is usually the “printed” version of the audio. **CC2** through **CC4** display content provided by the broadcaster.
- **Text1** through **Text4**—Closed captioning that covers half or all of the screen. **Text1** through **Text4** display content provided by the broadcaster.

- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.


## Customizing digital closed captioning styles

To customize digital closed captioning styles:


- 1 Press **MENU**. The on-screen menu opens.

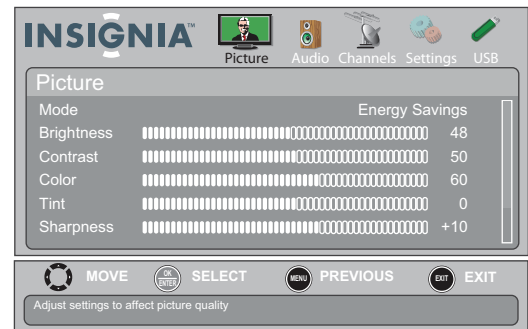

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

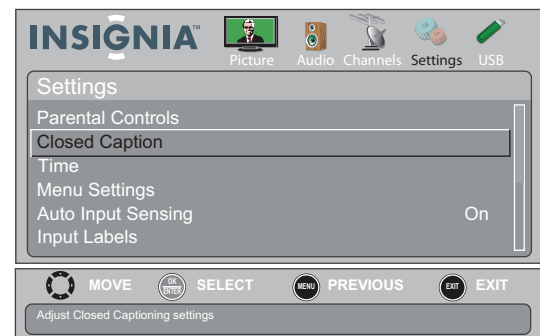

- 3 Press **▲** or **▼** to highlight **Closed Caption**, then press **ENTER**. The **SETTINGS-Closed Caption** menu opens.

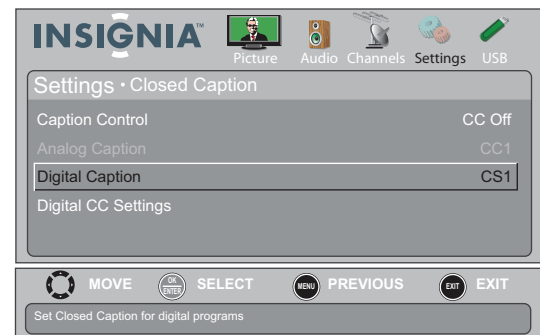


- 4 Press **▲** or **▼** to highlight **Digital Caption**, then press **ENTER**. A menu opens.

- 5 Press **▲** or **▼** to highlight a digital caption setting, then press **ENTER**. You can select **CS1** through **CS6** or **CC1** through **CC4**.
- 6 Press **MENU** to return to the previous menu, press **▲** or **▼** to highlight **Digital CC Settings**, then press **ENTER**. The *Digital CC Settings* menu opens with **Style** highlighted.
- 7 Press **ENTER**, then press **▲** or **▼** to select **Custom**.
- 8 Press **▲** or **▼** to highlight an option, then press **ENTER**. You can select:
  - **Size**—Selects the font size.
  - **Font**—Selects the font style.
  - **Text Color**—Selects the color for the words.
  - **Text Opacity**—Selects the opacity level for the words.
  - **Background Color**—Selects the color for the background.
  - **Background Opacity**—Selects the opacity level for the background.
  - **Edge Effect**—Selects the edge style.
  - **Edge Color**—Selects the edge color.
- 9 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

- 3 Press **▲** or **▼** to highlight **Time**, then press **ENTER**. The *SETTINGS-Time* menu opens.



- 4 Press **▲** or **▼** to highlight **Date/Time**, then press **ENTER**. The *SETTINGS-Time-Date/Time* menu opens.

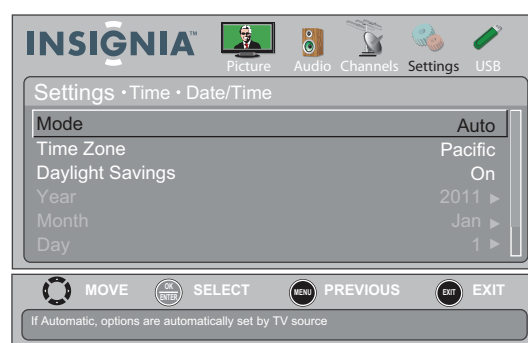


- 5 Press **▲** or **▼** to highlight **Mode**, then press **ENTER**. A menu opens.
- 6 Press **▲** or **▼** to highlight **Manual** (to set the options manually) or **Auto** (the options are automatically set by the TV signal source).
- 7 Press **ENTER** to close the menu.
- 8 Press **▲** or **▼** to highlight **Time Zone**, then press **ENTER**. The *SETTINGS-Time-Time Zone* menu opens.
- 9 Press **▲** or **▼** to select your time zone. You can select **Newfoundland, Atlantic, Eastern, Central, Mountain, Pacific, Alaska, or Hawaii**.
- 10 If your viewing area observes daylight savings time, press **▲** or **▼** to highlight **Daylight Savings**, then press **ENTER**.
- 11 Press **▲** or **▼** to select **On** or **Off**, then press **ENTER** to close the menu.
- 12 If you selected **Manual** for **Mode**:
  - Press **▲** or **▼** to highlight **Year**, **Month**, or **Day**, then press **◀** or **▶** to adjust the setting.
  - Press **▲** or **▼** to highlight **Time**, press **◀** or **▶** to the hour, minute, or AM/PM field, then press **▲** or **▼** to adjust the setting.
- 13 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Adjusting time settings


### Setting the clock

#### To set the clock:

- 1 Press **MENU**. The on-screen menu opens.

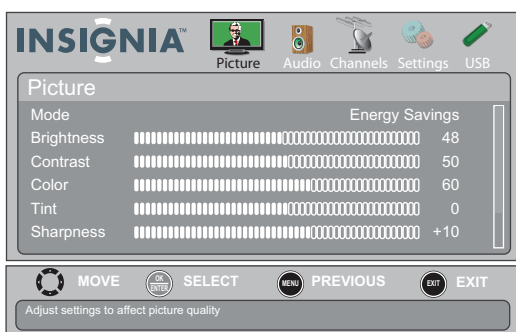

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The *SETTINGS* menu opens.

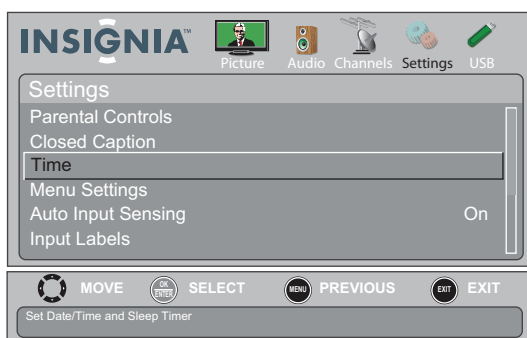


## Setting the sleep timer


You can specify the amount of time before your TV automatically turns off.

### To set the sleep timer:


- 1 Press **MENU**. The on-screen menu opens.

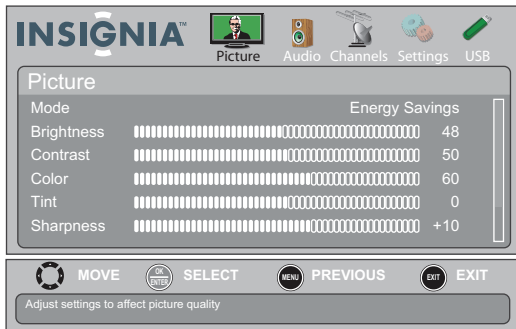

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

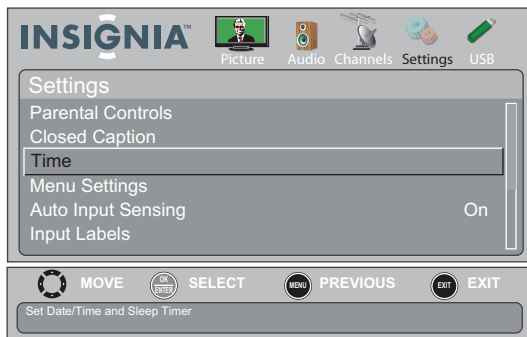

- 3 Press **▲** or **▼** to highlight **Time**, then press **ENTER**. The **SETTINGS-Time** menu opens.

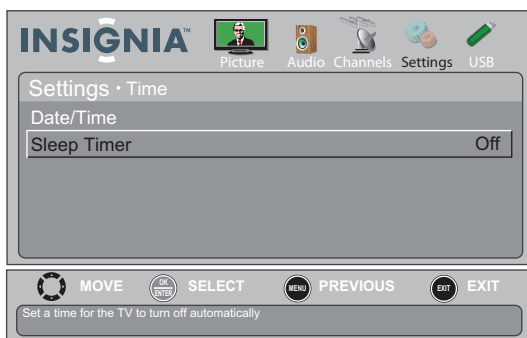

- 4 Press **▲** or **▼** to highlight **Sleep Timer**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select the amount of time before your TV turns off automatically. To turn off the sleep timer, select **Off**.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

#### Note


You can also press **SLEEP** to set the sleep timer.

## Adjusting menu settings


### Selecting the menu language

#### To select the menu language:

- 1 Press **MENU**. The on-screen menu opens.

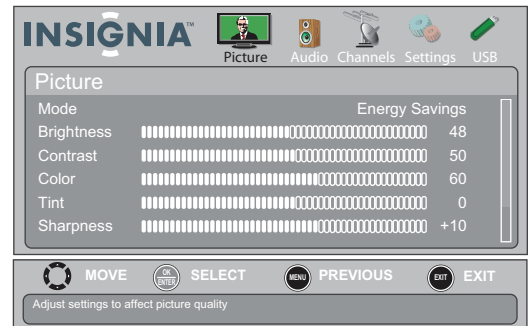

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

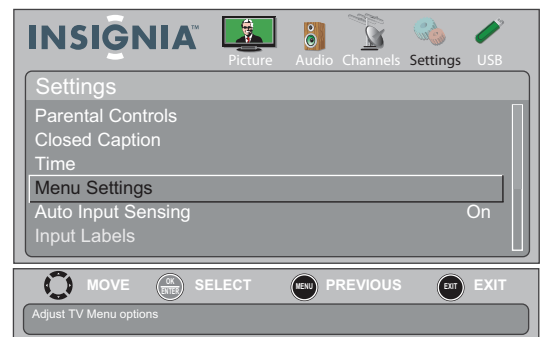

- 3 Press **▲** or **▼** to highlight **Menu Settings**, then press **ENTER**. The **SETTINGS-Menu Settings** menu opens.




- 4 Press **▲** or **▼** to highlight **Language**, then press **ENTER**. A language menu opens.
- 5 Press **▲** or **▼** to highlight **English**, **Français**, or **Español**, then press **ENTER** to close the menu.
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Input Sensor on or off

When the Input Sensor feature is turned on, your TV automatically detects which video jacks have devices connected to them. Your TV uses this information to determine what options you can select on the *Input Source* list when you press **INPUT**.

**To turn Input Sensor on or off:**

- 1 Press **MENU**. The on-screen menu opens.

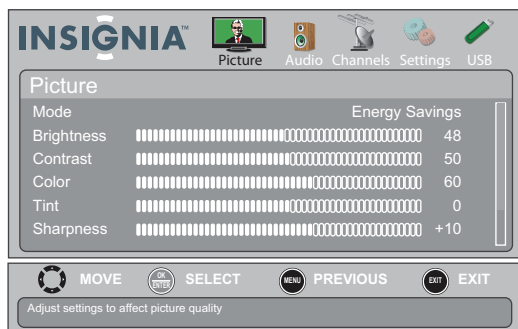

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The *SETTINGS* menu opens.




- 3 Press **▲** or **▼** to highlight **Auto Input Sensing**, then press **ENTER**. A menu opens.
- 4 Press **▲** or **▼** to select **On** (to activate the input sensor) or **Off** (to deactivate the input sensor).
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Labeling an input source

**To label an input source:**

- 1 Press **MENU**. The on-screen menu opens.

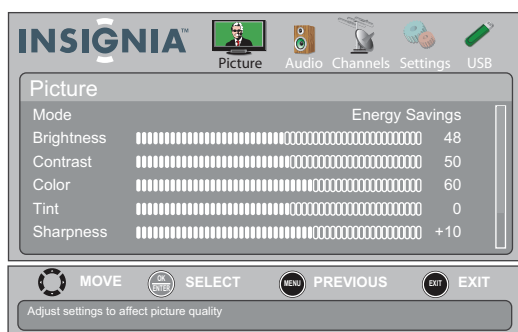

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The *SETTINGS* menu opens.



- 3 Press **▲** or **▼** to highlight **Input Labels**, then press **ENTER**. The *SETTINGS-Input Labels* screen opens with the input source field highlighted.



- 4 Press **▲** or **▼** to select the input source you want to label, then press **▶** to move to the custom label field.



- 5 Press **▲** or **▼** to select a preset label, then go to Step 7.

OR

If you want to create your own label, press **▲** or **▼** to select **Custom**, then go to Step 6.

- 6 Press **◀** or **▶** to highlight a character position, then press **▲** or **▼** to select the character. If you want to enter a space, select the blank. Repeat this step to enter additional characters. You can enter as many as 11 characters.
- 7 When you have completed the label, press **ENTER**.

- 8 When a message appears, press ◀ or ▶ to select **Yes** (saves the label) or **No** (does not save the label), then press **ENTER**.

The next time you press **INPUT**, your label appears in the *Input Source* list.


- 9 Press **EXIT** to close the menu.

## Restoring settings to the defaults

When you restore default settings, all the settings you have customized (except the password and parental rating) are reset.

### To restore settings to the defaults:

- 1 Press **MENU**. The on-screen menu opens.

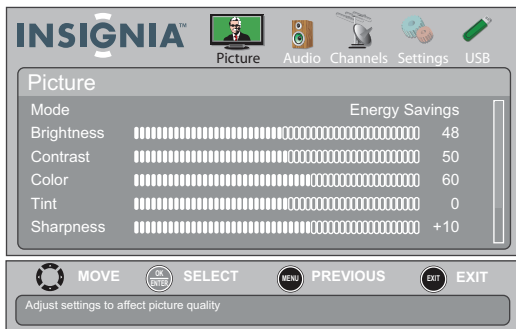

- 2 Press ◀ or ▶ to highlight **SETTINGS**, then press ▼ or **ENTER**. The **SETTINGS** menu opens.



- 3 Press ▲ or ▼ to highlight **Reset to Default**, then press **ENTER**. A confirmation box opens.
- 4 Press ◀ or ▶ to select **Yes** (to reset) or **No** (to not reset), then press **ENTER**.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using INlink

INlink lets you control HDMI CEC-compatible devices connected to the HDMI jacks on your TV using the remote control that came with your TV. To use INlink, you must set the **INlink Control** option on the **SETTINGS-INlink** menu to **On**.


### Notes

- HDMI cables must be used to connect HDMI CEC-compatible devices to your TV.
- The connected device's HDMI CEC feature must be turned on.
- If you connect an HDMI device that is not HDMI CEC-compatible, the **INlink Control** option does not work.


## Turning INlink on or off

### To turn INlink on or off:

- 1 Press **MENU**. The on-screen menu opens.

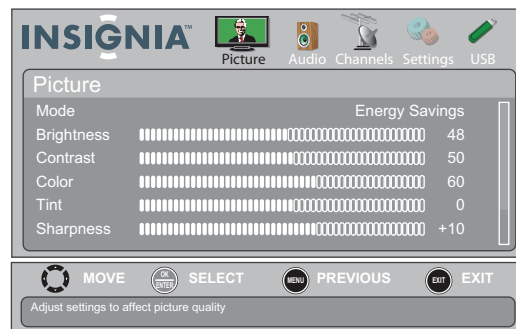

- 2 Press ◀ or ▶ to highlight **SETTINGS**, then press ▼ or **ENTER**. The **SETTINGS** menu opens.

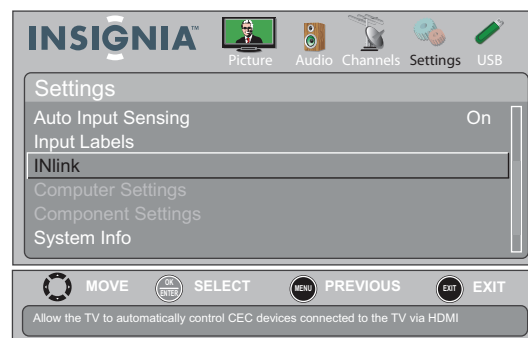

- 3 Press ▲ or ▼ to highlight **INlink**, then press **ENTER**. The **SETTINGS-INlink** menu opens.




- 4 Press ▲ or ▼ to highlight **INlink Control**, then press **ENTER**. A menu opens.
- 5 Press ▲ or ▼ to highlight **On** (to turn on the **INlink Control** option) or **Off** (to turn off the **INlink Control** option).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Device Auto Power Off on or off


When INlink is turned on, **Device Auto Power Off** turns off HDMI CEC devices when you turn off your TV.

**To turn Device Auto Power Off on or off:**

- 1 Press **MENU**. The on-screen menu opens.

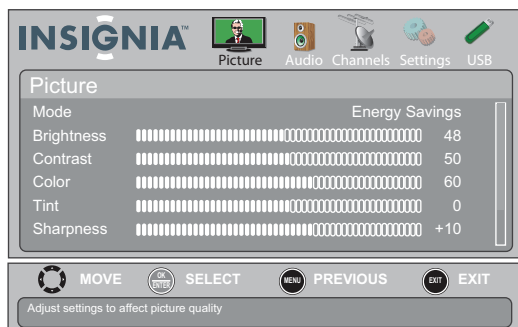

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

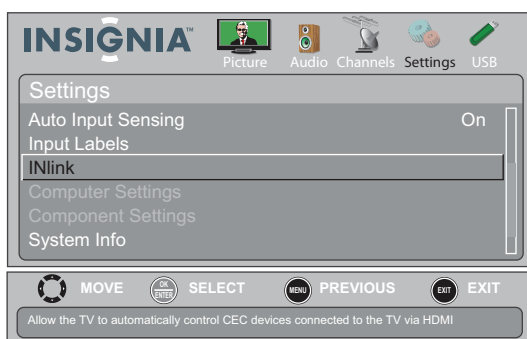

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The **SETTINGS-INlink** menu opens.




- 4 Press **▲** or **▼** to highlight **Device Auto Power Off**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select **On** (turns off the connected device when you turn off your TV) or **Off** (does not turn off the connected device when you turn off your TV).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning TV Auto Power On on or off


When INlink is turned on and you turn on an HDMI CEC device, **TV Auto Power On** turns on your TV automatically.

**To turn TV Auto Power On on or off:**

- 1 Press **MENU**. The on-screen menu opens.

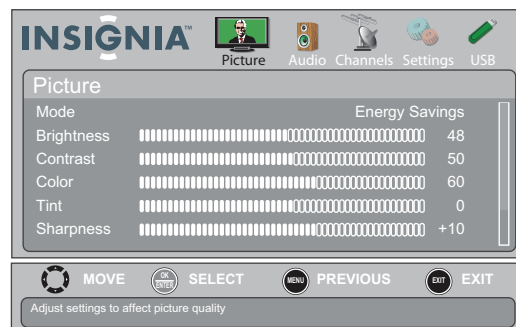

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

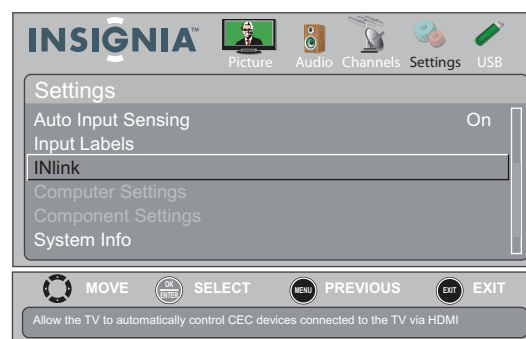

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The **SETTINGS-INlink** menu opens.




- 4 Press **▲** or **▼** to highlight **TV Auto Power On**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select **On** (turns on your TV when you turn on the connected device) or **Off** (does not turn on your TV when you turn on the connected device).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Turning Audio Receiver on or off


When INlink is turned on and you have connected an audio receiver to your TV, turning on **Audio Receiver** lets you use your TV's remote control to control the volume on the audio receiver.

### To turn Audio Receiver on or off:

- 1 Press **MENU**. The on-screen menu opens.

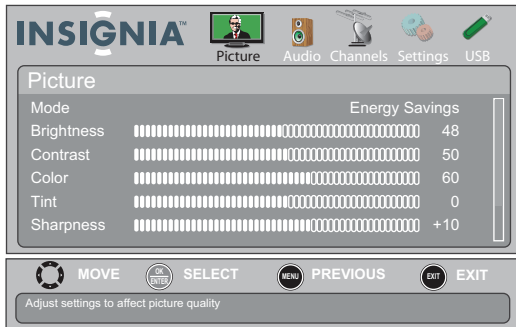

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

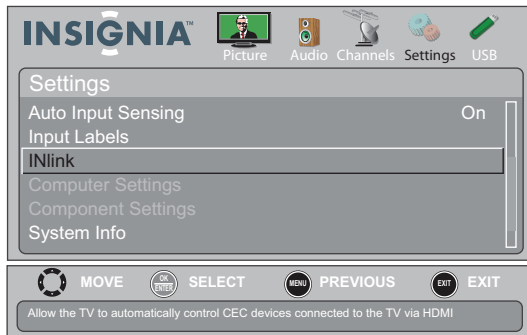

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The **SETTINGS-INlink** menu opens.




- 4 Press **▲** or **▼** to highlight **Audio Receiver**, then press **ENTER**. A menu opens.
- 5 Press **▲** or **▼** to select **On** (your TV's remote control controls the connected audio receiver's volume) or **Off** (your TV's remote control does not control the connected audio receiver's volume).
- 6 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Displaying a list of INlink-compatible (HDMI CEC) devices


You can display a list of HDMI CEC devices that are connected to your TV.

### To display a list of INlink-compatible (HDMI CEC) devices:

- 1 Press **MENU**. The on-screen menu opens.

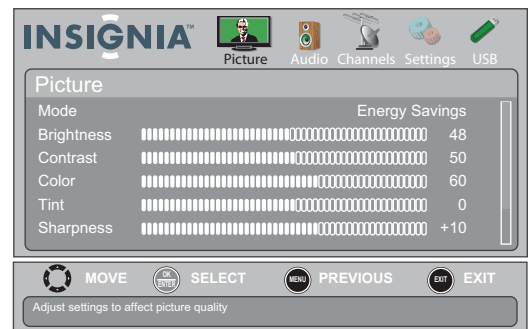

- 2 Press **◀** or **▶** to highlight **SETTINGS**, then press **▼** or **ENTER**. The **SETTINGS** menu opens.

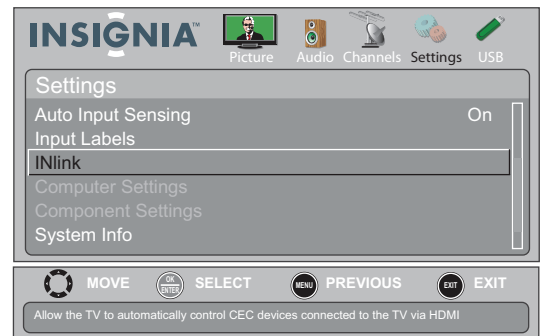

- 3 Press **▲** or **▼** to highlight **INlink**, then press **ENTER**. The **SETTINGS-INlink** menu opens.



- 4 Press **▲** or **▼** to highlight **INlink Device Lists**, then press **ENTER**. A list of the HDMI CEC-compatible devices you have connected appears.
- 5 Press **MENU** to return to the previous menu, or press **EXIT** to close the menu.

## Using a USB flash drive

You can connect a USB flash drive to your TV to view compatible JPEG pictures.

### Notes

- Never remove the USB flash drive or turn off your TV while viewing JPEG pictures.
- The JPEG picture viewer only supports JPEG format images (with ".jpg" file extensions) and not all JPEG files are compatible with the TV.

### Switching to USB mode

If you have a USB flash drive connected to your TV and you change video input sources, you can switch back to USB mode without removing and reconnecting the flash drive.

#### To switch to USB mode:

- 1 Press **INPUT**. The *Input Source* list opens.
- 2 Press **▲** or **▼** to highlight **USB**, then press **ENTER**.


### Note

When you connect a USB flash drive to your TV, your TV automatically detects the device and displays the message "Show Photos with USB Flash Drive?" Select **Yes** to switch to USB mode or select **No** to stay in the current mode.

### Browsing photos

#### To browse photos:

- 1 In USB mode, press **MENU**. The on-screen menu opens.

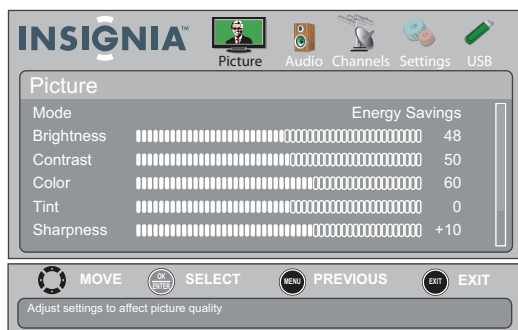


- 2 Press **◀** or **▶** to highlight **USB**, then press **▼** or **ENTER**. The *USB* menu opens with **Photos** highlighted.



- 3 Press **ENTER**. The *USB-Photos* menu opens



- 4 Press **▲** or **▼** to highlight **Browse Photos**, then press **ENTER**. The screen displays folder names and photo files stored on the USB flash drive in a thumbnail index with the first photo or folder highlighted. A control bar appears at the bottom of the screen.

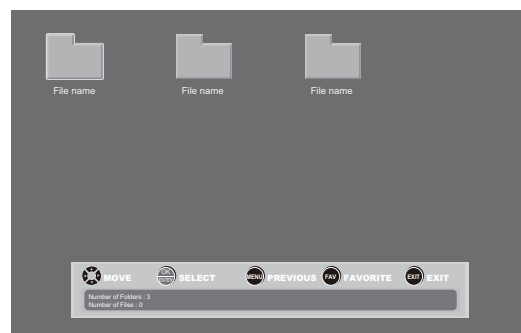

- 5 To navigate the thumbnail index screen, press:
  - **▲ ▼ ◀ ▶** to browse through the files and folders.
  - **ENTER** to view a highlighted photo full-screen or open a highlighted folder.
  - **MENU** to open the *USB* menu.
  - **FAVORITE** to add or remove a photo from the favorite photo list. A heart appears on a photo that has been added to the favorite photo list.
  - **EXIT** to clear the control bar.

To navigate on the photo screen, press:


- ◀ or ▲ to go to the previous photo.
- ▶ or ▼ to go to the next photo.
- **ENTER** to rotate the photo clockwise.
- **ZOOM** one or more times to enlarge the image by 2x or 4x or to select **Fill** (image fills the screen). You can press ▲ ▼ ◀ or ▶ to pan the photo.
- **EXIT** to return to the thumbnail index.
- **MENU** to go to the *USB* menu.

## Viewing favorite photos

After you created your favorite photo list, you can browse among your favorite photos quickly.

**To view favorite photos:**

- 1 In USB mode, press **MENU**. The on-screen menu opens.

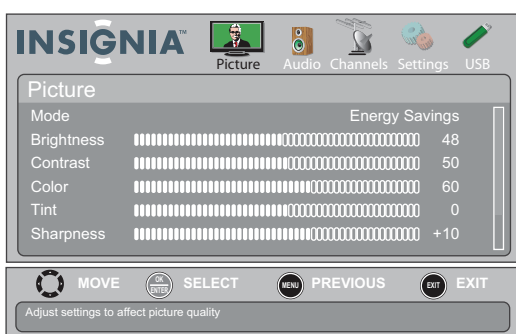

- 2 Press ◀ or ▶ to highlight **USB**, then press ▼ or **ENTER**. The *USB* menu opens with **Photos** highlighted.



- 3 Press **ENTER**. The *USB-Photos* menu opens.



- 4 Press ▲ or ▼ to highlight **Favorite Photos**, then press **ENTER**. A thumbnail index of your favorite photos opens with a control bar at the bottom of the screen.




You select photos and navigate on the photo screen in the same way you do when you are browsing through photos. For more information, see "Browsing photos" on page 44.

## Viewing photos in a slideshow

You can view all the photos on a USB flash drive or just your favorite photos.

**To view photos in a slideshow:**

- 1 In USB mode, press **MENU**. The on-screen menu opens.

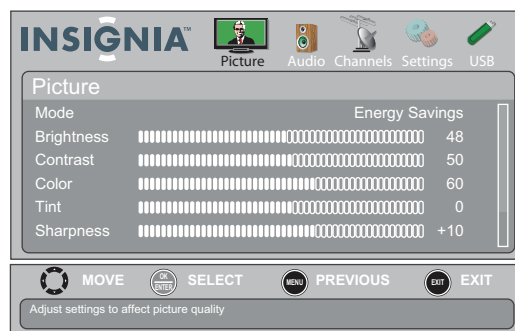

- 2 Press ◀ or ▶ to highlight **USB**, then press ▼ or **ENTER**. The *USB* menu opens with **Photos** highlighted.



- 3 Press **ENTER**. The *USB-Photos* menu opens.



- 4 If you want to view all the photos on the USB flash drive, press **▲** or **▼** to highlight **Browse Photos**, press **ENTER**, then press **MENU** to return to the *USB-Photos* menu.

OR

If you want to view your favorite photos only, press **▲** or **▼** to highlight **Favorite Photos**, press **ENTER**, then press **MENU** to return to the *USB-Photos* menu.


- 5 Press **▲** or **▼** to highlight **View Slideshow**, then press **ENTER**. A slideshow starts. If you selected **Browse Photos** mode, all your pictures are included in the slideshow. If you selected **Favorite Photos** mode, only your favorite photos are included in the slideshow.
- 6 To control in the slideshow, press:
- **ENTER** to pause or start the slideshow.
  - **EXIT** to exit the slideshow and return to thumbnail index.
  - **MENU** to go to the *USB* menu.

## Customizing slideshow settings


You can customize the slideshow settings, including **Repeat**, **Shuffle**, **Speed**, and **Transition**.

### To customize slideshow settings:

- 1 In USB mode, press **MENU**. The on-screen menu opens.

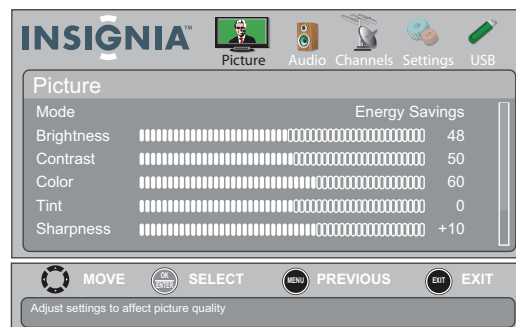

- 2 Press **◀** or **▶** to highlight **USB**, then press **▼** or **ENTER**. The *USB* menu opens with **Photos** highlighted.

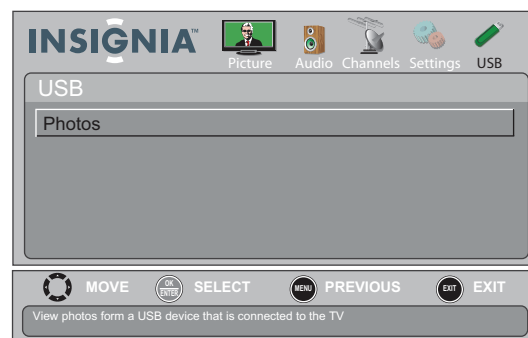

- 3 Press **ENTER**. The *USB-Photos* menu opens.



- 4 Press **▲** or **▼** to highlight **Settings**, then press **ENTER**. The *USB-Photo-Settings* menu opens.



- 5 Press **▲** or **▼** to highlight an option, then press **ENTER**. You can select:
- **Repeat**—Repeats the slideshow when it reaches the end. You can select **On** or **Off**.
  - **Shuffle**—Displays the slideshow photo in random order. You can select **On** or **Off**.
  - **Speed**—Sets the amount of time a photo is displayed before the slideshow moves to the next photo. You can select **4 Sec**, **6 Sec**, or **8 Sec**.
  - **Transition**—Selects the way photos transition when moving to the next file in the slideshow. You can select:
    - **None**—No transition effect.
    - **Fade to Black**—Fades the screen to black between photos.
    - **Vertical Wipe**—Wipes the screen from top to bottom between photos.
    - **Horizontal Wipe**—Wipes the screen from left to right between photos.
    - **Random**—Randomly selects a transition effect.
- 6 Press **EXIT** to close the menu.

## Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
- Storage temperatures are 32° to 122°F (0° to 50°C).
- Working temperatures are 41° to 104°F (5° to 40°C).
- Do not place your TV in direct sunlight or near a heat source.

### Cleaning the TV cabinet

Clean the cabinet with a soft, lint-free cloth. If the cabinet is especially dirty, moisten a soft, lint-free cloth in a weak detergent solution, squeeze the excess moisture from the cloth, then wipe the screen or cabinet with the cloth. Use a clean cloth to dry the screen or cabinet.

### Cleaning the TV screen


Clean the screen with a soft, lint-free cloth.

# Troubleshooting

## Warning

Do not try to repair your TV yourself. Contact authorized service personnel.

## Video and audio

Problem	Solution
Picture does not fill the screen. There are black bars around the picture.	<ul style="list-style-type: none"> <li>Change the aspect ratio. An increasing amount of digital TV and movies are presented in wide screen (16:9). See "Adjusting the TV picture" on page 24.</li> </ul>
No picture (screen is not lit) and no sound.	<ul style="list-style-type: none"> <li>Press  on the TV or the remote control.</li> <li>Make sure that the <b>Audio Only</b> option is set to <b>Off</b>. See "Playing TV audio only" on page 28.</li> <li>Make sure that the video cables are connected securely to your TV.</li> <li>Adjust the contrast and brightness. See "Adjusting the TV picture" on page 24.</li> <li>Make sure that the power cord is plugged in.</li> <li>Make sure that the correct video input source is selected. See "Selecting the video input source" on page 22.</li> <li>Try another channel. The station may be experiencing problems.</li> <li>Make sure that the incoming signal is compatible.</li> <li>Make sure the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>Check the closed caption settings. Some TEXT modes can block the screen.</li> </ul>
Dark, poor, or no picture (screen is lit), but sound is good.	<ul style="list-style-type: none"> <li>Try another channel. The station may be experiencing problems.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>Adjust the brightness. See "Adjusting the TV picture" on page 24.</li> <li>Make sure that the correct picture mode is selected. See "Adjusting the TV picture" on page 24.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> <li>If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> <li>Make sure that the video cables are connected securely to your TV.</li> <li>The video cable(s) you are using may be bad. Try a new set.</li> <li>Try another channel. The station may be experiencing problems.</li> </ul>

Problem	Solution
No color, dark picture, or color is not correct.	<ul style="list-style-type: none"> <li>Try another channel. The station may be experiencing problems.</li> <li>Adjust the color settings. See "Adjusting the TV picture" on page 24.</li> <li>Make sure that the video cables are connected correctly and securely to your TV.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> <li>If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> </ul>
Only snow (noise) appears on the screen.	<ul style="list-style-type: none"> <li>Try another channel. The station may be experiencing problems.</li> <li>Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> <li>If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> </ul>
Dotted lines or stripes appear on the screen.	<ul style="list-style-type: none"> <li>Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> <li>If you are using an antenna and the signal strength is low, adjust the antenna or use a highly directional outdoor antenna or set-top antenna with a built-in amplifier.</li> <li>Make sure that the video cables are connected securely to your TV.</li> <li>The video cable(s) you are using may be bad. Try a new set.</li> <li>Other devices (for example, surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>
Double images.	<ul style="list-style-type: none"> <li>Use a highly directional outdoor antenna, cable TV, or satellite TV.</li> </ul>
The picture has a few bright or dark spots.	<ul style="list-style-type: none"> <li>A few bright or dark spots on an LCD screen is normal. It does not affect the operation of this TV.</li> </ul>

Problem	Solution
Good picture, but no sound.	<ul style="list-style-type: none"> <li>• Increase the volume.</li> <li>• Make sure that the sound is not muted.</li> <li>• Disconnect the headphones.</li> <li>• Make sure that the correct audio mode is selected.</li> <li>• Make sure that the audio cables are connected correctly and securely to your TV.</li> <li>• Make sure that the antenna or cable TV is connected correctly and securely. See "Connecting a cable or satellite box" on page 11 or "Connecting an antenna or cable TV (no box)" on page 14.</li> <li>• If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> <li>• The audio cable(s) you are using may be bad. Try a new set.</li> </ul>
Poor picture	<ul style="list-style-type: none"> <li>• Make sure that the room is not too bright. Light reflecting off the screen can make the picture difficult to see.</li> <li>• If an S-VHS camera or a camcorder is connected while another connected device is turned on, the picture may be poor. Turn off one or more devices.</li> </ul>
Good sound but poor color	<ul style="list-style-type: none"> <li>• Adjust the contrast, color, and brightness settings.</li> </ul>
Audio noise	<ul style="list-style-type: none"> <li>• Other devices (for example, surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>
No output from one of the speakers	<ul style="list-style-type: none"> <li>• Adjust the audio balance. See "Adjusting sound settings" on page 27.</li> <li>• Make sure that the audio cables are connected correctly and securely to your TV.</li> </ul>
After images appear	<ul style="list-style-type: none"> <li>• Do not display a still image, such as a logo, game, or computer image, for an extended period of time. This can cause a permanent after-image to be burned into the screen. This type of damage is not covered by your warranty.</li> </ul>

## Remote control

Problem	Solution
Remote control does not work.	<ul style="list-style-type: none"> <li>• Make sure that the power cord is correctly connected to your TV and a power outlet.</li> <li>• Make sure that there are no obstructions between the remote control and the remote control sensor on the front of the TV.</li> <li>• Point the remote control directly at the remote control sensor on your TV. For the location of the remote control sensor, see "Front" on page 7.</li> <li>• The supplied batteries are wrapped tightly in clear plastic. Make sure that you have removed this plastic from the batteries.</li> <li>• Make sure that the batteries are installed correctly. See "Installing remote control batteries" on page 20.</li> <li>• Replace dead batteries with new batteries. See "Installing remote control batteries" on page 20.</li> </ul>
Trouble programming your existing universal remote control.	<ul style="list-style-type: none"> <li>• See instructions and a table of common codes in "Programming a different universal remote control" on page 52.</li> <li>• Codes are subject to change. For up-to-date codes, go to <a href="http://www.insigniaproducts.com/remotecodes">www.insigniaproducts.com/remotecodes</a></li> <li>• Replace dead batteries with new batteries. See "Installing remote control batteries" on page 20.</li> <li>• Refer to the User Guide that accompanied your universal remote control and contact the manufacturer if problems persist.</li> </ul>

## General

Problem	Solution
No power	<ul style="list-style-type: none"> <li>• Make sure that the power cord is correctly connected to your TV and a power outlet.</li> <li>• Unplug the power cord, wait 60 seconds, then plug the cord back in and turn on your TV.</li> <li>• Other devices (for example, surround sound receiver, external speakers, fans, or hair dryers) may be interfering with your TV. Try turning off one device at a time to determine which device is causing interference. Once you have determined which device is causing interference, move it further from the TV to eliminate the interference.</li> </ul>
"No signal" error message is displayed	<ul style="list-style-type: none"> <li>• Press <b>INPUT</b> and make sure that you have selected the correct input for the device or service you are trying to use.</li> <li>• If you are using a cable or satellite box, use the remote that came with that box to change channels.</li> <li>• Make sure you have the correct input selected to view channels from the cable or satellite box.</li> </ul>
After Auto Channel Search, there are no channels	<ul style="list-style-type: none"> <li>• Reception can vary by channel depending on the broadcast power level of a given station. Contact your cable or satellite TV provider.</li> <li>• Make sure the antenna or cable/satellite TV is connected securely to your TV.</li> <li>• Try replacing the cable between the antenna/cable or cable/satellite box and your TV.</li> </ul>

Problem	Solution
One or more channels do not display.	<ul style="list-style-type: none"> <li>Make sure that the channels are not blocked. See "Setting parental control levels" on page 34.</li> <li>Make sure that the channels are not hidden. The channel may have been deleted from the channel list. You can tune to the channel by pressing the number buttons or you can add the channel back to the channel list. See "Hiding channels" on page 29.</li> <li>If you are using a cable or satellite box, use the remote that came with that box to change channels.</li> <li>Make sure you have the correct input selected to view channels from the cable or satellite box.</li> <li>If you are using an antenna, the digital channel signal may be low. To check the digital channel signal strength, see "Checking the digital signal strength" on page 31.</li> </ul>
Password is lost.	<ul style="list-style-type: none"> <li>Enter <b>9999</b> to access parental controls, then set a new password. See "Setting or changing the password" on page 32.</li> </ul>
Some settings cannot be accessed.	<ul style="list-style-type: none"> <li>If a setting is grayed, the setting is not available in the current video input mode.</li> </ul>
TV cabinet creaks.	<ul style="list-style-type: none"> <li>When the TV is in use, the temperature rises naturally and may cause the cabinet to expand or contract which can cause a creaking noise. This is not a malfunction.</li> </ul>
Control buttons do not work	<ul style="list-style-type: none"> <li>Make sure that the <b>Button Lock</b> option is set to Off. See "Locking control buttons" on page 32.</li> <li>Unplug the power cord, wait a few seconds, then plug the cord back in and turn on your TV.</li> </ul>
TV keeps turning off	<ul style="list-style-type: none"> <li>Make sure that the sleep timer is not turned on. See "Setting the sleep timer" on page 39.</li> </ul>

**Note:** If the problem is not solved by using these troubleshooting instructions, turn off your TV, then turn it on again.

## Specifications

Specifications are subject to change without notice.

### Warranty

NS-42L780A12	NS-46L780A12	NS-55L780A12
<b>Parts:</b> 2 years	<b>Parts:</b> 2 years	<b>Parts:</b> 2 years
<b>Labor:</b> 2 years	<b>Labor:</b> 2 years	<b>Labor:</b> 2 years

### Dimensions and weight

	Without stand:	With stand:
<b>NS-42L780A12</b>	39.8 × 25.58 × 3.57 in. (101.10 × 64.98 × 9.06 cm) 36.5 lbs. (16.56 kg)	39.8 × 27.48 × 10.11 in. (101.10 × 69.79 × 25.69 cm) 43.11 lbs. (19.55 kg)
<b>NS-46L780A12</b>	43.44 × 27.56 × 3.70 in. (110.34 × 70.03 × 9.41 cm) 44.2 lbs. (20.05 kg)	43.44 × 29.63 × 10.5 in. (110.34 × 75.27 × 26.67 cm) 50.8 lbs. (23.05 kg)
<b>NS-55L780A12</b>	51.53 × 32.89 × 4.58 in. (130.88 × 83.55 × 11.64 cm) 63.93 lbs. (29 kg)	51.53 × 34.63 × 11.6 in. (130.88 × 87.96 × 29.47 cm) 79.37 lbs. (36 kg)

### Screen

<b>Screen size measured diagonally</b>	<b>NS-42L780A12:</b> 42 in. <b>NS-46L780A12:</b> 46 in. <b>NS-55L780A12:</b> 55 in.
<b>Display type</b>	LCD
<b>Panel 60 Hz vs. 120 Hz</b>	120Hz
<b>Display resolution</b>	1080p
<b>Panel resolution</b>	1920 (H) × 1080 (V)
<b>Aspect ratio</b>	16:9
<b>Contrast ratio (typical)–panel</b>	<b>NS-42L780A12:</b> 1500:1 <b>NS-46L780A12:</b> 5000:1 <b>NS-55L780A12:</b> 1450:1
<b>Dynamic contrast ratio (typical)–list value</b>	<b>NS-42L780A12:</b> 6000:1 <b>NS-46L780A12:</b> 12000:1 <b>NS-55L780A12:</b> 4350:1
<b>Brightness (center typical) cd/m2–panel</b>	<b>NS-42L780A12:</b> 400 <b>NS-46L780A12:</b> 450 <b>NS-55L780A12:</b> 400
<b>Comb filter</b>	3d y/c digital
<b>Response time</b>	<b>NS-42L780A12:</b> 6.5ms <b>NS-46L780A12:</b> 8ms <b>NS-55L780A12:</b> 8ms
<b>Horizontal viewing angle (typical)</b>	178
<b>Vertical viewing angle (typical)</b>	178

### Display resolutions/VGA scan rates

<b>HDMI</b> Suggested Resolutions	1080p, 1080i, 720p, 480p, 480i
<b>Component video</b> Suggested Resolutions	1080i, 720p, 480p, 480i
<b>PC/VGA</b> Suggested scan rates	720 × 400/70Hz, 640 × 480/60Hz, 640 × 480/72Hz, 640 × 480/75Hz, 800 × 600/56Hz, 800 × 600/60Hz, 800 × 600/75Hz, 1024 × 768/60Hz, 1024 × 768/70Hz, 1024 × 768/75Hz, 1280 × 768/60Hz, 1280 × 1024/60Hz, 1280 × 1024/75Hz, 1920 × 1080/60Hz

### Tuner

<b>Analog</b>	NTSC
<b>Digital</b>	ATSC, 8-VSB, Clear-QAM

### Inputs

<b>HDMI</b>	2 (back), 1 (side) E-EDID-compliant HDCP-compliant
<b>Component video</b>	1 (side)
<b>Composite video</b>	1 (side) Share with Component-Y
<b>Shared audio (component and composite)</b>	Yes
<b>S-Video</b>	No
<b>PC/VGA</b>	1 (back)
<b>3.5mm PC audio input</b>	1 (back)
<b>DVI</b>	1- HDMI port 1 (back)
<b>USB</b>	1 (side) Support JPEG and firmware upgrade
<b>Headphone</b>	1 (side)

### Outputs

<b>Video</b>	No
<b>Analog audio</b>	1 (back)
<b>Digital audio</b>	1 (back)
<b>WiFi</b>	No
<b>Ethernet</b>	No

### Audio

<b>Simulated Surround Sound</b>	Yes - SRS TruSurround HD
<b>Sound Leveler</b>	Yes
<b>Watts per channel</b>	10W
<b>Number of speakers</b>	2

### Power

<b>Power consumption</b>	On: <b>NS-42L780A12:</b> 200W <b>NS-46L780A12:</b> 250W <b>NS-55L780A12:</b> 365W Standby: <1 W
<b>Power input</b>	120V/60Hz

### Miscellaneous

<b>OSD languages</b>	English, French, Spanish
<b>INlink</b>	Yes
<b>Game Mode</b>	Yes
<b>ENERGY STAR qualified</b>	No
<b>Internet connectable</b>	No
<b>TV base screws</b>	M6 type (12 mm length) (4 pcs)
<b>V-Chip (version 2.0)</b>	Yes
<b>Sleep timer</b>	Yes
<b>Channel labeling</b>	Yes
<b>VESA mount (mm) (horizontal × vertical)</b>	<b>NS-42L780A12:</b> 400 × 200 <b>NS-46L780A12:</b> 400 × 200 <b>NS-55L780A12:</b> 400 × 200

#### Note

The length of the wall-mount screws vary depending on the wall-mount bracket you purchased. See the instructions that came with the wall-mount bracket for screw lengths.

# Programming universal remote controls

## Programming a different universal remote control

You can operate your Insignia TV with a new or existing universal remote control.

### To program a different universal remote control:

- 1 See the table below for common codes. If you have problems programming your remote or need a different remote control code, visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes) for the latest remote control code information.
- 2 Follow your universal remote control's instructions to enter the TV code you found in Step 1.

#### Tips

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using the Insignia TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

For additional help and information:

- Visit: <http://www.insigniaproducts.com/remotecodes>
- Call technical support for the universal remote control or cable/satellite company of the remote/set-top box you are trying to program.
- Call the Insignia Customer Care Center 1-877-467-4289.

## Common universal remote control codes

The following is a list of the most common remote control codes. Codes for other remote controls are available online at: [www.insigniaproducts.com](http://www.insigniaproducts.com) or check with your cable or satellite TV provide for the remote control code.

### Insignia TV codes for universal remote controls (for all Insignia TVs manufactured after Jan. 1, 2007)

#### Universal remote control makes and models

One for All	0054
Phillips	0198, 0490
RCA	135
Sony	068, 069, 078, 096, 100, 164, 168, 229, 026

#### Set-top box makes and models

Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
DirectTV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
TiVo	0091
Verizon	0198, 0490

#### Tips

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.

# Legal notices

## FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## Cables

Connections to this device must be made with shielded cables with metallic RF/EMI connector hoods to maintain compliance with FCC Rules and Regulations.

## Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003. Standard Television Receiving Apparatus — Appareil de réception télévision ordinaire, Canada BETS-7 / NTMR-7

## Dolby License Notice and Trade Mark Acknowledgement



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## HDMI



HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

## SRS TruSurround HD™



is a trademark of SRS Labs, Inc. TruSurround HD technology is incorporated under license from SRS Labs, Inc.

## Open Source Software

For OPEN SOURCE SOFTWARE information, refer to the System information section in the on-screen display (OSD) on the TV. If you require additional information or you wish to receive the complete corresponding GPL or LGPL licensed source code, please call the Insignia support line at 1-877-467-4289. This source code is available for a period of three (3) years from the date of the distribution of this product by Insignia.

# Two-year limited warranty - Insignia Televisions

## US and Canada Markets

### Definitions:

Insignia Products ("Insignia") warrants to you, the original purchaser of this new Insignia-branded television ("Product"), that the Product shall be free of defects in the original manufacture of the material or workmanship for a period of two (2) years from the date of your purchase of the Product ("Warranty Period"). For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop authorized dealer of Insignia brand products only that are packaged with this warranty statement.

### How long does the coverage last?

The Warranty Period lasts for 2 years (730 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

### What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

### How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location and your television Product has a screen size of less than 37 inches, please take your original receipt and the Product to any Best Buy or Future Shop store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy or Future Shop online web site, mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain in-home warranty service for a television with a screen 37 inches or larger, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY for Future Shop call 1-800-663-2275. Call agents will diagnose and correct the issue over the phone or will have an Insignia-approved repair technician dispatched to your home.

### Where is the warranty valid?

This warranty is valid only to the original purchaser of the product in the United States and Canada at Best Buy or Future Shop branded retail stores or websites.

### What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to acts of God, such as power surges
- Accident(s)
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Plasma display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).

- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

[www.insigniaproducts.com](http://www.insigniaproducts.com)

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, Minnesota, U.S.A. 55423-3645

© 2011 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.





[www.insigniaproducts.com](http://www.insigniaproducts.com)  
US & Canada: 1 (877) 467-4289

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN USA 55423-3645  
© 2011 BBY Solutions, Inc.

All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries.  
All other products and brand names are trademarks of their respective owners.

ENGLISH  
11-0043