

# INSIGNIA™

## QUICK SETUP GUIDE

28" LED TV / DVD COMBO  
NS-28ED200NA14

**Thank you**  
for purchasing this state-of-the-art Insignia television. We hope you enjoy the quality and reliability of this television for years to come.



**FIND YOUR USER GUIDE ONLINE!**  
We are going green so a copy of your *User Guide* is not provided in the box but is available online. Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.




### 1 START HERE

#### How do I attach the stand to my TV?

(not for wall mounting)

**You'll need:** A Phillips screwdriver and a soft surface to lay the TV on.

- A** Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches.
- B** Secure the TV stand to the TV with the four provided screws.

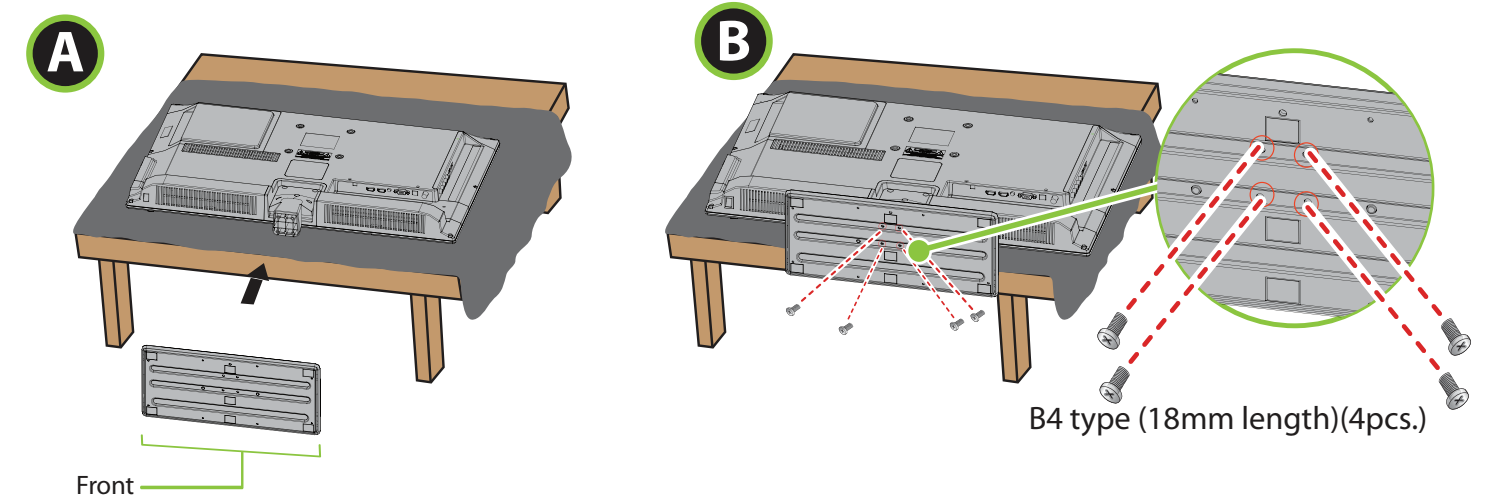


- OR -

#### How do I prepare my TV for wall mounting?

(not for use with a TV stand)

**You'll need:** A Phillips screwdriver and a soft surface to lay the TV on.

- A** Carefully place your TV face-down on a cushioned, clean surface to protect the screen from damages and scratches, then remove the 5 screws.
- B** Remove the stand column.  
See the instructions that came with your wall mount for more information about how to correctly mount your TV.

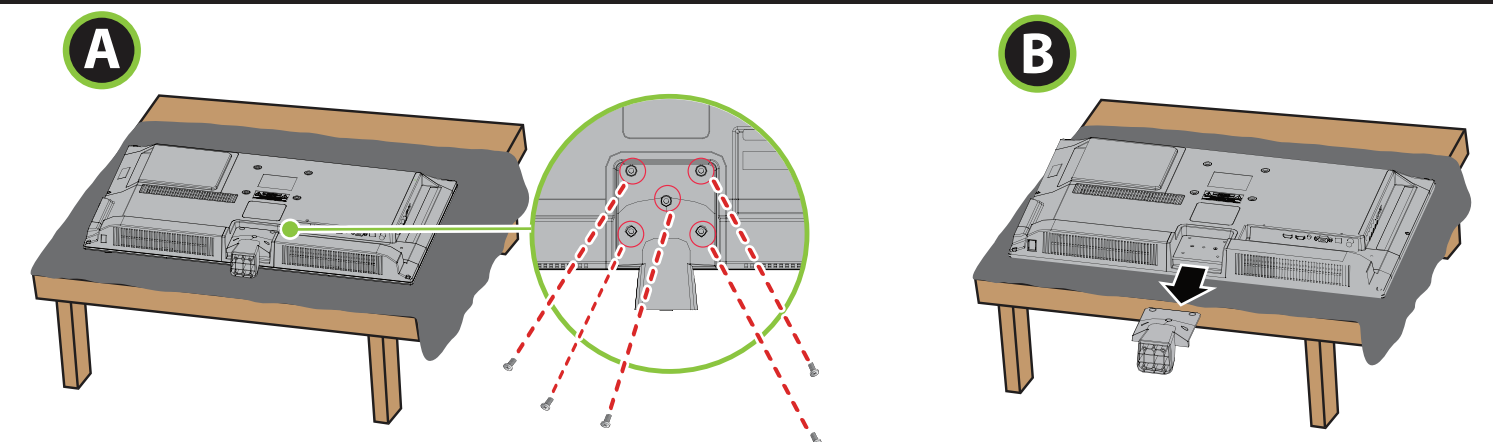


### STOP!

Do not plug your power cord in until all other devices have been connected.


### Included accessories



Remote control and two AAA batteries

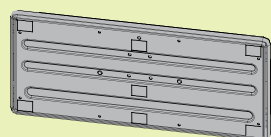

TV stand

 

B4 type (18mm length) (4pcs.)

### Which cables do you have?


*Your TV has several different jacks for connecting devices. For the best video quality, use the best available connection. Use the cables that came with your devices.*

| VIDEO QUALITY | JACK TYPE                        | CABLE CONNECTOR |
|---------------|----------------------------------|-----------------|
| <b>BEST</b>   | HDMI video/audio                 |                 |
| <b>BETTER</b> | Component video and analog audio |                 |
| <b>GOOD</b>   | Composite video and analog audio |                 |
| <b>GOOD</b>   | Coaxial video/audio              |                 |


**Note:** You can use the HDMI 2/DVI jack to connect a DVI device to your TV. Attach an HDMI-to-DVI adapter to the end of the HDMI cable. The adapter connects to the DVI device's jack. See your online *User Guide* for more information about HDMI/DVI devices.

### Features

Front view

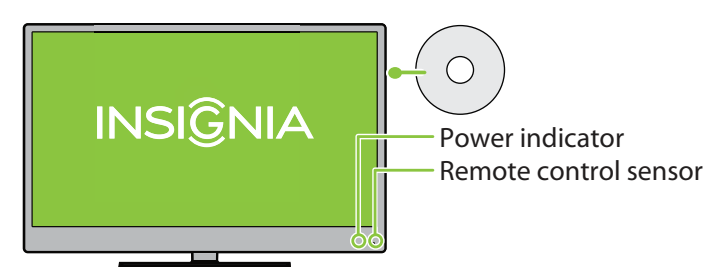

Back view

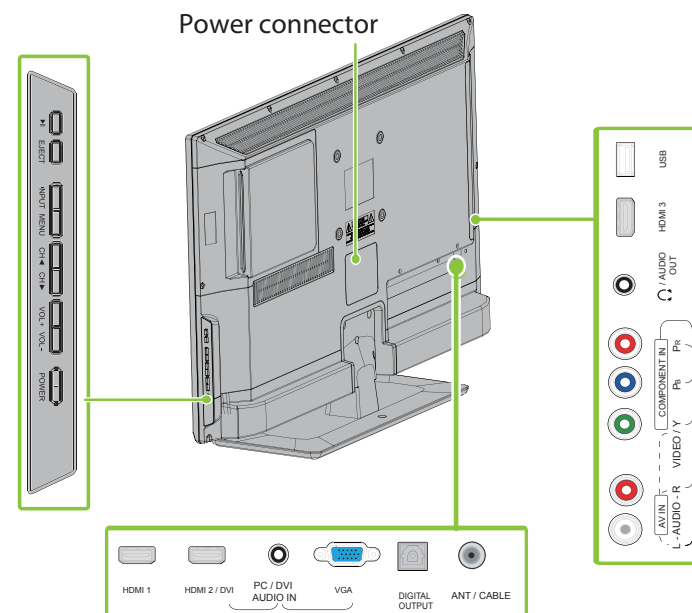


**Note:** Images do not necessarily represent the exact design of your television.

### 2 MAKING CONNECTIONS

#### How do I watch TV (cable or satellite receiver) or connect a device such as a DVD or Blu-ray Disc player, game console, or camcorder?

##### Using an HDMI cable (BEST)

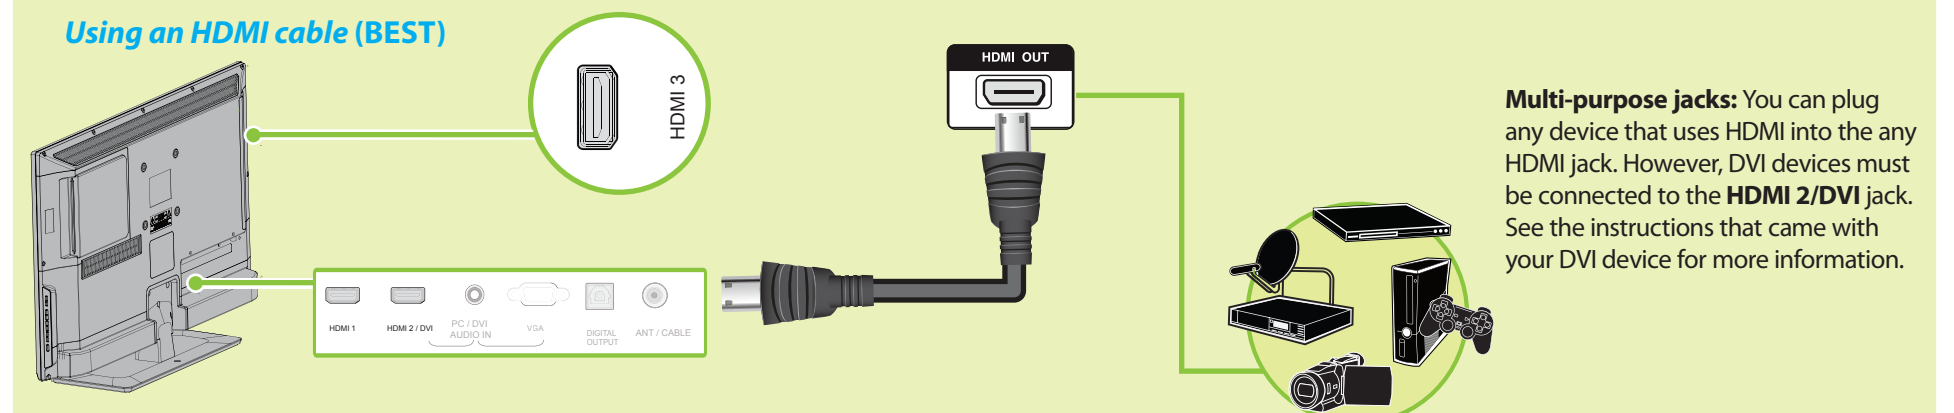


**Multi-purpose jacks:** You can plug any device that uses HDMI into the any HDMI jack. However, DVI devices must be connected to the **HDMI 2/DVI** jack. See the instructions that came with your DVI device for more information.

##### Using component cables (BETTER)

- OR -


##### Using an AV cable (GOOD)

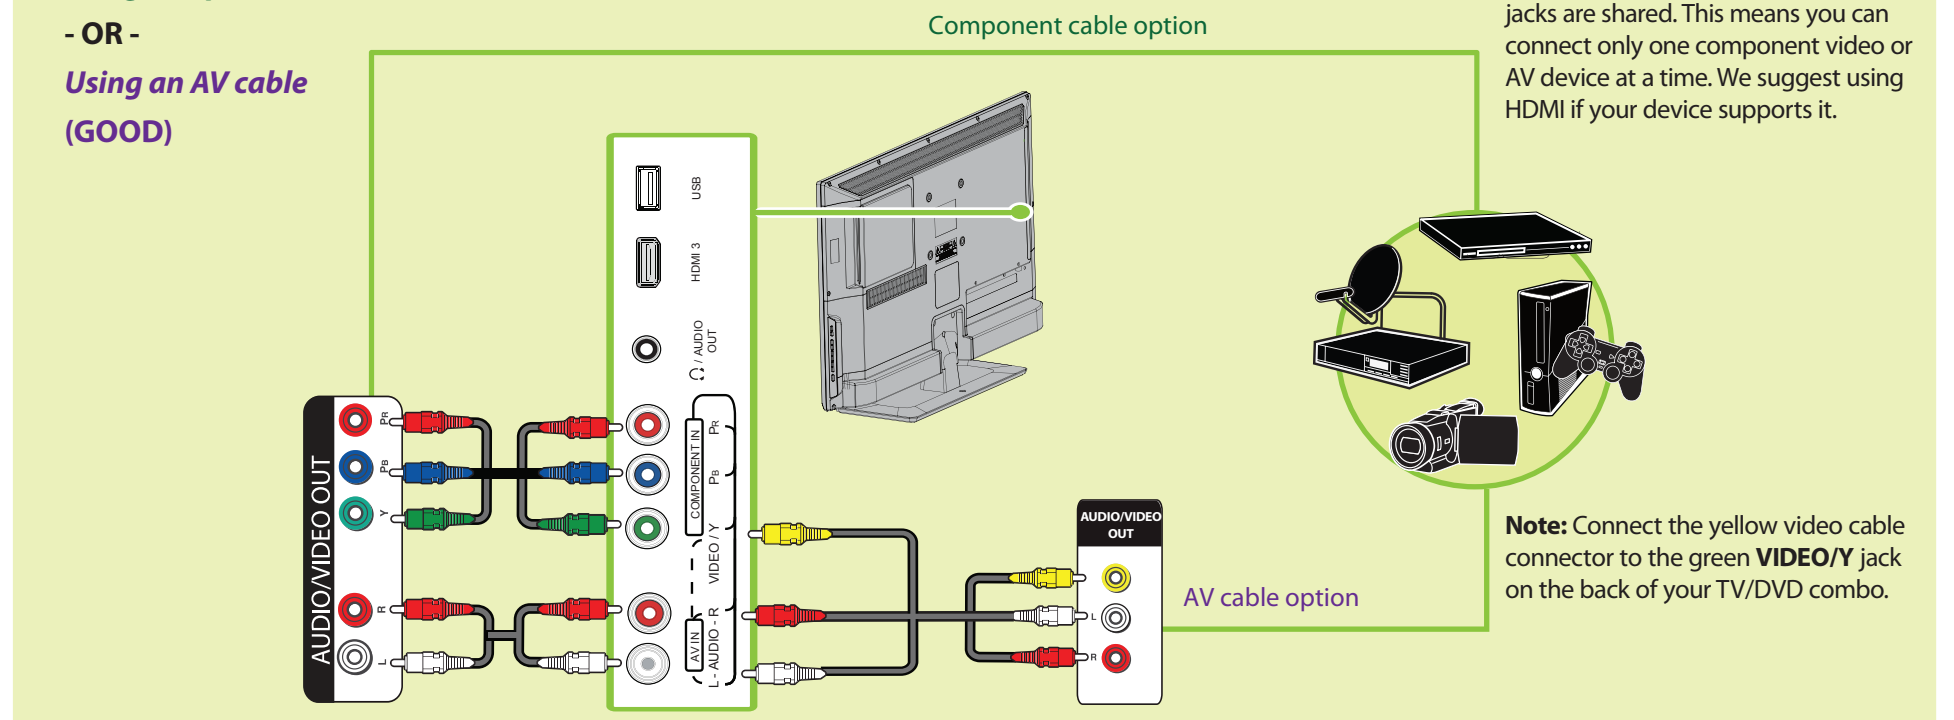

**Note:** The component video and AV jacks are shared. This means you can connect only one component video or AV device at a time. We suggest using HDMI if your device supports it.

**Note:** Connect the yellow video cable connector to the green **VIDEO/Y** jack on the back of your TV/DVD combo.

#### How do I connect my TV to an antenna or cable wall jack?

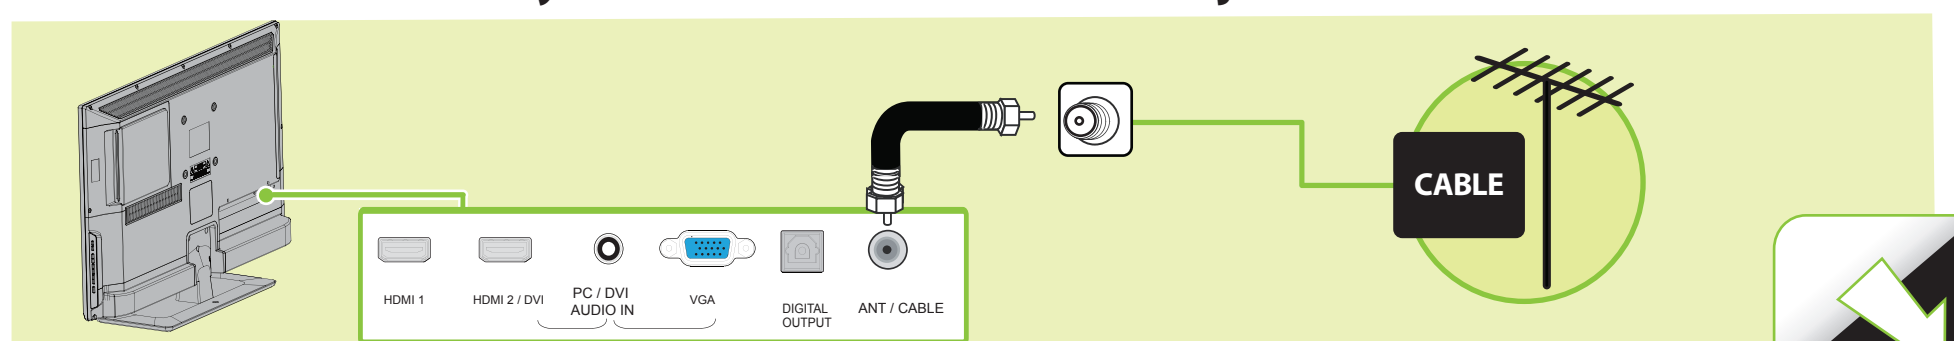

OVER


Before using your new product, please read these instructions to prevent any damage.



### 3 CONNECTING AUDIO DEVICES

#### How do I connect my TV to external speakers?


##### Using digital audio

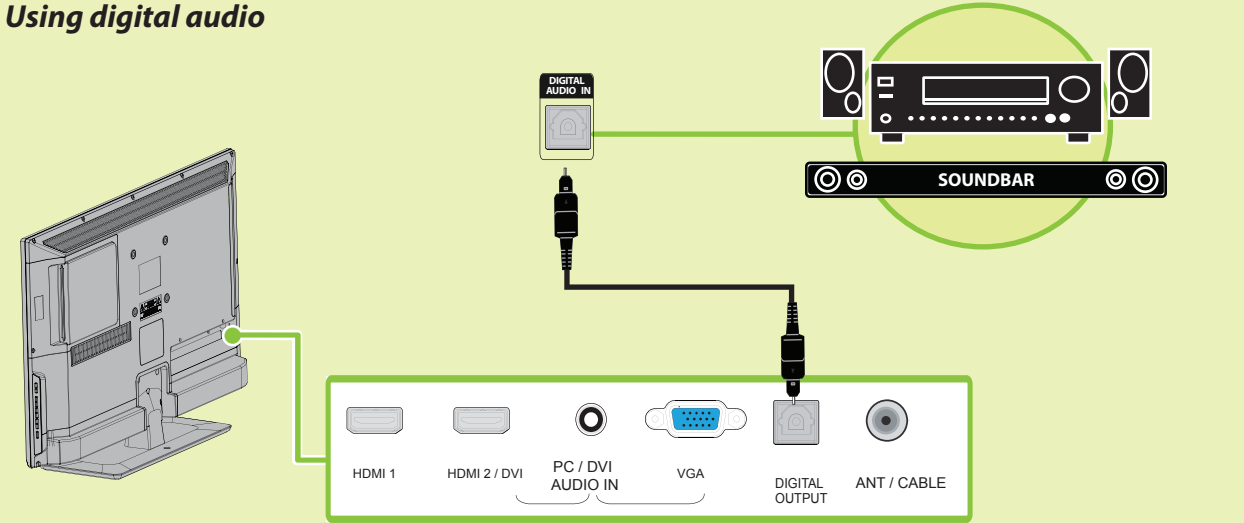

**Note:** Refer to the instructions that came with your speakers for more information.

- OR -

##### Using analog audio

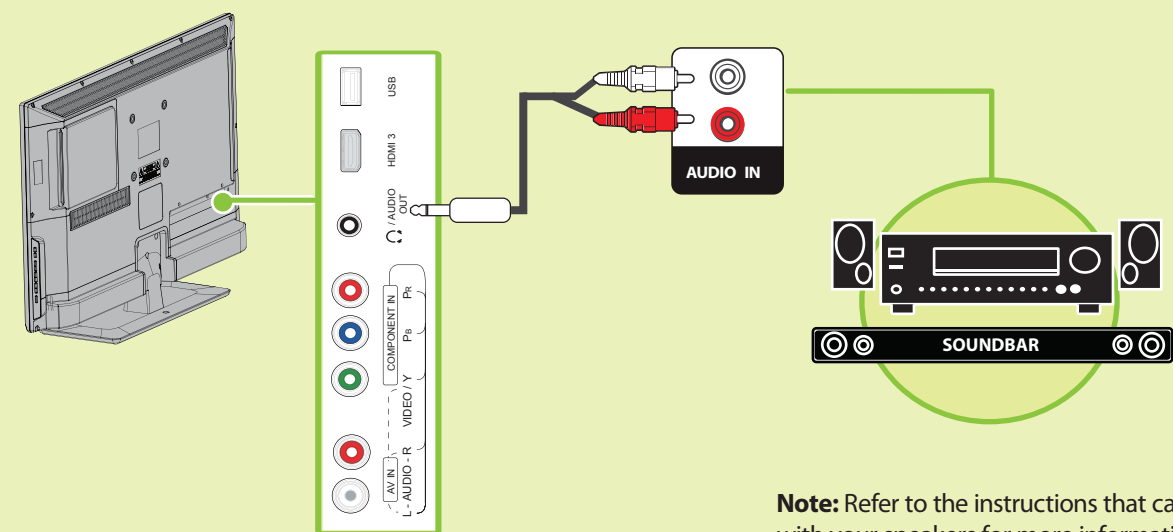


**Note:** Refer to the instructions that came with your speakers for more information.

### 4 TURNING ON MY TV


#### When can I turn on my TV?

The best time to turn on your TV is after you have attached the TV stand or wall-mounted your TV and connected all devices.


- 1 Plug the AC power cord into a power outlet.

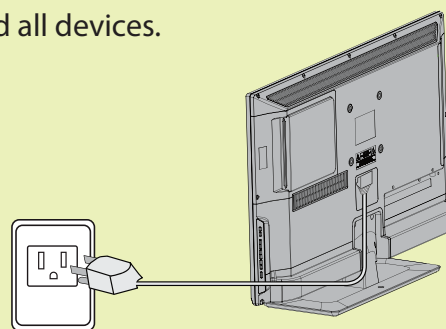


- 2 Install the remote control batteries.

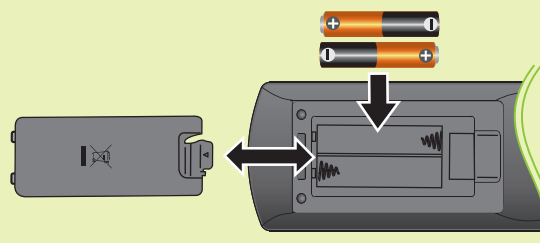

- 3 Press (power) on your remote control.
- 4 Follow the on-screen instructions.

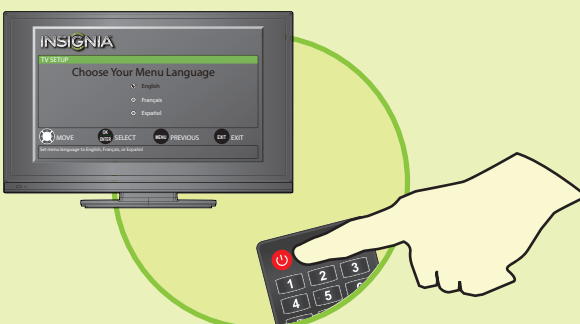

#### Using your remote control

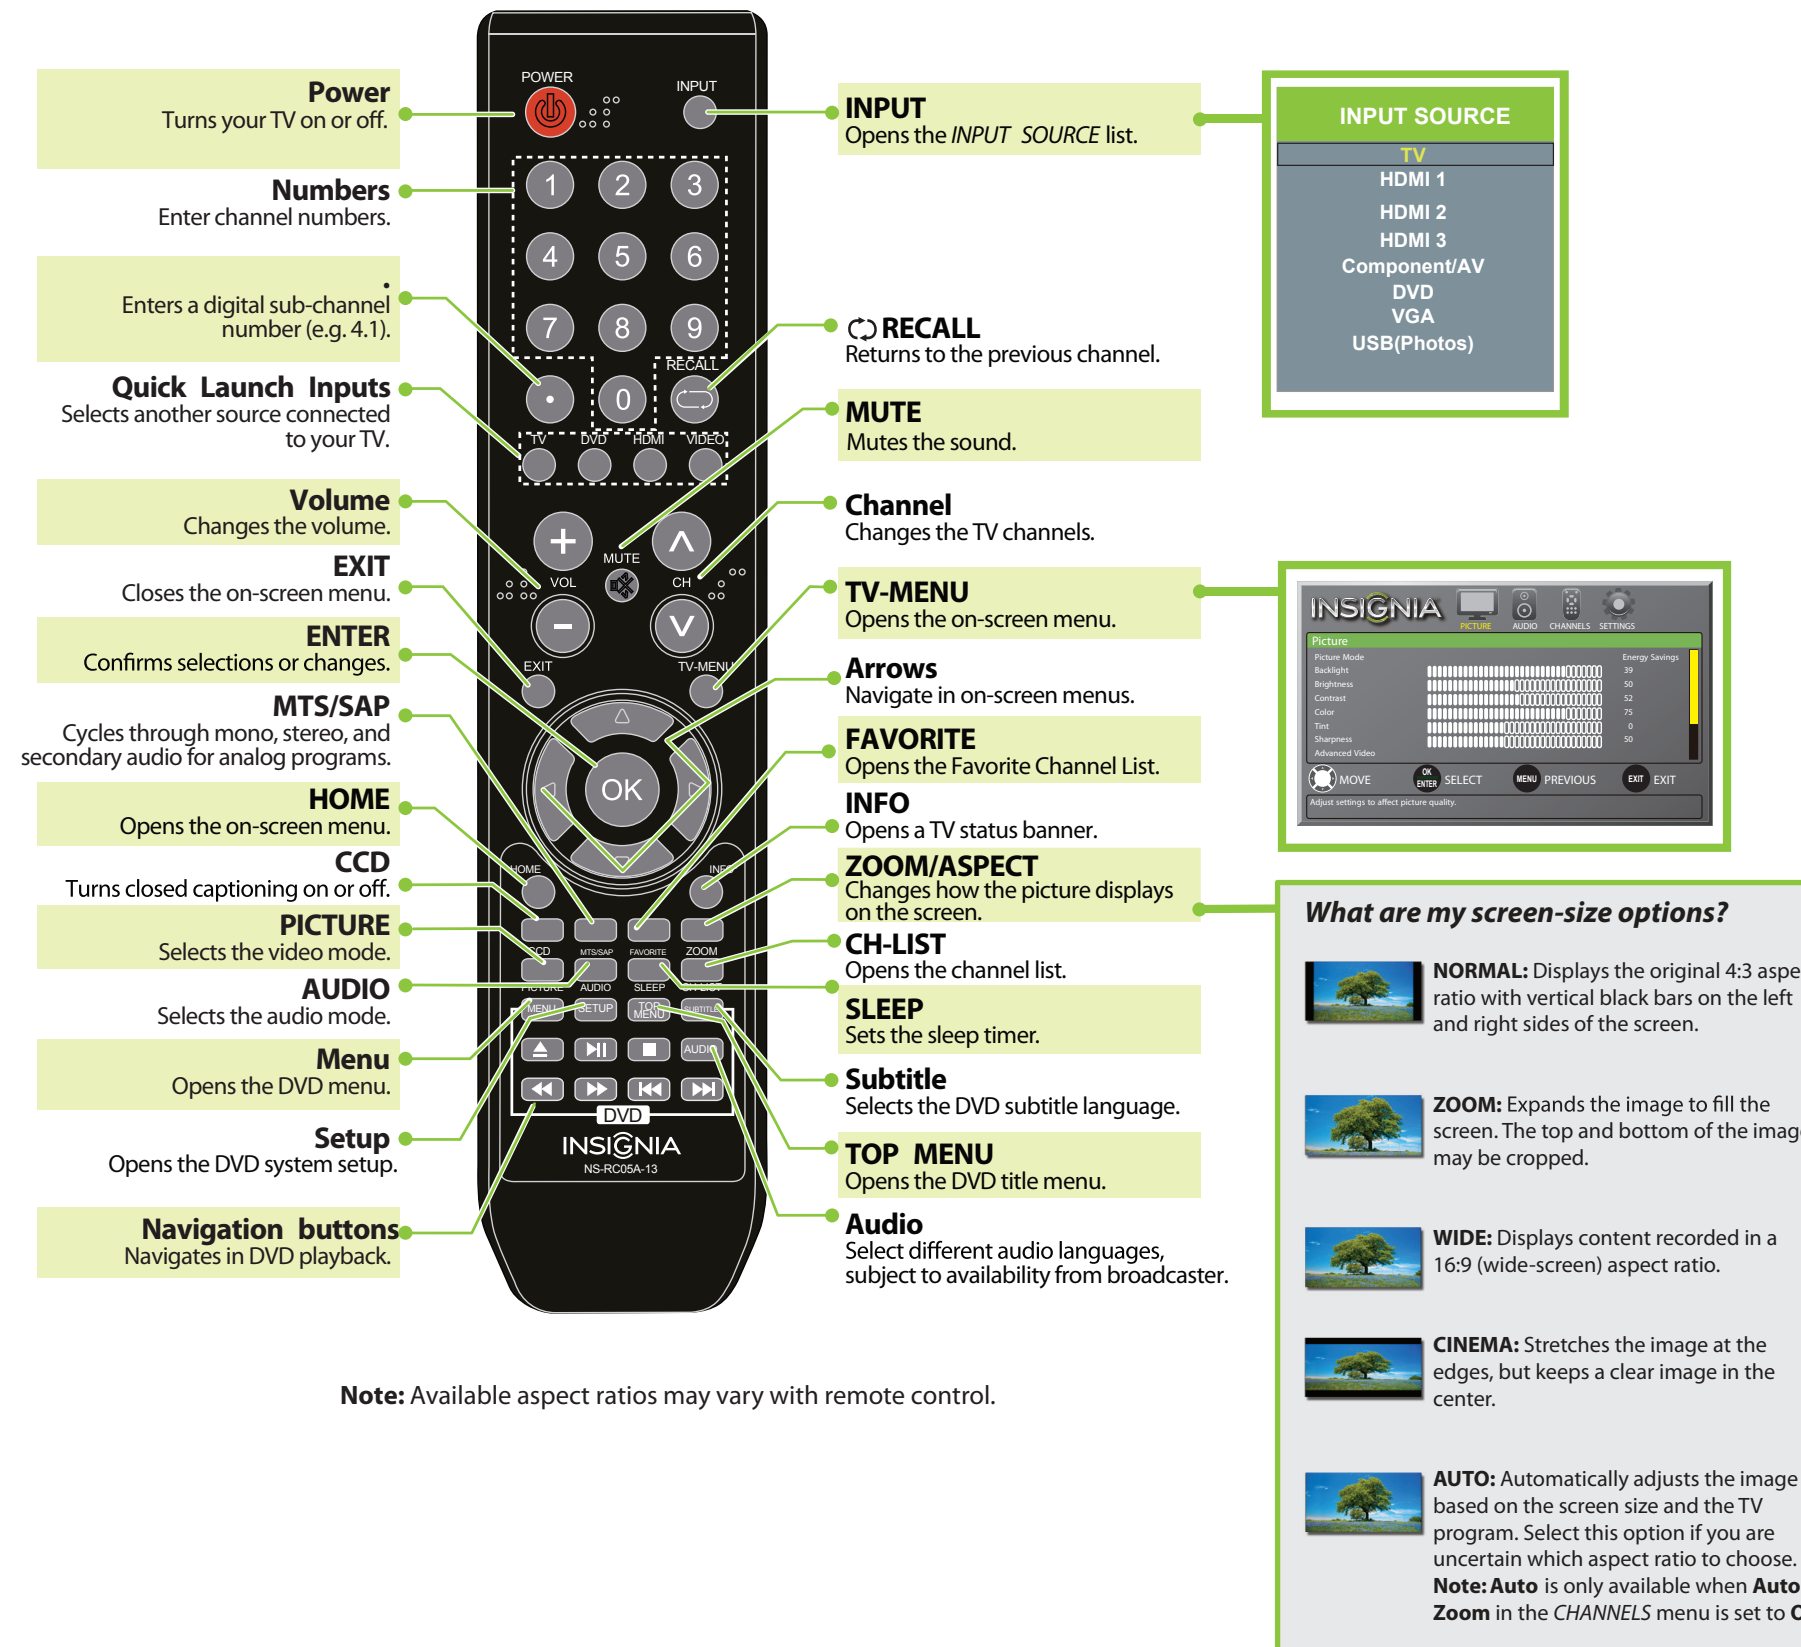

**Note:** Available aspect ratios may vary with remote control.

##### What are my screen-size options?

- NORMAL:** Displays the original 4:3 aspect ratio with vertical black bars on the left and right sides of the screen.
- ZOOM:** Expands the image to fill the screen. The top and bottom of the image may be cropped.
- WIDE:** Displays content recorded in a 16:9 (wide-screen) aspect ratio.
- CINEMA:** Stretches the image at the edges, but keeps a clear image in the center.
- AUTO:** Automatically adjusts the image based on the screen size and the TV program. Select this option if you are uncertain which aspect ratio to choose.  
**Note:** Auto is only available when Auto Zoom in the CHANNELS menu is set to On.

#### I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table for common codes.

| UNIVERSAL REMOTE TV CODES                      |                                                                                                                   |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| CABLE BOX, SATELLITE BOX, OR OTHER SET-TOP BOX |                                                                                                                   |
| <b>Cablevision</b>                             | 068, 069, 078, 096, 100, 164, 168, 229, 026                                                                       |
| <b>Charter</b>                                 | 2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586 |
| <b>Comcast</b>                                 | 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002                                       |
| <b>Cox</b>                                     | 1326, 1463                                                                                                        |
| <b>Direct TV</b>                               | 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002                                                            |
| <b>Dish Network</b>                            | 720                                                                                                               |
| <b>Time Warner</b>                             | 400, 450, 461, 456, 10463, 1463, 0463                                                                             |
| <b>Tivo</b>                                    | 0091                                                                                                              |
| <b>Verizon</b>                                 | 0198, 0490                                                                                                        |
| UNIVERSAL REMOTE CONTROLS                      |                                                                                                                   |
| <b>One for All</b>                             | 0054                                                                                                              |
| <b>Philips</b>                                 | 0198, 0490                                                                                                        |
| <b>RCA</b>                                     | 135                                                                                                               |
| <b>Sony</b>                                    | 068, 069, 078, 096                                                                                                |



For an up-to-date list of codes for other cable providers and universal remote brands, scan this **QR code** or visit [www.insigniaproducts.com/remotecodes](http://www.insigniaproducts.com/remotecodes)

INSIGNIA™

**One-year limited warranty**  
Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

#### Need additional help?

See your online *User Guide*! This comprehensive guide includes everything from basic how-to steps to more advanced features. A copy of your *User Guide* is not provided in the box but is available online. Go to [www.insigniaproducts.com](http://www.insigniaproducts.com), then click **Support & Service**. Enter your model number in the box under **Manual, Firmware, Drivers & Product Information**, then click ►.

Check out our **online community forum** at [www.insigniaproducts.com](http://www.insigniaproducts.com) for helpful information from other Insignia TV owners.

#### We're here for you

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
For customer service, call:  
**877-467-4289**  
(U.S./Canada markets)

INSIGNIA is a registered trademark of BBY Solutions, Inc. Registered in some countries. Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2013 BBY Solutions, Inc.  
All Rights Reserved  
1-877-467-4289  
[www.insigniaproducts.com](http://www.insigniaproducts.com)