



MAGNIFICA START



QUICK START GUIDE



VISIT US AT [DELONGHI.COM](https://www.delonghi.com)



ECAM22022B



EASILY REGISTER YOUR MACHINE & GET MORE OUT OF YOUR ESPRESSO EXPERIENCE

Register your Fully Automatic Espresso Machine and become De'Longhi Club Member. Join the De'Longhi Club to get more out of your coffee experience.



RECEIVE 1
ADDITIONAL YEAR
OF WARRANTY
FOR REGISTERING
PRODUCT



MEMBERSHIP
DISCOUNT ON
ACCESSORIES



PRIVATE
ONLINE SALES



DE'LONGHI
SPECIALIST
SUPPORT



EASY
ORDERING




EXCLUSIVE
COFFEE EVENTS
& NEWS

De'Longhi Club Member discount: Only members of the Club will receive special offers on coffee accessories.

STEP #1: TAKE A PHOTO

- Snap a photo of the camera icon, including the points.

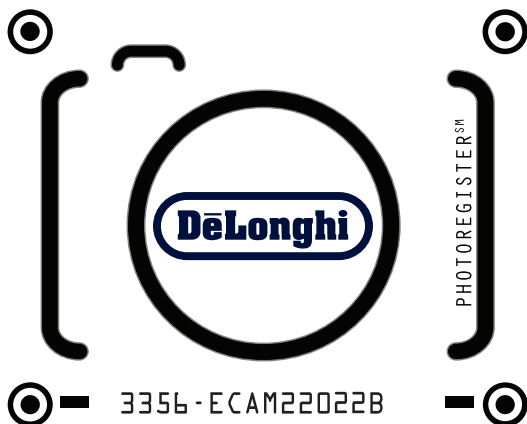 

STEP #2: SEND PHOTO

- Send a photo via text, Facebook Messenger or upload online.



TEXT PHOTO
TO 71403



MESSANGER @
PHOTOREGISTER



ONLINE:
WWW.DELONGHI.PHOTO

NEED HELP?:

Visit photoregister.com/help
or text HELP to 71403.

CONTACT US

 
 
 
- Call 1-800-945-0929
- Online: DeLonghi.com

VISIT US AT DELONGHI.COM



IN THE BOX

- A1. Beans container
- A2. Pre-ground coffee funnel lid
- A3. Beans container lid
- A4. Grinding adjustment dial
- A5. Pre-ground coffee funnel
- A6. Steam/Hot water dial
- A7. Steam/Hot water connection nozzle (removable)
- A8. Steam/hot water wand
- A9. Coffee spouts (adjustable height)
- A10. Condensate tray

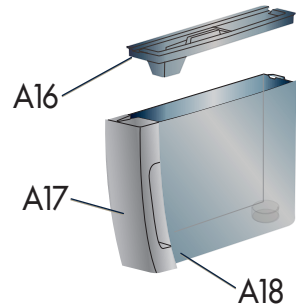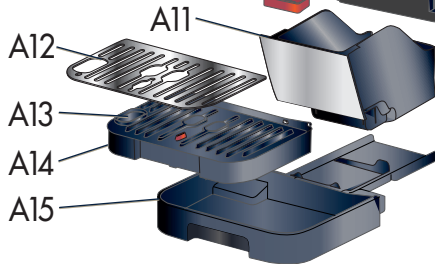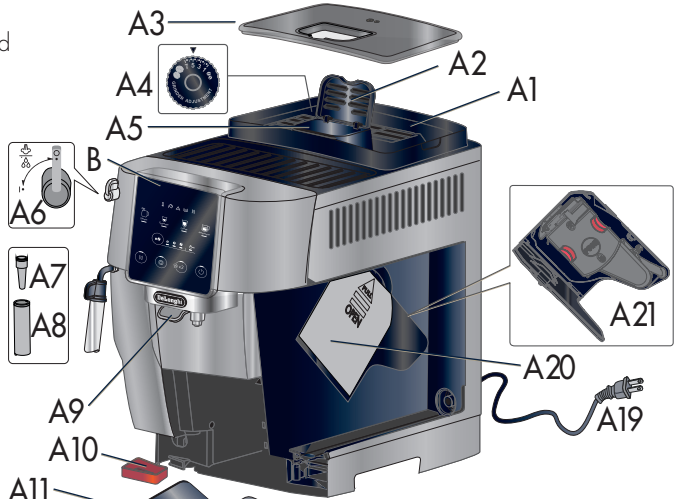

- A11. Grounds container
- A12. Cup tray
- A13. Drip tray water level indicator
- A14. Drip tray grille
- A15. Drip tray
- A16. Water tank lid
- A17. Water tank
- A18. Water filter housing
- A19. Power cord
- A20. Infuser door
- A21. Infuser

 
 
 
B. Control Panel



Get Started &
Owner's Instructions
Booklets


This short guide is not intended to explain
all the functions of the appliance.
Please read all the owner's
instruction booklet before use.

ACCESSORIES INCLUDED

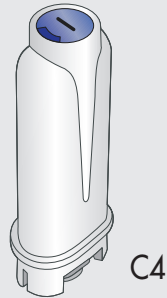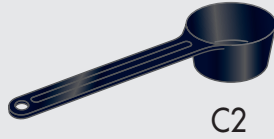

-
- C1. "Total Hardness Test" indicator paper
 - C2. Pre-ground coffee measuring scoop
 - C3. Descaler
 - C4. Water softener filter (certain models only)

 CONTROL PANEL & DISPLAY



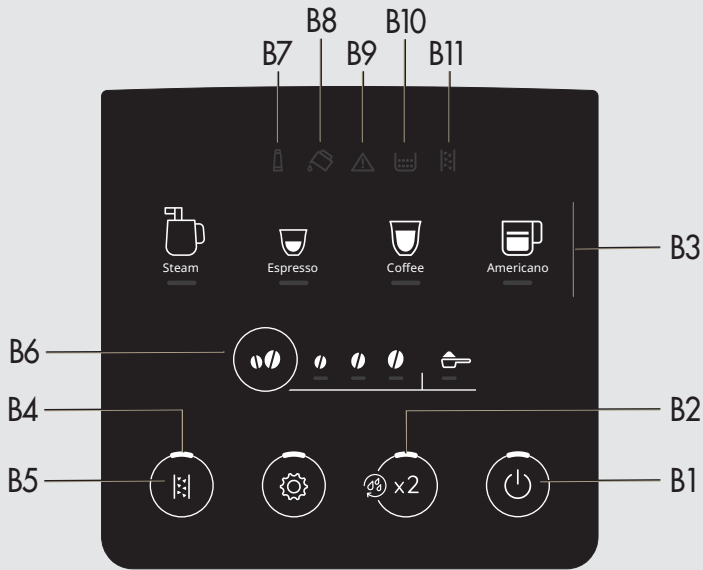


- B1. ON/Off Button
- B2. X2 button / Rinsing function (when pressed and hold for 5 seconds)
- B3. Direct recipes
- B4. Setting menu button
- B5. Descaling button
- B6. Strength selection and pre-ground function buttons
- B7. Exhausted water filter indicator light
- B8. Water indicator light
- B9. General alarm indicator light
- B10. Ground container light
- B11. Descaling indicator light


GET READY

Remove all stickers and clean all accessories with warm water and mild detergent and dry them. Priming the machine is only required the first time out of the box.

   - 1 Connect the machine to the mains socket. The Water indicator Light will turn on.
- 2 Fill the water tank with fresh water
- 3 Add a large water container under both the water/steam spout and coffee spouts. Note, hot water will be delivered during the priming process.
- 4 The Setting light will start blinking. Press the Setting button; the internal water circuits start to fill and the appliance will release hot water from the coffee spout.

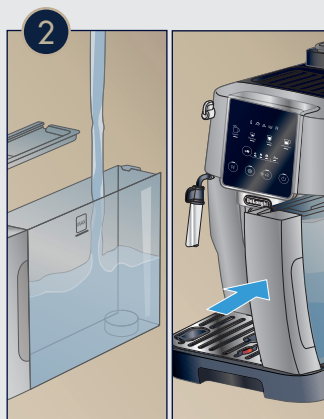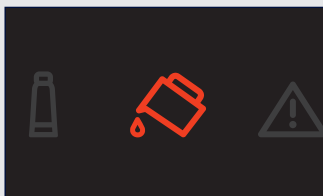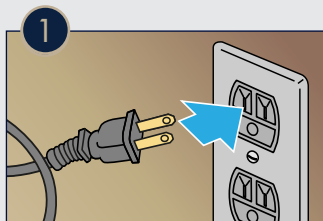


BREW ESPRESSO

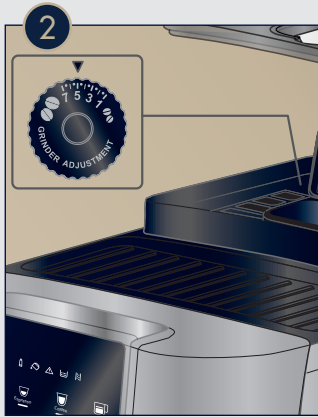 

The first time using the machine, brew and dump the first 3-4 espressos. If you haven't been using the machine for 3-4 days, perform a rinsing cycle (press and hold **X2** Button for about 5 seconds).



 To brew the perfect espresso set your grinder following the "Extraction Guidelines" on page 9.

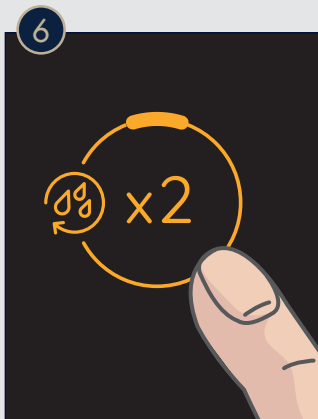

Select one of the recipes on the touch screen. Preparation will start with default strength and quantity, which can be changed by customizing your recipes.

To Brew doppio, first press the **X2** button and then select your espresso recipe.

CUSTOMIZE RECIPES

1 Strength Personalization:

 
 
Personalize the strength of recipes by selecting the desired option.

2 Quantity Personalization:

You can change the default quantity by pressing and holding the button of the recipe you want to modify until it blinks. Delivery begins. Press again to stop at the desired level. The new parameter is now saved.

3 Pre-ground:

To use pre-ground coffee, press the icon  and add one measuring scoop of pre-ground coffee in the dedicated funnel, then select the desired recipe.

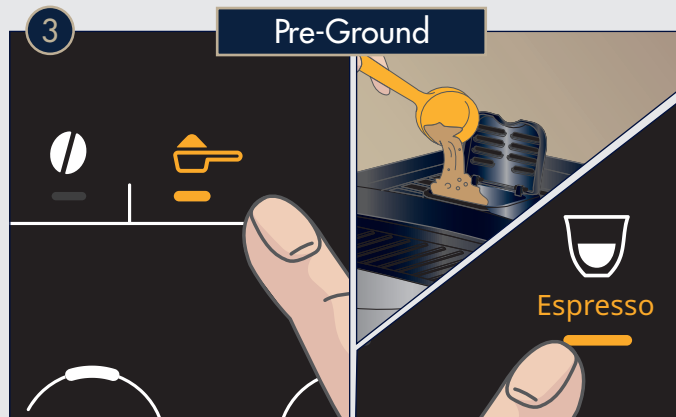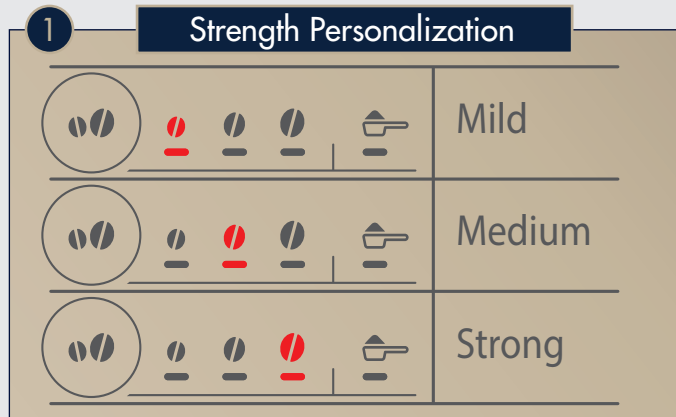

EXTRACTION GUIDELINES

Depending on your choice of beans, you might need to adjust the grinder setting to a finer or more coarse choice.



 
- Flow like warm honey
- Nut-brown Crema
- Well balanced and lingering taste



- Flowing fast like water
- Light and pale Crema

To make it perfect:


- Adjust grinding setting to a finer setting
- Select a higher strength

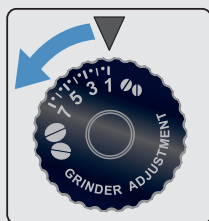

- Flowing in drips or not at all
- Crema very dark and not uniform

To make it perfect:

 
- Adjust grinding setting to a coarser setting
- Select a lower strength

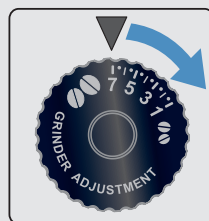


CLEANING

Keeping your machine clean will improve quality of the beverage and life span of the machine.

 1 Empty drip tray daily and empty coffee ground container when lights come up.

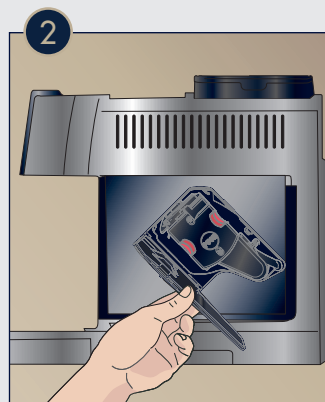

 
2 Once a month, clean the inside of the machine. Follow User Manual detailed instructions.

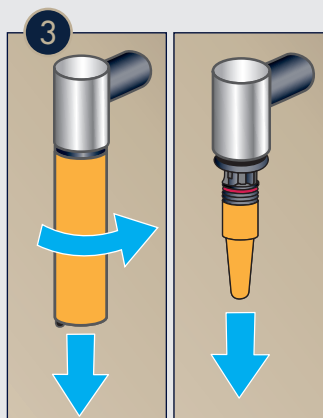


3 After using the steam spout to froth milk, remove and clean each part.

DESCALING

 4 Promptly descale when indication light comes on. The frequency of the need to descale of the machine depends on the water hardness setting. See User Manual for more information and detailed instructions.

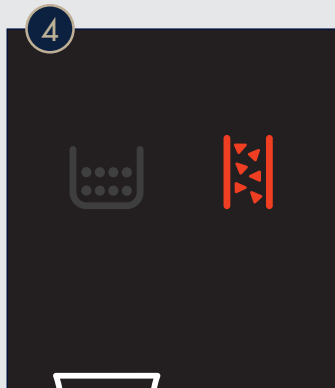

INSERT WATER FILTER

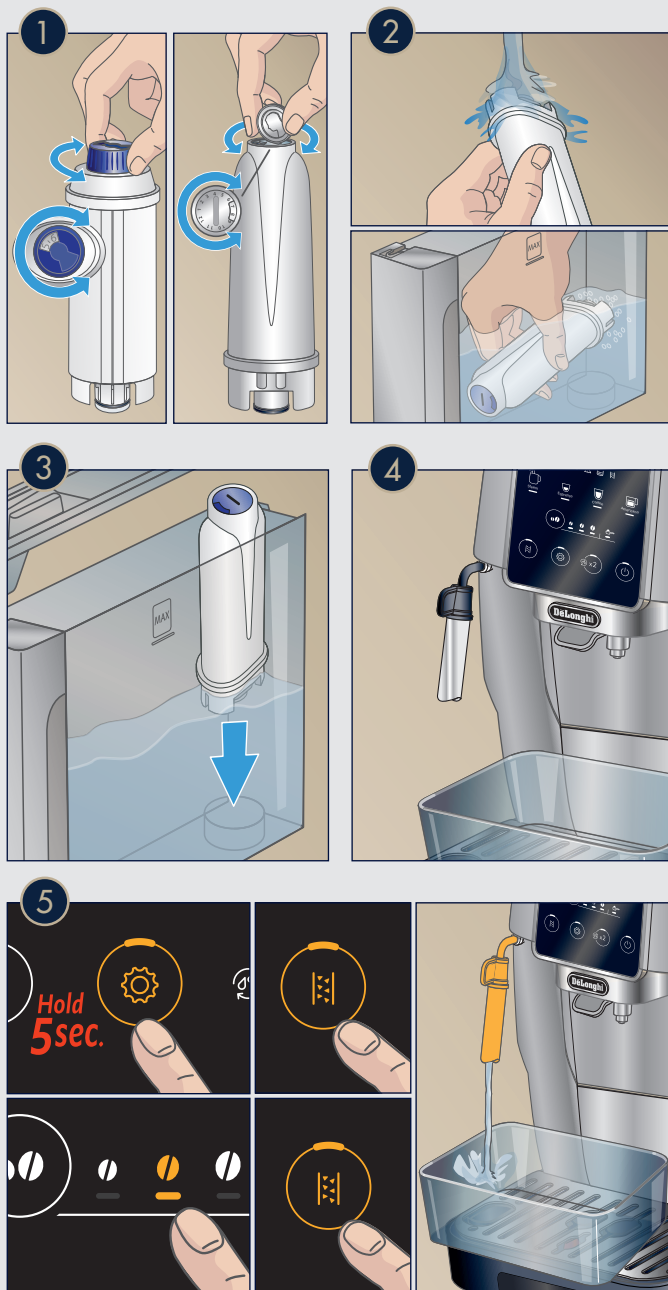 

To ensure better quality of the water install the provided water filter. Under normal use, filters last about 2 months. If coffee maker is left unused, the filter will last a maximum of 3 weeks*. You can purchase extra filters on www.delonghi.com
 *The type of filter may vary.

- 1 Turn the date indicator disk until the next two months are displayed.
- 2 Fill the filter with water submerge it inside the filled water tank, until all air bubbles have escaped.
- 3 Place the filter in the filter housing on the tank and cover with the lid. Put the water tank back in the machine.
- 4 Insert the Hot Water Spout.
- 5 Now you have to tell the machine you installed a new filter. Proceed by pressing the button sequence shown in the picture.
- 6 Water will be delivered and will stop automatically. The filter is now successfully installed.

Note the machine will let you know when it's time to substitute the filter when the  light will turn on.

SET WATER HARDNESS

Analyze the hardness of your water to set your machine accordingly. Different water levels will require for your machine to be descaled more or less frequently. To set your machine access "Water Hardness"

on the settings menu.

 
 
 
 
1 Dip the provided Total Hardness Indicator in a glass of water for one second and shake it.

2 Wait a couple of minutes. Read the Indicator paper colors and compare with this table.





3 Set Water Hardness on your machine by accessing the setting menu pressing  for 5 seconds and then pressing Coffee .

4 Use the Strength selector to chose the water level, based on the water hardness test results.

5 Confirm Selection by pressing Coffee . Exit the setting menu by pressing .

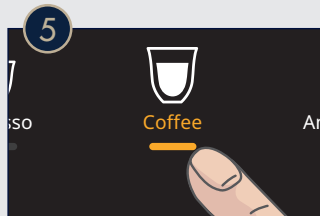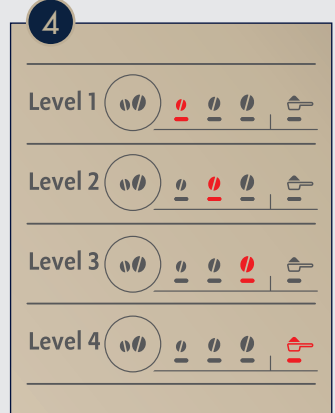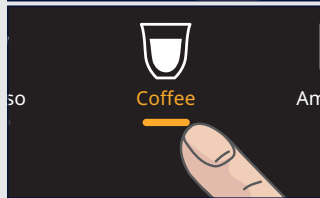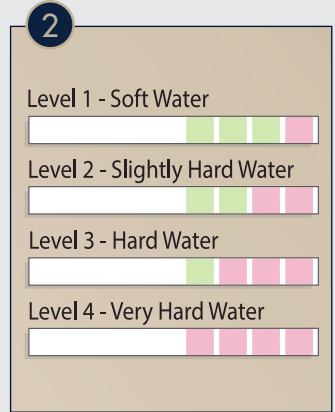

RÉGLER LA DURETÉ DE L'EAU

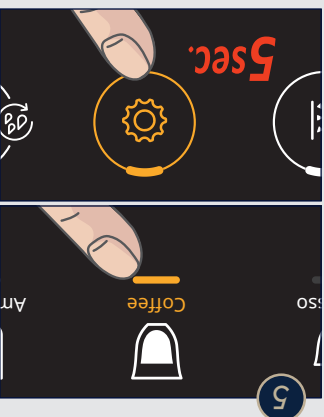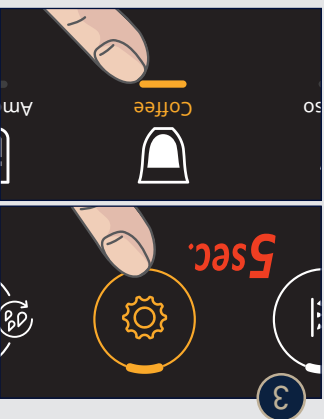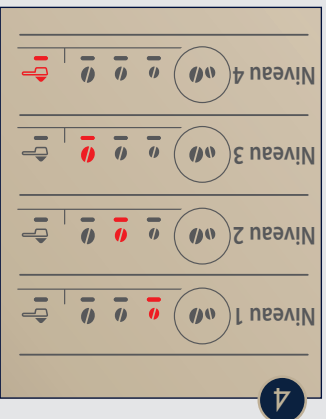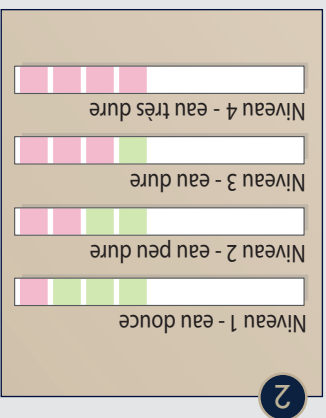    

Il faut analyser la dureté de l'eau pour régler votre machine en conséquence. Il faudra détartre votre machine plus ou moins souvent selon le niveau de dureté de l'eau. Pour régler votre machine, sélectionnez « Dureté de l'eau » dans le menu des paramètres.

1 Plonger la bandelette de test de dureté de l'eau incluse dans un verre et l'agiter.

2 Attendre une ou deux minutes. Lire les couleurs qui apparaissent sur la bandelette et les comparer avec le tableau ci-contre.

3 Pour régler la dureté de l'eau sur la machine,

 
 
 
accéder au menu des paramètres (ⓘ) appuyant pendant 5 secondes, puis appuyer sur Coffee.

4 Utiliser le sélecteur d'intensité pour régler le niveau de dureté selon le résultat du test de dureté de l'eau. Nulpa volonrias

5 Confirmer le réglage en appuyant sur Coffee.

Quitter le menu des paramètres en appuyant sur (ⓘ).

INSÉRER LE FILTRE À EAU

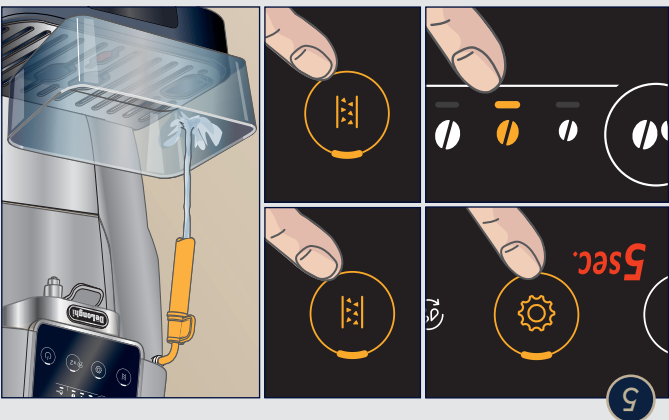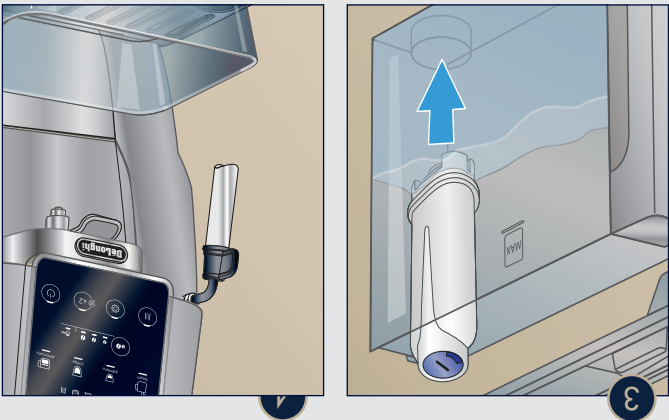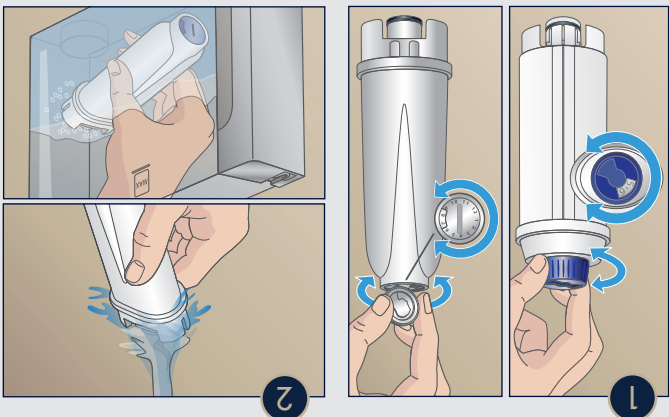

Pour assurer une meilleure qualité de l'eau, installer le filtre à eau inclus. Avec une utilisation normale, les filtres durent environ 2 mois. Si la machine à café n'est pas utilisée, le filtre durera un maximum de 3 semaines*. Pour acheter des filtres supplémentaires, visitez www.delonghi.com. *Le type de filtre peut varier.

1 Tourner le disque calendrier pour afficher les deux prochains mois.

2 Remplir le filtre d'eau, puis le plonger dans le réservoir plein d'eau, jusqu'à ce que toutes les bulles d'air soient échappées.

3 Insérer le filtre dans le boîtier du réservoir et placer le couvercle. Replacer le réservoir d'eau dans la machine.

4 Insérer la buse d'eau chaude.

5 Appuyer sur les boutons dans l'ordre indiqué sur l'image pour signaler à la machine que le nouveau filtre est installé.

 
6 De l'eau s'écoulera et s'arrêtera automatiquement. Le filtre est maintenant correctement installé.

Veillez noter que la machine vous indiquera quand il est temps de changer le filtre : le voyant s'allumera.

NETTOYAGE


Garder votre machine propre améliorera la qualité des boissons et la durée de vie de la machine.

1 Vider le plateau d'égouttement tous les jours et vider le bac à marc de café quand le voyant s'allume.

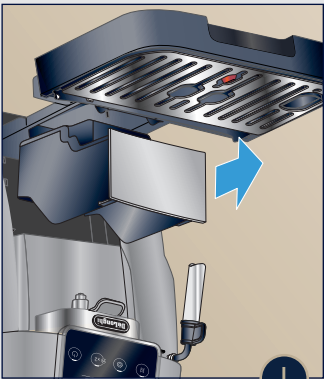


1

 2 Nettoyer l'intérieur de la machine une fois par mois. Suivre les instructions détaillées dans le guide d'utilisation.

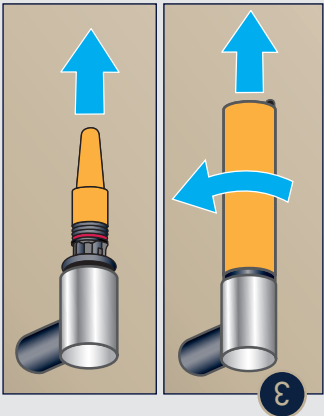


3

 3 Après l'utilisation de la buse vapeur pour le moussage du lait, retirer et nettoyer chaque pièce.

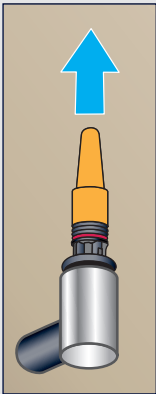


DÉTARRAGE

 
4 Détarrer la machine dès que le voyant s'allume. La fréquence du détarrage de la machine dépend du réglage de la dureté de l'eau. Consulter le guide d'utilisation pour plus d'informations et des instructions détaillées.

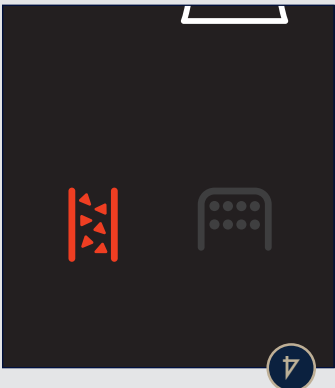

4

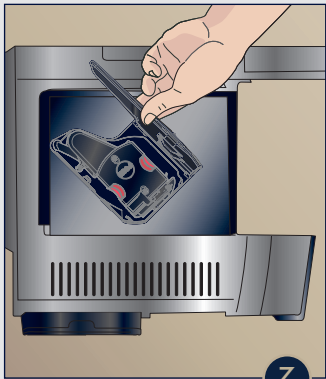 


2

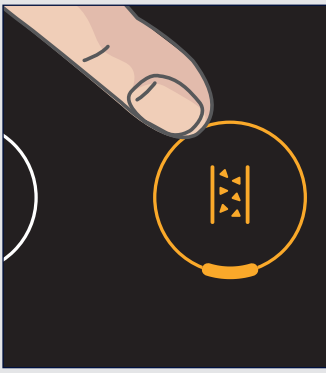 


GUIDE D'EXTRACTION

Selon votre choix de grains de café, il faudra peut-être régler la mouture pour obtenir une mouture plus fine ou plus grossière.

 Espresso parfait

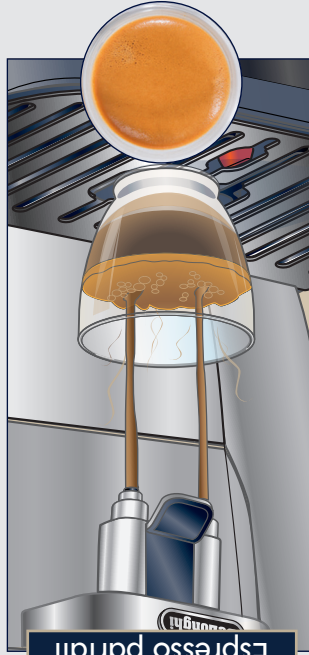

Under extracted

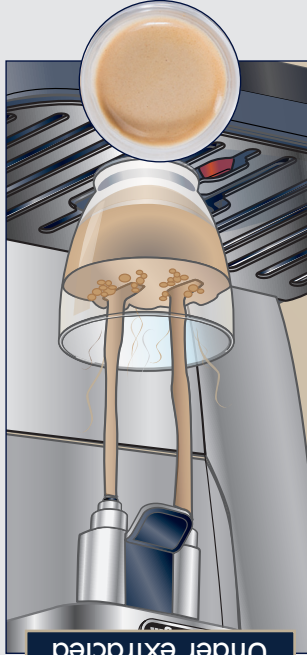 


Sur-extraction



- Coule comme du miel
- chaud
- Créma de couleur
- noisette
- Goût bien équilibré
- et persistant

Pour corriger le problème :

 - Régler le degré de mouture pour obtenir une mouture plus fine
- Sélectionner une intensité plus forte

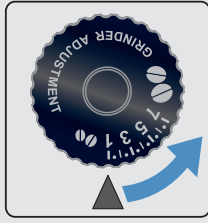




Pour corriger le problème :

- Régler le degré de mouture pour obtenir une mouture plus grossière
- Sélectionner une intensité moins forte

- Coule goutte à goutte
- ou pas du tout
- Créma très foncée et pas uniform



   PRÉPARER UN ESPRESSO

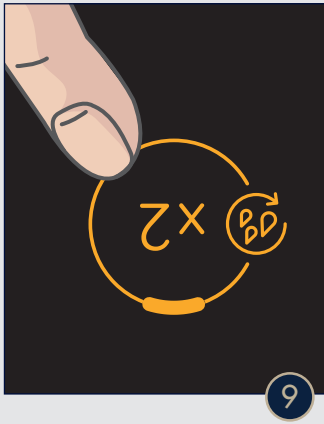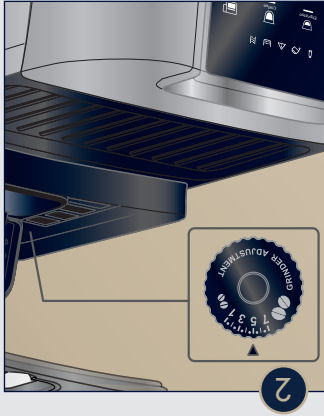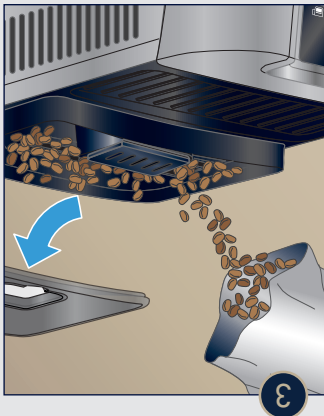

La première fois que vous utilisez la machine, préparez, puis jetez les 3 ou 4 premiers espressos. Si vous n'avez pas utilisé la machine depuis 3 ou 4 jours, effectuez un cycle de rinçage (appuyez et maintenez enfoncé le bouton X2 pendant environ 5 secondes).

2 Pour préparer l'espresso parfait, régler le moulin en consultant le « Guide d'extraction » à la page 9.

5 Sélectionner une boisson à partir de l'écran tactile. La préparation débute avec l'intensité et la quantité par défaut, qui peuvent être modifiées en personnalisant vos boissons.

6 Pour un espresso double, appuyer sur le bouton X2, puis sélectionner la boisson désirée.

 
PREMIÈRE MISE EN SERVICE

Enlever tous les autocollants et nettoyer tous les accessoires avec de l'eau chaude et un détergent doux, puis les sécher. Il faut amorcer la machine uniquement avant la première utilisation.


1 Brancher le cordon d'alimentation dans la prise. Le voyant d'eau s'allumera.

2 Remplir le réservoir d'eau avec de l'eau fraîche. Placer un grand récipient en dessous de la buse d'eau/de vapeur et de la sortie du café. Attention : de l'eau chaude s'écoulera de la machine.


4 Le voyant des paramètres commencera à clignoter. Appuyer sur le bouton des paramètres; les circuits d'eau internes commenceront à se remplir et l'appareil fait s'écouler de l'eau chaude par le bec verseur de café.

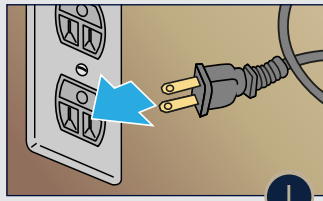

1

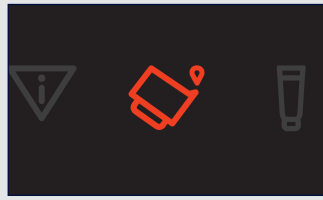 

2

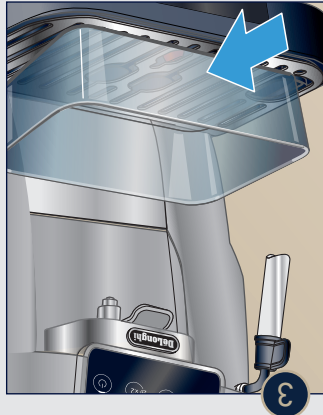 


3



 
4



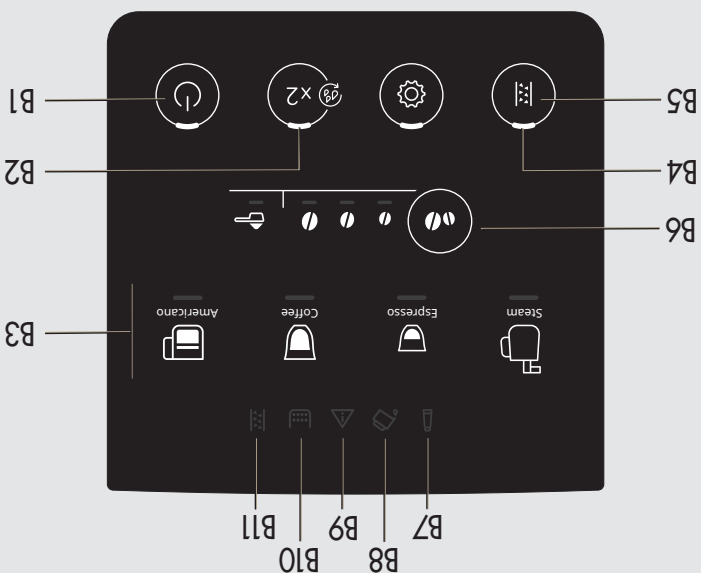


- B1. Bouton marche / arrêt
- B2. Bouton X2 / Rinçage
(appuyer et maintenir enfoncé pendant 5 secondes)
- B3. Boissons préprogrammées
- B4. Menu des paramètres
- B5. Bouton de détartrage
- B6. Sélecteur d'intensité et bouton café prémoulu
- B7. Voyant changement de filtre nécessaire
- B8. Voyant d'eau
- B9. Voyant d'alarme générale
- B10. Voyant du bac à marc
- B11. Voyant de détartrage nécessaire

 ACCESSOIRES INCLUS

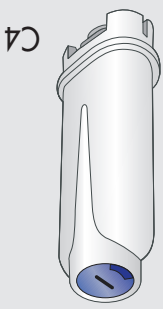

- C1**. Bandelette de test de dureté de l'eau
- C2**. Mesure à café
- C3**. Détartrant
- C4**. Filtre adoucisseur d'eau
(certains modèles seulement)

 DANS LA BOÎTE

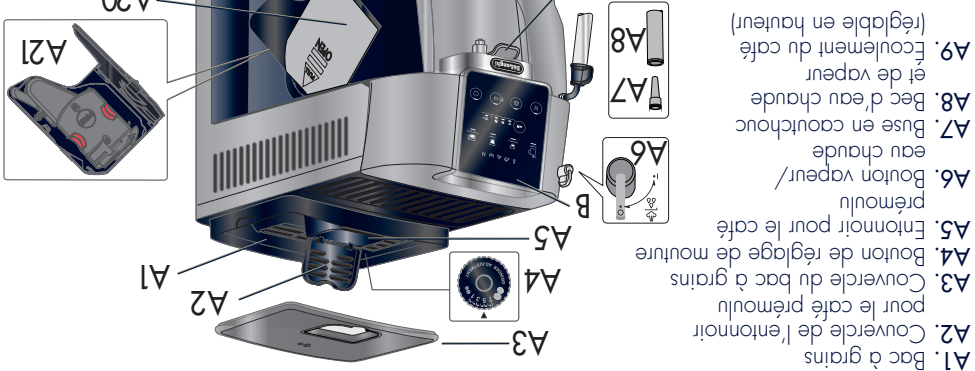

B. Panneau de commande



Guide de démarrage et Guide d'utilisation

Ce court guide n'explique pas toutes les fonctions de cette machine. Veuillez vous assurer de lire le guide d'utilisation ou complet avant d'utiliser cet appareil.

ENREGISTREZ FACILEMENT VOTRE MACHINE ET PROFITEZ D'AVANTAGE DE VOTRE EXPERIENCE ESPRESSO.

Enregistrez votre machine à espresso entièrement automatique et devenez membre du Club De'Longhi. Être membre vous permet de profiter davantage de votre expérience café.



OBTENEZ 1 AN DE GARANTIE SUPPLÉMENTAIRE LORSQUE VOUS ENREGISTREZ LE PRODUIT



RABAIS DE MEMBRE SUR LES ACCESSOIRES



SOLDES PRIVÉS EN LIGNE



SOUTIEN DES EXPERTS DE'LONGHI



COMMANDES FACILES




NOUVELLES ET EXCLUSIFS

Rabais pour les membres du Club De'Longhi : seulement les membres du Club recevront les offres spéciales sur les accessoires café.

ÉTAPE 1. PRENEZ UNE PHOTO

 - Prenez une photo de l'icône caméra, incluant les points.

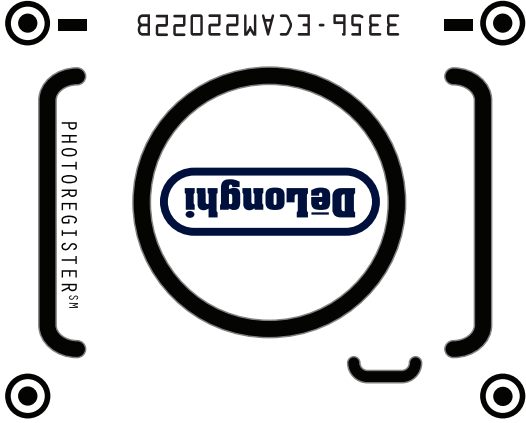

BESOIN D'AIDE?

- Visitez photoregister.com/help ou envoyez le message AIDE à 71403.
- Par téléphone : 1 800 945-0929
- En ligne : Delonghi.com

CONTACTEZ-NOUS



EN LIGNE : WWW.DELONGHI.PHOTO



MESSENGER @PHOTOREGISTER



ENVOYEZ LA PHOTO À 71403

- Envoyez la photo par SMS, Facebook Messenger ou la télécharger en ligne.



VISITEZ DELONGHI.COM



57132C8824_00_1223



ECAM22022B



VISITEZ DELONGHI.COM

DeLonghi

GUIDE DE DÉMARRAGE
RAPIDE



MAGNIFICA
START