

Scan this QR code for product information, videos, and assembly assistance.

HEAVY-DUTY FULL-MOTION TV WALL MOUNT



HAVE QUESTIONS?

Monday - Friday from 5:00am - 5:00pm PST



support@mount-it.com



(855) 925-5668



 


www.mount-it.com

Step 1a

Wood Stud Installation Option



- Use a stud finder to locate the center of the studs and hold the Template (#E) to the wall in the desired mounting location.
- Use a Bubble Level (#D) to ensure that the mount is level.
- Mark the center of the studs through the Template as shown.
- Drill holes in the marked locations using a 1/4" drill bit (6mm) to a depth of 3.5" (90mm)
- Hold the Wall Mount (#A) to the wall over the holes, check the level once again, and install the 4 Lag Screws (#W-A) and Washers (#W-C) then tighten until secure.

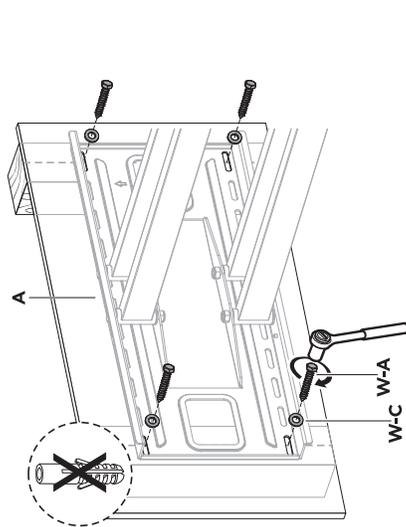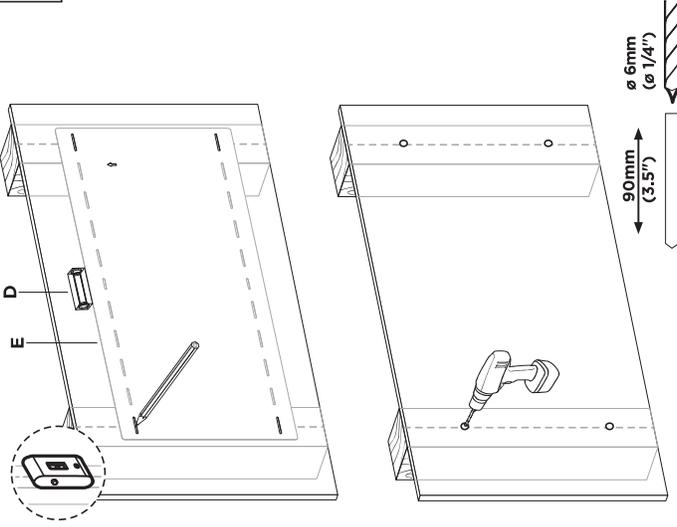

Step 1b

Concrete/Brick Installation Option


- Hold the Template (#E) to the wall in the desired mounting location.
 - Use a Bubble Level (#D) to ensure that the mount is level.
 - Mark the center of the studs through the Template, as shown.
 - Drill holes in the 6 marked locations using a 1/2" drill bit (12mm) to a depth of 3.7" (95mm).
- Note: Do not drill mounting holes into mortar (such as between bricks or stones) only drill and install into solid stone or concrete surfaces.**
- Clear dust or debris from the holes and insert the Concrete Anchors (#W-B) fully until flush with the wall. Hold the Wall Mount (#A) to the wall over the holes, check the level once again, and install the 6 Lag Screws (#W-A) and Washers (#W-C) then tighten until secure.

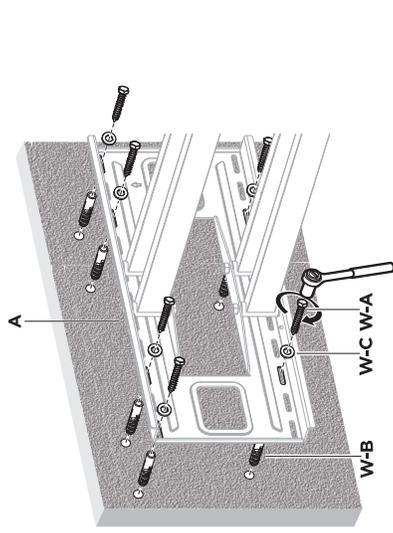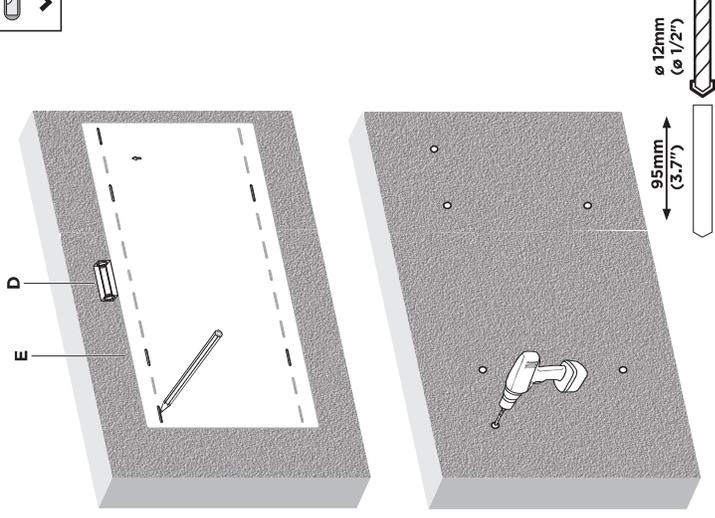

Step 2

Install the Plastic Covers


- Slide the Plastic Covers (#1) onto each end of the horizontal bracket, as shown.

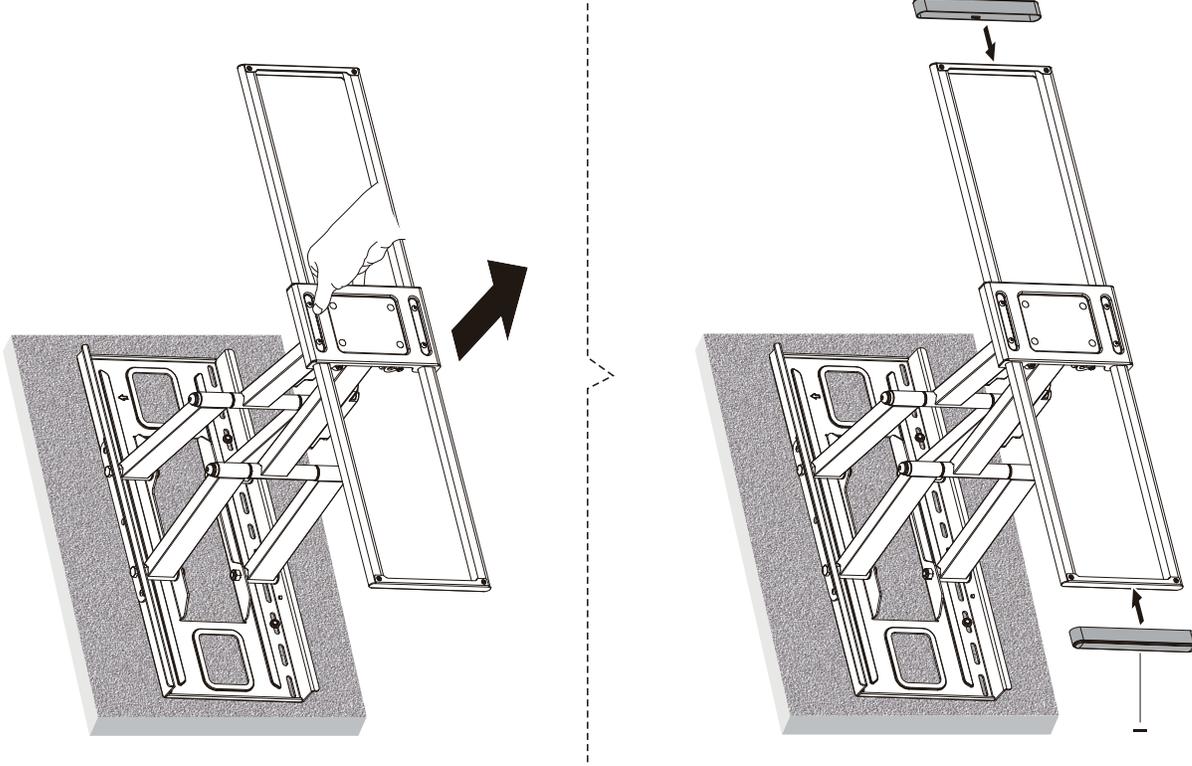

Step 3



Attach the VESA Brackets to the TV

- Select the appropriate size mounting bolt (Select one size #M-A, M-B, M-C or M-D) and washer (#M-E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your display's user manual or contact the display's manufacturer for sizing information. If necessary, use the included spacers (#M-F, M-G) between the mount and the screen as shown above to adjust the length of the mounting bolt.
- Attach the VESA Brackets (#B, #C) to the TV as shown using the selected bolts. The latches will be on the inside of the two arms for the majority of VESA configurations.

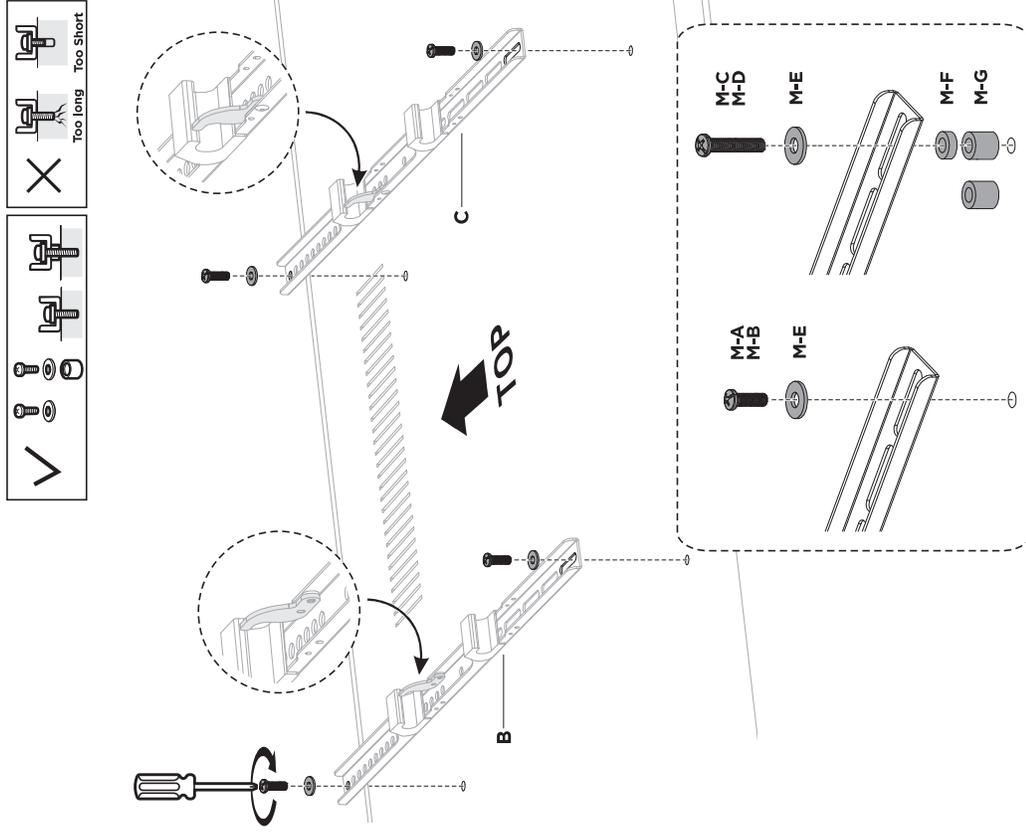

Attach the VESA Brackets to the TV: VESA 200x200


- Select the appropriate size mounting bolt (Select one size #M-A, M-B, M-C or M-D) and washer (#M-E) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your display's user manual or contact the display's manufacturer for sizing information. If necessary, use the included spacers (#M-F, M-G) between the mount and the screen as shown above to adjust the length of the mounting bolt.
- Attach the VESA Brackets (#B, #C) to the TV as shown using the selected bolts. For VESA patterns 200x200, install in the configuration shown here so that the latches are facing the outside edges of the TV.

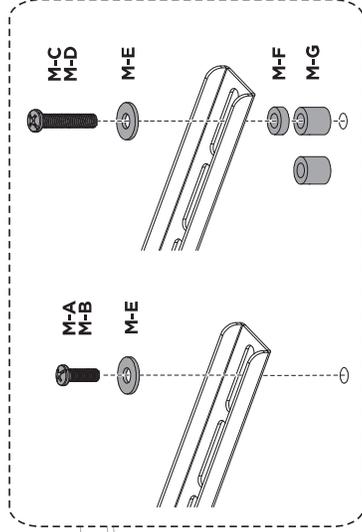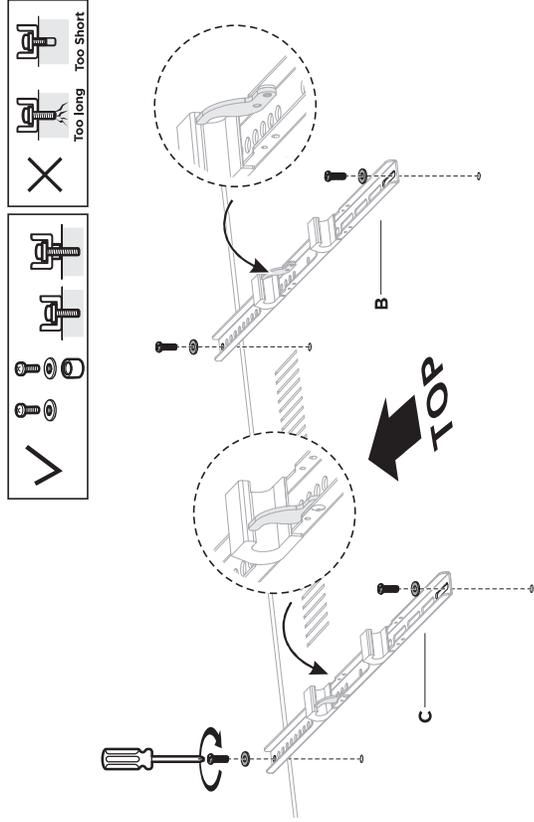

Step 4


Hang the TV on the Wall Mount

- It is recommended that you use the assistance of a second person for this step. Hang the TV on the wall mount as shown so that the VESA brackets hook onto the top and bottom horizontal bars of the wall mount.

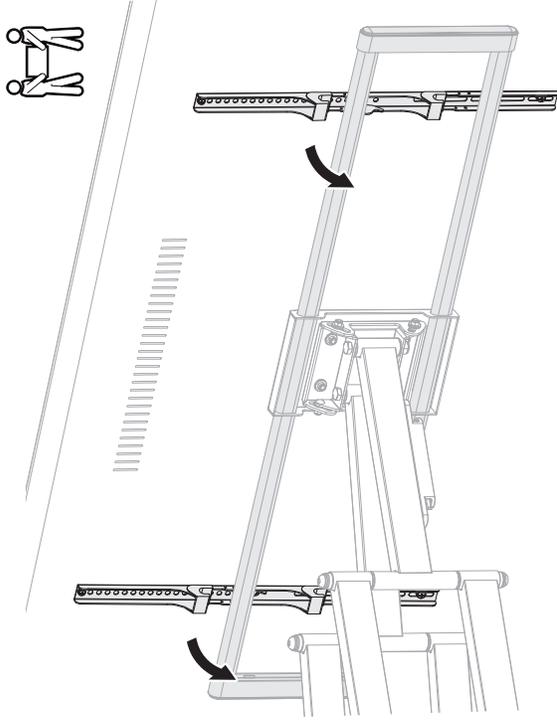

Engage the Latches


- Flip the latches up on both VESA Brackets, then secure them in place using the Security Screws (#F).

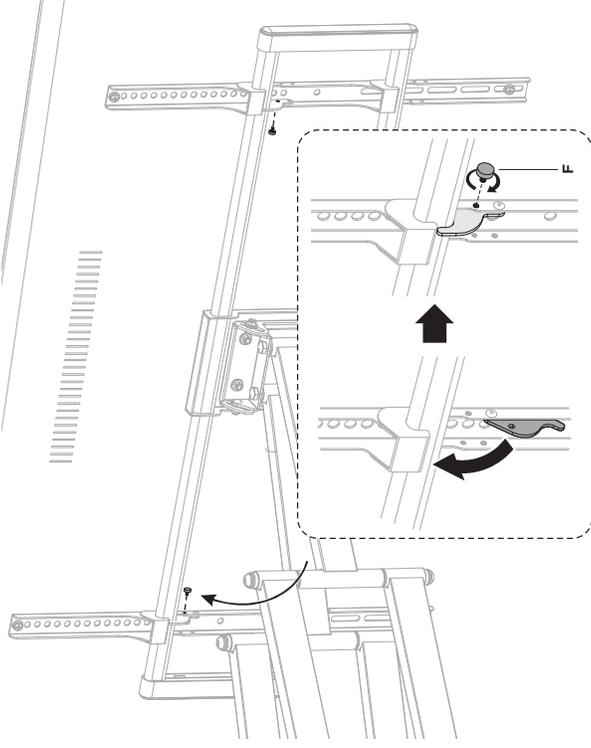

Step 5



Cable Management

- Use the integrated cable management clips and the Cable Ties (#G) to route cables along the mount arm.

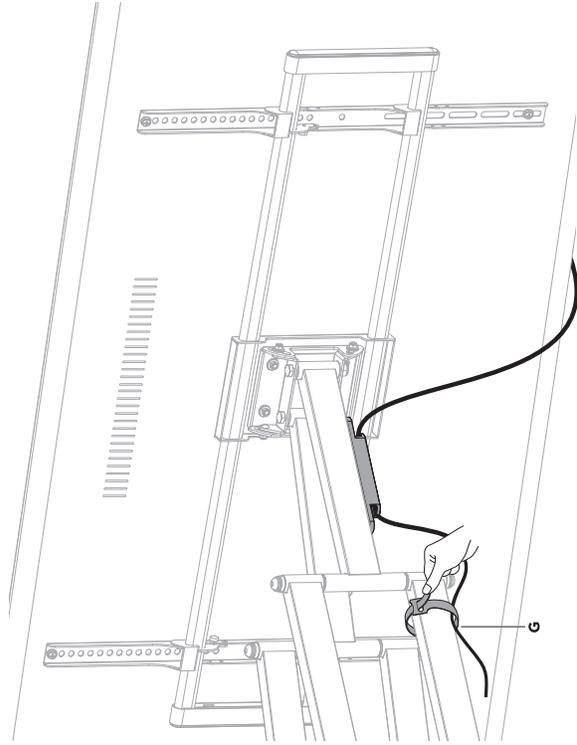


Level Adjustments

- To level the screen $\pm 5^\circ$ left or right, slightly loosen the 4 bolts shown here behind the TV, adjust to the desired level and then tighten the bolts back in place.

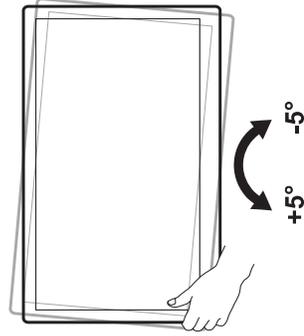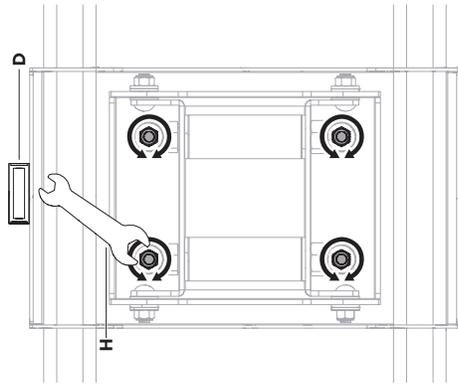

Tilt and Swivel Adjustments

- To tilt the screen $+5^\circ$ and -15° , slightly loosen the 4 bolts shown here behind the TV, adjust to the desired level and then tighten the bolts back in place.
- The screen can swivel $\pm 60^\circ$ side to side.

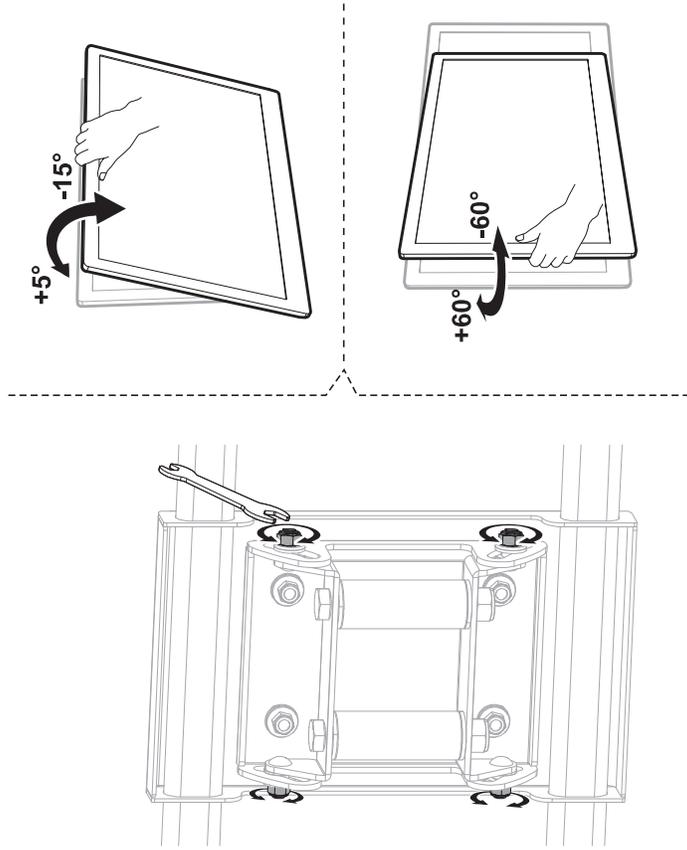

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.



support@mount-it.com

Available by phone **Monday - Friday from 5:00am to 5:00pm** PST.



(855) 925-5668

Chat live with an agent on our website!



www.mount-it.com