


# INSTALLATION & USER MANUAL

## CEILING FAN WITH LIGHT

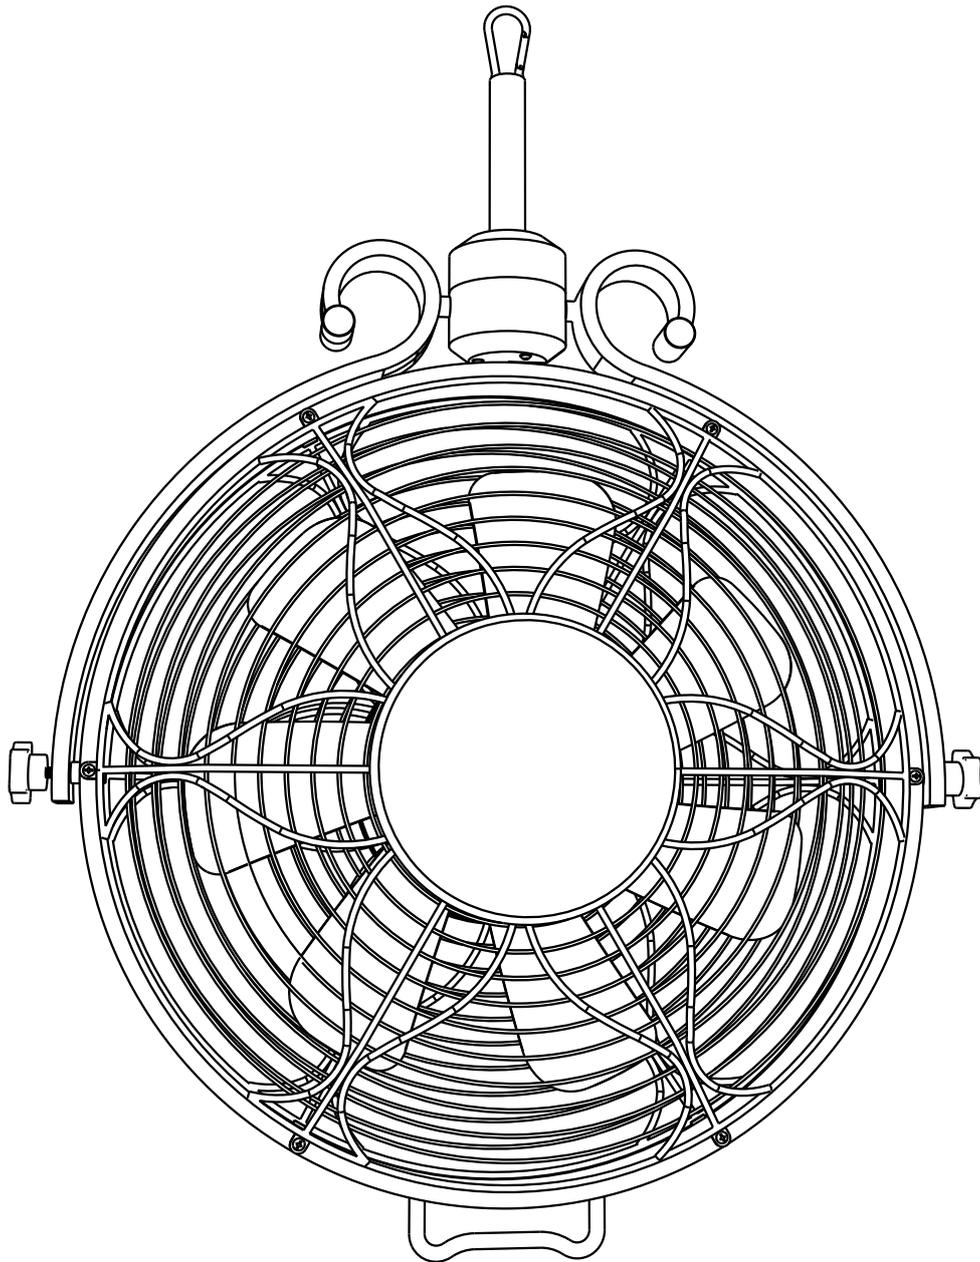

ITEM # 32082

Customer Service: [support@ceilingfanhelp.com](mailto:support@ceilingfanhelp.com)

# Table of Contents

Table of Contents.....	2	Installation Instructions .....	4-8
Safety Information.....	2	Remote Control Operation.....	9
Dimension Reference.....	3	Troubleshooting.....	10
Hardware Included.....	3		
Fan Parts Included.....	3		

# Safety Information

## READ AND SAVE THESE INSTRUCTIONS.

1. To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before you begin.
2. All wiring must be in accordance with the National Electrical Code “ANSI/NFPA 70” and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL Listed outlet boxes marked Acceptable for Fan Support of “35 lbs (15.9 kg) or less.”
4. Do not place objects in the path of the blades.
5. To clean the fixture, turn off the power, wait for it to cool, and wipe the fixture with a clean dry, soft cloth.
6. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and ungrounded conductor on the other side of the outlet box.
7. All screws must be checked and retightened where necessary before installation.



**WARNING:** To reduce the risk of electrical shock or fire, not use this fan with any solid-state fan speed control device. It will permanently damage the electronic circuitry.



**WARNING:** To reduce the risk of fire or injury do not use this product in conjunction with any variable (rheostat) wall control.



**WARNING:** To reduce the risk of personal injury, do not bend the blade brackets when installing the rackets balancing the blades, or cleaning the fan. Do not insert objects.



**WARNING:** To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked “acceptable for fan support of 35 lbs. (15.9 Kg) or less” and use screws provided with the outlet box.



**WARNING:** To avoid possible electrical shock, turn the electricity off at the main fuse box before wiring.



**WARNING:** Do not use this fan with isolating wall control/switches or variable wall controls (rheostats).



**CAUTION:** To reduce the risk of personal injury, use only the screws provided with the outlet box.



**CAUTION:** Please use carefully when working around or cleaning the fan to avoid injury or damage of fan.




**CAUTION:** The fan must be mounted with a minimum of 7.5 feet (2.3 Meter) clearance from the trailing edge of the blades to the floor.




**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

## Dimension Reference

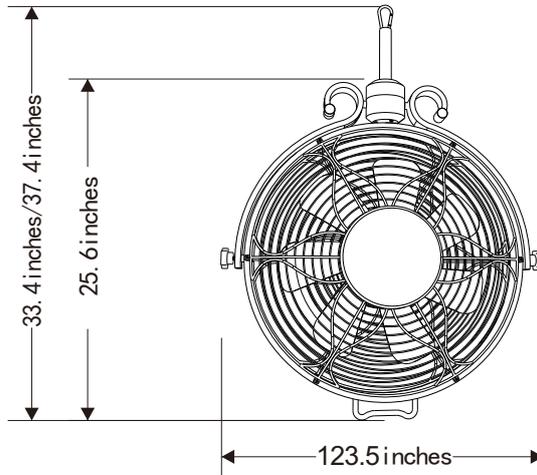

## Hardware Included

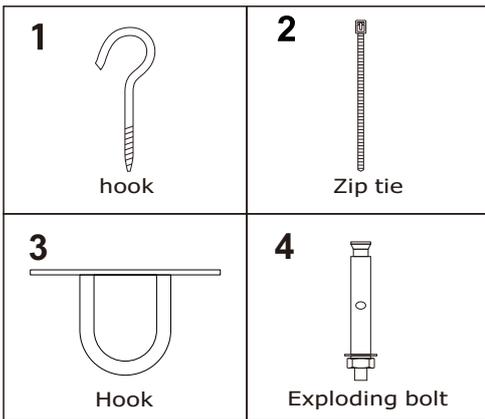


### Hardware Package

### Quantity

1.Hook	1
2.Zip Tie	3
3.Hook	1
4.Exploding Bolt	2

## Fan Parts Included

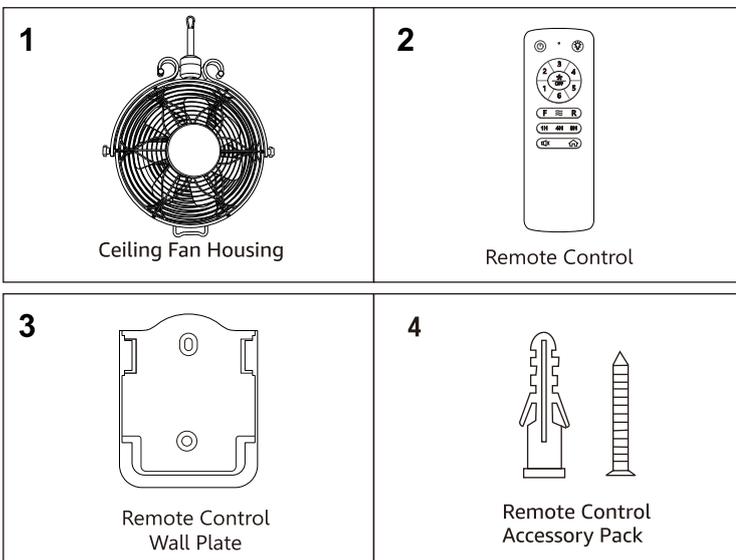

### Item Name

### Quantity

1.Ceiling Fan Housing	1
2.Remote Control	1
3.Remote Control Wall Plate	1
4.Remote Control Accessory Pack	2

## Installation Instructions

### Energy Saving Usage

- Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

#### Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7.5 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7.5~9 feet above the floor to achieve optimal airflow.

#### Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to save energy.

#### Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

## Installation Instructions

---

### Electrical and Structural Requirements

- Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 35 pounds. Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing.
- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

#### **WARNING**


To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.

#### **WARNING**

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.


# Installation Instructions

## Installation

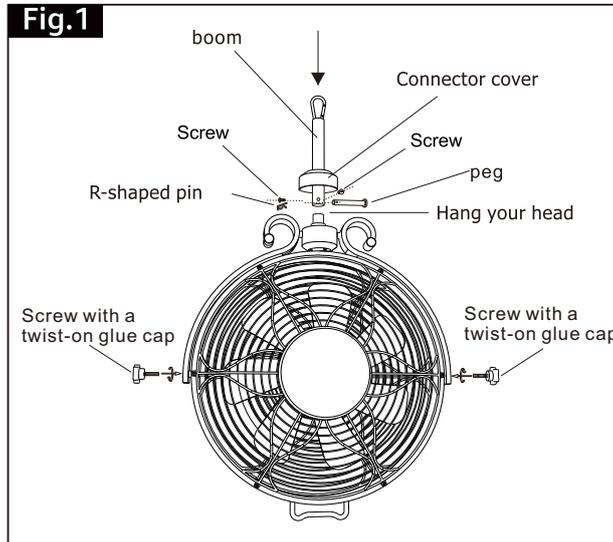

- Install the hook


Insert the lifting rod into the lifting head, Insert the lifting rod into the lifting head, insert the pin into the lifting rod hole, insert the R-pin into the small pin hole, and the lifting rod with a screw to prevent it from shaking, and finally lower the coupling cover.

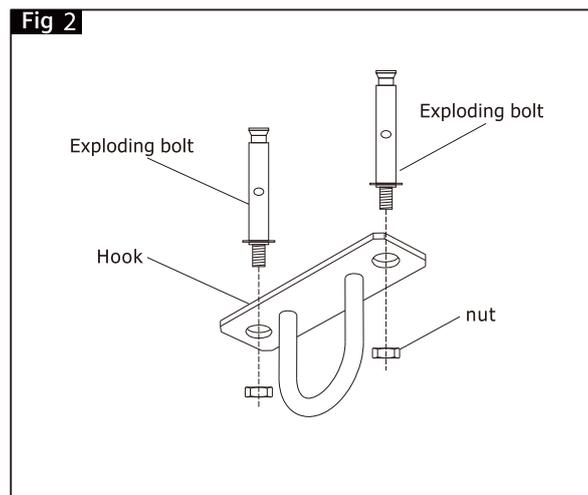

Drill two holes with a diameter of 6mm and a spacing of 72mm on the ceiling, insert the explosive screws into the, place the hoist ring hole over the explosive screws, and tighten the nuts.

## Installation Instructions



**Fig. 3**

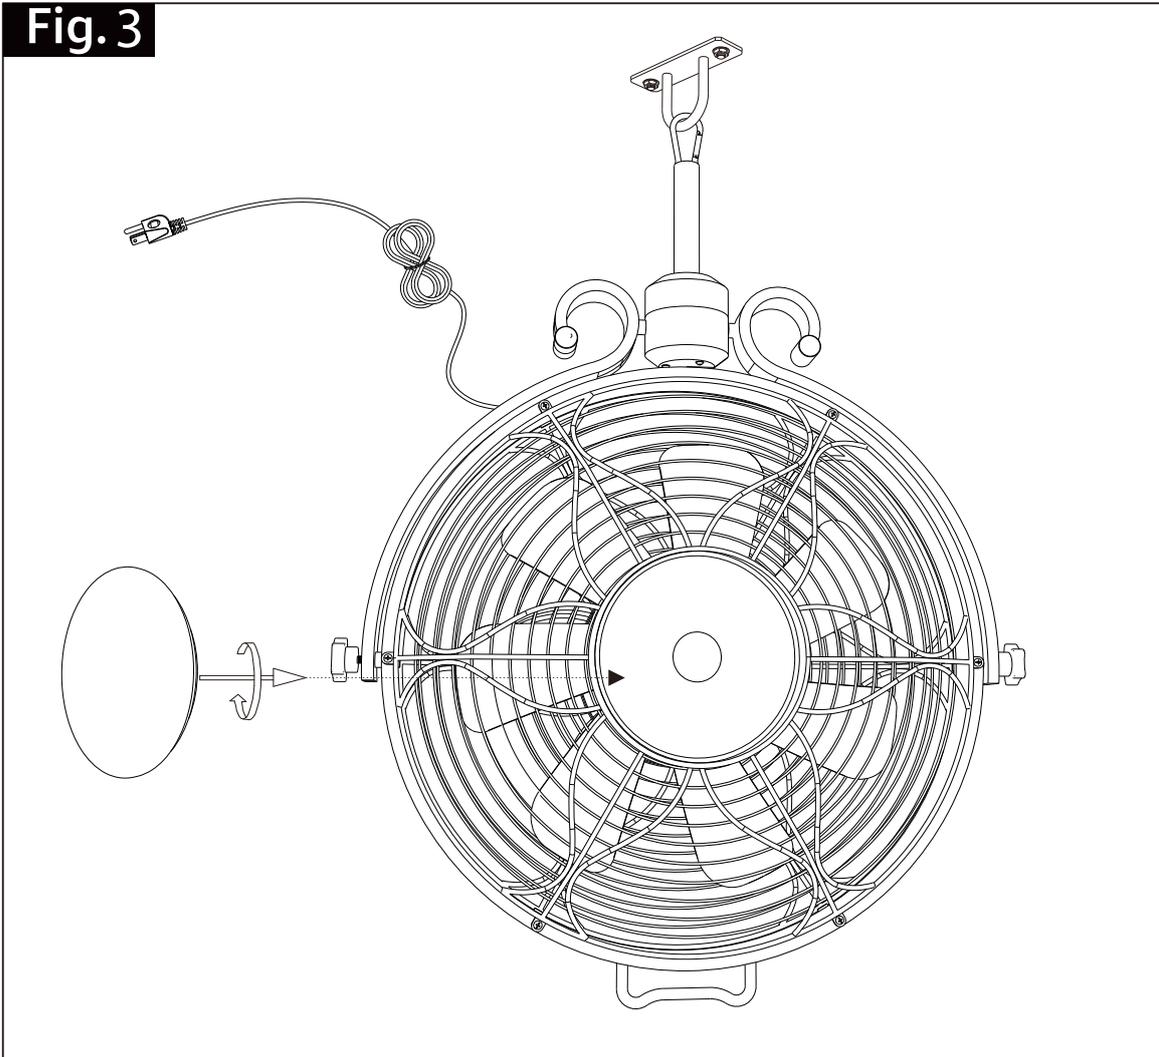

- Fixed

Wrap the lifting rod and hook with a tie strap to secure them tightly, reducing the wobble caused by the fan's rotation. Place the light into the light pan and tighten it by turning.

# Remote Control Operation

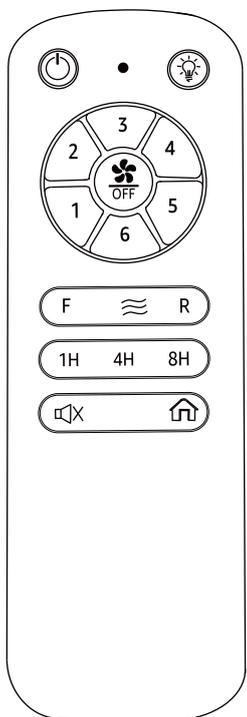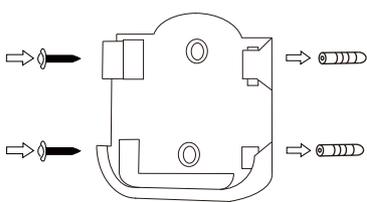	All off	
	Light on/off (light memory after 10 seconds) CCT switch (fast click to switch)	
1-6	Fan speed setting	
	Fan on/off	
	Natural wind	
F	Forward	
R	Reverse	
1H 4H 8H	Quick timer setting (1H-4H-8H)	
	Security Mode: Fan and light run for 15 minutes every 2 hours.	
	<b>Mute function</b>	
		<p><b>Installing Wall Plate:</b> Attach wall plate using the two provided screws.</p> 

To operate the fan, please install 2 AAA batteries (**not included**) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, plug off for at least 60 seconds.
2. Plug on the ceiling fan, then press and hold the "" button for 3-5 seconds.
3. Wait for a beep sound, then release the button. Pairing is complete. If the pairing process is unsuccessful, please repeat the above steps.

# Troubleshooting

Problem	Solution
The fan will not start.	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check the main and branch circuit fuses or breakers.</li> <li><input type="checkbox"/> Check the line wire connections to the fan.</li> <li><input type="checkbox"/> Check the battery in the remote control.</li> <li><input type="checkbox"/> Ensure you are in the normal range of 7.5 feet.</li> <li><input type="checkbox"/> Turn the main power source off and then restore the power to the unit. Within 3 seconds of turning the fan's AC power ON, press and hold the "OFF" button for 5 seconds to complete the "pairing process". Once the receiver has detected the set frequency, the LED light of the fan will blink once.</li> </ul>
The fan is noisy.	<ul style="list-style-type: none"> <li><input type="checkbox"/> Ensure all motor housing screws are snug.</li> <li><input type="checkbox"/> Ensure the wire nut connections are not rattling against each other.</li> <li><input type="checkbox"/> Allow a 24-hour "breaking in" period. Most noises associated with a new fan disappear during this time.</li> <li><input type="checkbox"/> Ensure the canopy is a short distance from the ceiling. It should not touch the ceiling.</li> <li><input type="checkbox"/> Ensure your outlet box is secure and rubber isolator pads were used between the mounting plate and outlet box.</li> </ul>
The fan is wobbles.	<ul style="list-style-type: none"> <li><input type="checkbox"/> This fan has a one-piece blade design, fan blade balancing kit is not applicable to this product.</li> <li><input type="checkbox"/> If the fan wobbles, disconnect the power by removing the fuses or turning off the circuit breakers from the main power source, then check with the following: Remove the grille from the fan body by first removing the decorative cap at the center of the grille by rotating the decorative cap anti-clockwise, use a Phillips screwdriver to tighten the screw inside of the plastic threaded nipple.</li> <li><input type="checkbox"/> If the wobbling persists, adjust the angle of the grille slightly to make it move perpendicular to the ground.</li> <li><input type="checkbox"/> If the problem persists, please contact our customer service.</li> </ul>
Fan moves backwards and forwards when turned on.	<ul style="list-style-type: none"> <li><input type="checkbox"/> This is normal start-up procedure for DC motor fans. The partial movement during start-up is the result of the DC motor aligning the internal magnetic poles for proper motor operation. This design saves electricity and allows the fan to operate much quieter than standard AC motor fans.</li> </ul>