

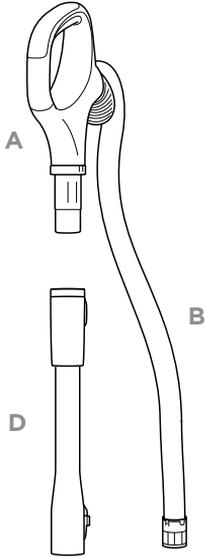
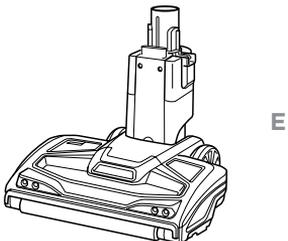



# WHAT'S INSIDE:

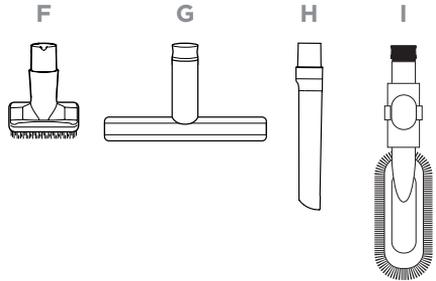

- A Handle
- B Hose
- C Vacuum Pod
- D Wand
- E Motorized Floor Nozzle
- F Dusting Brush
- G Wide Upholstery Tool
- H 12" Crevice Tool
- I Multi-Angle Dusting Brush

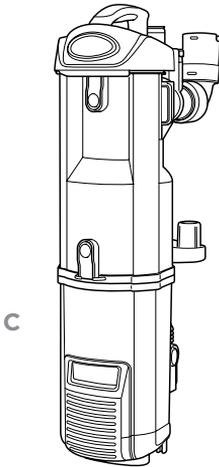

For additional parts and accessories, visit [sharkaccessories.com](http://sharkaccessories.com)

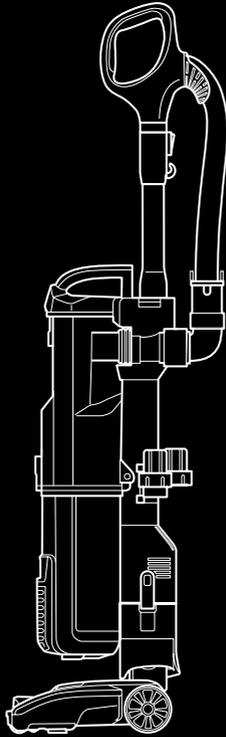

# ***Shark***<sup>®</sup>

**For questions or to register your product, contact us at  
1-800-798-7398 or visit us online at [sharkclean.com](http://sharkclean.com)**



**@sharkcleaning**

©2017 SharkNinja Operating LLC. ROTATOR and SHARK are registered trademarks of SharkNinja Operating LLC. DUOCLEAN and JOIN THE CLEAN EVOLUTION are trademarks of SharkNinja Operating LLC.

NV201\_QSG\_PLT\_Mv2

Please be sure to read the enclosed Shark® Owner's Guide prior to using your unit.

# Shark®

SLIM

THE ONLY  
**duo clean™**  
DUAL BRUSHROLL


NV201

## QUICK START GUIDE


Use this Quick Start Guide  
to learn about your new  
vacuum's great features.




# ASSEMBLY

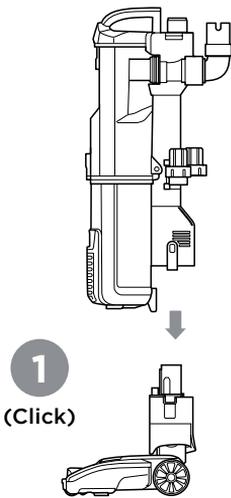


Place pod onto motorized floor nozzle.

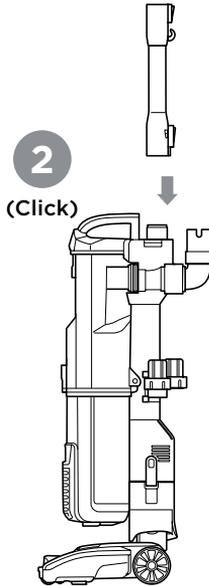

Insert wand into top of pod.

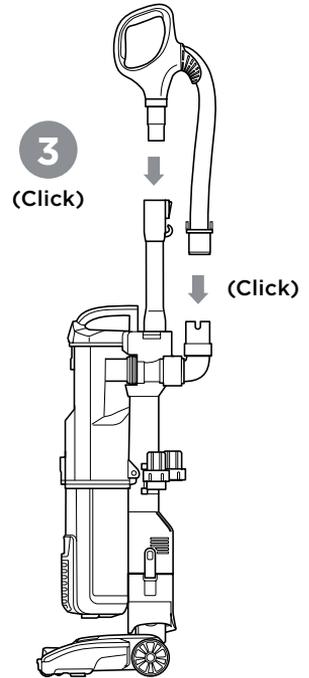

Insert handle into top of wand, then connect hose to back of pod, pressing until it clicks into place.

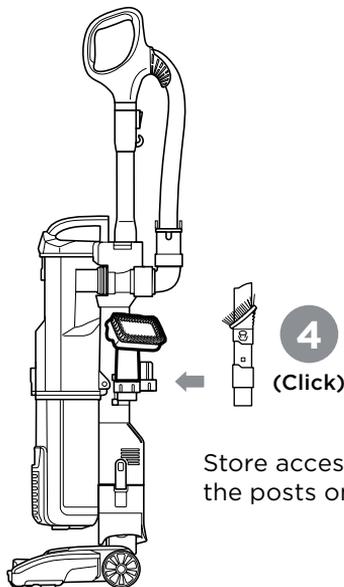

Store accessories on the posts on the pod.

# Join The Clean Evolution.™

When it comes to  
cleaning, we're not afraid  
to get our hands dirty.

At Shark®, we're constantly  
working to evolve and  
innovate products to meet  
the needs of people like  
you. Because our job is  
to make 5-star-worthy  
products that make your  
life a whole lot easier.

# HAVING TROUBLE?

## ISSUE

---

Vacuum is not picking up debris. No suction or light suction.

### **Solution**

Empty dust cup, clean filters, check all openings for blockages.

## ISSUE

---

Vacuum lifts area rugs.

### **Solution**

Turn off the unit to disengage the brushroll, then restart by pushing the Power button.

## ISSUE

---


Brushroll and/or Soft Roller does not spin. The Brushroll Indicator Light on the floor nozzle turns red.

### **Solution**

Turn off and unplug the vacuum immediately. Remove any blockages, then reconnect and turn vacuum back on. If Brushroll Indicator Light on the floor nozzle is green, the blockage has been successfully cleared. If the light is still red, please contact customer service at 1-800-798-7398.

1

## UPRIGHT

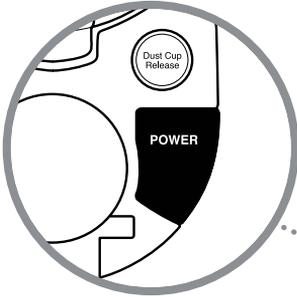
**Power**

Push the POWER button to turn the vacuum on or off.

**Brushroll Operation**


In Carpet mode  
brushroll spins fast  
(green light)

In Hard Floor mode,  
brushroll spins slowly  
(no light)

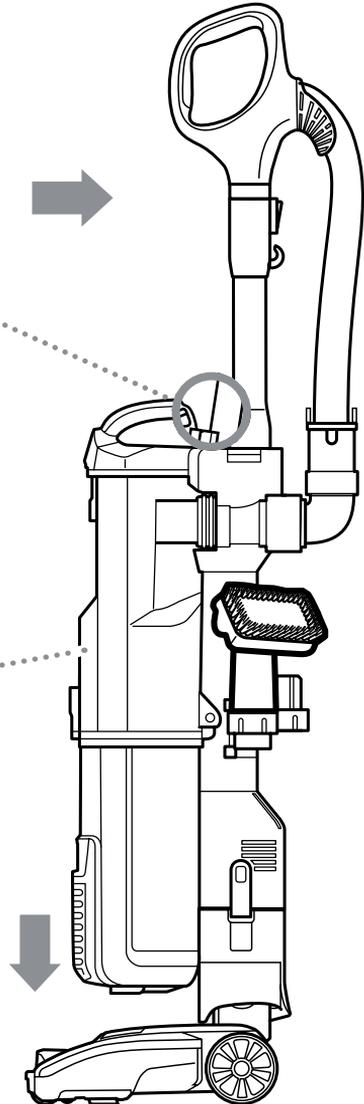

2

## ABOVE THE FLOOR

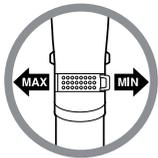


**Suction Control**




**Handle Release**




**Wand Release**

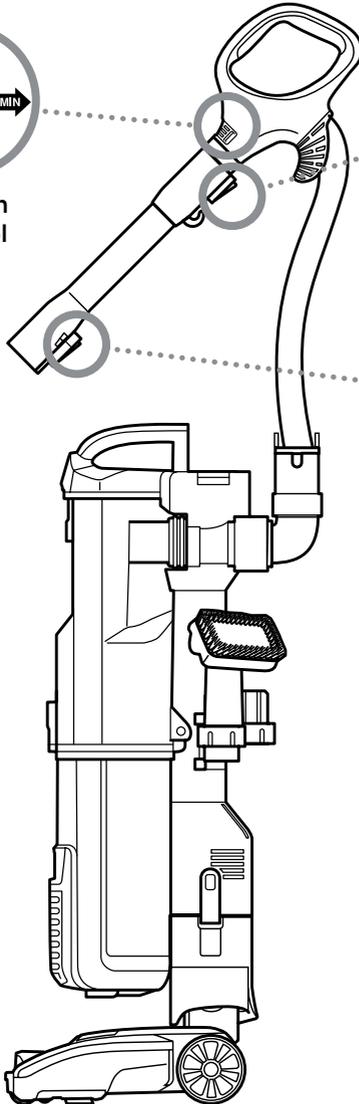

Attach any of the specialized cleaning accessories to the handle or wand.

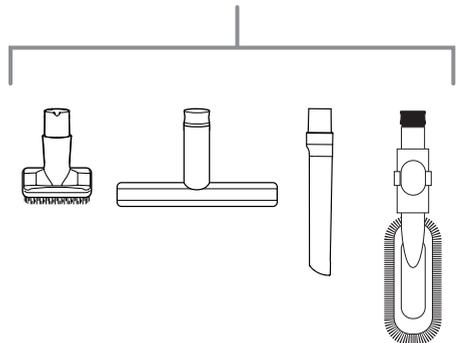

# DUOCLEAN™ TECHNOLOGY

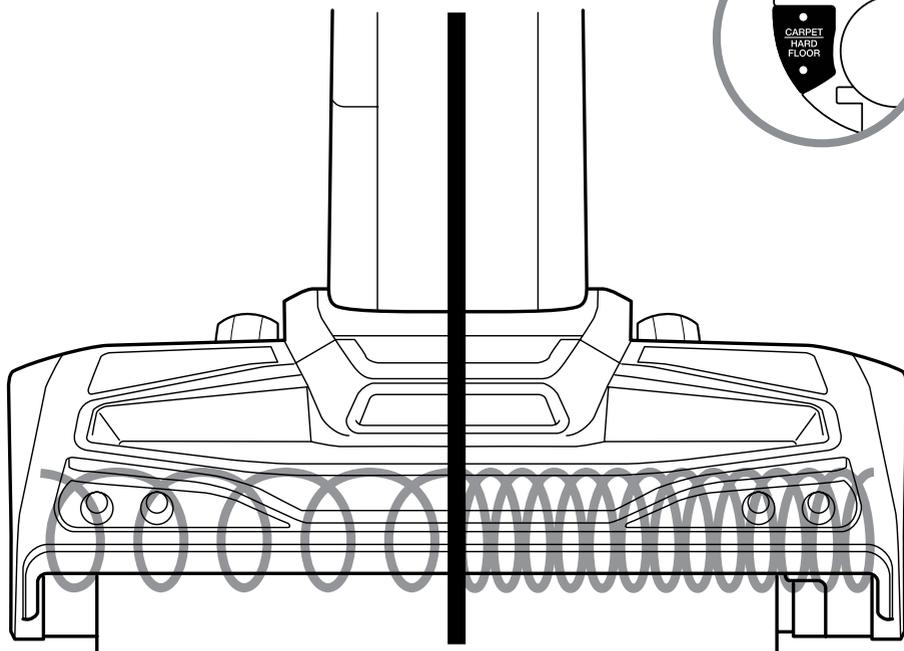

## ON FLOORS

Direct engagement with the Soft Roller removes large particles, small particles, and stuck-on dust.

### Hard Floor

Gentle on bare floors and delicate area rugs.

## ON CARPETS\*

The Soft Roller pulls in large particles, while the deep-cleaning bristle brush removes embedded fine dirt.


### Carpet

Optimized brushroll speed for carpets.

\* For deep cleaning per ASTM F 608 (embedded dirt in carpet) please use in Carpet mode with suction control closed.

# MAINTENANCE

## Empty dust cup after each use

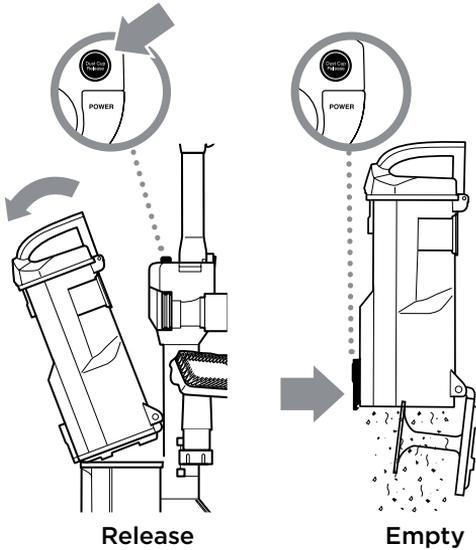

### TIP:

Wash filters once every month to keep the suction strong.

Rinse filters and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.

## Maintaining the Soft Roller

Lift out the brushroll to easily remove any string, hair, or debris that may be wrapped around it. Slide the Soft Roller access button up to remove the Soft Roller for cleaning.

