

Using your tripod

- 1 To adjust your camera to portrait position, loosen the vertical tilt lock knob, rotate the plate up to 90°, then tighten the knob.



- 2 To adjust horizontal tilt, turn the pan locking knob counter-clockwise, tilt the tripod head as desired, then tighten the handle.
- 3 To pan, turn the pan locking knob counter-clockwise, pan the tripod head, then tighten the knob to lock in place.
Note: For maximum stability, always make sure that your camera lens is over a leg.
- 4 To adjust the vertical tilt, loosen the vertical tilt handle, then use the handle to adjust the vertical position. Tighten the vertical tilt handle.

Converting to a monopod

- 1 Loosen the center column locking screw, and remove the center column/monopod leg (with the pan head).
- 2 With one hand, grab all the twist screw leg locks on the monopod leg and twist them counterclockwise to loosen them.
- 3 Extend the leg sections, starting with the thickest section, to the height you want.
- 4 Twist each leg lock clockwise to tighten it.
Caution: Incorrectly securing a leg lock can cause the monopod leg to retract unexpectedly and could result in damage to the monopod or to the attached camera or camcorder



Storing your tripod

- 1 Remove your camera.
- 2 Loosen the center column locking screw. Lower the column as far as it will go, then tighten the locking screw.
- 3 Collapse the legs.
- 4 Press the leg release buttons and push the legs in.
- 5 Store the tripod in the carrying case.

Important safety instructions

- Make sure that all leg locks are correctly tightened and that the legs are fully opened before use.
- Do not carry or transport your tripod with camera equipment attached (for example, over your shoulder or cradled in your arms).
- Do not expose your tripod to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use only a mild detergent and wipe dry with a soft, lint-free cloth.
- Do not exceed the load limit of this tripod.

Specifications

- Maximum operating height : 66.5 in. (168.9 cm)
- Minimum operating height: 22.64 in. (57.5 cm)
- Folded height: 24.8 in. (63 cm)
- Net weight: 4.3 lbs (2 kg)
- Max operating load: 11 lbs (5 kg)
- Number of leg sections: 4
- Quick release thread: 1/4 in. (0.6 cm)
- Material: aluminum alloy

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, call 800-305-2204 (U.S. and Canada) or 01-800-926-3020 (Mexico)
www.dynexproducts.com

DYNEX is a registered trademark of BBY Solutions, Inc.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 BBY Solutions, Inc. All Rights Reserved.

DYNEX

DX-TRPMN665 66.5" Tripod-Monopod Combo




Before using your new product, please read these instructions to prevent any damage.

Package contents

- Tripod
- Carrying case
- *Quick Setup Guide*


Features

- 3-way pan head with slide quick release plate
- Smooth fluid movement for cameras up to 11 lbs (5 kg)
- Center column converts to a monopod that extends 59.3 in. (150.6 cm)
- Independent legs spread with three angle adjustments
- Reversible tripod leg

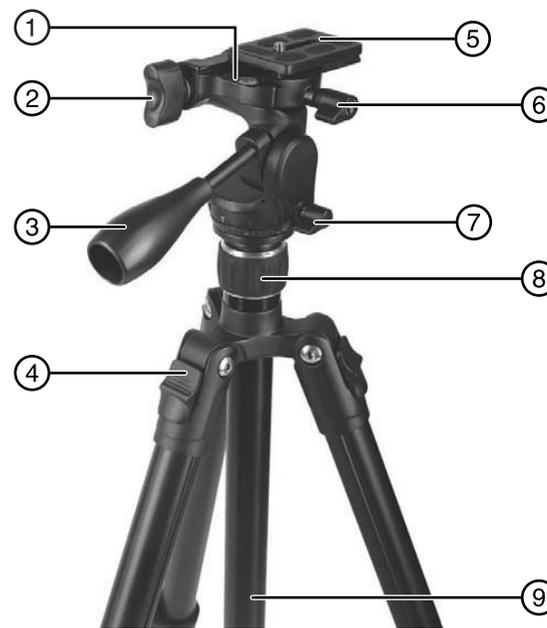


Setting up your tripod

- 1 Open the flip-lever leg locks on each leg.
- 2 Extend the leg sections from the top down (thickest section first) to reach the height you want.

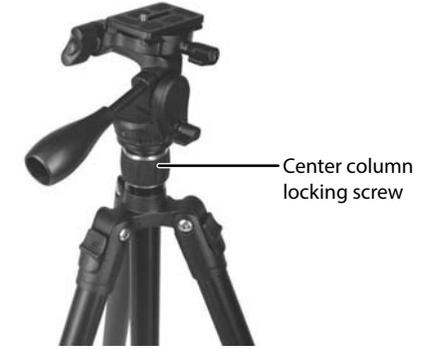

- 3 Close the flip-lever leg locks on each leg.
Caution: Incorrectly securing a leg lock can cause the tripod leg to retract unexpectedly and could result in damage to the tripod or to the attached camera or camcorder.
- 4 Adjust the height of the center column by loosening the center column locking screw, raising the center column to the height you want, then tightening the locking screw.
- 5 To set the angle position of the legs, press the leg release buttons and lift the tripod leg.
- 6 To remove the mounting plate, turn the quick-release plate locking knob counter-clockwise to loosen it, then turn the quick-release plate locking knob open, then lift the mounting plate to remove it.

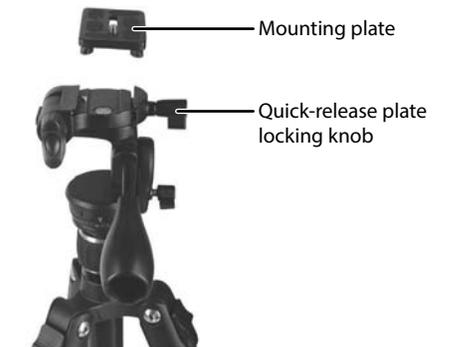

- 7 Align the bottom of your camera or camcorder with the 1/4" mounting screw, then secure your camera or camcorder to the plate with the screw. The screw should be tight.
- 8 To attach the mounting plate to your tripod, loosen the quick-release plate locking knob, then slide the plate onto the tripod head. Tighten the quick-release plate locking knob.

#	Item	Description
1	Leveling bubble	The quick release plate is level when the bubble is in the center.
2	Vertical tilt lock knob	Adjusts vertical tilt up to 90 degrees.
3	Vertical tilt lock handle	Adjusts vertical tilt for head.
4	Leg release button	Lets you adjust the leg angle position
5	Mounting plate	Holds your camera.
6	Quick-release plate locking knob	Secures the quick-release plate to the tripod.
7	Pan locking knob	Locks the tripod head so that it will not rotate horizontally.
8	Center column locking screw	Locks the center column in place.
9	Center column/monopod leg	Provides quick height adjustment.
10	Flip-lever leg locks	Locks the legs in place.
11	Rubber feet	Provide a secure, non-slip footing for your tripod.