


PACKAGE CONTENTS

- 7-outlet surge protector
- *Quick Setup Guide*

FEATURES

- Protects equipment from damaging power surges and spikes
- 3-line protection guards hot, neutral, and ground lines
- Reduces EMI/RFI (electromagnetic interference and radio frequency interference) on power lines that can interfere with equipment performance
- Six standard-spaced outlets and one wide-spaced outlet support a variety of electronics
- One USB-A port (12W) and one USB-C port (PD 20W) charge smartphones and tablets
- 3-prong plug connects directly into walls, providing a low-profile appearance
- LED indicators show when devices are grounded and protected
- 6 ft. (1.83 m) power cord with offset plug and wall mounting capability for flexible placement

OVERVIEW

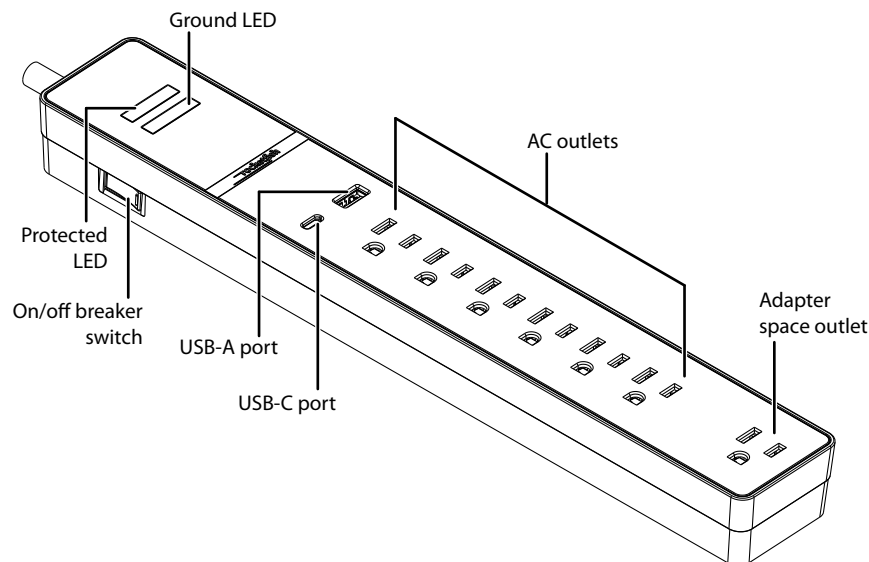

Before using your new product, please read these instructions to prevent any damage.

USING YOUR SURGE PROTECTOR

- 1 Press the side breaker switch to turn on and off or reset the surge protector after a circuit overload.
- 2 USB ports provide individual power with USB-C 20W and USB-A 12W. Both in use will not affect output power.
- 3 The Protected LED lights when surge protection is working. Replace the surge protector if it turns off.
- 4 The Ground LED lights when a properly grounded AC outlet is detected. If this LED does not light, contact a certified, licensed electrician to inspect your wiring.

SAFETY PRECAUTIONS

- **RISK OF ELECTRIC SHOCK** – Use only in dry locations and only indoors.
- **DO NOT** plug into another relocatable power tap or extension cord.
- **DO NOT** “daisy chain” surge protectors.
- **DO NOT** use with any aquarium equipment.
- **DO NOT** use if correctly grounded outlets are not available.
- This device features internal protection that will disconnect the surge protective component at the end of its useful life and Auto Shutdown this device. At this time, no output power will be provided to AC outlets and DC ports and device needs to be replaced.

TROUBLESHOOTING

Surge protector switches off

- Try a different outlet.
- One of your devices may have tripped the circuit breaker. Remove devices until you find the one tripping the circuit breaker, then turn your surge protector back on.
- Contact a certified, licensed electrician to inspect your outlets.

Protected LED doesn't light

- Your equipment is no longer protected. Replace the surge protector.

Your surge protector is warm during use

- This is normal.

Connected USB devices charge slowly

- The output of the USB ports may not match your device's requirements. Check your device's documentation for more information.

SPECIFICATIONS

- **Dimensions without power cord (H×W×D):** 1.35 × 2.12 × 13.61 in. (3.43 × 5.39 × 34.57 cm)
- **Weight:** 1.5 lbs (10.89 kg)
- **Plug style:** Right-angle offset
- **Cord length:** 6 ft. (1.8 m)
- **Total USB ports:** two

Electrical specifications:

- **Load rating:** 15 amps
- **Line voltage:** 120V AC @ 60 Hz
- **Surge protection:** 3 lines (L-N / L-G / N-G)
- **Maximum surge current:** 120,000 amps
- **Maximum energy dissipation:** 2,160 joules
- **Clamping voltage:** 400V L-N, 500V L-G and N-G
- **EMI/RFI noise filtering:** Up to 47 dB
- UL-1449 certified

Other specifications:

- **USB output:** USB-C 20 W, USB-A 12 W

LEGAL NOTICES

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

\$200,000

Connected equipment limited warranty.
Certain restrictions apply.
See www.rocketfishproducts.com for details.

LIMITED LIFETIME WARRANTY

See included warranty sheet, visit www.rocketfishproducts.com, or call 1-800-620-2790 for additional connected equipment and product warranty information or for customer service.

CONTACT ROCKETFISH

For customer support, call 1-800-620-2790
www.rocketfishproducts.com



ROCKETFISH is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2024 Best Buy. All rights reserved.