



Introduction

Thank you for purchasing the Rocketfish 4-port WirelessHD Kit. Please follow the steps in this *Quick Setup Guide* to ensure a successful installation of this product. If you experience any difficulty setting the product up after referring to this guide, please consult the more detailed *User Guide*, also included in the package, which contains some troubleshooting techniques that may help. If the additional instructions and troubleshooting section of the *User Guide* prove unsuccessful for your setup, please contact our customer service department at 800-620-2790 or visit www.rocketfishproducts.com for additional assistance.

This product is designed to wirelessly send fully uncompressed signals from up to four HDMI source devices, such as a Blu-ray player, cable/satellite set-top box, gaming console, laptop, etc., to a HDTV or projector at a distance of up to 30 feet within the same room. It is important to note that the 60 GHz frequency with which this product transmits provides the necessary bandwidth to send every bit of information from the source device to the display with no compression or bit dropping, but does not penetrate wall or floors. Therefore, this product is not designed to send signals from one room to another.

 
Package contents

- 60 GHz WirelessHD transmitter
- 60 GHz WirelessHD receiver
- High-speed HDMI cables (2)
- Wall mounting bracket (for use with the receiver)
- Remote control
- AC power adapters (2 - one for the transmitter, one for the receiver)
- *Quick Setup Guide*
- *User Guide*


Setting up the WirelessHD Kit

Tips:


- Test the placement of the transmitter and receiver for a good signal prior to permanently mounting or installing everything.
- For best performance and range, mount the receiver vertically on the wall next to the TV (not behind the TV), or upside-down on the ceiling next to the projector. Make sure that you can see the Rocketfish and WiHD logos on the receiver from the location in the room where the transmitter is located. For more details about mounting the receiver, see your *User Guide*.
- Use only good quality high-speed HDMI cables for all connections, such as Rocketfish brand cables. Poorly constructed HDMI cables can negatively impact performance and may not support all of the features included in your connected devices.
- Do not place the transmitter or receiver inside a cabinet or other location where they will not have a clear view of the room.

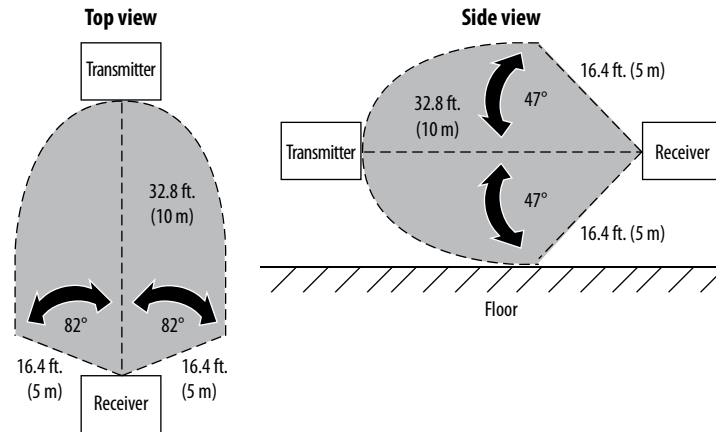

 - 1 Connect your HDMI source devices (up to four) to the WirelessHD transmitter with high-speed HDMI cables.

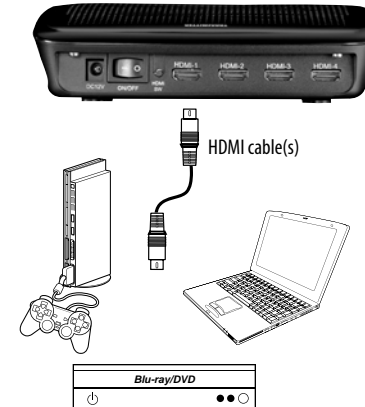

 - 2 Connect the WirelessHD receiver to the TV or projector with a high-speed HDMI cable.

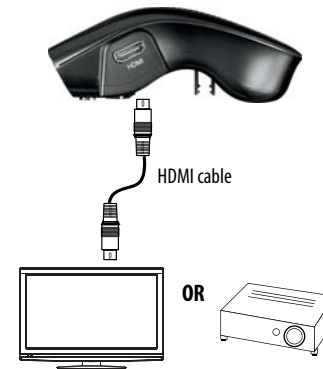

- 3 Connect the included AC adapters for the transmitter and receiver to the DC input jacks, then plug them both into an available AC outlet.



Note: The included AC adapters are labeled to ensure the correct adapter is used with the transmitter and receiver.

- 4 Power on the TV or projector and at least one of the source devices that is connected to the transmitter.
Note: Be sure the TV or projector is switched to the HDMI input to which the WirelessHD receiver is connected.
- 5 Switch the Power switches on the transmitter and receiver to the ON position (it does not matter which one you power on first). The HDMI input port LED on the transmitter should light continuously (stop blinking) to indicate that the desired input is selected. If this doesn't happen automatically, use the included remote control or HDMI Select Switch on the back of the transmitter to select the desired input port. For more details on HDMI port switching, see your *User Guide*.
Note: The Power and Link Status indicator LED will flash while the transmitter and receiver establish a connection. Once the connection has been established, these indicators will light continuously (stop flashing).

 
For more detailed instructions on operating the WirelessHD kit, please refer to the included *User Guide* section, "Operating the WirelessHD kit".



Features

Transmitter front/top panel

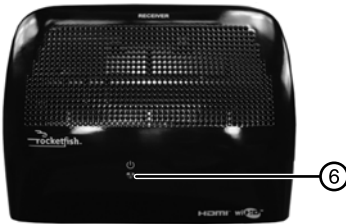

Receiver front/top panel



#	Component	Description
1	HDMI 4	Lights to indicate that this HDMI input is selected.
2	HDMI 3	Lights to indicate that this HDMI input is selected.
3	HDMI 2	Lights to indicate that this HDMI input is selected.
4	HDMI 1	Lights to indicate that this HDMI input is selected.
5	Power and link status indicator 	Blinking—Power is on and the transmitter is in sleep mode or searching for the receiver. On—The transmitter and receiver are linked. Off—The power is off.
6	Power and link status indicator 	Blinking—Power is on and the receiver is in sleep mode or searching for the transmitter. On—The transmitter and receiver are linked. Off—The power is off.

Transmitter back panel



#	Component	Description
1	DC IN jack	Connect the power adapter labeled “Transmitter” to this jack.
2	Power switch	Turns the unit on or off.
3	HDMI select switch	Press quickly (<1 second) to switch HDMI inputs; or hold for at least 3 seconds to join a Wireless Video Area Network (WVAN). See <i>User Guide</i> for more information about WVAN.
4	HDMI 1 jack	Connect an HDMI source device with a high-speed HDMI cable.
5	HDMI 2 jack	Connect an HDMI source device with a high-speed HDMI cable.
6	HDMI 3 jack	Connect an HDMI source device with a high-speed HDMI cable.
7	HDMI 4 jack	Connect an HDMI source device with a high-speed HDMI cable.

Receiver back and side panels

Left side



#	Component	Description
1	HDMI jack	Connect this port to an HDMI input on the TV or projector, using a high-speed HDMI cable.
2	DC IN jack	Connect the power adapter labeled “Receiver” to this jack.
3	Power switch	Turns the receiver on or off.
4	Cable routing clips	Insert HDMI cable into these clips for receiver placement stability.

Remote control

Note: Remove the plastic film from the remote control before using it for the first time.



Important safety instructions

- Keep these instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments or accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus shall not be exposed to dripping or splashing and no objects with liquids such as vases, shall be placed on the apparatus.

For more information on using your 4-port wireless HD kit, see your online *User Guide* at www.rocketfishproducts.com.

FCC RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna.

Canadian RF Exposure Statement

This equipment is in conformity with the IC radiation exposure limits set forth for an uncontrolled environment. This device must be installed and used at a distance of at least 20 cm (8 in) between the antenna and the body of the user. The transmitter should not be placed close to another antenna or another transmitter, or to function with another antenna or another transmitter.

FCC Part 15 Class B Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

IC Class B Statement (Canada)

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210.

Cet appareil numérique de la classe B conforme à la norme NMB-003 et RSS-210 du Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

One-year limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service, please call 1-800-620-2790.

www.rocketfishproducts.com

Distributed by Best Buy Purchasing, LLC
7601 Penn Avenue South, Richfield, MN 55423-3645 USA
© 2011 BBY Solutions, Inc., All Rights Reserved. ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.
Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349
© 2011 Best Buy UK Distributions Limited. All rights reserved. Distributed by Best Buy Europe Distributions Limited.
1 Portal Way, London W3 6RS