

KE 2P

AC1300 Dual Band Gigabit Wireless Router User Guide

PHICOMM

Inhaltsverzeichnis

1	About this guide	9
1.1	Structure of this guide	9
1.2	Symbols and conventions	9
2	Introduction	11
3	Hardware connections	12
3.1	Package contents	12
3.2	Connect your devices	12
4	Get started	14
4.1	TCP/IP settings	14
4.2	Configuring router via web browser	15
4.3	Log into Web Management	18
4.4	Configuring router via Phicomm app	19
5	General configurations	20
5.1	Manage devices	20
5.2	Wireless settings	20
5.3	WAN settings	22
5.4	LAN settings	23
6	Advanced settings	24
6.1	DHCP service	24
6.2	Guest WiFi	24
6.3	Parental Control	25
6.4	UPnP	26
6.5	Port forwarding	27
6.6	DMZ Host	28
6.7	Dynamic DNS	29
6.8	Remote access	30
6.9	Wireless Extension	31
6.10	IPTV	33
6.11	IPv6	34
7	Administration	40
7.1	Router status	40
7.2	Time zone	40
7.3	Firmware update	41
7.4	Diagnostics	43
7.5	Restore	44
7.6	LED	45
8	Appendix	47
8.1	Troubleshooting	47
8.2	Technical support – contact us	48

Notification of Compliance



CE Mark Warning

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Operating Frequency

2.4G: 2402 - 2482 MHz / 5G: 5150 – 5250MHz

Maximum Transmit Power

2.4G: 20 dBm / 5G: 23 dBm

This device may be operated in all EU countries (and other countries following the EU directive RED 2014/53/EU) for home and office use.

The band 5150 – 5250 MHz is restricted to indoor-only operation.

RF Exposure Information

This device meets the EU requirements (RED 2014/53/EU) on the limitation of exposure of the general electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

LEGAL INFORMATION ABOUT INTELLECTUAL PROPERTY

All company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners. Phicomm (Shanghai) Co., Ltd. reserves the right to revise the content of this document at any time without prior notice. No part of this document may be reproduced or transmitted in any form or by any means, electronical or mechanical, including photo-copying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of Phicomm (Shanghai) Co., Ltd.

DISCLAIMER

Any pre-installed software or data provided as a bundle to this device is subject to the

applicable law under the responsibility of the issuing software / service provider. The hardware manufacturer cannot be held liable for any breach, malfunction or other occurrence raised by using this third-party software. Only the issuing providers can lawfully be held responsible. Phicomm (Shanghai) Co., Ltd. does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Phicomm (Shanghai) Co., Ltd. will not provide any warranty of any kind for these third-party software and applications. Neither will Phicomm (Shanghai) Co., Ltd. provide support to customers who use these third-party software and applications nor be responsible or liable for the functions of these third-party software and applications. Third-party software and applications services may be interrupted or terminated at any time. Phicomm (Shanghai) Co., Ltd. does not guarantee that any content or service would be maintained for any period during its availability. Third-party service providers provide content and services through network or transmission tools outside of the control of Phicomm (Shanghai) Co., Ltd. to the greatest extent permitted by applicable law, it is explicitly stated that Phicomm (Shanghai) Co., Ltd. shall not compensate or be liable for services provided by third-party service providers or the interruption or termination of third-party contents or services. Phicomm (Shanghai) Co., Ltd. Shall be not responsible for the legality, quality or any other aspects of any software installed on this product, or for any uploaded or downloadad third-party works, such as texts, images, videos or software. Customers shall bear the risk for any and all effects including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

LIMITATION OF DAMAGES

To the maximum extent permitted by applicable law, in no event shall Phicomm (Shanghai) Co., Ltd. be liable for any special incidental, indirect or consequential damages or lost profits, business, revenue, data, goodwill or anticipated savings. The maximum liability (this limitaion shall not apply to liability for personal injury to the extent applicable law prohibits such a limitation) of Phicomm (Shanghai) Co., Ltd. arising from the use of the product described in this document shall be limited to the amount paid by customers for the purchase of this product.

IMPORTANT HEALTH INFORMATION AND SAFETY PRECAUTIONS

When using this product, the safety precautions below must be taken to avoid possible legal liabilities and damages. Retain and follow all product safety and operating instructions. Observe all warnings in the operating instructions on the product.

To reduce the risk of bodily injury, electric shock, fire and damage to the equipment, observes the following precautions.

SAFETY PRECAUTIONS FOR PROPER INSTALLATION

CAUTION: Connecting to an inappropriate charger can result in an electric shock to your device.

SAFETY PRECAUTIONS FOR PROPER SUPPLY UNIT

Use the correct power source!

This product can only be charged with matching standard external power source appointed by Phicomm (Shanghai) Co., Ltd.

Phicomm (Shanghai) Co., Ltd. is not liable for any device breakdown or safety accident arising from the use of unauthorized external power source.

SAFETY PRECAUTION FOR DIRECT SUNLIGHT

Keep this product away from excessive moisture and extreme temperatures. The device is designed to be operated in temperatures between 0°C and 40°C. Low- or high-temperature conditions might cause the device to temporarily stop working properly. Do not leave the product in a vehicle or in places where the temperature may exceed 70°C (window sill or behind glass). Avoid dramatic changes in temperature or humidity when using the device as condensation may form on or within the device.

When you are using the device, it is normal for the device to get warm. The exterior of the device functions as a cooling surface that transfers heat from inside the unit to the cooler air outside.

ENVIRONMENT RESTRICTIONS

Do not use this product in gas stations, fuel depots, chemical plants or where blasting operations are in process, or in potentially explosive atmospheres such as below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust or metal powders. Please be aware that sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

EXPLOSIVE ATMOSPHERES

In any area with a potentially explosive atmosphere or where flammable materials exist, the product should be turned off and the user should obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised not to use the equipment at refueling areas such as service or gas stations and are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. These include fueling areas, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as dust or metal powders.

SAFETY PRECAUTIONS FOR RADIO FREQUENCY EXPOSURE

- Avoid using your device near metal structures (e. g. the steel frame of a building).
- Avoid using the device near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories.
- Use of non-original manufacturer-approved accessories may violate your local RF exposure guidelines and should be avoided.

INTERFERENCES WITH MEDICAL EQUIPMENT FUNCTIONS

This product may cause medical equipment to malfunction. The use of this device is forbidden in most hospitals and medical clinics.

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy.

HEARING AID DEVICES

Some devices may interfere with some hearing aid devices. In the event of such interference, you may want to consult your service provider, or call customer service line to discuss alternatives.

NON-IONIZING RADIATION

Your device has external antennas. This product should be operated in its normal-use position to ensure the radiative performance and safety of the interference. Users are advised that for satisfactory operation of the equipment and for the safety of personnel, it is recommended that no part of the human body be allowed to come too close to the antenna during operation of the equipment.

Use only the supplied antennas. Use of unauthorized or modified antennas may impair transfer quality and damage the device, causing loss of performance and SAR levels exceeding the recommended limits as well as result in noncompliance with local regulatory requirements in your country.

To assure optimal device performance and ensure human exposure to RF energy is within the guidelines set forth in the relevant standards, always use your device only in its normal-use position. Contact with the antennas may impair quality and cause your device to operate at a higher power level than needed. Avoiding contact with the antenna area when the device is in use optimizes the antenna performance.

GENERAL PRECAUTIONS

AVOID APPLYING EXCESSIVE PRESSURE TO THE DEVICE

Do not apply excessive pressure on the device to prevent damage.

DEVICE IS GETTING WARM AFTER PROLONGED USE

When using your device for prolonged periods the device may become warm. In most cases this condition is normal and therefore should not be interpreted as a problem with the device.

HEED SERVICE MARKING

Except as explained in the user manual, do not repair any product yourself. Service needed on components inside the device should be done by an authorized service outlet or provider.

Phicomm (Shanghai) Co., Ltd. is entitled to use new or reconditioned replacements parts or boards for repairs under warranty, provided they have the same functionality as the parts to be replaced.

DAMAGE REQUIRING SERVICE

Unplug the device from the electrical outlet and refer servicing to an authorized service center or provider under the following conditions:

- Liquid has been spilled or an object has fallen onto the product.
- The product has been exposed to rain or water.
- There are noticeable signs of overheating.
- The product does not operate normally when you follow the operating instructions.

AVOID HOT AREAS

The product should be placed away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

AVOID WET AREAS

Never use the product in a wet location.

AVOID USING YOUR DEVICE AFTER A DRAMATIC CHANGE IN TEMPERATURE

When you move your device between environments with very different temperature and/or humidity ranges, condensation may form on or within the device. To avoid damaging the device, allow sufficient time for the moisture to evaporate before using the device.

NOTICE: When taking the device from low-temperature conditions into a warmer environment or from high-temperature conditions into a cooler environment, allow the device to acclimate to room temperature before turning on power.

AVOID PUSHING OBJECTS INTO THE DEVICE

Never push objects of any kind into cabinet slots or other openings in the product. Slots and openings are provided for ventilation. These openings must not be blocked or covered.

MOUNTING ACCESSORIES

Do not use the product on an unstable table, cart, tripod or bracket. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.

AVOID UNSTABLE MOUNTING

Do not place the product with an unstable base.

USE PRODUCT WITH APPROVED EQUIPMENT

This product should be used only with personal computers and options identified as suitable for use with your equipment.

CLEANING

Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning, but NEVER use water to clean the device. The device has been provided with special treatments featuring that it could dispose dirt and sweat on its surface. The device itself does not have a stain-resistant function. In case of smudginess and dyeing, please wipe it with clean damp sponge immediately. Please keep the device dry when necessary.

PACEMAKER

The device may cause disturbance to pacemakers. Please keep the device a proper distance of least 5 centimeters away from pacemakers.

 If you need detailed information about other active implantable medical devices, please consult your doctor to ensure the magnetic interference of such active implantable medical devices.

CAUTION

Update your operating system with caution

- Improper operation or unforeseen external factors may cause an operating system update fail leading to device not functioning properly. If such a situation occurs, you need to send the unit for repair.
- An unofficial operating system can cause security risks. Please install only official updates provided by Phicomm (Shanghai) Co., Ltd., if not you will void the warranty and a repair is chargeable.



FCC User Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

1 About this guide

This user guide includes a complete overview of the configuration and functions of PHICOMM KE 2P router on Web Management interface.

Note



- It is suggested to use Firefox, Google Chrome, IE 9.0 or above to login in Web Management. Software interface might vary by browsers.
- Software interface and functions might vary by firmware versions.

1.1 Structure of this guide

This guide is structured as follows:

Chapter	Title	Subject
1	About this guide	Basic description of document content, definition of symbols and conventions
2	Introduction	Description of basic functions
3	Hardware connections	Description of the way connecting the router to your devices
4	Get started	Description of the way to set up your router for the first time
5	General configurations	Description of router's general functions
6	Advanced configurations	Description of router's advanced functions
7	Administration	Description of router's administration features
8	Appendix	FAQs and technical support information

1.2 Symbols and conventions

The following symbols are used in the user guide:



WARNING!

May result in severe damage to your device or database.



Note

Useful additional information.

The following editorial conventions are used in the guide:

Convention	Explanation
Bold	Field names / button names are written in bold Example: click menu View
<i>Italic</i>	Commands, screen output, file names and paths are written in <i>Italic</i> . Example: Input <i>192.168.2.1</i> in IP address text box.
<code><...></code>	<code><...></code> keyboard or actual names are represented in angle brackets Example: Click <code><Ctrl> + <Alt> + <Delete></code> to open the task manager.
<code>></code>	Used for menu sequence Example: Click File > Print to print.

2 Introduction

Phicomm KE 2P AC1300 Dual Band Gigabit Wireless Router is all-in-one router for home and SOHO users to share broadband internet connection over a wired or a wireless network.

PHICOMM KE 2P supports simultaneous dual band with transmission speed up to 1267Mbps (2.4GHz + 5GHz).

2.4GHz WiFi band provides extensive WiFi signal coverage in your home with 2 high performance antennas and revolutionary Multiple-Input-Multiple-Output (MIMO) technology.

5GHz WiFi band ensures supreme transmission speed for simultaneous Internet surfing, Internet phone calling, HD video streaming and online gaming without lagging.

Phicomm KE 2P router support the following features:

- Super-fast dual band 802.11ac WiFi with wireless speeds up to 867Mbps (5GHz) and 400Mbps (2.4GHz).
- 4 external high gain antennas providing omni-directional wireless coverage and helps eliminate dead zones.
- 1 Gigabit WAN + 4 Gigabit LAN ports, give throughput up to 1Gbps.
- The dual core processor gives you powerful wired and wireless network performance.
- 128MB DDR3 RAM to support high speed processing with up to 64 devices connected.
- Privacy with Guest Network access provides secure WiFi access for guests sharing your home or office network.
- Mg - Al metal body for premium finish and enhanced device performance.
- Easy setup and management with PhiWiFi App.

3 Hardware connections

3.1 Package contents

Please check the package content before the installation of the router:

- 1 x AC1300 Dual Band Gigabit Wireless Router KE 2P
- 1 x power adapter
- 1 x RJ-45 Ethernet cable
- 1 x Quick Installation Guide
- 1 x GPL license

3.2 Connect your devices

Follow these steps below to connect your devices.

3. Connect your modem to the WAN port on the router using a RJ-45 cable.



Note


- Make sure your modem has proper Internet connection.
- If you have a wired ethernet connection to Internet instead of a modem, connect RJ-45 cable directly to the WAN port on the router, and turn on the router, then continue with the following instructions to complete the router setup.

4. Connect your device to the router (wired or wireless):

Wired: Connect your PC to the LAN port on the router with a RJ-45 cable.

Wireless: Turn on WLAN on your wireless device and connect to **@PHICOMM_XX** or **@PHICOMM_XX_5G**.

XX represents the last two digits of router's MAC address that can be found on the label at the bottom of your router.

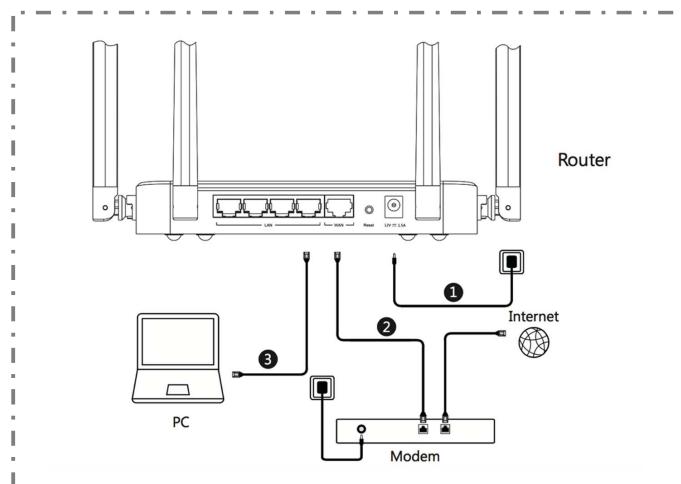

Phicomm (Shanghai) Co., Ltd.

2. Connect the power adapter into an electrical socket, connect the other end to the router.

4 Get started

This section gives instructions of the procedures that must be performed to enable the wireless router.


4.1 TCP/IP settings

The IP address has to be obtained automatically before starting the configuration of the router. Please follow these steps:


1. With the right mouse button please click on the right bottom corner. Click **Open Network and Sharing Center** and select **Change adapter settings** on the upper left of the screen.



2. Right-click network connection type and select **Properties**. In the **Properties** window double click **Internet Protocol Version 4 (TCP/IPv4)**.

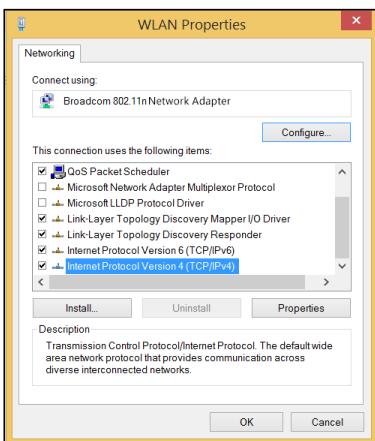

3. Select both **Obtain an IP address automatically** and **Obtain DNS server address automatically**. Click **OK** to confirm the configuration.

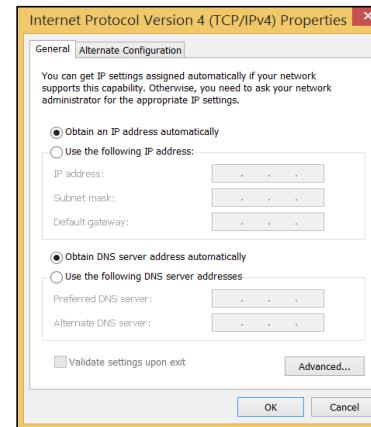

4.2 Configuring router via web browser

1. On your web browser, enter **p.to** or **192.168.2.1** or **10.10.10.1** in address bar and click **Start Setup** to run the setup wizard.



2. Create a login password for your router and click **Next**.

Create a login password for your router:

Login Password

Repeat Password

3. Select your local time zone and click **Next**.

Region

Time Zone

4. Specify your Internet connection type, enter the relevant account information as required and click **Next**. Contact your Internet Service Provider (ISP) if you are not sure about this step.

✓ WAN port is connected

Connection Type

✓ WAN port is connected

Connection Type

DHCP

DHCP is commonly used if internet service provider does not provide any IP to use. Router will obtain IP address information automatically.

PPPoE

PPPoE is typically used for DSL services. Enter the username and password provided by your internet service provider.

Static IP address

Select Static IP if internet service provider provides the static IP address, subnet mask, default gateway and DNS server address.

PPTP/L2TP

Select PPTP or L2TP if ISP provides the username, password, and VPN server IP.



Note

Contact your ISP if you are not sure about your internet connection type.

5. Set SSID and password for your wireless network or use the default settings. Click **Save** to complete the setup.

2.4 GHz

SSID


Password

5 GHz

SSID

Password

6. Now WiFi has been successfully set up on your router. If your device does not automatically connect to the wireless network, please connect manually. You can also click **More Settings** for further advanced configuration. If you need to use IPTV function, please click **IPTV** for the relevant settings.

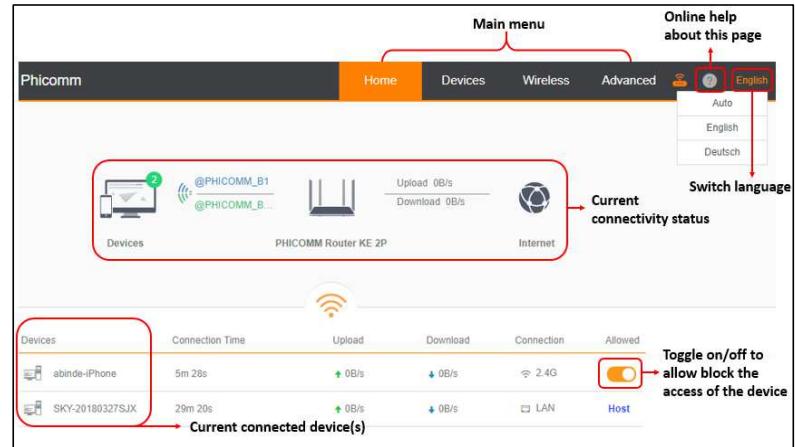

4.3 Log into Web Management

On your web browser, enter **p.to** or **192.168.2.1** or **10.10.10.1** in address bar, and enter the login password that is set when you set up the router for the first time.



You can now use the Web Management for further configurations on the router.

4.4 Configuring router via Phicomm app

To install and set up your router via Phicomm app, follow these steps:

1. Scan the QR Code below, download and install **PhiWiFi** from Apple App Store or Google Play.



for US



for Europe and other regions



Note

Alternatively, you can search “**PhiWiFi**” on Apple App Store or Google Play.

2. Make sure your router is powered on and connected to Internet properly. Turn on WLAN on your smartphone and connect to Phicomm's wireless network **@PHICOMM_XX** or **@PHICOMM_XX_5G**.
3. Launch PhiWiFi and follow the step-by-step instructions to complete the setup.

5 General configurations

5.1 Manage devices

To manage the devices on your local network, go to **Main menu > Devices** on Web Management, all devices connected to your local network will be listed on this screen.

Devices	IP/MAC Address	Current Speed	Limited	Connection	Allowed
abirde-iPhone 13s	IP:192.168.2.145 MAC:C0:CC:F8:D3:5B:3F	0B/s 0B/s	— —	2.4G	<input checked="" type="checkbox"/>
MAC Pro 1h 1m 22s	IP:192.168.2.197 MAC:C4:B3:01:D3:61:BD	0B/s 0B/s	200KB/s 200KB/s	2.4G	<input type="checkbox"/> Host
Unknown 1h 21m 52s	IP:192.168.2.151 MAC:D0:BF:9C:58:38:6D	0B/s 0B/s	— —	LAN	<input checked="" type="checkbox"/>

To block a computer or device from connecting to your home network, toggle off the **Allowed** switch. To allow the computer or device to continue access the network, toggle on the **Allowed** switch.

You can specify the maximum upload/download bandwidth in the **Limited** field.

The device can be renamed by clicking **Devices** field and entering the new name.

5.2 Wireless settings

To configure the basic wireless settings, go to **Main menu > Wireless** on Web Management.

You can switch on/off wireless network or modify the SSID/password.

The screenshot shows the 'Wireless' configuration page. It is divided into two sections: '2.4 GHz' and '5 GHz'.
2.4 GHz:

- SSID: @PHICOMM_ED
- Password: (redacted)
- Hide SSID:

5 GHz:

- SSID: @PHICOMM_ED_5G
- Password: (redacted)
- Hide SSID:

Below these sections is a 'Advanced settings' section with an 'Expand' button and a 'Save' button.

Hide SSID

If **Hide SSID** is enabled, the wireless network with this SSID will not be discovered by other WiFi devices.

Click **Expand** to have more advanced settings displayed.

The screenshot shows the 'Advanced settings' section of the wireless configuration page, which is expandable from the main 'Wireless' page.
2.4 GHz:

- Mode: 802.11b/g/n
- Channel: Auto
- Bandwidth: 20/40 MHz
- AP Isolation:

5 GHz:

- Mode: 802.11a/n/ac
- Channel: Auto
- Bandwidth: 20/40 MHz
- AP Isolation:

Below these sections is a 'Save' button.

Mode

Select the WiFi mode you want to use. For more information about IEEE802.11, please refer to <http://www.ieee.org>.

Channel

Channel determines which operating frequency will be used. If you notice a severe interference problem with another nearby access

point, you may try to manually select a fixed channel. Otherwise you can leave it as *Auto*.


Bandwidth Different WiFi mode has different bandwidth. Normally a higher bandwidth provides faster network speed, but it will be much easier interfered by other radio signal. The default value is recommended.

AP Isolation If enabled, the devices under this SSID can only access Internet and it cannot communicate with other devices in the same WiFi network.

Click **Save** to save the settings.

5.3 WAN settings

To configure WAN settings, go to **Main menu > Advanced > Internet Settings** on Web Management.

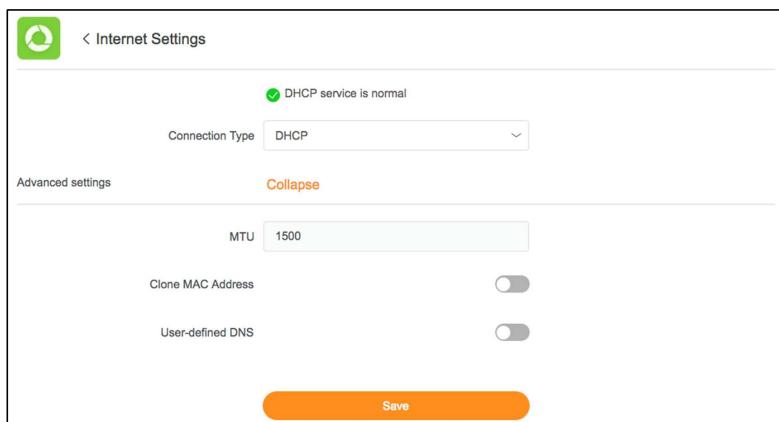

The screenshot shows the 'Internet Settings' page. At the top, a green checkmark indicates 'DHCP service is normal'. Below this, the 'Connection Type' is set to 'DHCP'. Under 'Advanced settings', the 'MTU' is set to 1500. There are two toggle switches: 'Clone MAC Address' and 'User-defined DNS', both of which are off. At the bottom is an orange 'Save' button.

For **Connection Type**, refer to Section 0.

Click **Expand** to have more advanced settings displayed.

MTU MTU defines the maximum length of your data packet.

- *DHCP*: The range of maximum length is between 576 and 1500. 1500 is the default value.
- *PPPoE*: The range of maximum length is between 576 and 1492. 1480 is the default value.
- *Static IP Address*: The range of maximum length is between

576 and 1500. 1500 is the default value.

- *PPTP*: The range of maximum length is between 576 and 1420. 1420 is the default value.
- *L2TP*: The range of maximum length is between 576 and 1460. 1460 is the default value.


User-defined DNS

If any specific server is required, toggle on this switch and enter the IP address of primary DNS server and secondary DNS server (if available).

Click **Save** to save the settings.

5.4 LAN settings

To configure LAN settings, go to **Main menu > Advanced > LAN Settings** on Web Management. Current LAN IP address and subnet mask are displayed.

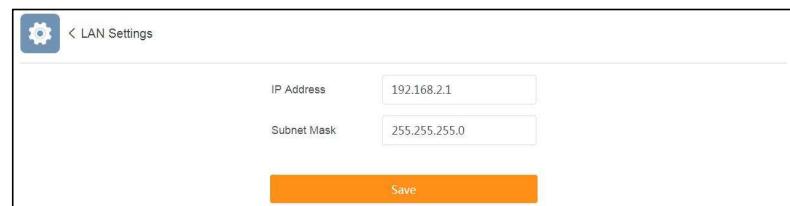

The screenshot shows the 'LAN Settings' page. It displays the current 'IP Address' as 192.168.2.1 and the 'Subnet Mask' as 255.255.255.0. At the bottom is an orange 'Save' button.

IP address Enter LAN IP address of the router.

Subnet Mask Enter the subnet mask associated with the LAN IP address.



Note

If you change the LAN IP address of the router, log in the web management page with the new IP address.

6 Advanced settings

6.1 DHCP service

By default, the router acts as a Dynamic Host Configuration Protocol (DHCP) server. The router assigns IP, DNS server, and default gateway addresses to all computers connected to the LAN and WLAN.

To enable DHCP server, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > DHCP** and toggle on **DHCP** switch.

Devices	IP Address	MAC Address	Action
MAC Pro	192.168.2.197	C4:B3:01:D3:61:BD	Bind Cancel

2. Specify the **IP Address Pool** for the clients on your network.

3. Click **Save** to save the settings

You can also specify a reserved IP address for a computer on the LAN and bind the **IP Address** and **MAC Address** into a pair, so that the computer always receives the same IP address each time it accesses the router's DHCP server.

6.2 Guest WiFi

Guest WiFi is a type of small local network designed for temporary visitors. You can give the guest access to your internet connection without sharing your WiFi password and the devices connected to the guest network will not be able to access the share files inside your home network.

To set up a guest network, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Guest WiFi** and toggle on **Guest WiFi** switch.

Guest WiFi

SSID: @PHICOMM_Guest

Save

2. Enter the SSID and password for the guest network and click **Save** to save the settings.
3. Click **Save** to save the settings.



Note

By default, the guest network SSID is @PHICOMM_Guest.

6.3 Parental Control

Parental control allows you to set access restriction rules on individual devices on your home network. You can restrict internet access at times of the day and days of the week when your children's devices are not allowed to be online.

To set up a restriction rule, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Parental Control**.
2. Toggle on **Parental Control** switch, select the device on which you want to set the restriction rule, and specify day(s) and time(s) the device will be blocked from internet.

Click **Save** to save this rule. You can click  to continue to add another rule.

6.4 UPnP

Universal Plug and Play (UPnP) helps devices, such as Internet appliances and host devices, to access the local network and connect to other devices as needed. You can enable UPnP if you want to use multiplayer gaming, real-time communication, or peer-to-peer connection.

UPnP devices can automatically discover the services from other registered UPnP devices on the local network. To enable UPnP, on Web Management, go to **Main menu > Advanced > UPnP** and toggle on **UPnP** switch.

When UPnP is enabled, devices/applications may dynamically add themselves to a network and be shown in the list without the need for user configuration.

Service Description The description about the application that initiates the UPnP request.

External Port The port that the router opens for the application.

Internal Port The port that the router opens for local host.

IP Address The IP address of the local host that initiates the UPnP request.

UPnP Status

The status about whether the port of the UPnP device that established a connection is currently active.

6.5 Port forwarding

Port forwarding opens a specific port to allow remote users to access certain public services such as gaming, downloading, or web server on your local network.

To set up port forwarding on Phicomm router, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Port Forwarding** and toggle on **Port Forwarding** switch.


2. Enter the service name or description in **Rule Name**, enter the LAN IP of the server, specify port/port range for external port and internal port, and select the protocol.

3. Click **Save** to save the settings. You can also add another service by clicking .

When the configuration completes, the access to the server will be redirected to the server IP address by using the WAN IP.

6.6 DMZ Host

DMZ allows you to specify and expose one computer on your network that can be accessed from outside (e.g. web server, SSH, or other remote access protocol).

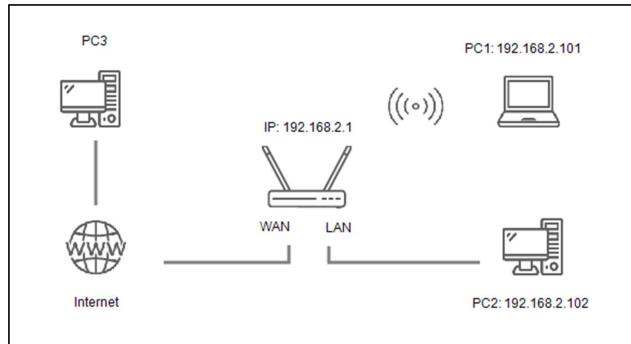

In above topology, if you want to access the FTP server of PC1 on PC3, follow these steps:

1. Run the FTP server on PC1.
2. On PC2, log on Web Management and go to **Main menu > Advanced > DMZ host**.
3. Toggle on **DMZ Host**, enter the IP address of PC1 as the **DMZ Host IP**.



Note

Before using the DMZ host, you should assign a static IP address to the designated server. Then enter this static IP address into the router as its IP address.

4. Click **Save** to save the settings.

Now PC1 as DMZ host can connect to PC3 on the internet for intercommunication by using the WAN IP, which can be checked in **Main menu > Advanced > Router Status**.

6.7 Dynamic DNS

Dynamic DNS feature allows you to host a server (web, FTP, game server, and etc.) using a fixed domain name (host name) instead of remembering the dynamic IP address which might be changed from time to time.

To assign a fixed host or domain name to a dynamic internet IP address, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Dynamic DNS** and toggle on Dynamic DNS switch.



WARNING!

It is recommended to disable the DMZ host when it is not in use to avoid potential safety risks.

2. Select your DDNS service provider *NO-IP* (www.noip.com) or *DynDNS* (www.dyn.com), enter the username, password, host name (domain name).
3. Click **Save** to save the settings.



Note

Phicomm router supports two DDNS service providers: NO-IP (www.noip.com) and DynDNS (www.dyn.com). Before you set up the DDNS, please have the DDNS account created and the host name purchased on the service provider website before setting DDNS on this screen.




Note

If you set Management IP as 255.255.255.255, all devices from the network can remotely manage your router.

6.8 Remote access

Using Remote Access, you can allow a user on the internet to access and manage your router. This feature is helpful when you want to administer your router remotely.

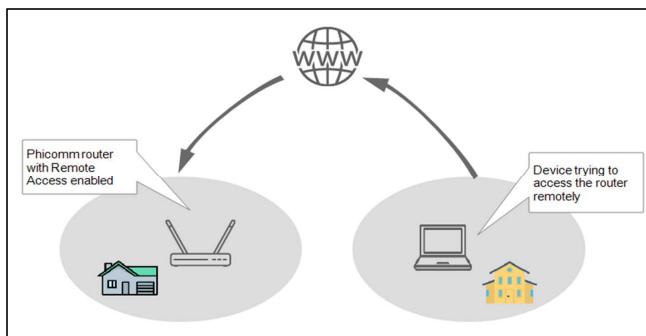

To enable Remote Access, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Remote Access** and toggle on **Remote Access** switch.

2. Enter the IP address of the computer that is given the access.

3. Click **Save** to save the settings.

To access the router from internet, type the router's WAN IP into the address bar of a browser, followed by a colon (:) and the port number. For example, if the WAN IP is 211.117.154.79, and the port number you set is 8181, enter <http://211.117.154.79:8181> to manage the router via internet.



WARNING!

Turn off Remote Access if it is not used to avoid potential hazard from internet.

6.9 Wireless Extension

By using the Wireless Extension, the main and the sub routers can be bridged to extend coverage of the wireless network. The wireless network to be extended can be achieved by auto-scanning (recommended) or specifying a network manually.


To enable Wireless Extension, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > Wireless Extension** and toggle on **Wireless Extension** switch.

2. **WISP Mode** supports automatic scan and manual input.


3. **Scan:** You can choose **Scan** to scan for wireless signals in the current network

4. Select the SSID you want to connect and click **Connect**.

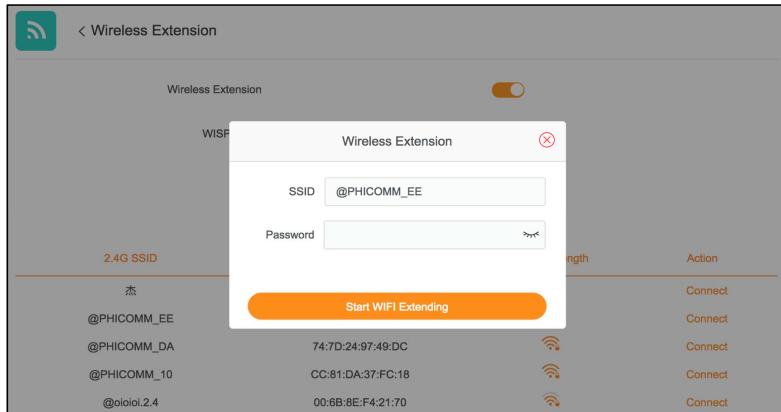

5. If the wireless network is password protected, enter the wireless network password in the pop-up window and click **Start WIFI Extending**.

6. **Manual Input:** insert SSID and select the Security Mode.

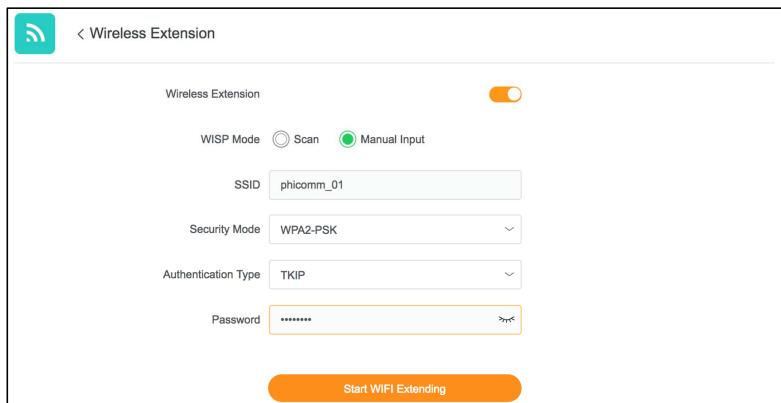

7. Confirm with **Start WIFI Extending**.



Note


When Start WIFI Extending, the router will restart automatically.

6.10 IPTV

Configure IPTV setup to enable Internet/IPTV/Phone service provided by your internet service provider (ISP).


To enable IPTV, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > IPTV** and toggle on **IPTV** switch.

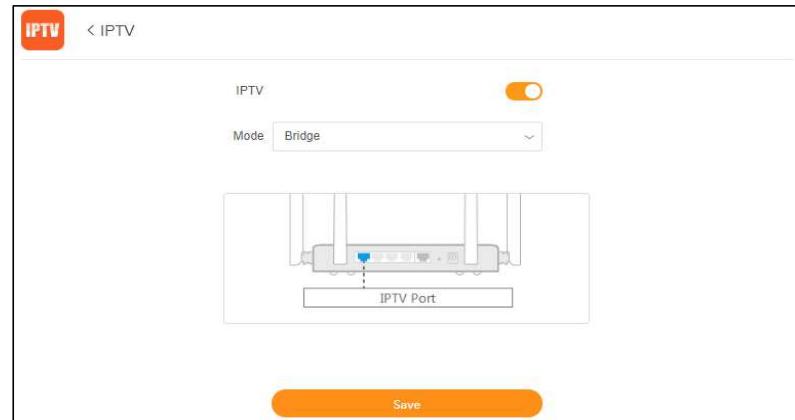

2. Select the appropriate Mode according to your ISP.

- Select **Bridge** if your ISP is not listed and no other parameters are required.
- Select **Custom** if your ISP is not listed but provides necessary parameters.

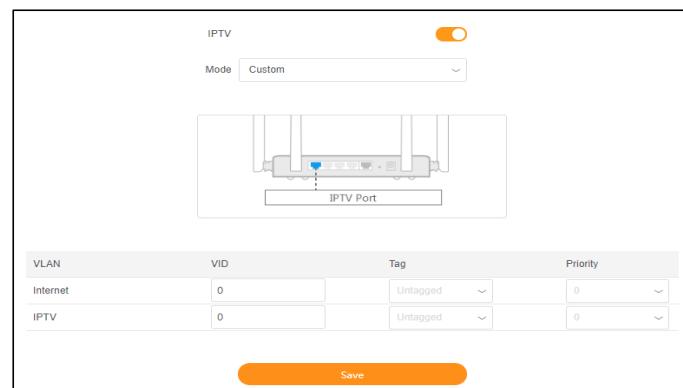

3. After you have selected the **Custom** mode, the necessary parameters, including the Internet/IPTV VID、Tagged/untagged、Priority are required to set by users.
4. Click **Save**.
5. Connect the set-top box to the corresponding LAN port which is has been prompted on the picture.

6.11 IPv6

This function allows you to enable IPv6 function and set up the parameters of the router's Wide Area Network (WAN) and Local Area Network (LAN).

To enable IPv6, follow these steps below:

1. On Web Management, go to **Main menu > Advanced > IPv6** and toggle on **IPv6** switch.
2. Select the WAN Connection Type according to your ISP network topology:

IPv6 Settings

IPv6

WAN Settings

WAN port is connected

WAN Connection Type: **DHCPv6**

Get IPv6 prefix delegation

IPv6 Address

Renew Release

User-defined DNS

- **DHCPv6**: Connections which use RADVD IPv6 address assignment.
- **PPPoEv6**: Connections which use PPPoEv6 that requires a username and password.

- **Static IPv6**: Connections which use static IPv6 address assignment.
- **Tunnel 6to4**: Connections which use 6to4 address assignment.

3. LAN settings:

LAN Settings

IPv6 Address Assign Type: **DHCPv6 Server**

IPv6 Address Prefix: ::/64


LAN IPv6 Address

Save

- **IPv6 Address Assign Type** - Users can choose mode: DHCPv6 Server or SLAAC.
- **IPv6 Address Prefix** - Get the IPv6 address prefix from the ISP.
- **LAN IPv6 Address** - Display the LAN IPv6 address created by the device.

4. Click **Save**.

DHCPv6

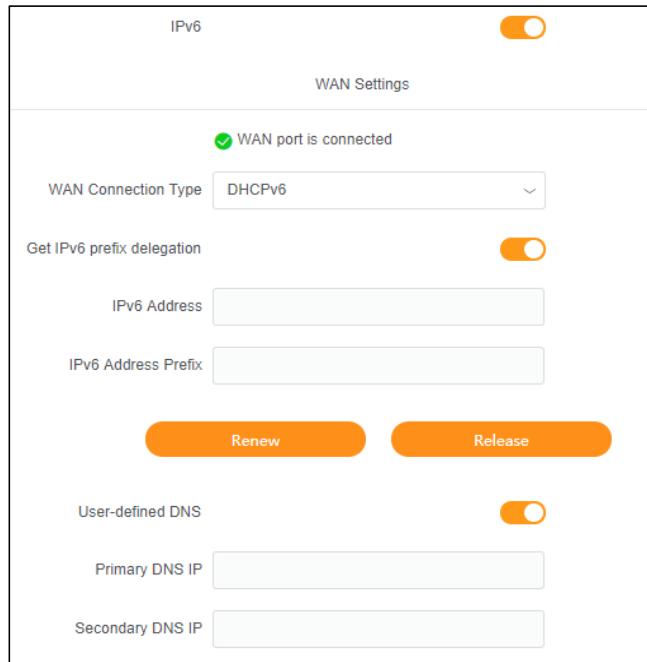


The screenshot shows the 'WAN Settings' section for DHCPv6. It includes the following fields:

- IPv6** toggle switch (on)
- WAN Settings** section with a green checkmark and the text "WAN port is connected".
- WAN Connection Type** dropdown menu set to "DHCPv6".
- Get IPv6 prefix delegation** toggle switch (on).
- IPv6 Address** and **IPv6 Address Prefix** input fields.
- Renew** and **Release** orange buttons.
- User-defined DNS** toggle switch (on).
- Primary DNS IP** and **Secondary DNS IP** input fields.

- **IPv6 Address** - The IPv6 address assigned by your ISP dynamically.
- **IPv6 Address Prefix** - Get IPv6 prefix delegation.
- **Renew** - Click Renew to renew the IPv6 parameters from your ISP.
- **Release** - Click Release to release the IPv6 parameters from your ISP.
- **User-defined DNS** default closed station - If your ISP does not give you any DNS IPv6, the user can open the switch manually.
 - ✓ **Primary DNS IP** - Enter the DNS IPv6 address provided by your ISP.
 - ✓ **Secondary DNS IP** - Enter another DNS IPv6 address provided by your ISP.

PPPoEv6

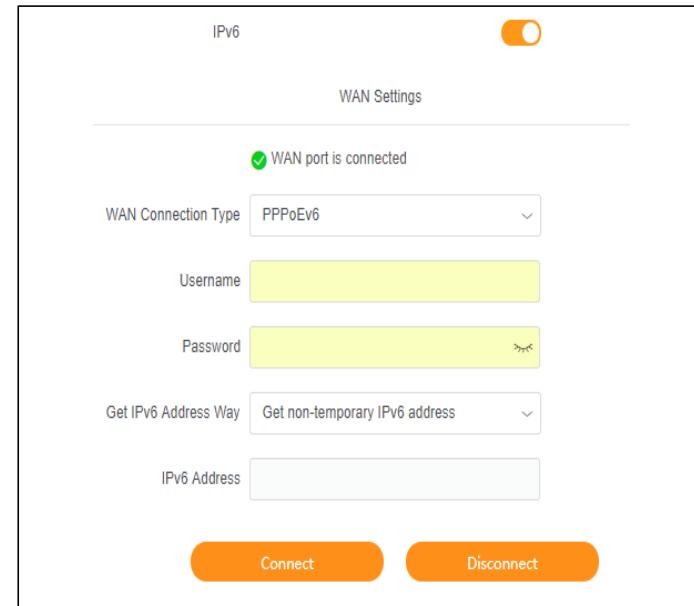


The screenshot shows the 'WAN Settings' section for PPPoEv6. It includes the following fields:

- IPv6** toggle switch (on)
- WAN Settings** section with a green checkmark and the text "WAN port is connected".
- WAN Connection Type** dropdown menu set to "PPPoEv6".
- Username** and **Password** input fields.
- Get IPv6 Address Way** dropdown menu set to "Get non-temporary IPv6 address".
- IPv6 Address** input field.
- Connect** and **Disconnect** orange buttons.

- **Username/Password** - Enter the username and password provided by your ISP. These fields are case-sensitive.
- **Get IPv6 Address Way** - Users can choose mode: Get non-temporary IPv6 address or Get IPv6 prefix delegation or Use IP address specified by ISP.
- **IPv6 Address** - The IPv6 address assigned by your ISP dynamically.
- **Connect** - Click Connect to connect immediately.
- **Disconnect** - Click Disconnect to disconnect immediately.

Static IPv6

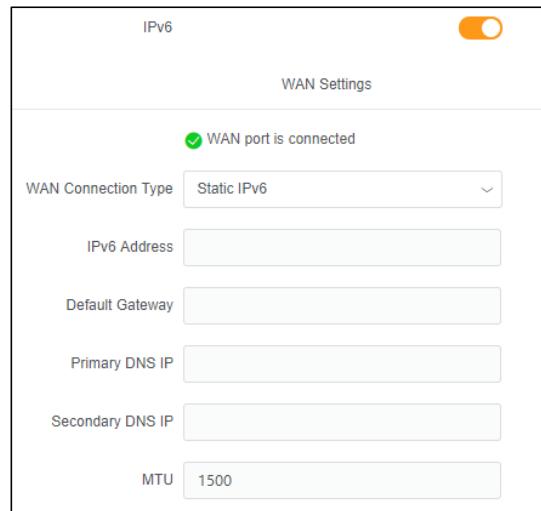

IPv6

WAN Settings

WAN Connection Type: Static IPv6

IPv6 Address:

Default Gateway:


Primary DNS IP:

Secondary DNS IP:

MTU: 1500

- IPv6 Address** - Enter the IPv6 address provided by your ISP.
- Default Gateway** - Enter the default gateway provided by your ISP.
- MTU Size (in bytes)** - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. For some ISPs, you may need to modify the MTU. But this is rarely required and should not be done unless you are sure it is necessary for your ISP connection.
- Primary DNS IP** - Enter the DNS IPv6 address provided by your ISP.
- Secondary DNS IP** - Enter another DNS IPv6 address provided by your ISP.

Tunnel 6to4

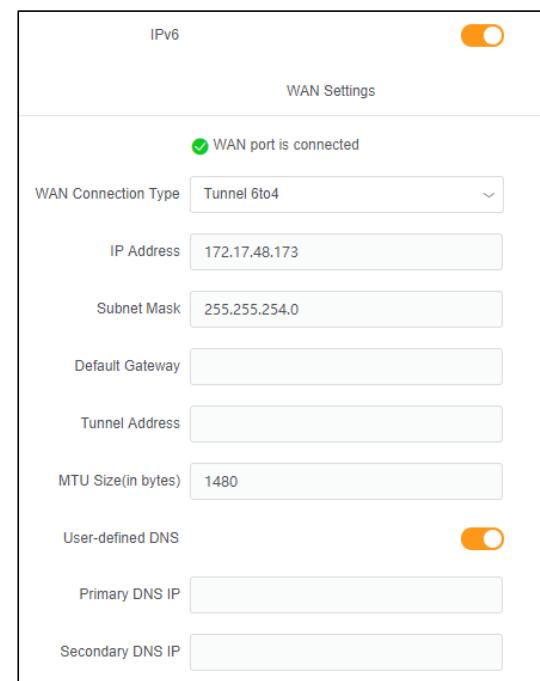

IPv6

WAN Settings

WAN Connection Type: Tunnel 6to4

IP Address: 172.17.48.173

Subnet Mask: 255.255.254.0

Default Gateway:

Tunnel Address:

MTU Size(in bytes): 1480

User-defined DNS

Primary DNS IP:


Secondary DNS IP:

- IP Address/Subnet Mask/Default Gateway** - The IPv4 address/ subnet mask/ default gateway assigned, in dotted-decimal notation.
- Tunnel Address** - The 6to4 tunnel address created by the device to access theIPv6 network.
- MTU Size (in bytes)** - The normal MTU (Maximum Transmission Unit) value for most Ethernet networks is 1500 Bytes. For some ISPs, you may need to modify the MTU. But this is rarely required and should not be done unless you are sure it is necessary for your ISP connection.
- User-defined DNS** default closed station - If your ISP does not give you any DNS IPv6, the user can open the switch manually.
 - Primary DNS IP** - Enter the DNS IPv6 address provided by your ISP.
 - Secondary DNS IP** - Enter another DNS IPv6 address provided by your ISP.

7 Administration

7.1 Router status

You can view the router status from **Main menu > Advanced > Router Status** on Web Management. General system information, WAN and LAN status, WiFi status will be shown on this screen.

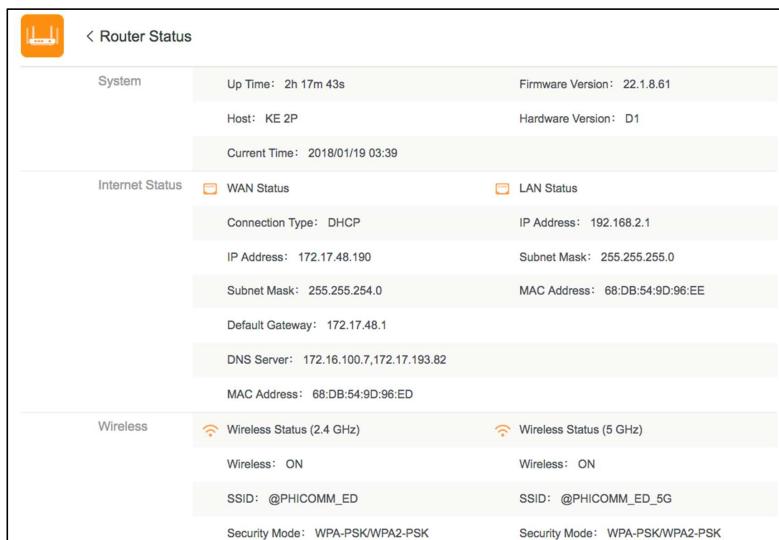


The screenshot shows the Router Status page with the following details:

System		Firmware Version: 22.1.8.61
Up Time:	2h 17m 43s	
Host:	KE 2P	Hardware Version: D1
Current Time: 2018/01/19 03:39		
Internet Status		
WAN Status	LAN Status	
Connection Type: DHCP	IP Address: 192.168.2.1	
IP Address: 172.17.48.190	Subnet Mask: 255.255.255.0	
Subnet Mask: 255.255.254.0	MAC Address: 68:DB:54:9D:96:EE	
Default Gateway: 172.17.48.1		
DNS Server: 172.16.100.7, 172.17.193.82		
MAC Address: 68:DB:54:9D:96:ED		
Wireless		
Wireless Status (2.4 GHz)	Wireless Status (5 GHz)	
Wireless: ON	Wireless: ON	
SSID: @PHICOMM_ED	SSID: @PHICOMM_ED_5G	
Security Mode: WPA-PSK/WPA2-PSK	Security Mode: WPA-PSK/WPA2-PSK	

7.2 Time zone

You will be asked to specify your local time zone during the setup wizard when you set up the router for the first time. You can set up the daylight-saving time in time zone settings. The time zone can also be modified from **Main menu > Advanced > Time Zone** on Web Management.

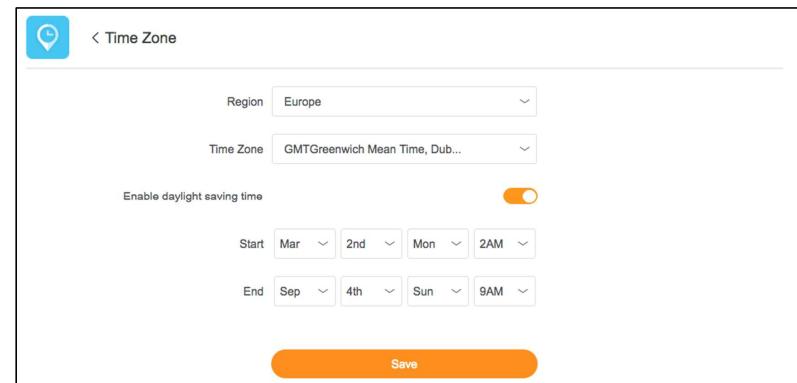

The screenshot shows the Time Zone settings page with the following configuration:

- Region: Europe
- Time Zone: GMTGreenwich Mean Time, Dub...
- Enable daylight saving time: On
- Start: Mar 2nd Mon 2AM
- End: Sep 4th Sun 9AM
- Save button


7.3 Firmware update



Note

It is recommended to install the latest firmware to improve your router's overall performance.

You will be asked whether to update the firmware if the latest available update is detected.

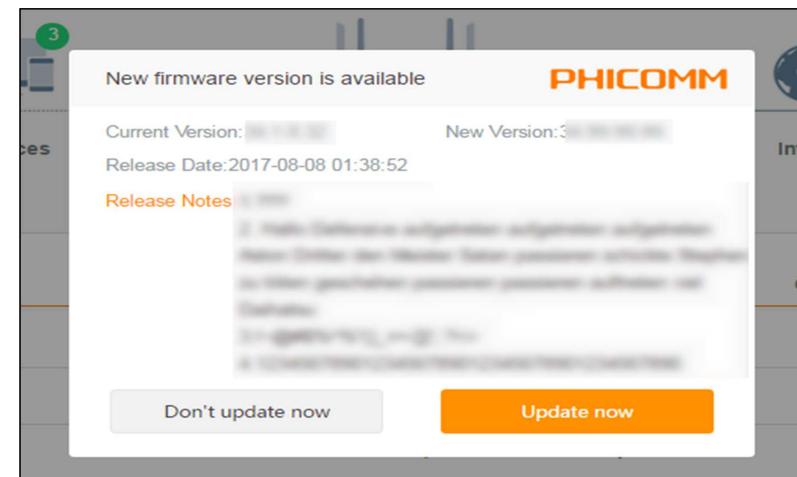

The screenshot shows a notification for a new firmware version:

New firmware version is available

Current Version: [REDACTED] New Version: [REDACTED]
Release Date: 2017-08-08 01:38:52


Release Notes

Don't update now Update now


when you log on Web Management.

Click **Update now** to update the firmware now, or you can click **Don't update now** to postpone the update.


To check whether a new update is available, and update your router online, go to **Main menu > Advanced > Online Update** on Web Management:

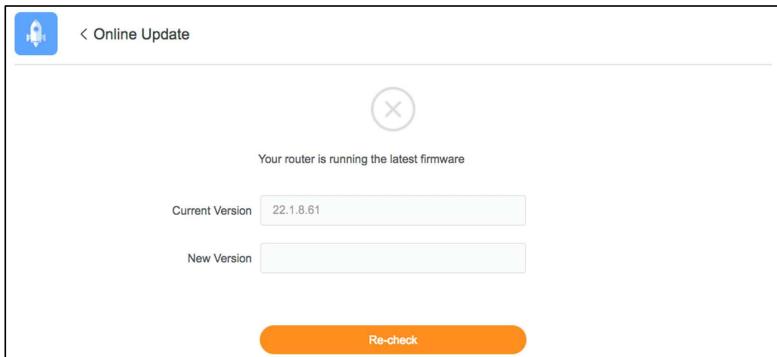

Entering the Online Update page, it automatically detects whether it is the latest firmware version. If a new update is found, click Update to update your router with the newest firmware.

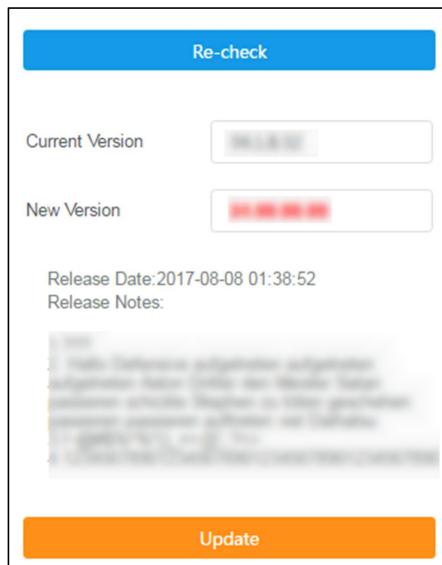

Alternatively, you can go to **Main menu > Advanced > Update** to download the firmware to your local drive, and update the router any time appropriate to your needs:

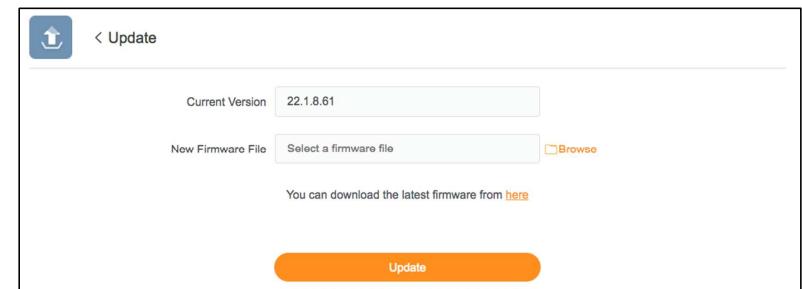

Click **Browse** to locate the new firmware file in your local drive and click **Update** to start updating your router.

You can also click the link as instructed to download the latest firmware.



WARNING!

Do not interrupt a firmware upgrade that is in progress to avoid potential damage to your router.


7.4 Diagnostics

To troubleshoot router's connectivity problems or check the router's overall conditions such as password strength and firmware updates, go to **Main menu > Advanced > Health Check** on Web Management.




Click **Check** to start diagnostics on your router.

If your password strength is categorized as *Weak*, click **Modify** to modify the password to a more complex one to improve the security.

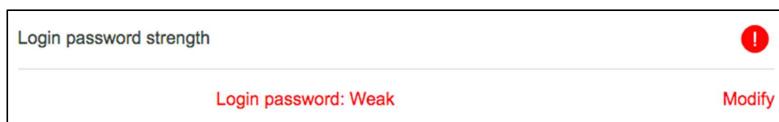


You can click **Update** to update your router with the latest firmware if a new update is detected.

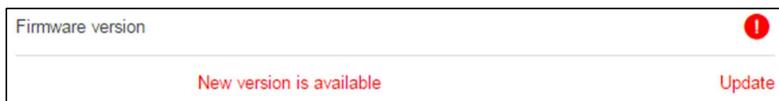

7.5 Restore

You can backup router's current settings in a file and restore these settings for any unexpected change.

To make a configuration backup, go to **Main menu > Advanced > Restore** on Web Management.

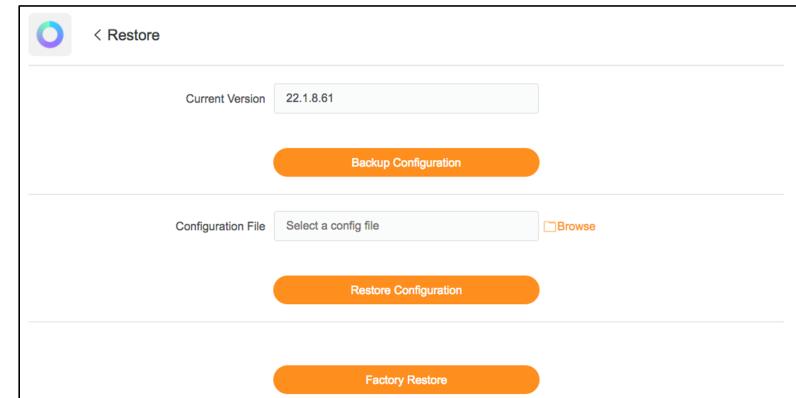

Backup Configuration


Click to save the current router settings in a backup file on your local drive.

Restore Configuration

Locate a backup file on your local drive and click this button to restore your router with these settings.

Factory Restore

Click to reset your router to factory defaults.

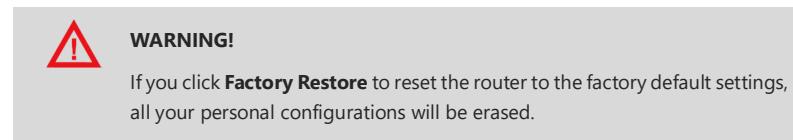

7.6 LED

If you want to turn off or turn on the LED, go to **Main menu > Advanced > LED** on Web Management:



You can use the LED indicator located at the edge of the front panel to diagnose the

connectivity status of your router.

	LED behavior	WLAN	WAN connection	Internet connection
Blue	Solid	✓	✓	✓
	Blinking	✓	✓	✗
Yellow	Solid	✓	✗	✗
	Blinking	✗	✗	✗
Red	Solid	✗	✓	✓
	Blinking	✗	✓	✗

* The LED indicator is solid red when the router is initializing.

* The LED indicator blinks red rapidly when the reset button is held for more than 5 seconds

8 Appendix

8.1 Troubleshooting

Why I cannot open the management page?

- Turn off browser's proxy settings.
- Make sure that your network card has been set to obtaining an IP automatically.
- Make sure that your LAN and wireless LED is on and all cables are connected correctly.

I forgot my network name or encryption keys!

- Try to set up a wired connection and configure the wireless encryption again.
- Click  beside the password textbox to reveal the bulleted password.
- Press the Reset button of the router longer than 5 seconds or go to **Main menu > Advanced > Restore** to reset the router to factory defaults.

Why I cannot access the internet via LAN adapter?

- Move the router closer to the wireless client.
- Check whether the wireless adapter is connected to the correct wireless router.
- Check whether the wireless channel conforms to the channels available in your country / area.
- Retry using another Ethernet cable.
- Check if all cables are connected correctly.

8.2 Technical support – contact us

Phicomm (Shanghai) Co., Ltd.

Email Sales: info@phicomm.com

Email Support: service@phicomm.com.cn

Phicomm Europe GmbH

Email Sales: info-eu@phicomm.com

Email Support: support-de@phicomm.com

Phicomm Communication USA, Inc.

Email Support: support.usa@phicomm.com

Phicomm India Private Limited

Email Support: service.in@phicomm.com

Phicomm Technology (Asia Pacific) Pte. Ltd.

Email Support: support.sg@phicomm.com

For detailed product information and downloads (software, user manuals and certificates)
please visit our website:

www.phicomm.de for Germany and Europe

www.phicomm.us for North America

www.phicomm.in for India

www.phicomm.sg for Singapore

www.phicomm.com for rest of the world