

1 Unpack



WiFi camera

The accessories:

- (1) Power adapter
- (1) 10' charging cable
- (2) Mounting screws

Check out our setup videos

On your computer, go to <http://bit.ly/pnwifi-setup> or scan the QR code here.



2 Position the camera

Find a location for the camera that gives you the best view of your baby in his or her crib.



Place the camera on a flat surface, like a dresser or shelf, or mount the camera to a wall using the keyhole slots on its bottom (see the mounting template included in this package).

IMPORTANT: NEVER place the camera or cords of any kind inside the crib. NEVER place the camera or cords within reach of the baby.

⚠️ WARNING

Strangulation Hazard:

Children have **STRANGL**ED in cords. Keep this cord out of the reach of children (more than 3ft (0.9m) away).

Never use extension cords with AC Adapters. Only use the AC Adapters provided.




3 Test your WiFi signal

Your Project Nursery WiFi Camera needs strong enough signal from your WiFi router in order to send its video signal. Here's how to test it.


First, go to where you want to put the camera. Make sure your smartphone or other portable wireless device is connected to the WiFi network you want to test.

Look at the WiFi icon on your device screen to see the strength of the connection. For example, on iOS devices look in the upper left-hand corner of the screen for the WiFi icon (shown here).

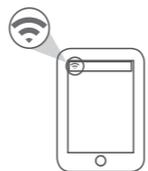


For best results, look for a location with at least 50% strength to use the WiFi camera.

4 Plug in the camera

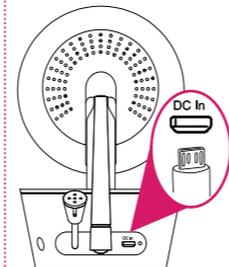

Plug one end of the included charging cable into the **DC In** jack on the back of the camera.

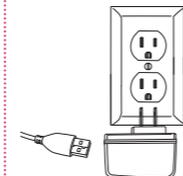

Plug the other end into the included power adapter. Then plug the adapter into an outlet or surge protector.

The camera turns on automatically when you plug it in (the indicator light on its back panel turns solid red).

5 Install the App on your phone



In the Google Play or Apple App Stores, search for "PROJECT NURSERY MONITOR" and look for the icon shown here. Then download and install the App.

6 Launch the App

Once the Project Nursery Monitor App has installed on your smartphone or tablet, press the icon to launch the App.


7 Create a Project Nursery user name and password



The first time you launch the Project Nursery App, you'll need to create a user name and password so that you can access your camera securely.

Press the Register button to start, then follow the steps to set up your account.

IMPORTANT: Make sure you give a valid email address that you have easy access to. The App will use this address if you ever need to recover or reset your password.

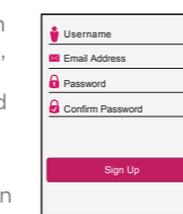


Once you've finished creating your user name and password, the App will ask you to Login with the name and password you created.

IMPORTANT: Your user name cannot contain special characters (like "@")—only letters and numbers.

8 Pair the Project Nursery camera with the App

Make sure the Project Nursery App is open on your phone or tablet. Also make sure that your phone or table is connected to your WiFi network.

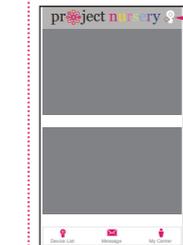

In the App's home screen, press the  icon (Add Camera) in the upper right corner of the screen.



In the next screen, press the **Add new camera with WiFi** button.


The App will prompt you to make sure your camera is on. If you haven't already turned it on, press the Power button on the right side of the camera (the camera's LED lights up), then press the **Next step** button in the App.



The next screen in the App lets you name the camera you're setting up and prompts you to scan the QR code on the bottom of the camera.

To name the camera you're setting up: Press in the Camera name field and enter the name you want to use.

To scan the QR code on the WiFi camera: Find the QR code on the bottom of the WiFi camera. Position your smartphone or tablet so that its camera can scan this QR code. Then press where indicated in the App to scan this QR code.

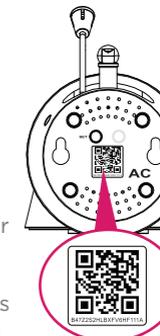

Continues on other side...

8 Pair the Project Nursery camera with the App (continued)




After you've scanned the QR code on the bottom of the WiFi Camera, the App will ask you to press the Set Up button on the bottom of the camera and enter the name (WiFi SSID) and password of your WiFi network.



Enter the name (WiFi SSID) and password for your home WiFi network in the App.


IMPORTANT: Double check your network name and password correctly—these must be correct to work with the App!

Once you've finished entering your network name and password, press the Next step button on the App screen. The indicator light on the back of the WiFi camera starts flashing—the camera is trying to join your WiFi network.

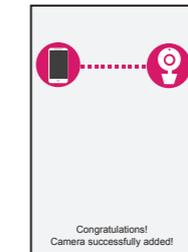

Once the WiFi camera has successfully connected to your WiFi network, you'll see the Success screen in the App and the indicator light on the back of the camera will turn green. **Congratulations—you've just set up your first camera!**

IMPORTANT: If the WiFi camera does not connect, follow the instructions in the App to troubleshoot.

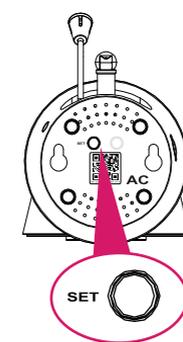

Find the SET button on the bottom of the WiFi camera. Press it for one second (until the camera gives an audio signal).

Connection Troubleshooting

- + Make sure your phone or tablet is connected to the WiFi network you want to use.
- + Make sure the camera is getting a good signal from your WiFi router. See step 3 for more information.
- + Test your WiFi network with other devices to make sure its working.
- + Double check that you've entered the correct password for your WiFi network in the Project Nursery App.
- + Make sure your router is broadcasting its SSID (name). The Project Nursery WiFi camera does not support hidden SSIDs.
- + Make sure that Wi-Fi signal is 2.4GHz. The Project Nursery WiFi camera does not support 5GHz WiFi.
- + Make sure that your WiFi router uses either WPA2-PSK/WPA-PSK or AES as its encryption method.
- + Make sure that there is no MAC filter on router or add MAC address to router whitelist.
- + Reset the camera to set up connection again. Press and hold SET key for 10 seconds. The camera gives a long beep when it is fully reset.

For additional assistance, please call 1-844-393-7338.

9 Choose the camera from the home screen



Press the part of the home screen showing the camera you set up in order to choose this camera.



The Camera View screen is your gateway to total control of your WiFi camera from virtually anywhere.

The next section gives you a tour of the features available from this screen.

Tour of the System: Camera View Screen

(Settings) accesses the Settings menu for this camera. Press this icon to adjust the WiFi and other settings.

Camera view shows you the image from your WiFi camera. Pan and tilt the camera by swiping on the screen left/right or up/down. Zoom the camera by double-tapping the screen.

(Multi-Camera View) lets you see multiple cameras at once on a single screen (if you've set up multiple cameras). Press this icon to access the multi-camera view screen.

(HD-SD Select) lets you switch between high- and standard-definition video on the view screen.

(Micro-SD Card) accesses any content stored on the camera's Micro-SD Card (not included). Press this icon to start viewing or downloading motion/sound-activated videos or images from the camera's Micro-SD Card. (This is where you'll see auto recordings.)

(Record) starts/stops recording video. The video file is saved to your smartphone or tablet.

(Snapshot) takes a still photo of the camera video. The snapshot file is saved to your smartphone or tablet.


(Talk) lets you speak through this camera's built-in speaker. Press and hold this icon to start speaking.

(Sound On/Off) turns the sound from the camera on and off.



Tour of the System: Camera

Front

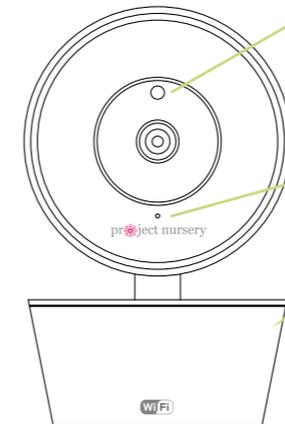

Nighttime sensor adjusts the camera sensitivity to the amount of ambient light.

Microphone picks up sound around the camera.

POWER button (right side) turns the camera on and off (press and hold).

MICRO SD slot (left side) accepts a micro SD card (not included) for storage of automatic photos/video.

Set Up / WiFi Reset (bottom) starts the WiFi setup process (press and hold).


Back

Adjustable antenna communicates wirelessly with your WiFi network.

Indicator light shows the power and connection status of the camera:

DC In jack plugs into your charging cable to power the camera.

- off (camera not plugged in or powered on)
- solid red (on but not connected)
- blinking red (in the process of connecting)
- solid green (connected to network and App)
- blinking green (camera being actively viewed).

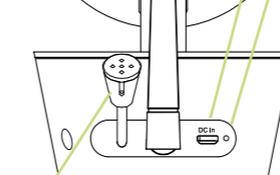

Thermal sensor detects the temperature around the camera.

Up and Running In Just a Few Baby Steps...