

INSIGNIA™

QUICK SETUP GUIDE

40"/43" FHD 1080p 60Hz LED TV


NS-40D510NA21 / NS-40D510CA21 /
NS-43D510NA21

ACCESSORIES


Remote and two AAA batteries



TV stands

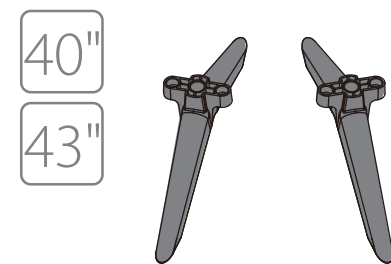

M4 screws (16 mm length) (4 pcs.)

 


STOP
Before using your new product, read these instructions to prevent any damage. Do not plug your power cord in until all other devices have been connected.

1 INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- 2 Use a Phillips screwdriver and two provided screws to secure each stand to your TV.

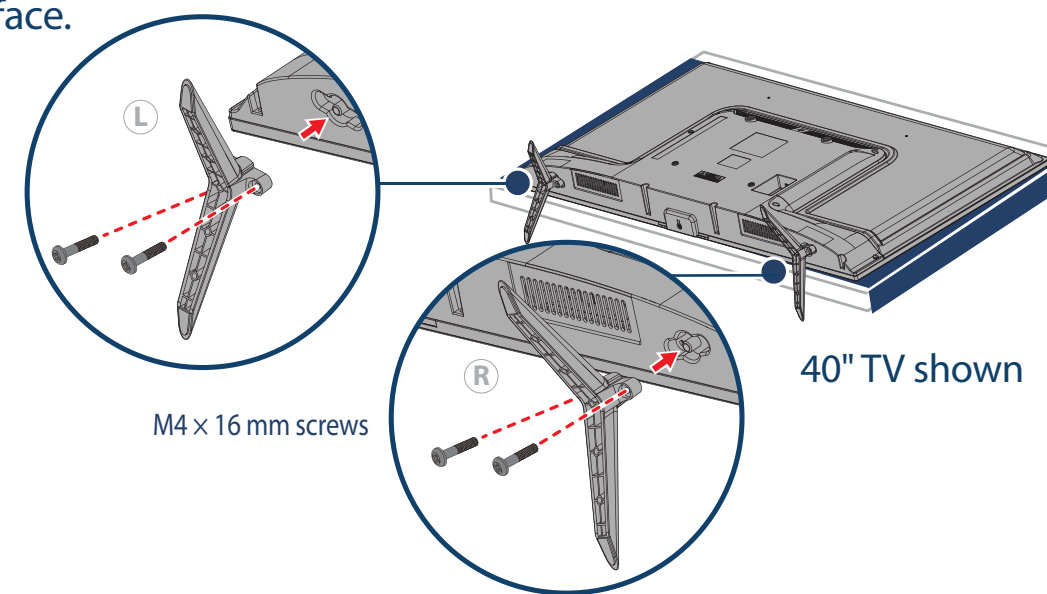

M4 x 16 mm screws

40" TV shown

OR

WALL MOUNT

Before you mount your TV, make sure that:


- You remove the stands.
- The wall-mount bracket supports the weight of your TV.

See the instructions that came with your wall mount for more information about how to correctly mount your TV.

WARNING: Your TV has four VESA mounting holes on the back. **You must secure a wall-mount bracket to all four holes.** If you do not use all four holes, your TV may fall and cause property damage or personal injury.

Note: Wall-mount screws are not included.



40" TV shown

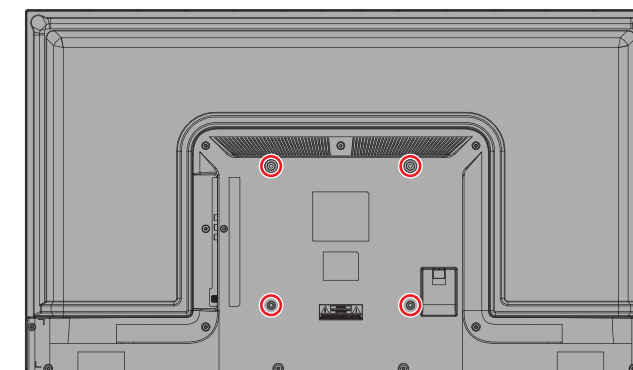


40" VESA Mounting Pattern
200 x 200 mm
M6 screws (10 mm length) (4 pcs.)

43" VESA Mounting Pattern
400 x 200 mm
M6 screws (10 mm length) (4 pcs.)

FEATURES

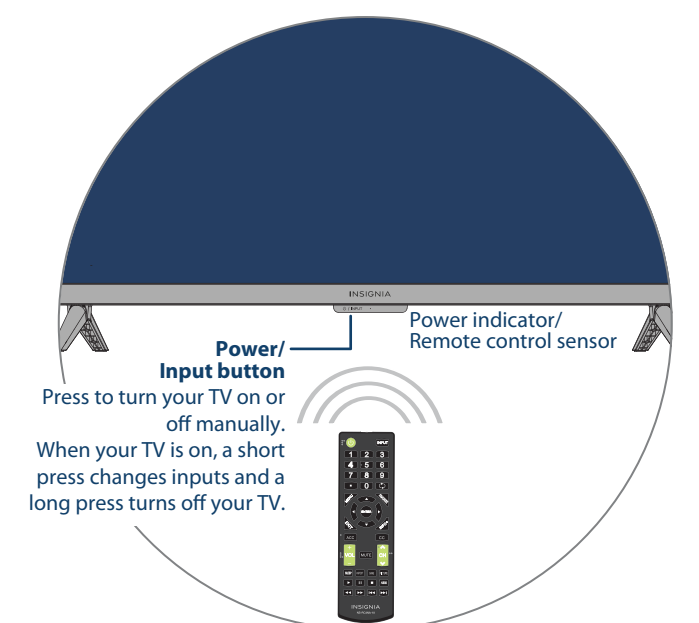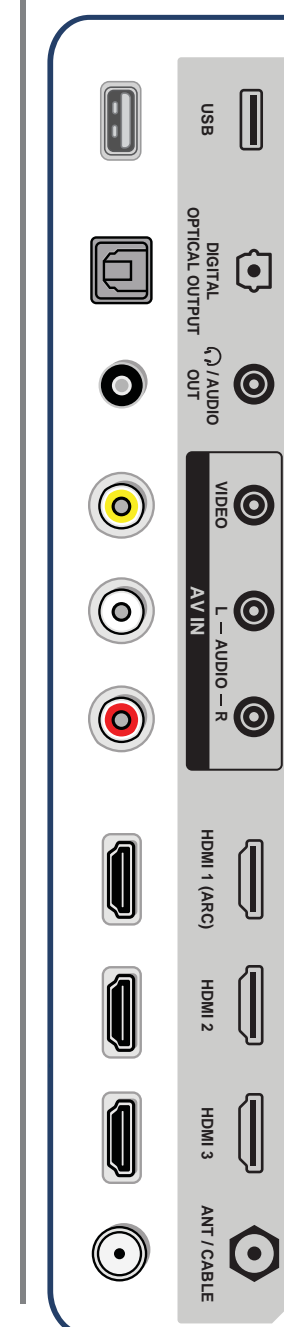



40" TV shown

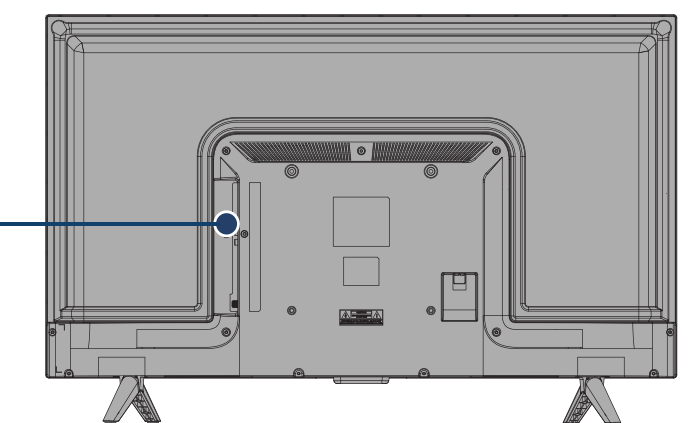

Note: Images do not necessarily represent the exact design of your television.

2 MAKING CONNECTIONS

 HDMI (best video quality)


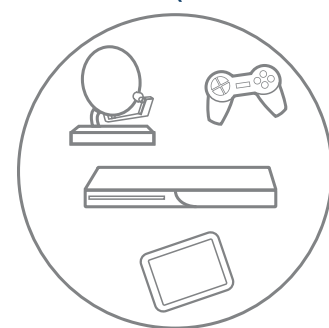


Note: You can use the **HDMI 1 (ARC)** jack to connect a digital audio system.

AV (good video quality)



Coaxial (good video quality)

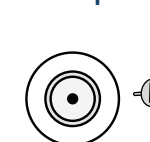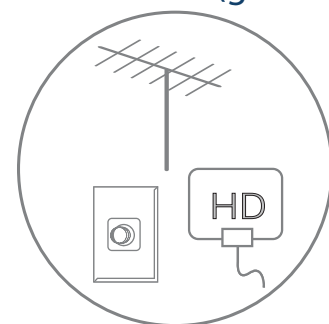



Connect an antenna to access live over-the-air TV.



HDMI options



AUDIO OPTIONS

DIGITAL

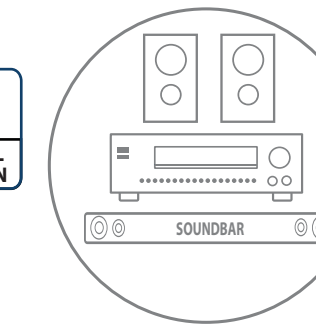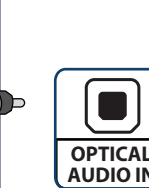


You can use the **DIGITAL OPTICAL OUTPUT** jack or the **HDMI 1 (ARC)** jack.
Note: To change the digital audio format, on your TV's Audio menu, select **Audio Format/Audio Delay**, then set **Audio Format** to **PCM**.

ANALOG

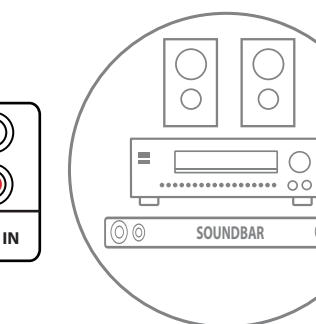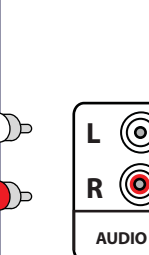


3 TURNING ON YOUR TV

1 Plug the power cord into a power outlet.

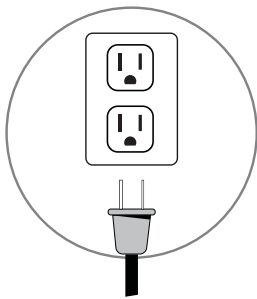

2 Remove the remote control cover and install the batteries.

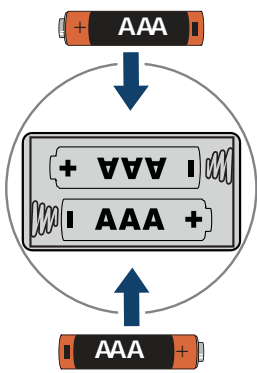

3 Press  on your remote.

4 Follow the on-screen instructions.



REMOTE



FIND YOUR USER GUIDE ONLINE

- Go to www.insigniaproducts.com.
- Use the search bar to find **NS-40D510NA21**, **NS-40D510CA21** or, **NS-43D510NA21**.
- Select **Support & Downloads**.
- Next to *User Guide*, select the language you want.

I already have a universal remote control. How do I make it control this TV?

If you already have a universal remote control that you would like to program to work with your TV and don't want to use the included Insignia remote control, see the table below for common codes.

| UNIVERSAL REMOTE CONTROL CODES | |
|--------------------------------|---|
| AT&T U-verse | 1034, 1035, 1040, 1398, 1465, 1596, 1437, 1507, 12049, 11641, 11564, 11326, 11423, 11892, 11517, 10171, 10463, 11385, 11660, 11963, 12184, 13227 |
| Cablevision | 068, 069, 078, 096, 100, 164, 168, 229, 026 |
| Charter | 2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586 |
| Comcast | 10463, 10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002, 01877, 00276, 01982, 01376, 00810, 01187, 01106, 00877, 00476 |
| Cox | 1326, 1463 |
| DirecTV | 10463, 10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002, 11463, 12049 |
| Dish Network | 834, 720, 222, 898, 365, 777, 754 |
| RCA | 135, 12049, 11423, 11564, 10171, 10463, 11810, 11892, 11963, 12184, 12417 |
| Rogers | 0463, 1326, 2049, 1785, 1780, 1423, 1963 |
| Time Warner | 400, 450, 461, 456, 10463, 1463, 0463 |
| Verizon | 0198, 0490 |

For an up-to-date list of codes for other cable providers and universal remote brands, visit www.insigniaproducts.com/remotecodes.

INSIGNIA™

ONE-YEAR LIMITED WARRANTY
Visit www.insigniaproducts.com for details.

NEED ADDITIONAL HELP?

Check out our **Support Community** at <http://community.insigniaproducts.com/> for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU
www.insigniaproducts.com
For customer service, call:
1-877-467-4289 (U.S./Canada)



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS, Inc.
DTS, TruSurround and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries.
© 2020 DTS, Inc. ALL RIGHTS RESERVED.

U.S. and Canada:
INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2021 Best Buy. All rights reserved.