

QUICK SETUP GUIDE

Mobile Photography Kit

NS-MPKIT30 / NS-MPKIT30-C

PACKAGE CONTENTS

- Carrying case
- Flexible smartphone tripod
- Bluetooth® shutter remote (CR2032 battery included)
- Lenses (3)(macro, wide-angle, and fisheye)
- Lens clip
- Lens cleaning pen
- Microfiber cleaning cloth
- Quick Setup Guide

FEATURES

- Bluetooth shutter remote and tripod
- 3 lenses with clip
- Lens cleaning pen and microfiber cleaning cloth

COMPATIBILITY

Works with most smartphones with conventional bezels up to 5.5" and edge-to-edge screens up to 6.3".

ITEM	DESCRIPTION
 <p>Carrying case</p>	Convenient transportation for all of the accessories in this kit.
 <p>Flexible smartphone tripod</p>	Flexible, foam rubber legs wrap around objects. Universal phone clip holds most phones with screens up to 5.5" and edge-to-edge screens up to 6.3".
 <p>Bluetooth® shutter remote</p>	Bluetooth shutter remote lets you take photos from a distance (works with most iOS and Android smartphones).

ITEM	DESCRIPTION
 <p>3 lenses with lens clip</p>	There are three lenses: macro, wide-angle, fish eye. The macro lens makes the tiny seem large, the wide-angle lens takes breathtaking panoramas and the fisheye lens captures an amazing wrap-around perspective. Universal design quickly clips on most phones, even over cases.
 <p>Lens cleaning pen</p>	With dual sides - one with a retractable soft brush to brush away any loose particles and the other side with a self-replenishable carbon-based tip to clean the lens.
 <p>Microfiber cleaning cloth</p>	Removes fingerprints, oil smudges, dust, and dirt from the screen.

TRIPOD AND REMOTE SHUTTER

Use by itself or with the included tripod for group shots or triggering your phone from a distance. No app needed!

Mount your phone on the tripod for easy group shots, blur-free night shots, or stable video. Flexible legs allow the tripod to be wrapped or hung for placement anywhere.

Tripod



Bluetooth remote control




USING YOUR TRIPOD

- 1 Turn the lock screw counter-clockwise to loosen the clip.
- 2 Push the folded clip into a horizontal orientation, then tighten the lock screw.



- 3 Push the body of the clip into a vertical orientation, then fold the top of the clip up.

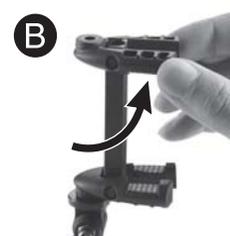

- 4 Insert your smartphone into the clip horizontally.



- 5 Place the tripod on a table, floor, or other stable location.

OR

Wrap all three tripod legs around an object, like a tree branch or railing.

Caution: Placing the tripod on an unsteady object or not attaching it securely could result in damage to your tripod or smartphone.

- 6 Adjust the clip and tripod to point your phone in the direction you want.

USING YOUR REMOTE CONTROL

Pairing to your smartphone

- 1 Slide the remote control's power switch **ON**. The remote enters pairing mode and the LED blinks rapidly.
- 2 On your smartphone, turn on Bluetooth, then put it in pairing mode. For more information, see the documentation that came with your phone.
- 3 On your smartphone, select **NS-MTRIBT10**. The remote control pairs with your smartphone and the LED blinks slowly.

Note: Pressing the  (shutter) button when your phone is not in camera mode may cause unwanted functionality (such as changing the volume). Turn off the remote control when it is not in use.

Taking a photo

- 1 Pair your smartphone to the remote control. See "Pairing to your smartphone" for more information.
- 2 Open your smartphone's camera app.
- 3 Press  (shutter) to take a single picture. OR Press and hold  (shutter) to take a series of photos (if your smartphone supports this feature).



- 4 When finished, slide the power switch **OFF**. **Note:** The remote enters sleep mode and the LED turns off after ten minutes of inactivity. Press  (shutter) to wake.


Replacing the remote battery

Note: The LED blinks quickly when the battery is low.

- 1 Use a Phillips screwdriver to remove the screw, then slide off the battery cover and remove the old battery.



- 2 Insert a new CR2032 battery with the + facing up, then slide on the battery cover and replace the screw.

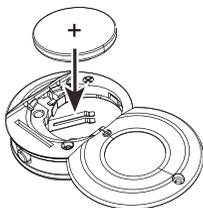

CAMERA LENS KIT

The macro lens makes the tiny seem large, the wide-angle lens takes breathtaking panoramas, and the fisheye lens captures an amazing wrap-around perspective.

Note: The following images are representative only.

Selecting a lens



Macro: Captures more detail (10x) in close-up photos. Ideal for flowers, insects, and jewelry.

Note: Focusing is only possible within a few inches of the subject. Macro lens cannot be used for standard pictures at longer distances.



Wide-angle: Captures 30-50% more than a normal phone camera. Ideal for landscapes or tight indoor shots.



Fisheye: Capture extreme ultra-wide photos with dramatic shots of everyday scenes.

TAKING A PHOTO


- 1 Select a lens, remove its caps, then screw the lens onto the clip.



- 2 Squeeze the clip to align the lens over your mobile device's camera.

Notes:

- If the lens is not aligned correctly, there may be shadows or blurriness on one side of the image.
- You may need to remove your phone's case to get the lens aligned with the phone's camera.

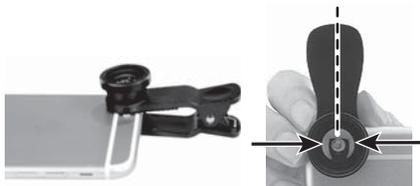

- 3 Open your photo app, then take a photo.

- 4 When finished, remove the clip, unscrew the lens, then cover with front and rear caps.

MAINTENANCE

- Take care when cleaning the lenses. They are precision glass lenses and can scratch. If dirt or fingerprints need to be cleaned, first wipe gently with a clean, lint-free cloth. If further cleaning is required, a camera lens cleaning kit can be used. Eyeglass cleaning products are also suitable.
- Do not use harsh chemicals such as window glass cleaner, as they can permanently damage the lenses.
- Do not submerge lenses in liquid for cleaning, as water can be permanently trapped inside the lens.

TROUBLESHOOTING

Remote control will not pair with my phone

- Move your phone and remote control within five feet of each other.
- Make sure that your remote control is not paired to another phone.
- Make sure that you selected NS-MTRIBT10 on your phone.
- Turn your remote off, then on. Re-pair your remote control and phone.
- The remote control battery may be depleted. Replace the battery.

"NS-MTRIBT10" does not appear on my phone

- Move your phone and remote control closer together.
- Put your remote control in pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your phone.

SAFETY INFORMATION

- Do not expose these devices to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of these devices.
- Do not use any solvents or thinners to clean these devices. Use only a mild detergent and wipe dry with a soft, lint-free cloth.
- Do not exceed the load limit of the tripod (10 oz.).
- Do not squeeze or drop these devices.
- Recycle or dispose of your batteries in accordance with your local regulations.
- **DO NOT SWALLOW THE BATTERY.** This product contains a coin/button cell battery. If the cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you

think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

LEGAL NOTICES

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

1. FCC Caution - \$15.21:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2. FCC Statement - \$15.105(b):

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC statement: RSS-Gen & RSS-247 Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: this device may not cause interference, (2) this device must accept any interference, including interference that may cause undesired operation of the device. RSS-102 Statement This equipment complies with Industry Canada radiation exposure limits set forth for and uncontrolled environment.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2018 Best Buy. All rights reserved.
Made in China