



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The BT-27 is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (3-5 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El MODELO es un altavoz que funciona con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (entre 3 y 5 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se esté cargando, la luz indicadora de batería estará roja. Cuando la batería esté completamente cargada, la luz indicadora se apagará. Una vez completada la carga, desconecte la unidad. Cuando no esté en uso, el altavoz debe estar siempre APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utilice durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería esté completamente agotada, la unidad no podrá funcionar al 100 % del volumen cuando se conecte inmediatamente a la fuente de alimentación. Se recomienda cargar durante un tiempo antes de usar con el volumen al 100 %. La unidad puede funcionar y cargarse con un volumen más bajo. El nivel del volumen aumentará a medida que la unidad se carga.

BATTERIE

Le modèle est un haut-parleur alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation pour maximiser la durée de vie de la batterie. Une fois l'adaptateur secteur connecté à une source d'alimentation, il commencera automatiquement à se charger (3 à 5 heures pour charger complètement la batterie). Même si la batterie est faible, l'appareil s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne vide la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à la source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser à 100 % du volume. L'appareil peut fonctionner et se charger à un volume inférieur. Le niveau de volume augmente pendant que l'appareil est en charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-BT579

Bluetooth

Switch the " **M** " to Bluetooth. Search for " **QFX BT-27** " on your mobile Bluetooth device and pair/connect to it. After successful pairing, you can stream music over Bluetooth. And it will automatically connect to Bluetooth the next time you want to stream music over Bluetooth.

Press the " **⏮** " button shortly to play the previous music track on the connected audio source.

Press-and-hold " **⏮** " button for volume down.

Press the " **⏭** " button shortly to play the next music track on the connected audio source.

Press-and-hold " **⏭** " button for volume up.

Press " **⏸** " button for Play or Pause the music. Click to answer/hang up the call, double-click to call back, long press to reject.

Press-and-hold " **⏻** " button for power on/off.

Press " **M** " button to change modes to Bluetooth, USB , FM radio or AUX input.

AUX Input

Connect an external audio source (portable audio player, CD player, etc.) output to the AUX audio jack input using the included 3.5mm stereo audio cable.

FM Radio

Toggle mode " **M** " button to FM radio mode. Press and hold " **⏸** " button and the unit will auto-search and save available radio stations in your area. This process may take 1-2 minutes to complete. After it has been completed, you can press " **⏮** " and " **⏭** " buttons to change radio stations.

USB Music Player

Connect USB drive with MP3 song files on it and the music will start to play automatically.

Press the " **⏮** " button shortly to play the previous music track on the connected audio source.

Press-and-hold " **⏮** " button for volume down.

Press the " **⏭** " button shortly to play the next music track on the connected audio source.

Press-and-hold " **⏭** " button for volume up.

Press " **⏸** " button for Play or Pause the music.

True Wireless Stereo (TWS)

Two **BT-27** speakers can be paired together and connect to a Bluetooth device and deliver True Wireless Stereo (TWS) sound. To do so, Press-and-hold the " **M** " button, it will search for the other speaker and pairing. After successful pairing, you will here a confirming sound. Then you can connect it with your mobile phone and enjoy TWS music.

Charging

Connect the USB power cable to Type-c USB port with computer or other USB port, the charge led light on.

LED Lights

Press-and-hold " **💡** " button to turn LED lights ON/OFF.

Once lights are on, you can toggle the " **💡** " button to change to 7 different light modes.

Bluetooth

Cambie " **M** " a Bluetooth. Busque "QFX BT-27" en su dispositivo Bluetooth móvil y vincúlelo/conéctese. Después de un emparejamiento exitoso, puede transmitir música a través de Bluetooth. Y se conectará automáticamente a Bluetooth la próxima vez que desee transmitir música a través de Bluetooth.

Presione el botón " **—** " brevemente para reproducir la pista de música anterior en la fuente de audio conectada.

Mantenga presionado el botón " **—** " para bajar el volumen.

Presione el botón " **+** " brevemente para reproducir la siguiente pista de música en la fuente de audio conectada.

Mantenga presionado el botón " **+** " para subir el volumen.

Presione el botón " **▶||** " para reproducir o pausar la música. Haga clic para contestar / colgar el teléfono, doble clic para volver a llamar y presione para rechazar durante mucho tiempo.

Mantenga presionado " **☰** " este botón para encender/apagar.

Presione el botón " **M** " para cambiar los modos a Bluetooth, USB, radio FM o entrada AUX.

Entrada auxiliar

Conecte la salida de una fuente de audio externa (reproductor de audio portátil, reproductor de CD, etc.) a la entrada del conector de audio AUX utilizando el cable de audio estéreo de 3,5 mm incluido.

Radio FM

Botón de cambio de modo " **M** " al modo de radio FM. Mantenga presionado " **▶||** " y la unidad buscará y guardará automáticamente las estaciones de radio disponibles en su área. Este proceso puede tardar entre 1 y 2 minutos en completarse.

Una vez completado, puede presionar los botones " **—** " y " **+** " para cambiar de estación de radio.

Reproductor de música USB

Conecte la unidad USB con archivos de canciones MP3 y la música comenzará a reproducirse automáticamente.

Presione el botón " **—** " brevemente para reproducir la pista de música anterior en la fuente de audio conectada.

Mantenga presionado el botón " **—** " para bajar el volumen.

Presione el botón " **+** " brevemente para reproducir la siguiente pista de música en la fuente de audio conectada.

Mantenga presionado el botón " **+** " para subir el volumen.

Presione el botón " **▶||** " para reproducir o pausar la música.

Verdadero estéreo inalámbrico (TWS)

Se pueden emparejar dos altavoces **BT-27** y conectarlos a un dispositivo Bluetooth y ofrecer sonido estéreo inalámbrico verdadero (TWS). Para hacerlo, mantenga presionado el botón " **M** ", buscará el otro altavoz y lo emparejará. Después de un emparejamiento exitoso, escuchará un sonido de confirmación. Luego podrás conectarlo con tu teléfono móvil y disfrutar de la música TWS.

Cargando

Conecte el cable de alimentación USB al puerto USB tipo c con la computadora u otro puerto USB, la luz LED de carga está encendida.

Luces led

Mantenga presionado el botón " **☀** " para encender o apagar las luces LED.

Una vez que las luces estén encendidas, puede alternar el botón " **☀** " para cambiar 7 modos de luz diferentes.

Bluetooth

Basculer le « **M** » sur Bluetooth. Recherchez « **QFX BT-27** » sur votre appareil mobile Bluetooth et associez-le/connectez-vous à celui-ci. Une fois le couplage réussi, vous pouvez diffuser de la musique via Bluetooth. Et il se connectera automatiquement à Bluetooth la prochaine fois que vous souhaitez diffuser de la musique via Bluetooth.

Appuyez brièvement sur le bouton « **—** » pour lire la piste musicale précédente sur la source audio connectée.

Appuyez et maintenez enfoncé le bouton « **—** » pour baisser le volume.

Appuyez brièvement sur le bouton « **+** » pour lire la piste musicale suivante sur la source audio connectée.

Appuyez et maintenez le bouton « **+** » pour augmenter le volume.

Appuyez sur le bouton « **▶||** » pour lire ou mettre en pause la musique. Cliquez sur répondre / raccrocher, double - cliquez pour rappeler, appuyez longuement sur rejeter

Appuyez et maintenez ce bouton « **⏻** » enfoncé pour allumer/éteindre.

Appuyez sur le bouton « **M** » pour changer de mode en Bluetooth, USB, radio FM ou entrée AUX.

Entrée AUX

Connectez une sortie de source audio externe (lecteur audio portable, lecteur CD, etc.) à l'entrée de la prise audio AUX à l'aide du câble audio stéréo 3,5 mm inclus.

Radio FM

Basculer le bouton de mode « **M** » vers le mode radio FM. Appuyez et maintenez le bouton « **▶||** » et l'appareil recherchera et enregistrera automatiquement les stations de radio disponibles dans votre région. Ce processus peut prendre 1 à 2 minutes.

Une fois l'opération terminée, vous pouvez appuyer sur les boutons « **—** » et « **+** » pour changer de station de radio.

Lecteur de musique USB

Connectez une clé USB contenant des fichiers de chansons MP3 et la musique commencera à jouer automatiquement.

Appuyez brièvement sur le bouton « **—** » pour lire la piste musicale précédente sur la source audio connectée.

Appuyez et maintenez enfoncé le bouton « **—** » pour baisser le volume.

Appuyez brièvement sur le bouton « **+** » pour lire la piste musicale suivante sur la source audio connectée.

Appuyez et maintenez le bouton « **+** » pour augmenter le volume.

Appuyez sur le bouton « **▶||** » pour lire ou mettre en pause la musique.

Véritable stéréo sans fil (TWS)

Deux haut-parleurs **BT-27** peuvent être couplés et connectés à un appareil Bluetooth pour offrir un son True Wireless Stereo (TWS). Pour ce faire, appuyez et maintenez enfoncé le bouton « **M** », il recherchera l'autre haut-parleur et l'appairage. Après un appairage réussi, vous entendrez ici un son de confirmation. Ensuite, vous pouvez le connecter à votre téléphone mobile et profiter de la musique TWS.

Mise en charge

Connectez le câble d'alimentation USB au port USB de type C avec un ordinateur ou un autre port USB, le voyant LED de charge est allumé.

Lumières LED

Appuyez et maintenez enfoncé le bouton « **☼** » pour allumer/éteindre les lumières LED.

Une fois les lumières allumées, vous pouvez basculer le bouton « **☼** » pour passer 7 modes d'éclairage différents.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-27 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

