

# INSIGNIA™

## QUICK SETUP GUIDE

# Powered Stereo Speakers

## NS-PCS219

### PACKAGE CONTENTS

- Stereo speakers (2)
- AC adapter (100 - 240V)
- Quick Setup Guide

### FEATURES

- Stereo speakers (2) for immersive sound
- Compatible with computers, tablets, phones, and any device with a 3.5 mm audio jack
- Speaker controls for easy power and volume level adjustments
- Headphone jack for private listening
- Sleek appearance for a modern look to accent your computer

 


1	Power button	Press to turn your speaker on or off.
2	Power LED	Lights blue when power is on.
3	Headphone output jack	Connect headphones to this jack. They will mute the speaker system automatically. The master volume control can then be used to turn up or down the volume to your headphones.
4	Master volume control	Rotate clockwise to turn the volume up or counterclockwise to turn the volume down.

### SETTING UP YOUR SPEAKER SYSTEM


#### Positioning your speaker system

- Place the speakers on opposite sides of the device they are connected to and as far apart as possible.

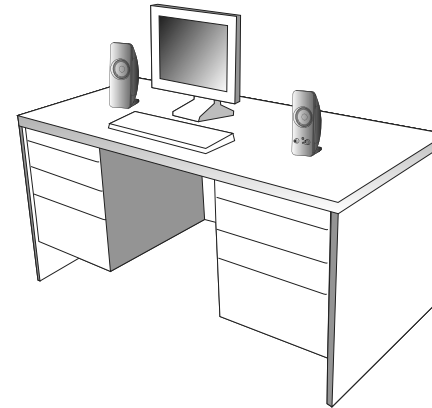


#### Connecting to a computer

 - 1 Make sure that the computer and your speaker system are turned off and unplugged from the power outlet.
- 2 Plug the cable with the green plug on the right speaker into the audio out jack on the computer.

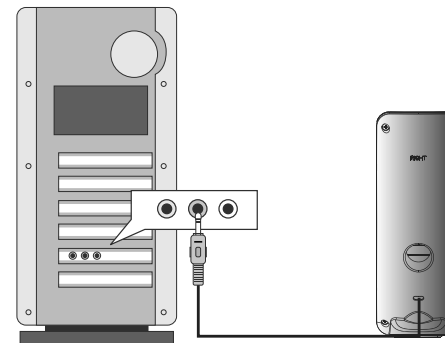

 
- 3 Connect the power plug to the AC power adapter, then plug the adapter into a wall outlet or power strip.

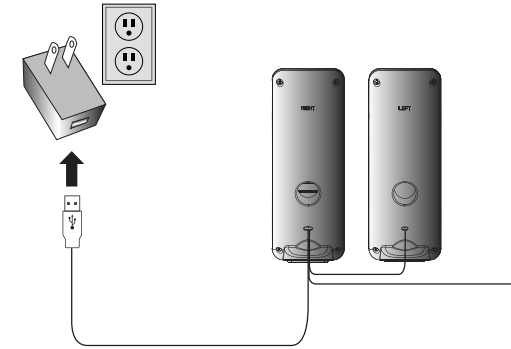

- 4 Turn on the computer and your speaker system.

#### Connecting to portable audio devices

 - 1 Make sure that the portable audio device and your speaker system are turned off and unplugged.
- 2 Plug the green audio cable attached to the speaker into your audio device.

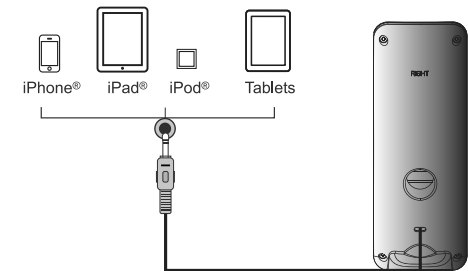

- 3 Connect the power plug to the AC power adapter, then plug the adapter into a wall outlet or power strip.
- 4 Turn on the portable audio device and your speaker system.

## POWER SUPPLY SPECIFICATIONS

Input: AC100-240V ~ 50/60Hz

Output: DC 5.0V, 1.0A

## TROUBLESHOOTING

PROBLEM	SOLUTION
Speaker system will not turn on	<ul style="list-style-type: none"><li>• Press the power button on the right speaker. When your speaker system is turned on, the power LED lights blue.</li><li>• Make sure that the power cord is connected to a power outlet.</li><li>• Test the power outlet to make sure that it is supplying power.</li></ul>
Speaker does not produce sound	<ul style="list-style-type: none"><li>• Press the power button on the right speaker. When your speaker system is turned on, the power LED lights blue.</li><li>• Make sure that the power cord is connected to a power outlet.</li><li>• Test the power outlet to make sure that it is supplying power.</li><li>• Make sure that you have connected the speakers correctly. For more information, see "Setting up your speaker system" on page 1 of this <i>Quick Setup Guide</i>.</li><li>• Make sure that the sound is not muted or the volume is not set too low on the audio device you connected to.</li><li>• Try connecting your speaker system to another audio device. If your speaker system produces sound, the problem is with the audio device you connected to.</li></ul>
Sound is distorted	<ul style="list-style-type: none"><li>• For best sound quality, adjust the volume on the NS-PCS219 computer speakers to its lowest position. Increase the volume to 75-100% maximum level on the computer or source device, then increase the volume on the NS-PCS219 computer speakers to the desired level.</li><li>• If a constant noise or tone is emitted from the speakers, try to move them away from other devices or cables.</li></ul>
Sound is coming from one speaker	<ul style="list-style-type: none"><li>• If your speaker system is connected to a computer, adjust your computer's audio levels to balance the sound coming from the speakers.</li><li>• Reseat the audio connector into the audio out jack of your audio device.</li></ul>

## IMPORTANT SAFETY INFORMATION

- 1 Read, follow, and save all instructions.
- 2 Do not use this apparatus near water.
- 3 Clean only with a dry cloth.
- 4 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8 Only use attachments/accessories specified by the manufacturer.
- 9 Unplug this apparatus during lightning storms or when unused for long periods of time.

- 10 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## LEGAL NOTICES

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

### Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2018 Best Buy. All rights reserved.

**Made in China**