

 


## Introduction

Thank you for purchasing the Rocketfish 4-port WirelessHD Kit. This product is designed to wirelessly send fully uncompressed signals from up to four HDMI source devices, such as a Blu-ray player, cable/satellite set-top box, gaming console, laptop, etc., to a HDTV or projector at a distance of up to 30 feet within the same room. It is important to note that the 60 GHz frequency with which this product transmits provides the necessary bandwidth to send every bit of information from the source device to the display with no compression or bit dropping, but does not penetrate wall or floors. Therefore, this product is not designed to send signals from one room to another.

Please follow the steps in this *Quick Setup Guide* to ensure a successful installation of this product. If you experience any difficulty setting the product up after referring to this guide, please consult the more detailed *User Guide*, also included in the package, which contains some troubleshooting techniques that may help. If the additional instructions and troubleshooting section of the *User Guide* prove unsuccessful for your setup, please contact our customer service department at 800-620-2790 or visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for additional assistance.


## Package contents

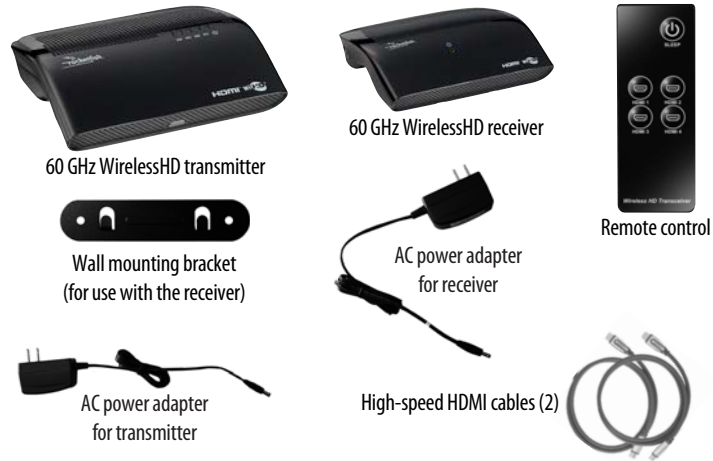


## Setting up the WirelessHD Kit

### Tips:

 
- The WirelessHD transmitter and receiver are pre-paired at the factory, and should discover each other within about one minute after being set up and powered on as described in these instructions.
- Test the placement of the transmitter and receiver for a good signal prior to permanently mounting or installing everything.
- For best performance and range, mount the receiver vertically on the wall next to the TV (not behind the TV), or upside-down on the ceiling next to the projector. Make sure that you can see the Rocketfish and WiHD logos on the receiver from the location in the room where the transmitter is located. For more details about mounting the receiver, see your *User Guide*.
- Use only good quality high-speed HDMI cables for all connections, such as Rocketfish brand cables. Poorly constructed HDMI cables can negatively impact performance and may not support all of the features included in your connected devices.
- Do not place the transmitter or receiver inside a cabinet or other location where they will not have a clear view of the room.

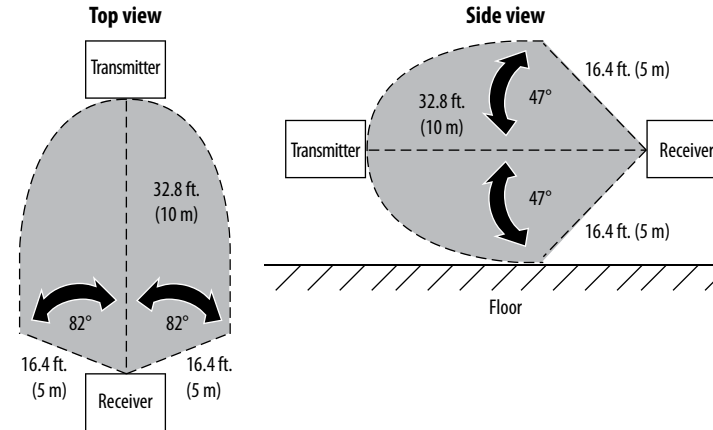

 - 1 Connect your HDMI source devices (up to four) to the WirelessHD transmitter with high-speed HDMI cables.

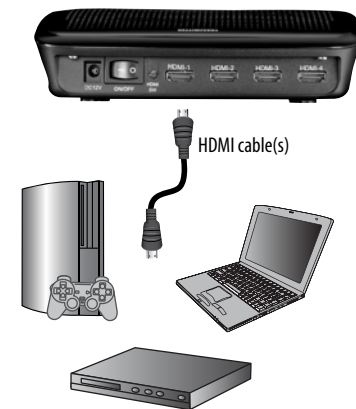

 - 2 Connect the WirelessHD receiver to the TV or projector with a high-speed HDMI cable.

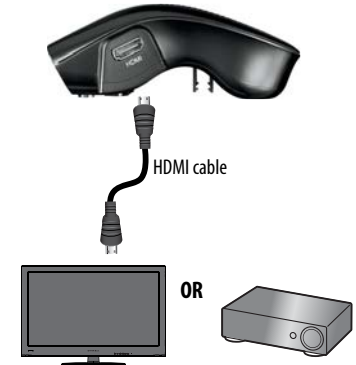

- 3 Connect the included AC adapters for the transmitter and receiver to the DC input jacks, then plug them both into an available AC outlet.



**Note:** The included AC adapters are labeled to ensure the correct adapter is used with the transmitter and receiver.

- 4 Power on the TV or projector and at least one of the source devices that is connected to the transmitter.

**Note:** Be sure the TV or projector is switched to the HDMI input to which the WirelessHD receiver is connected.

5 Switch the Power switches on the transmitter and receiver to the ON position (it does not matter which one you power on first). The HDMI input port LED on the transmitter should light continuously (stop blinking) to indicate that the desired input is selected. If this doesn't happen automatically, use the included remote control or HDMI Select Switch on the back of the transmitter to select the desired input port. For more details on HDMI port switching, see your *User Guide*.

**Note:** The Power and Link Status indicator LED will flash while the transmitter and receiver establish a connection. Once the connection has been established, these indicators will light continuously (stop flashing).

**Note:** The transmitter and receiver are pre-paired and should discover each other shortly after being powered on. However, should you experience an excessively long delay (over five minutes) for the link to be established, press the HDMI/WVAN switch on the back of the transmitter for at least three seconds to establish the link (the receiver must also be powered on during this process).

For more detailed instructions on operating the WirelessHD kit, please refer to the included *User Guide* section, "Using the WirelessHD kit".

Features

 
Transmitter front/top panel



Receiver front/top panel





Transmitter back panel

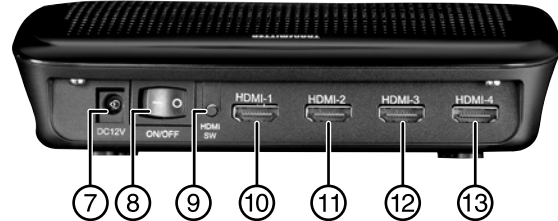

Receiver back and side panels

 

#	Component	Description
1	HDMI 4	Lights to indicate that this HDMI input is selected.
2	HDMI 3	Lights to indicate that this HDMI input is selected.
3	HDMI 2	Lights to indicate that this HDMI input is selected.
4	HDMI 1	Lights to indicate that this HDMI input is selected.
5	Power and link status indicator  (transmitter)	Blinking—Power is on and the transmitter is in sleep mode or searching for the receiver. On—The transmitter and receiver are linked. Off—The power is off.
6	Power and link status indicator  (receiver)	Blinking—Power is on and the receiver is in sleep mode or searching for the transmitter. On—The transmitter and receiver are linked. Off—The power is off.
7	DC IN jack	Connect the power adapter labeled "Transmitter" to this jack.
8	Power switch	Turns the unit on or off.
9	HDMI select switch	Press quickly (<1 second) to switch HDMI inputs; or hold for at least 3 seconds to join a Wireless Video Area Network (WVAN).
10	HDMI 1 jack	Connect an HDMI source device with a high-speed HDMI cable.
11	HDMI 2 jack	Connect an HDMI source device with a high-speed HDMI cable.
12	HDMI 3 jack	Connect an HDMI source device with a high-speed HDMI cable.
13	HDMI 4 jack	Connect an HDMI source device with a high-speed HDMI cable.
14	HDMI jack	Connect this port to an HDMI input on the TV or projector, using high-speed HDMI cable.
15	DC IN jack	Connect the power adapter labeled "Receiver" to this jack.
16	Power switch	Turns the receiver on or off.
17	Cable routing clips	Insert HDMI cable into these clips for receiver placement stability.

Remote control

**Note:** Remove the plastic film from the remote control before to using it for the first time.



One-year limited warranty

Visit [www.rocketchfishproducts.com](http://www.rocketchfishproducts.com) for details.

Contact Rocketfish:

For customer service, please call 1-800-620-2790.

[www.rocketchfishproducts.com](http://www.rocketchfishproducts.com)

Distributed by Best Buy Purchasing, LLC  
7601 Penn Avenue South, Richfield, MN 55423-3645 USA  
© 2011 BBY Solutions, Inc., All Rights Reserved. ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.  
Best Buy Imports, S. de R.L. de C.V. Av. Santa Fe 485, Segundo Piso, Colonia Cruz Manca, Programa Parcial de Desarrollo Santa Fe, Delegación Cuajimalpa, Distrito Federal, México 05349  
© 2011 Best Buy UK Distributions Limited. All rights reserved. Distributed by Best Buy Europe Distributions Limited. 1 Portal Way, London W3 6RS