

**INSIGNIA™**

 
Quick Setup Guide | NS-BBTCD01 CD Boombox with Bluetooth

Congratulations on your purchase of a high-quality Insignia product. Your Insignia NS-BBTCD01 CD Boombox represents the state of the art in boombox and Bluetooth design and is designed for reliable and trouble-free performance.


PACKAGE CONTENTS

- CD Boombox with Bluetooth
- AC power adapter
- Quick Setup Guide
- User Guide


Top View / Controls

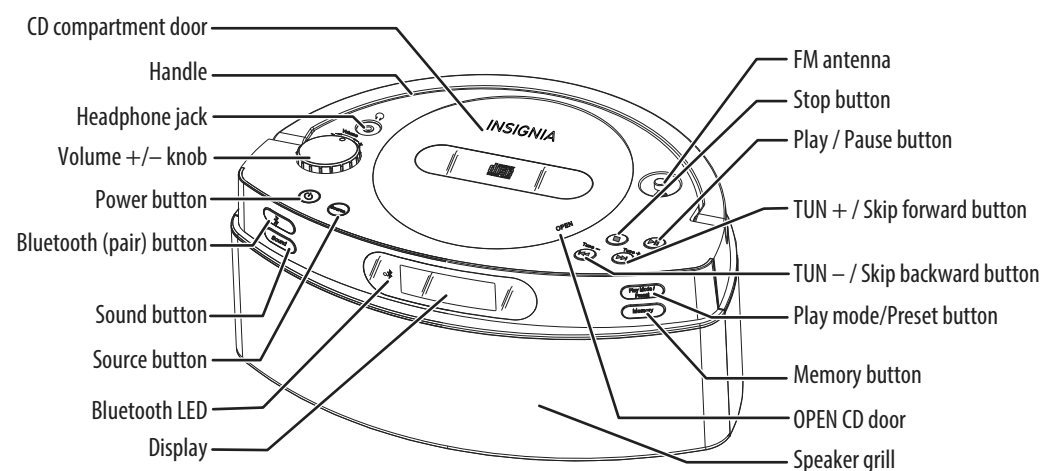

LCD screen

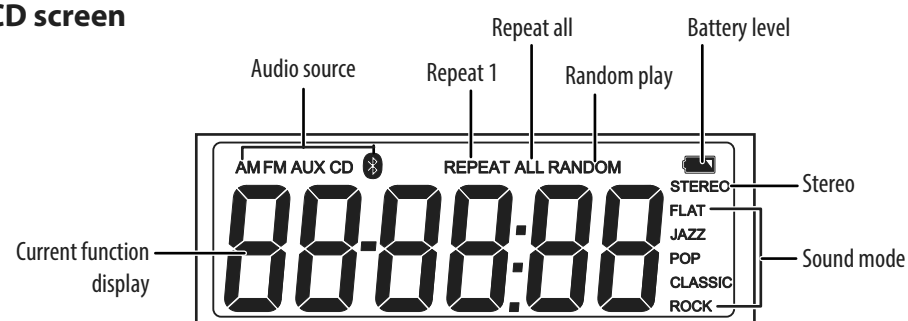 


Back view

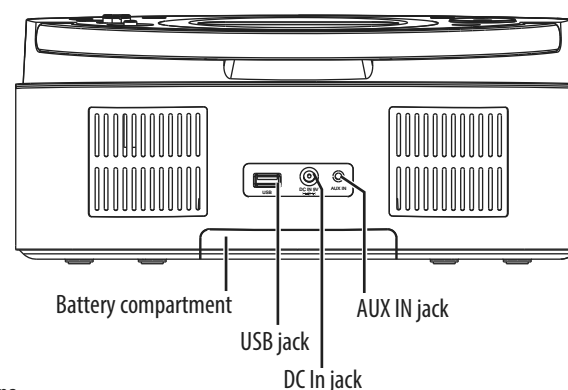 


INSTALLING THE BATTERIES

 - 1 Turn your boombox over so the bottom is facing up, then press down on the **OPEN ▼** and slide the battery compartment cover off the battery compartment.
- 2 Insert six type C batteries (not included) into the battery compartment. Make sure that the + and - symbols on the batteries align with the + and - symbols inside the battery compartment.
- 3 Insert the tabs on the battery compartment cover into the slots on the battery compartment, then slide the cover into place. Set your boombox upright.

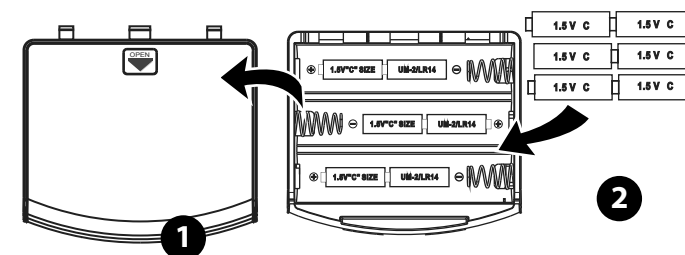

CONNECTING THE AC ADAPTER

 - 1 Plug the small connector on the power adapter into the **DC IN** jack on the back of your boombox.
- 2 Plug the other connector on the power adapter into a power outlet.

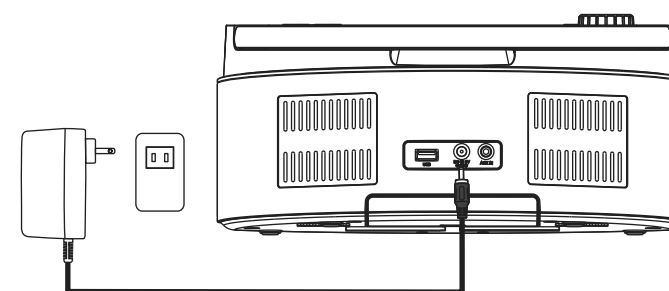

Before using your new product, please read these instructions to prevent any damage.





TURNING YOUR BOOMBOX ON OR OFF

- Press the  button.

Selecting the audio source

- Press the **Source** button one or more times until the audio source appears on the display. You can select:
 - **AM**—AM radio band
 - **FM**—FM radio band
 - **CD**—CD player
 - —Paired Bluetooth device
 - **AUX**—Device connected to the **AUX** in jack.

PAIRING WITH A BLUETOOTH DEVICE

- 1 On your boombox, press the **Source** button one or more times until the  icon appears on the display.
- 2 Make sure that your Bluetooth device is turned on and within 33 feet (10 meters) of your boombox. On your boombox, press the  button. Your boombox enters pairing mode, and the Bluetooth LED blinks. Your boombox remains in pairing mode for two minutes or until your boombox pairs with the Bluetooth device.
- 3 On the Bluetooth device, add or search for **NS-BBTCD01**. See the instructions that came with the device for information about selecting a device.
- 4 When **NS-BBTCD01** appears on the Bluetooth device's display, select it.
- 5 If you are asked for a password, enter **0000**. When pairing is complete, the Bluetooth LED on your boombox lights solid.
- 6 To disconnect from the paired Bluetooth device, press and hold the  button on your boombox for three seconds. Your boombox disconnects from the Bluetooth device and enters pairing mode again.
- 7 To reconnect your boombox to a paired device, on the Bluetooth device search for and select **NS-BBTCD01**.

Note: For more information about reconnecting with a paired device, see your *User Guide*.

PLAYING AUDIO FROM A BLUETOOTH DEVICE

 
- 1 On your boombox, press the **Source** button one or more times until the  appears on the display.
- 2 Make sure that the Bluetooth device has been paired to your boombox. See "Pairing with a Bluetooth device."
- 3 To control playback from the Bluetooth device, on your boombox:
 - Press the  button to start or pause playback. Your boombox plays the audio files on the Bluetooth device.
 - Rotate the volume control knob to increase or decrease the volume.
 - Press the  button to go to the next song.
 - If the song has played more than two seconds, press the  (skip back) button to go to the beginning of the current song. Press again to go to the previous song. If the song has played less than two seconds, press to go the previous song. Press and hold for two seconds to fast reverse.

PLAYING THE RADIO

- 1 Press the  button to turn on your boombox.
- 2 Press the **Source** button one or more times until **AM** or **FM** appears on the display.
- 3 Rotate the volume control knob to increase or decrease the volume.
- 4 Press the  or  button to go to the next higher or lower radio frequency. When your boombox detects a strong FM signal, **STEREO** appears on the display.
OR
Press and hold the  or  button for two seconds to automatically tune to the next higher or lower radio station.
- 5 Press the  button to turn off your boombox.

Playing audio from a connected audio device

- 1 Make sure that your boombox is turned off.
- 2 Plug one end of a 3.5mm audio cable (not provided) into the **AUX In** jack on the back of your boombox and to the audio out or line out jack on the audio device.

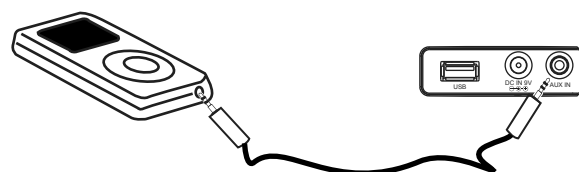

- 3 Press the  (power) button to turn on your boombox, then press the **Source** button one or more times until **AUX** appears on the display.
- 4 Adjust the volume using the volume knob on your boombox.
- 5 Use the controls on the audio device to control playback.

PLAYING A CD

- 1 Press the  button to turn on your boombox.
- 2 Press **OPEN** on the CD door to open the CD compartment.
- 3 Insert a CD into the CD tray with the label facing up, then press **OPEN** again to close the CD compartment. The total number of tracks appears on the display. CD plays automatically. The currently playing track number appears on the display. When your boombox has played all the tracks on the CD, playback stops. Your boombox can play standard and 3" CDs.
- 4 Rotate the volume control knob to increase or decrease the volume.
- 5 To control CD playback:
 - Press the  button to pause playback. Playback stops, but the CD continues to spin and the playback time blinks on the display. Press this button again to resume playback.
 - Press the  button to go to the next track on the CD. Press and hold this button for two seconds to fast forward on the CD.
 - If the current track has played more than two seconds, press the  (skip back) button to go to the beginning of the currently playing track. Press this button again to go to the previous track. If the current track has played for less than two seconds, press this button to go to the previous track. Press and hold for two seconds to fast reverse on the CD.
 - Press  to stop playback before the CD has finished playing.

For more information about using your boombox, see your *User Guide*.

ONE-YEAR LIMITED WARRANTY

See your *User Guide* or visit www.insigniaproducts.com for details.

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Registered in some countries. Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 Best Buy. All rights reserved. Made in China

