

INSIGNIA™

QUICK SETUP GUIDE

French Door Refrigerator with Freezer Drawers

NS-RFD21SS7

PACKAGE CONTENTS

- French door refrigerator
- Handles and screws
- Decorative cover for bottom beam
- User Guide
- Quick Setup Guide

SETTING UP YOUR FREEZER

1 Prepare your refrigerator

- Remove the exterior and interior packing.
- Let the refrigerator stand upright for approximately two hours before connecting it to power.
- Wipe the inside.
- When moving your refrigerator, do not tilt it beyond 45° from upright.

2 Find a suitable location

- This refrigerator is designed to be free standing only, and should not be recessed or built-in.
- Place your refrigerator on a floor that is strong enough to support the refrigerator when it is fully loaded.

- Allow 3.9 inches (10 cm) of space between the sides of the refrigerator and the walls, 3.9 inches (10 cm) between the back of the refrigerator and the wall, and 11.8 inches (30 cm) between the top of the refrigerator and the ceiling.
- If you locate the refrigerator next to a fixed wall, allow sufficient space on the hinge side for the door to swing open.
- Locate the refrigerator away from direct sunlight and sources of heat, such as a stove, heater, or radiator. Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extremely cold temperatures may also prevent the refrigerator from performing properly.
- Avoid locating the refrigerator in moist areas.

3 Level your refrigerator

- It is very important for the refrigerator to be level. If the refrigerator is not leveled during installation, the doors may not close or seal properly, causing cooling, frost, or moisture problems.
- To level your refrigerator, rotate the leveling feet clockwise (to raise) the refrigerator or counter-clockwise (to lower).
Note: If your doors do not line up after leveling, see *Adjusting the refrigerator doors* in the online user manual.

4 Installing the handles

- 1 Unplug the refrigerator.
- 2 Identify the handles. Lay all four on a flat surface. The refrigerator door handles extend higher than the freezer drawer handles.

 


- 3 Screw the extended-head screws into the door/drawer holes with the wrench provided. Do not overtighten. The screw heads should extend above the surface of the door/drawer.
- 4 Place the door/drawer handle over the heads of the screws.
- 5 Install the remaining two screws into the holes on the handle, then tighten them securely.



5 Connect the water supply line

Note: Water line installation kits are available from your local hardware store.

- 1 First shut off the main water supply line and turn the ice-maker off.
- 2 Locate the nearest cold water line (potable water only).
- 3 After connecting the water shut off valve to the water supply line, turn your main water supply back on and flush several gallons water to clear the water supply line.
- 4 Turn the water valve off.

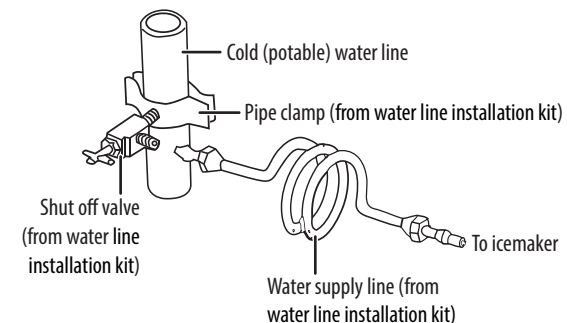

  - 5 Connect the water supply tubing to the valve you installed in the water line.

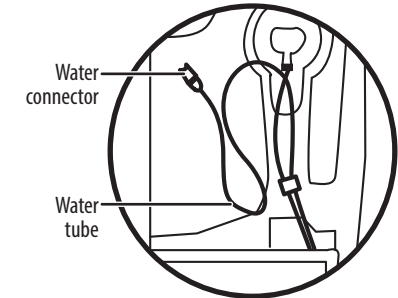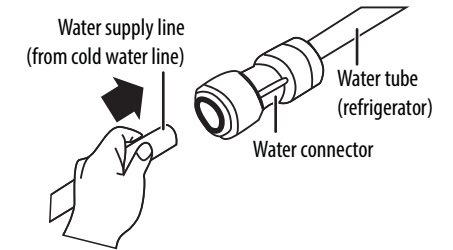

- 6 Connect the other end of the water supply tubing to the water connector on your refrigerator.
- 7 Turn the water on and check for any leakage.
Caution: Only connect the water line to a drinkable water source.

6 Plug in your refrigerator

- Wait for 30 minutes, then open the door to make sure that the refrigerator is working properly.

7 Set the refrigerator temperature

- 1 Press **REF. TEMP.** The Refrigerator Temperature display turns on.
- 2 Press **REF. TEMP.** repeatedly until the desired temperature is displayed. The temperature range is 36° and 46° F (2° and 8°C).

8 Set the freezer temperature

- 1 Press **FRZ. TEMP.** The Freezer Temperature display turns on.
- 2 Press **FRZ. TEMP.** repeatedly until the desired temperature is displayed. The temperature range is 9° and -8° F (-13° and -22° C).

9 Switching between Fahrenheit and Celsius

 
- Press and hold **AUTO MODE** for three seconds.

USING YOUR REFRIGERATOR


- Each compartment inside the refrigerator is designed to store different types of food. Store your food in the optimal space to enjoy the freshest taste.

FEATURES

Interior

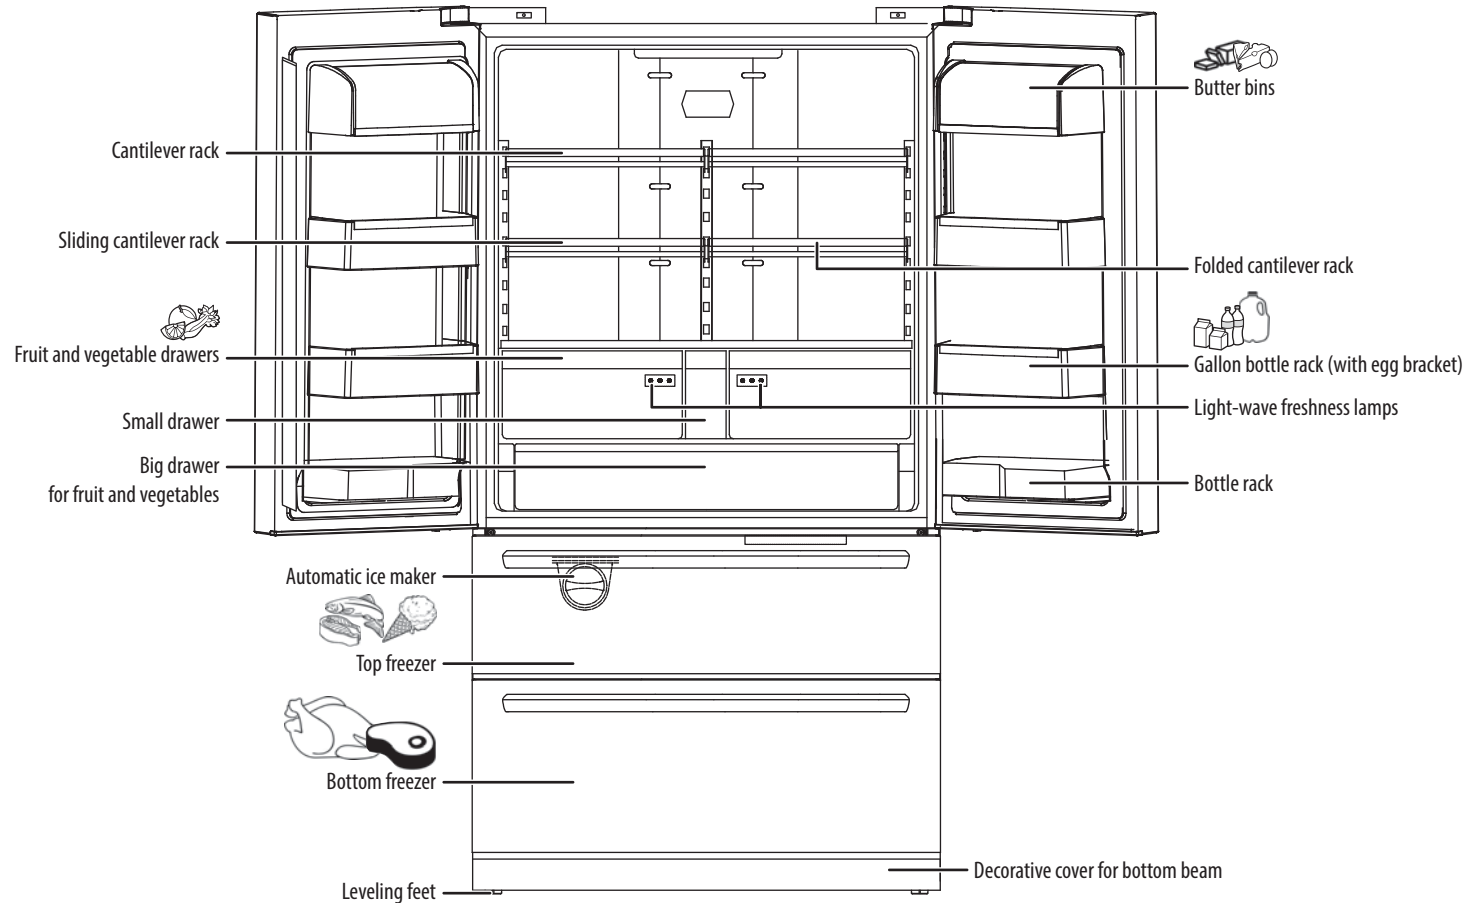

Control panel

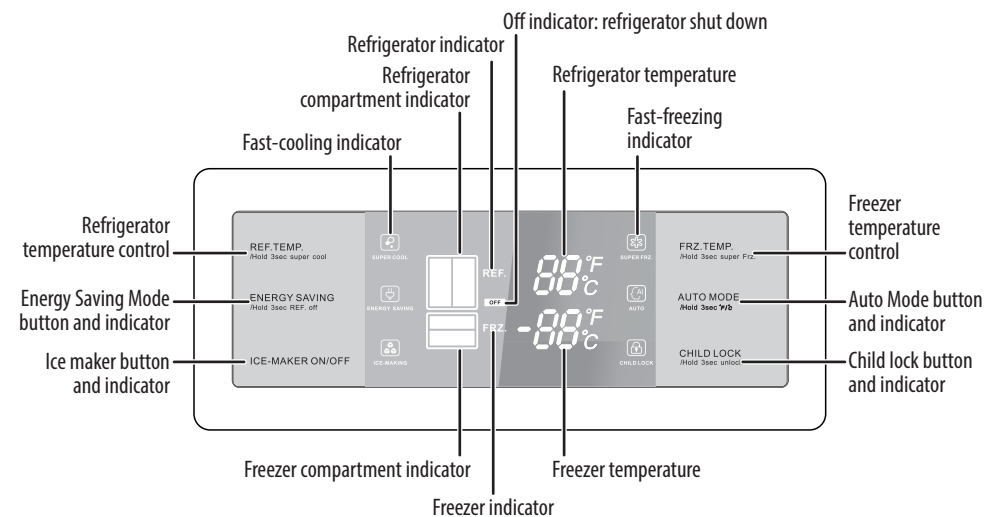 

REMOVING THE DOORS

For instructions on how to remove the doors see your online *User Guide*.

TROUBLESHOOTING

For troubleshooting information see your online *User Guide*.

SPECIFICATIONS

For specifications see your online *User Guide*.

SAFETY INFORMATION

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this appliance near water.
- Clean only with a damp cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- Do not attempt to modify or extend the power cord of this appliance.
- Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- Make sure that the available AC power matches the voltage requirements of this appliance.
- Do not handle the plug with wet hands. This could result in an electric shock.
- Unplug the power cord by holding the plug, never by pulling the cord.
- Do not turn the appliance on or off by plugging or unplugging the power cord.
- Turn off the appliance before unplugging it.
- Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and no objects filled with liquids should be placed on top of it.

Grounding requirement

This refrigerator must be grounded. This refrigerator is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded. Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the freezer is properly grounded.

LEGAL NOTICES

If at any time in the future you should need to dispose of this product, note that waste electrical products should not be disposed of with household waste. Recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

Owing to continuous improvement, no prior notice will be given regarding changes on features and specifications.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies
 Distributed by Best Buy Purchasing, LLC
 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
 ©2016 Best Buy. All rights reserved.

Made in China