

QUICK SETUP GUIDE

Elite Controller
Charging Station

NS-GXBOECS101

PACKAGE CONTENTS

- Charging station
- Battery pack
- Battery cover
- AC adapter
- *Quick Setup Guide*

COMPATIBILITY

- Works with Xbox One Elite, Xbox One, or Xbox One S wireless

 
FEATURES

- 1400 mAh battery capacity for a longer play time
- Battery pack eliminates the need for costly disposable batteries

INSTALLING YOUR BATTERY PACK


Insert the battery pack into the compartment (A), then install the battery cover (B).

Note: Make sure that the + and – symbols on the battery pack match the symbols inside the battery compartment.

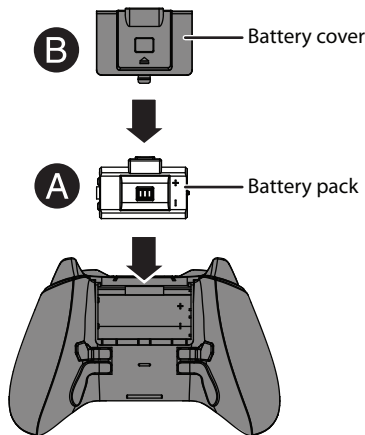

SETTING UP THE CHARGING STATION

 - 1 Connect the AC adapter from the charging station to a power outlet.
- 2 Place the charging station on a flat, stable surface.

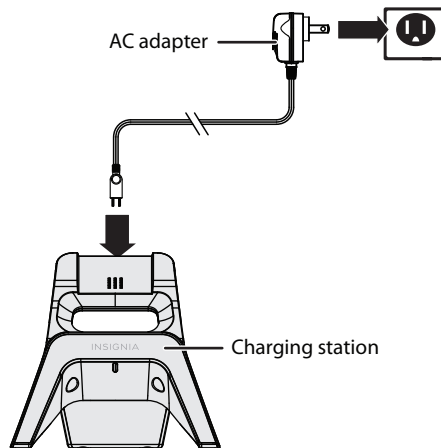

RECHARGING YOUR CONTROLLERS

Charging station

- 1 Gently push your controller onto the charging station's connector until you hear a click. The charging LED lights red while charging, then turns green when finished.




STATUS LIGHT	DESCRIPTION
Red	Charging
Green	Fully charged

2 To remove a controller, hold the charging station down, then lift off the controller.

AC adapter

 To charge the controller while playing, connect the AC adapter from the micro USB port (on the battery pack) to a power outlet.

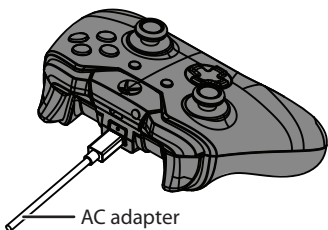

SPECIFICATIONS

Charging Station Input: DC 5V 800mA

Charging Station Output: DC 3V 800mA

Battery Type: NiMh

Cable Length: 1.2m

Operating Temperature: 0°-55°

TROUBLESHOOTING

Controller doesn't work with the battery pack:

- Re-install the battery pack. Make sure that it is locked in place.
- Try to recharge the battery pack.
- Use other batteries to determine whether the controller is damaged or the battery pack's charge is low.

Charging station doesn't charge the controllers:

- Make sure that the battery pack is correctly installed in the Xbox One controller.
- Make sure that you have connected the AC power adapter to the charging station and a working power outlet.
- If the battery pack has been stored and/or unused for a long time, it may have become over-discharged. The charging station may not be able to recover the battery.

Battery life seems short:

- It is normal for battery life to decrease over time.
- Make sure that the battery is full (LED is green) before disconnecting from the charging station.
- Leaving your fully charged controller on the charging station for extended periods of time will limit your battery's lifespan and performance.

SAFETY INFORMATION/CAUTION

Incorrect battery use may result in battery leakage, overheating, or explosion. When using batteries, make sure that you follow these instructions:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water or remove the clothing immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.
- Remove the battery when the product will not be used for an extended period of time.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

Microsoft and Xbox One are registered trademarks of the Microsoft group of companies.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2016 Best Buy. All rights reserved.

Made in China