



CARPET CLEANER

INSTRUCTION MANUAL

Model: H6

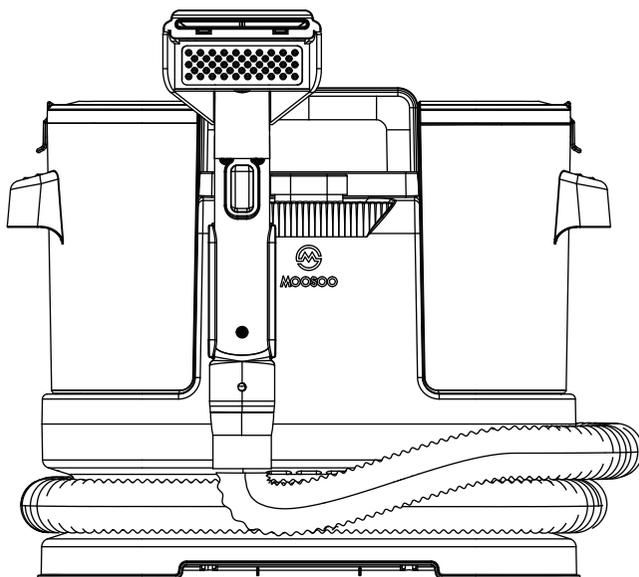


TABLE OF CONTENTS

SAFETY INSTRUCTION	01
The scope of use	02
About the machine	02
KNOW YOUR PRODUCT	03
Product Overview	03
Product configuration	03
Product disassembly	04
Cleaning head replacement	04
TECHNICAL SPECIFICATION	05
DAILY USE AND MAINTENANCE	06
Product daily use	06
Clean the tank and add water	06
Product routine maintenance	07
TROUBLE SHOOTING	09
WARRANTY	10
Customer Care	10
What is not cover	10
Warranty Service	10

SAFETY INSTRUCTIONS



Warning:

Please follow the steps in this manual to install the machine. Keep this instruction properly. If you take this machine.

For third party use, please enclose this manual with the machine. Any instructions similar to those in this manual.

Inconsistent operations may result in product damage or serious personal injury. This machine is suitable only in It is used in a conventional home environment and is not suitable for use in an industrial environment or outdoors.

- This appliance is for indoor use only.
- This machine is not intended for persons with physical, sensory or intellectual impairments or who lack experience and common sense children (including children) unless supervised or directed by others to ensure their safe use. They have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved.
- Do not touch the plug or any live parts of the product with wet hands to avoid the risk of electric shock.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Stop to use the adapter/plug if it is broken. This could cause electric shock. And call our professional for replacement.
- Keep hair, loose clothing, fingers, and other parts of body away from opening and moving parts of the appliance. Do not point the vacuum tube, accessories, or tools to eyes, ears, or put them into mouth.
- Stop to use the appliance if electric leakage, motor over-heating, or abnormal sound is found. And call our professional for help.
- If you do not use this product for a long time, turn off the power.
- If the machine can not work properly because of falling, damage, falling outdoors or falling into the water, please do not take it out for operation, please contact the company's professional maintenance personnel to repair, in order to avoid danger and personal injury.
- Do not place the machine outdoors or in a place where it may freeze. Do not place the product near a heat source.
- Do not expose the machine to fire or excessive temperature to avoid the risk of product damage or explosion.
- After using the machine, please clean the sewage tank in time and keep the ventilation path unblocked to avoid suction decrease and motor heating, which will affect the service life of the carpet cleaning machine.
- Keep the machine in a dry place after use. A damp place will affect the insulation and service life of the electrical apparatus.
- The cleaning machine is powered on and cannot be soaked in water or rinsed. Please check the unblocked condition of the suction nozzle regularly. If there is blockage, please remove it in time to avoid the decrease of suction caused by blockage and affect the performance of the machine.
- Please ensure that the cleaning brush head is replaced after the machine is turned off. If the machine fails, do not repair it by yourself. It must be repaired by professional maintenance personnel recognized by our company or please call our after-sales department for help.
- Do not disassemble closed machines by yourself, there are no parts in this machine that customers can repair by themselves, and do not attempt to change the performance of the machine, otherwise it will lead to danger.
- The use of a voltage that does not correspond to the specifications of this product will cause damage to the motor and more likely to cause injury to the user. The correct rated voltage is indicated on the label.
- In order to prevent tripping, the machine should be placed against the wall after use. If the cleaning bucket and sewage bucket are not properly installed, do not use them.
- Do not place any small objects in the outlet, do not block the outlet, take away all small objects that may hinder the smooth airflow of the outlet, and prevent the machine from overheating.

All the technical and other data reflected in this product specification shall be obtained by our company or the designated third party testing company, and the final interpretation shall be reserved by our company.

>> The scope of use


- This product is suitable for flat surface such as porcelain tiles in indoor environment, suitable for short plush carpet cleaning work.
- Do not use this product near or on flammable or explosive objects where there is a risk of fire and explosion.
- Do not use this product near working fireplaces and heaters to prevent deformation of the machine shell.
- Do not smoke high-temperature substances (undistinguished cigarette ends, matches, hot ash, etc.), ultra fine substances (such as lime, cement, wood chips, gypsum powder, ash, charcoal powder, etc.), hazardous substances (such as solvents, scale removers, etc.), and chemicals substances (such as acids, detergents, etc.) and other substances with uncertain physical properties.
- Do not use this cloth cleaning machine to absorb detergent, kerosene, gasoline, alcohol, paint, perfume, etc.
- These liquids can cause a short circuit, fire or explosion in the machine.
- Do not use this cloth cleaning machine to absorb toners and colors used in laser printers and copiers
- Powder. These objects could cause a fire or an explosion.
- Do not use this cloth cleaner to absorb sharp objects, such as glass fragments, small toys, pins,
- Paper clips, stones, plaster, large pieces of paper, etc. These objects may cause blockage and damage the machine.
- Do not use the cloth cleaner to absorb any burning or smoking objects, such as smoke from an undistinguished heat source
- Ashes, burning cigarette ends, matches, etc. Similar to shoe polish, paint, pigment and other strong grease, strong viscosity
- Or strong staining, not within the scope of use of this product.
- Do not use any cleaner other than the right one.

>> About the machine


- Local environmental regulations should be followed when handling sewage and cleaning solutions.
- Do not disassemble closed machines by yourself, there are no parts in this machine that customers can repair by themselves, and do not attempt to change the performance of the machine, otherwise it will lead to danger.
- The use of a voltage that does not correspond to the specifications of this product will cause damage to the motor and more likely to cause injury to the user. The correct rated voltage is indicated on the nameplate.
- Do not shake the machine up and down or collide violently to prevent sewage from flowing into the motor.
- When the motor is working, please do not lift or carry the electrical appliance up and down, do not tilt the machine to one side or flat, to prevent sewage into the motor.
- In order to prevent tripping, the machine should be placed against the wall after use.
- Do not use the clean water tank and waste water pail if they are not properly installed.
- Do not place any small objects in the air outlet, and do not block the air outlet. Take away all small objects that may hinder the smooth airflow of the air outlet to prevent the machine from overheating.
- Do not get the fuselage wet, otherwise there may be fire and electric shock accidents due to short circuit of the machine.
- The water tank contains water stain, which is the residue of the product test before delivery. It is a normal phenomenon, please rest assured that it can be used.

KNOW YOUR PRODUCT

>> Product Overview

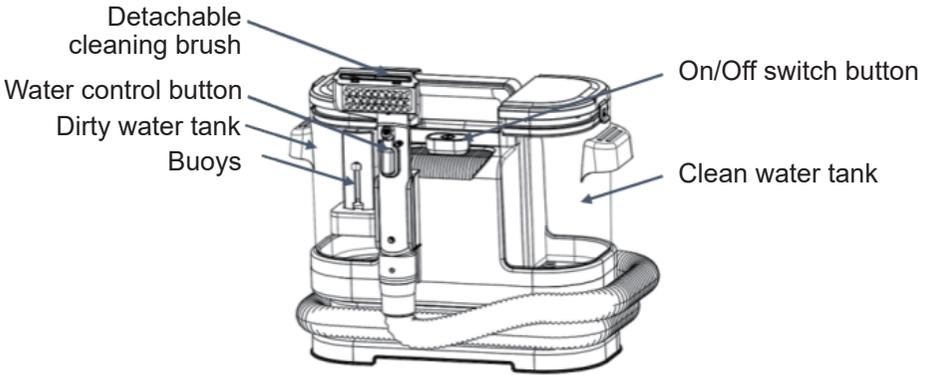

>> Product Configuration

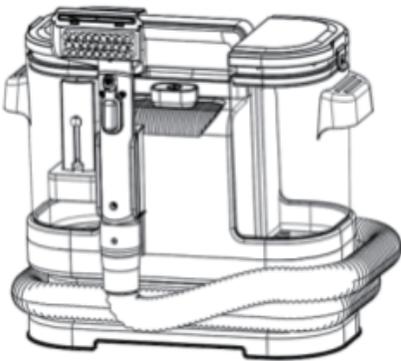

Host Machine



Cleaning nozzle



Silicone cleaning brush



Self-cleaning head

>> Product disassembly

1 Insert the brush head in alignment and hear "click!" sound, the installation is complete.



2 Press and hold the release button and pull outwards to remove the brush head.




>> Cleaning head replacement


1 Hold the release button and pull outwards to remove the brush head module.



2 Insert the brush head module in alignment and hear "click!" sound, the installation is complete.

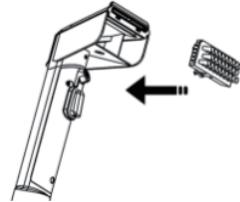

Note: Silicone brush head can be used for pet cleaning, and hard hair brush for fabric products cleaning.

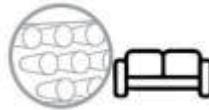

TECHNICAL SPECIFICATION

>> Product Overview

Product name:	Carpet cleaner
Product model:	H6
Rated voltage(V) :	120V
Rated power(W) :	450W
Dirty water tank Capacity:	800ml
Clean water tank Capacity:	1800ml
Product dimensions(mm)	240*330*303mm
Net weight(kg)	4Kg


DAILY USE AND MAINTENANCE

>> Product daily use


- 1 According to the washing label on the fabric, confirm whether it can be washed.




- 2 Check the type of socket before use to ensure that the correct plug is inserted.

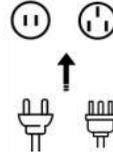

- 3 Press and hold the on/off switch button and the machine starts to work.

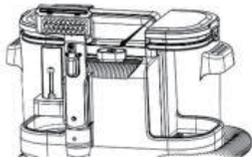

- 4 Press and hold the water control button to start cleaning.

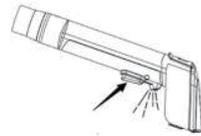

>> Clean the tank and add water

- 1 Pull vertically upward to pull out the clean water tank.



- 2 Unlatch and open clean water tank.




- 3 Pour in some clean water.




- 4 Put the clean water tank cover on.



- 5 Install the cleaning tank vertically down.

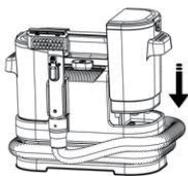


- 6 Hear a "click" sound, then the installation is complete.

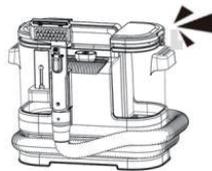


>> Product routine maintenance


- 1 Fill the clean water tank with enough water, replace the self-cleaning head, and confirm the power status.

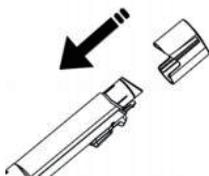

- 2 Press and hold the water control button to start self-cleaning

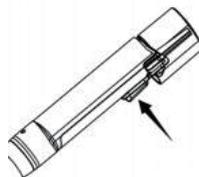

- 3 Check whether the product is powered off before maintenance.

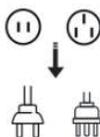


- 4 Pull vertically upward to pull out the dirty water tank.




- 5 Open the cover of the dirty water tank.



- 6 Remove buoy support.

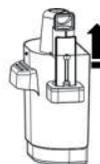


7 Clean the tank dry in the shade, before installing it back on the machine.

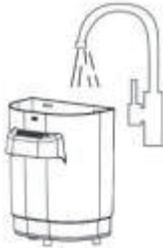


8 Clean buoy support and dry in the shade.



9 Install the dirty water tank straight down.

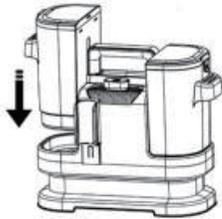

10 Hear a "click" sound ,then the installation is complete.

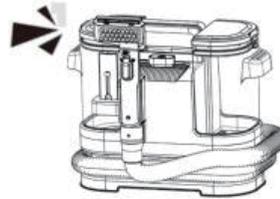

Kind reminder:

The machine should be stored in a cool and dry place, away from direct sunlight.

TROUBLE SHOOTING

If you find some abnormal conditions during the use of the machine , you can check the following table to eliminate .



Warning:

To reduce the risk of shock and unintended operation , turn off power before servicing.

Problem	Possible solution
Not working	Check position of each switch on the machine , and power connect.
No suction	Check whether the dirty water reaches the MAX line and the buoy is raised.
No clean water come out	1. The water pipe is long. Please wait patiently for water to come out after 3s 2. check whether there is water in the water tank.

For other tech problems, please contact customer service.

Please do not disassemble the machine for maintenance without permission.

WARRANTY

>> CUSTOMER CARE

The 1-year Limited Warranty is valid for products purchased from our MOOSOO only, starting from the date of the original retail purchase. We will provide customer service for any defects in quality or materials under normal, non-commercial use.

1. According to the requirements outlined in this instruction manual, the warranty is subject to the following conditions and exclusions.
2. This warranty provides, at no extra cost to you all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.
3. We provide the repair or replacement of your MOOSOO appliance if your MOOSOO appliance is found to be defective due to faulty materials, workmanship function within 1 year of purchase or delivery. (If any part is no longer available or out of manufacture, we will replace it with a functional replacement part).

>> WHAT IS NOT COVERED

1. Under your MOOSOO guarantee, MOOSOO shall not be liable for costs of repair or replacement of a product incurred as a result of: Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the MOOSOO appliance which is not in accordance with this MOOSOO Instruction Manual.
2. Machines purchased from an unauthorized dealer.
3. Use of parts and accessories other than those produced or recommended by MOOSOO.
4. Repairs or alterations carried out by unauthorized parties or agents.
5. Use of the machine other than for normal domestic purpose, e.g. for commercial or rental purposes.
6. Reduction in battery run time due to battery age or use.

>> WARRANTY SERVICE

1. If you have a query about your MOOSOO appliance, please contact the MOOSOO customer service email: **usa@imoosoo.com**
Official website: imoosoo.com
 2. Please inform us your model name/number, purchase date, order number, machine problem and your requirement.
 3. Your model number can be found on rating plate.
 4. Please keep your purchase receipt in a safe place to ensure you have this information.
- Service under this warranty will not extend the available time of warranty.



MOOSOO

————— *Different for you* —————