

**V1
FINAL
FOR PRINT**

Final trim size (WxH): 5.85" x 8.28" (148.59 x 210.312 mm)

NS-MC60SS8_17-0691_MAN_V1_ENG.fm Page 1 Tuesday, September 12, 2017 11:32 AM

INSIGNIA™

USER GUIDE

6-Quart Multi-Cooker

NS-MC60SS8



Recipes are included with this manual!

Before using your new product, please read these instructions to prevent any damage.

INSIGNIA™

Contents

Introduction	2
IMPORTANT SAFETY INSTRUCTIONS	3
Features	5
Package contents	5
Main features	6
Control panel	7
Using your multi-cooker	9
Preparing to cook	9
Opening the cover safely	10
Cooking - general	11
Using the preset timer	12
Cooking frozen meats	12
Recipes	13
Cooking Rice	13
Cooking Beef in red wine	14
Cooking Butter Chicken	15
Cleaning and maintaining your multi-cooker	16
Removing and installing the anti-block shield	16
Removing and installing the rubber gasket	16
Cleaning your multi-cooker	17
Maintaining the stainless steel inner pot	17
Troubleshooting	18
Specifications	19
ONE-YEAR LIMITED WARRANTY	20

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-MC60SS8 represents the state of the art in multi-cooker design and is designed for reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS

When using a multi-cooker, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- 1 Do not touch hot surfaces - use handles.
- 2 To avoid the risk of electric shock, do not immerse the multi-cooker or cord in water or other liquids.
- 3 Keep the multi-cooker away from children to avoid accidents. Close supervision is necessary when any appliance is used by or near children.
- 4 Unplug from the wall outlet when not in use or before cleaning. Allow to cool before installing or removing parts and before cleaning.
- 5 Do not operate the multi-cooker with a damaged cord or if the multi-cooker has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the multi-cooker. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the multi-cooker is used after reassembly.
- 6 Use of accessories not recommended by the manufacturer may cause injuries.
- 7 Do not use outdoors.
- 8 Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- 9 Do not place on or near a gas or electric burner or an oven. Never put the whole appliance in a dishwasher (only the inner cooking pot is dishwasher safe).
- 10 Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- 11 To disconnect, turn off, then remove the plug from the wall outlet.
- 12 Only use this multi-cooker for its intended purpose.
- 13 This appliance is for household use only.
- 14 **Caution** - to reduce the risk of electric shock, cook only in the included inner cooking pot.
- 15 Do not place the unit on an unstable surface or on a surface that might block the vent hole on the bottom, such as newspapers or foam.
- 16 Do not use this multi-cooker in a location near water or fire, or in a place exposed to direct sunlight or splashing oil.
- 17 Put the appliance in a place out of reach of children.

INSIGNIA™

- 18** Do not immerse the multi-cooker, power cord, or plug in water or other liquid in order to protect against electric shock hazards.
- 19** Do not replace any parts inside the multi-cooker yourself. Send it to the service center for repairs.
- 20** Prior to each use, be sure to check the anti-block shield, float valve, and pressure release valve for obstructions. Wipe the surface of the inner cooking pot and the heating plate to confirm that they are free of any foreign objects. Make sure that the pressure relief valve is in the Closed Vent position.
- 21** Do not use an extension cord with this appliance. A short power cord should be used to reduce the risk resulting from the cord being grabbed by children, of becoming entangled in, or tripping on a longer cord.
- 22** Some foods are not suitable for cooking in a multi-cooker. Do not attempt to cook any of the following in this cooker, as they tend to froth, foam, and sputter and may result in clogging the pressure release devices:
 - Applesauce
 - Cranberries
 - Rhubarb
 - Oatmeal/cereals
 - Noodles, macaroni, spaghetti, or any other pasta
 - Split peas
 - Pearl barley
- 23** Make sure that you use the appropriate amount of liquid when cooking.
- 24** Do not fill the cooker above the MAX FILL line inside the inner cooking pot with liquid or food. When cooking foods that expand during cooking such as rice or dried vegetables, do not fill the unit over 1/2 full. Over filling may cause a risk of clogging the vent pipe and developing excess pressure.
- 25** Do not move this product or forcefully remove the cover when the multi-cooker is in operation.
- 26** Do not place your hands or face over the pressure release valve or float valve when the multi-cooker is in operation to avoid a serious burn.
- 27** After cooking, use extreme caution when removing the cover. Serious burns can result from the steam inside the unit.
- 28** When opening the cover after cooking, do not touch the inner cooking pot or cover with your hands to avoid burns.
- 29** Do not cover the pressure release valve.
- 30** Never deep fry or pressure fry in this multi-cooker. It is dangerous and may cause a fire or serious damage.

- 31** This appliance cooks under pressure. Improper use may result in scalding injuries. Make sure that the unit is properly closed before operating.
- 32** DO NOT OPEN THE MULTI-COOKER UNTIL THE UNIT HAS COOLED AND ALL INTERNAL PRESSURE HAS BEEN RELEASED. If it is difficult to open the lid, it indicates that the cooker is still pressurized - do not force it open. Any pressure in the cooker can be hazardous.
- 33** Make sure that the handles are assembled and fastened properly before each use. Cracked or damaged handles should be replaced.
- 34** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been supervised by a person responsible for their safety.
- 35** Never use metal utensils with this appliance. Use plastic or wooden utensils to protect the inner cooking pot from scratches.
- 36** Intended for countertop use only.
- 37** **Warning:** Spilled food can cause serious burns. Keep this appliance and cord away from children. Never drape the cord over the edge of the counter, never use a power outlet below the counter, and never use with an extension cord.
- 38** When the normal operating pressure is reached, turn the heat down so that all the liquid, which creates the steam, does not evaporate.

SAVE THESE INSTRUCTIONS

Polarized power plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.





Features

Package contents



- 6-quart multi-cooker
- Rice spoon
- Soup ladle
- Measuring cup
- Condensation collector
- Stainless steel rack
- *User Guide*

INSIGNIA™

Main features

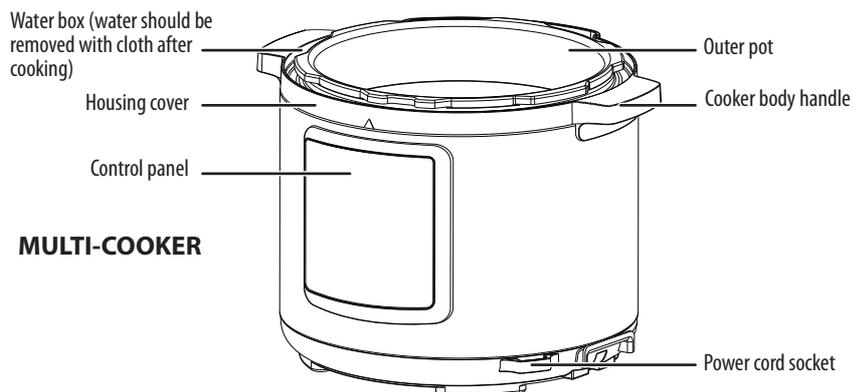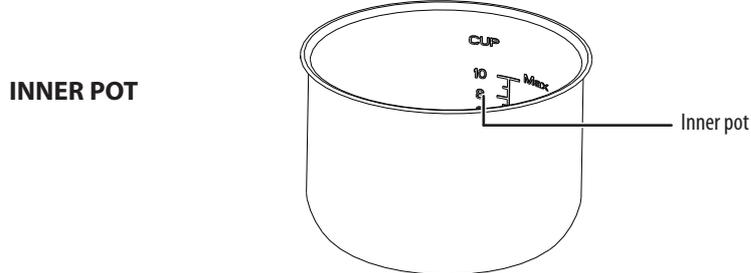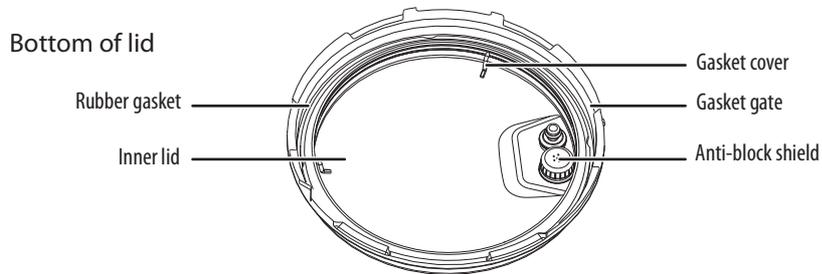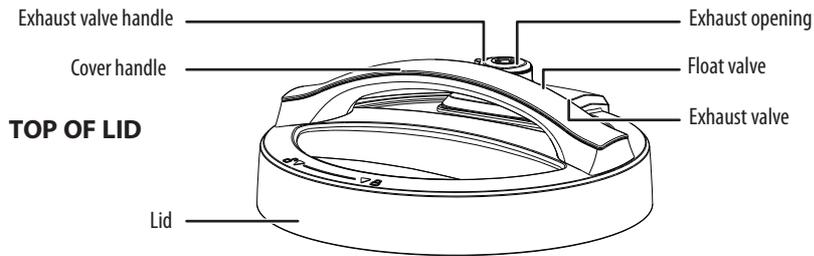

Control panel

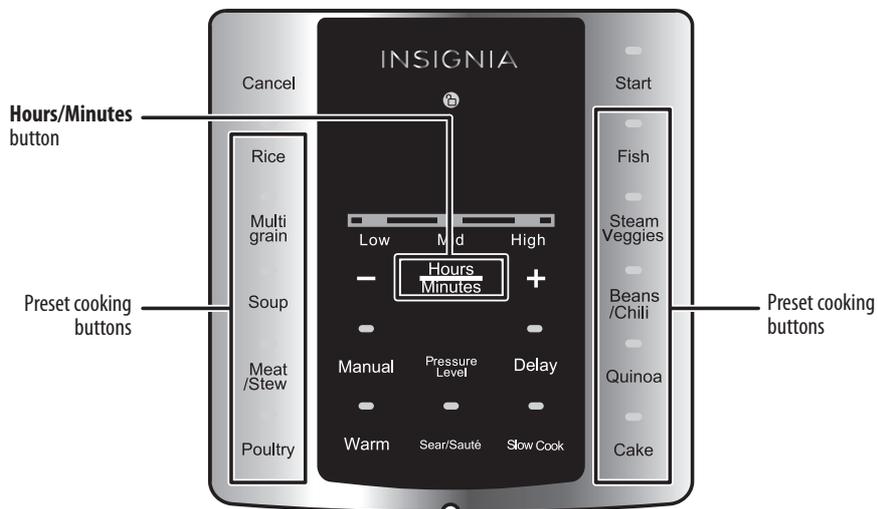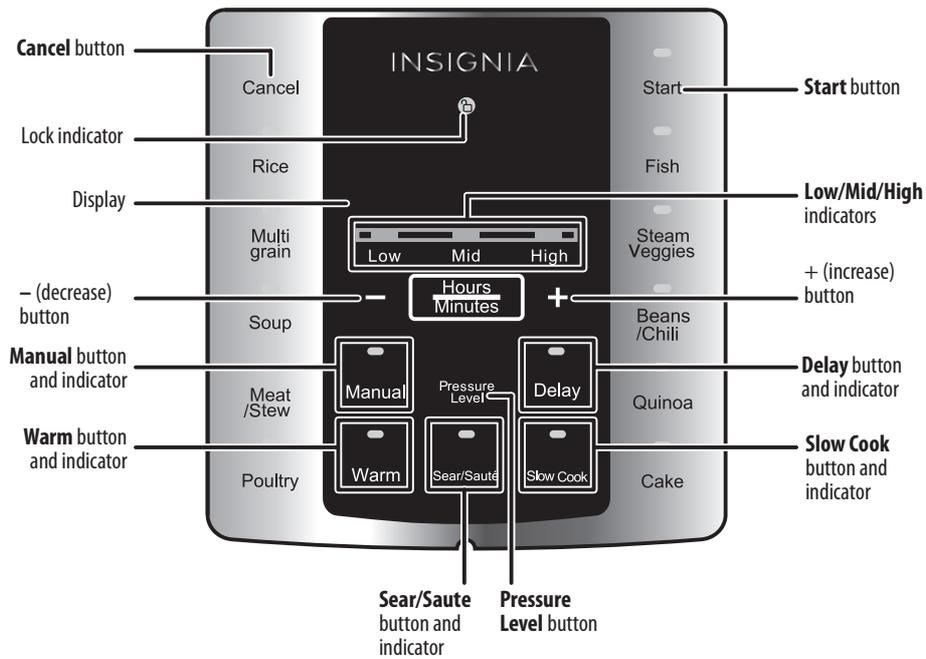


INSIGNIA™

BUTTON	EXPLANATION
CANCEL	Press to cancel the current process and return to standby.
WARM	In Standby, press to enter the Keep Warm state. The Warm indicator lights and the display shows the number of hours the Keep Warm state has been used (example: 0H, 1H, 2H).
SEAR/SAUTÉ	In Standby, press to initiate the Sear function. The Sear indicator lights and the display shows “---”. Press the Start button (or wait 10 seconds) and the sear function begins. The multi-cooker returns to standby when the sear cycle is complete (30 minutes).
SLOW COOK	In Standby, press to begin slow cooking. The Slow cook indicator lights and the display shows the default cooking time (four hours). Press the + or – and the Hours/Minutes buttons to adjust the cooking time. Press the Start button (or wait 10 seconds) and the Slow Cook function begins and the display shows a countdown of the time remaining. The multi-cooker returns to standby when the slow cook cycle is complete.
MANUAL	<p>Manual – In Standby, press to cook using a manual setting. The Manual indicator light turns on and the digital screen shows default working time. Press the + or – button to adjust the cooking time. Press the Start button (or wait 10 seconds), the cooker automatically starts cooking. The digital screen starts countdown as soon as working pressure is present. The multi-cooker enters the Keep Warm state when it finishes cooking.</p> <p>Preset cooking – Before a program starts, press the Delay button. The screen shows the preset start time. Press + or – to adjust the delay time, then press the Hours/Minutes button to change the hours or minutes delay. Press the Start button (or wait 10 seconds) and the cooker starts the delay time countdown. When the countdown ends the program begins.</p> <p>Adjust – Before a program starts, you can press the Pressure Level button to change the pressure to Low, Mid, or High.</p>
Rice, Multigrain, Soup, Meat/Stew, Poultry, Fish, Steam Veggies, Beans/Chili, Quinoa, and Cake	<p>In Standby, press to cook with the preset. The indicator light turns on and the digital screen shows “---”. Press the Start button (or wait 10 seconds), the cooker automatically starts cooking. The digital screen starts a countdown as soon as working pressure is present. The multi-cooker enters the Keep Warm state when it finishes cooking.</p> <p>Preset cooking – Before a program starts, press the Delay button. The screen shows the preset start time. Press + or – to adjust the delay time, then press the Hours/Minutes button to change the hours or minutes delay. Press the Start button (or wait 10 seconds) and the cooker starts the delay time countdown. When the countdown ends the program begins.</p>


Using your multi-cooker

Preparing to cook

- 1 Unplug the multi-cooker.
- 2 Open the cover by holding the cover handle with one hand, then rotating the cover until the cover marking ▼ aligns with the "Open" mark ▲ on the housing, then open the cover.

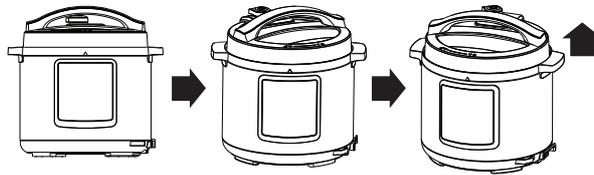


- 3 Check the float valve and exhaust valve for obstructions and confirm that all parts are installed properly, especially the rubber gasket and anti-block shield.
- 4 Remove the stainless steel inner pot, then remove any foreign objects and water droplets from the outside of the inner pot and the inside of the housing.
- 5 Add food and water to the inner pot. The total amount of food and water should not exceed the MAX level indicated in the inner pot.

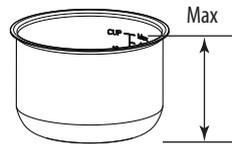

- 6 Put the inner pot into the electric multi-cooker housing, then rotate the inner pot slightly left to right to ensure good contact between the inner pot and heating plate.
- 7 Close the cover completely by holding the cover handle with one hand and rotating the cover until the lock mark (🔒) aligns with the "Close" mark ▲ on the housing.

INSIGNIA™

- 8** Turn the exhaust valve handle to the Sealing icon, indicating that the multi-cooker is in airtight condition.

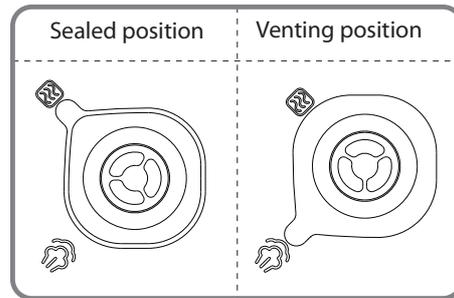

Notes

- To manually exhaust the multi-cooker, turn the exhaust valve to the Venting icon.
- Make sure that the float valve has fallen.

- 9** Plug in the multi-cooker.
- 10** After each use, remove any foreign objects or materials from the rubber gasket and anti-block shield. Keep these items clean to avoid odor.

Cautions

- Never pull the rubber gasket. Pulling the gasket may deform it, affecting the sealing and pressure of your cooker.
- Never use your multi-cooker with a damaged gasket. If your cooker has a damaged gasket, it should be sent to the service center for replacement.

Opening the cover safely

Cautions

- Do not open the lid before the pressure in the pot has been completely released.
- Do not force the lid if it is difficult to open.
- Do not pull out the exhaust valve when turning it.
- After cooking a large amount of food, do not immediately open the vent. Allow it to cool for a short while before opening the lid.

- 1** Unplug the multi-cooker.
- 2** Make sure that the pressure is released.
- For solid foods:
You can either turn the exhaust valve to the “Venting” position until the float valve falls or put a wet towel on the cover to quicken cooling until the float valve falls.

- For liquids:
Let the multi-cooker cool naturally, until the float valve falls on its own.
- 3 Open the cover by holding the cover handle with one hand, then rotating the cover until the cover marking ▼ aligns with the "Open" mark ▲ on the housing, then lift and open the cover.

Note

When cooking a small quantity of food, the inner pot may stick to the cover when it is opened. In this case, shake the inner pot manually, then remove the cover after the inner pot falls into the cooker body.

Cooking - general

After the initial preparations are complete and the multi-cooker is closed and ready, do the following:

- 1 Turn on the multi-cooker by plugging it in. The display blinks and shows a red horizontal line "---", indicating that the multi-cooker is ready.
- 2 Press the desired preset button. The indicator next to the preset button turns red and 10 seconds later cooking begins. The display shows a bright red horizontal line "----".

Notes

- If the buttons do not function, make sure that the lid is closed correctly.
- Cooking time varies with different preset selections. The greater the food amount, the longer the cooking time.
- You can cancel the current preset selection and return to standby by pressing the **Cancel** button.
- Within 10 seconds you can re-select preset time and function level. The electric multi-cooker starts working within 10 seconds after selection.
- While cooking, the cooker may sometimes generate a "cluck" sound. This is not a malfunction.

- 3 After the selected cooking cycle is completed your cooker automatically enters the Keep Warm state, the selected function indicator goes out, and the Keep Warm indicator turns on. At this time the display screen shows "0.0", and the cooker beeps 10 times.

INSIGNIA™

Using the preset timer

You can adjust the cook times of the preset modes to fit a desired recipe.

- 1 Select the preset you want. Note that you cannot select a preset time for Sear/Sauté, Slow Cook, or Cake modes.
- 2 Within 10 seconds, press **Preset**. The time flashes on the display and the indicator next to **Preset** blinks.
- 3 Press + or – to adjust the time (in half hour increments between 2 and 24 hours), then press **Preset**. The indicator next to **Preset** turns green and 10 seconds later cooking begins.
 - The display shows the remaining time until cooking ends. To cancel the operation, press **Cancel**.
 - After cooking, the multi-cooker enters the Keep Warm state automatically. This maintains your food at between 140° and 176° F (60° and 80° C).
 - The Keep Warm feature can also be turned on by pressing the **Warm** button. Do not use the Keep Warm feature for more than eight hours.

Notes

- Cooking time varies with different preset selections. The greater the food amount, the longer the cooking time.
- You can cancel the current preset and return to standby by pressing the **Keep Warm/Cancel** button.
- Pressure build and release will add 8-20 min to the cook time (based on pressure setting [Low-Med-High]).

Cooking frozen meats

If you use meats that are 1" thick or less, the cooking time stated in the recipes section below can remain the same. It will just take longer for the multi-cooker to reach the pressure point. For example, if the recipe calls for the meat to be cooked for 15 minutes after pressure has been achieved, it will still be 15 minutes. It just takes longer for pressure to be achieved.

Larger cuts of meat will increase cooking times and they won't cook as well as meats that were fully or partially thawed and browned first.

Recipes

We've provided a few recipes to get you started, but you'll find plenty of recipes online on such websites as Food52, Epicurious, CookEatShare, and the Food Network. Just search for multi-cooker recipes.

Cooking Rice

- 1 Finish cooking preparation according to "Preparing to cook" on page 9.
- 2 Measure the amount of rice you want to cook in a measuring cup (level) and wash it.
 - One measuring cup of rice is about 150 grams.
 - Don't wash rice in the inner pot.
- 3 Put the cleaned rice into the inner pot and fill it with water to the correct water level.
 - The scale line inside the inner pot indicates how much water to add. For example, to cook two cups of rice, add water to line 2.
 - Water quantity can vary with rice type and hardness, but never exceed the MAX level inside the inner pot.
- 4 Place the inner pot (wiped clean) into the cooker body, then rotate it slightly from left to right to ensure full contact between inner pot and heating plate.
- 5 Put the cover in place and turn on the multi-cooker.
- 6 Press the **Rice** button. The **Rice** preset function indicator lights and, after 10 seconds, the cooker begins cooking.

Cooking time is around 35 minutes, but the time may slightly vary with rice amount or rice quality. After cooking, the multi-cooker switches to Keeping Warm automatically.
- 7 Open the cover (see "Opening the cover safely" on page 10).

After cooking, the rice should be served after about one to three minutes on Keeping Warm.

INSIGNIA™

Cooking Beef in red wine

- 4.4 lbs (2 kg) blade or chuck steak, cubed
- 1 cup (150 g) flour
- Salt and pepper, to taste
- 2 tablespoons (40 g) butter
- 2 tablespoons (40 ml) olive oil
- 2 onions, diced
- 1 leek, finely chopped
- 2 carrots, chopped
- 2 cloves garlic, minced
- 2 tablespoons parsley, chopped
- 2 tablespoons chives, chopped
- 1.6 pints (750 ml) red wine

- 1 Finish cooking preparation according to “Preparing to cook” on page 9.
- 2 In a plastic bag, toss the meat in flour and seasonings.
- 3 Press the **Sear/Sauté** button. The **Sear/Sauté** preset function indicator turns on and, after 10 seconds, the cooker begins cooking.
- 4 Melt the butter and oil, then place the meat into the inner pot in four batches, searing each for five minutes each.
- 5 Add onions, leek, carrots, garlic, parsley, and chives.
- 6 Pour the red wine over the top of the food and bring to the boil.
- 7 Put the cover in place and turn on the multi-cooker.
- 8 Press the **Warm** button, then press the **Slow Cook** preset button. The **Slow Cook** preset function indicator turns on and, after 10 seconds, the cooker begins cooking.
After cooking, the multi-cooker switches to Keeping Warm automatically.
- 9 Open the cover (see “Opening the cover safely” on page 10).

Cooking Butter Chicken

- 2 tablespoons olive oil
 - 1 teaspoon ginger, minced
 - 3 small onions, sliced thinly
 - 2 teaspoons cayenne pepper, ground
 - 2 teaspoons paprika, ground
 - 1 teaspoon coriander seeds, ground
 - 2 teaspoons turmeric, ground
 - 2 teaspoons cumin, ground
 - 2 x 14.2 oz. (420 ml) cans tomatoes, diced
 - 4.4 lbs. (2 kg) chicken breast, diced
 - 10 oz. (300 ml) pure cream
 - Fresh coriander to taste
- 1** Finish cooking preparation according to “Preparing to cook” on page 9.
 - 2** Press the **Sear/Sauté** button. The **Sear/Sauté** preset function indicator turns on and, after 10 seconds, the cooker begins cooking.
 - 3** Add the oil, garlic, and onions and saute until softened.
 - 4** Add the spices and stir until combined. Stir the tomatoes and chicken breast until everything is evenly coated.
 - 5** Pour the stock over the chicken, then securely place and seal the lid onto the multi-cooker.
 - 6** Press the **Warm** button.
 - 7** Press the **Bean/Chili** button. The **Bean/Chili** preset function indicator turns on and, after 10 seconds, the cooker begins cooking.
After cooking, the multi-cooker switches to Keeping Warm automatically.
 - 8** Open the cover on according to “Opening the cover safely” on page 10.



INSIGNIA™

Cleaning and maintaining your multi-cooker

Removing and installing the anti-block shield

Turn the anti-block shield counterclockwise until it comes off.



Insert and turn the anti-block shield clockwise until it seats firmly.

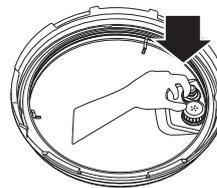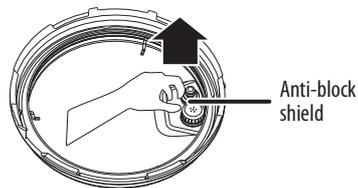

Removing and installing the rubber gasket

Gently grip the gasket and remove it from the groove.

Press the gasket into the groove in the cover until it seats firmly.

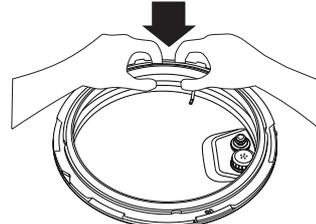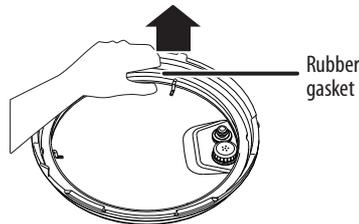

- 1 Prior to each use, make sure that the rubber gasket and anti-block shield are installed on the upper cover.
- 2 After each use, remove any foreign objects or cooked food from the gasket and anti-block shield. Keep these items clean to avoid odors. Never pull the gasket. Pulling the gasket could cause deformation which may affect sealing and pressure. A damaged gasket should never be used. Send the damaged gasket to the service center for replacement.

Cleaning your multi-cooker

After each use, clean your multi-cooker thoroughly.

- 1 Before cleaning, unplug the multi-cooker and wait until it cools down completely.
- 2 Remove the cover and inner pot, then wash them with a detergent, rinse with fresh water, and wipe them dry with a soft cloth.
- 3 Using clear water, clean the cover, including the rubber gasket, gasket gate, exhaust valve, anti-block shield, exhaust valve core, and float valve, then wipe them clean with a rag. After cleaning install them on the cover correctly.
- 4 Clean the cooker body with a cloth. Do not immerse the cooker in water or wash with running water.

Maintaining the stainless steel inner pot

Note

The inner pot comes with a smooth and polished surface. After being used for a long period, the surface will lose its luster. This is normal and won't influence the function of the product.

Do not empty

- It may cause yellowish and spotted inner pot or distorted bottom if it is empty with the unit on for a long time.

Do not use it to store acid, alkali, or preserved foods for a long period

- Although the inner pot has excellent anti-corrosion performance, it may cause a certain degree of corrosion. The suggested time of keep warm shall not exceed eight hours.

Keep it clean to prolong the service life

- Do not immerse it in water for long periods.
- Clean the inner pot with soap, weak detergent, or warm water to remove dust, oil, and dirt.

Do not scratch it with steel cooking implements

- Soften burnt foods on the bottom with water and then remove.

INSIGNIA™

Troubleshooting

Caution

Do not try to repair your multi-cooker yourself. Doing so invalidates the warranty.

IF THIS OCCURS	DO THIS
The power cord and plug suffer from expansion, deformation, discoloration, or are damaged.	Stop using the multi-cooker immediately and send to an authorized service center for repair.
A portion of the power cord and the plug are hotter than usual.	
When you plug it in, there is an unusual sound or shock.	
There is dust or dirt on the plug or socket.	Remove dust or dirt with a dry brush.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
It's difficult to close the cover.	The rubber gasket is not positioned well.	Reposition the rubber gasket.
	The red push rod on the top of the lid is jammed by the float valve.	Push the push rod gently by hand.
	The float valve is in the up position.	Press the float valve gently with a knife.
	There is still pressure in the cooker.	Wait for the pressure to completely release.
It's difficult to open the cover.	The float valve fails to fall after the steam has been released.	Press the float valve gently with the rice spoon.
	There is pressure inside the cooker.	Wait until the pressure is lower.
The cover is leaking.	No rubber gasket.	Install the rubber gasket correctly.
	Food debris on the rubber gasket.	Clean the rubber gasket.
	Worn rubber gasket.	Replace the rubber gasket.
	The cover is not closed completely.	Close the cover again.
The float valve is leaking.	Food debris on the float valve gasket.	Clean the float valve gasket.
	Float valve gasket ring worn.	Replace the float valve gasket.
The float valve won't rise.	Too much or too little food and water in the cooker.	Adjust food and water level in the cooker.
	The cover or exhaust valve are leaking.	Return to a Best Buy store near you for inspection or repair.
The exhaust valve does not seal.	The exhaust valve is not in the SEALED position.	Turn the exhaust valve to the SEALED position.
	The pressure control is failing.	Return to the service center for inspection or repair.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
E1 or E2 appears on the display.	Bottom sensor failure.	Return to the service center for inspection or repair.
C1 appears on the display.	The temperature is too high because there is no water in the inner pot.	Add water as required.
	The temperature is too high because the inner pot is not positioned correctly.	Reposition the inner pot correctly.
E8 appears on the display.	The pressure switch has failed.	Return to the service center for inspection or repair.
The rice is half cooked or too hard.	There is not enough water in the inner pot.	Add water.
	The cover was closed prematurely.	When the cooking time expires, release the steam and open the cover in five minutes.
The rice is too soft.	Too much water in the inner pot.	Reduce the water level.

Specifications

Volume	6 Quarts
Weight	Net: 11.5 lbs. (5.2 kg) Gross: 14.3 lbs. (6.5 kg)
Power	120 V ~ 60 Hz
Power consumption	1000W

INSIGNIA™

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY or in Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.

- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C, etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

 
INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.




©2017 Best Buy. All rights reserved.


Made in China





INSIGNIA™

    
NS-MC60SS8





6-Quart Multi-Cooker

  

 

INSIGNIA™

www.insigniaproducts.com
1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.
Distributed by Best Buy Purchasing, LLC
7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2017 Best Buy. All rights reserved.
Made in China.

V1 ENGLISH
17-0691

