

INSIGNIA™

50-liter Electric Party Cooler

NS-CC50SS6



Before using your new product, please read these instructions to prevent any damage.

Insignia 50-liter Electric Party Cooler

Contents

- Introduction 2
- Important Safety Instructions..... 2
 - Grounding requirement..... 4
- Features 5
 - Package contents 5
 - Exterior..... 5
 - Control/indicator 6
- Setting up your cooler 6
 - Before using your cooler 6
 - Finding a suitable location 7
 - Providing a proper power supply 7
- Using your cooler 8
- Cleaning your cooler 8
- Storing your cooler..... 9
- Troubleshooting 9
- Specifications 10
- ONE-YEAR LIMITED WARRANTY - INSIGNIA 11

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-CC50SS6 represents the state of the art in cooler design and is designed for reliable and trouble-free performance.

Important Safety Instructions



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your cooler.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your cooler.

WARNING

- 1** Read these instructions.
- 2** Keep these instructions.
- 3** Heed all warnings.
- 4** Follow all instructions.
- 5** Do not use this appliance near water.
- 6** Clean only with damp cloth.
- 7** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8** Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9** Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10** Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the appliance.
- 11** Do not attempt to modify or extend the power cord of this appliance.
- 12** Unplug this appliance during lightning storms or when it will not be used for long periods of time.
- 13** Make sure that the available AC power matches the voltage requirements of this appliance.
- 14** Do not handle the plug with wet hands. This could result in an electric shock.
- 15** Unplug the power cord by holding the plug, never by pulling the cord.
- 16** Do not turn the appliance on or off by plugging or unplugging the power cord.
- 17** Turn off the appliance before unplugging it.
- 18** Refer all servicing to qualified service personnel. Servicing is required when the appliance has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the appliance, the appliance has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 19** To reduce the risk of fire or electric shock, do not expose this appliance to rain, moisture, dripping, or splashing, and no objects filled with liquids should be placed on top of it.



WARNING

Electric Shock Hazard

Failure to follow these instructions can result in electric shock, fire, or death.

- 1 **WARNING**—Keep ventilation openings in the cooler clear of obstruction.
- 2 **WARNING**—Do not use this cooler near open fires or flames.
- 3 **WARNING–DANGER**—Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not puncture the refrigerant tubing.
- 4 **WARNING–DANGER**—Risk of child entrapment.
- 5 Follow local regulations regarding disposal of the cooler due to flammable refrigerant and gas. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.
- 6 This cooler is intended to be used in household and similar environments.
- 7 We do not recommend the use of an extension cord with this cooler as it may overheat and become a fire hazard. If it is necessary to use an extension cord, be sure that the cord is:
 - #14 AWG minimum wire size and rated at 1500 W
 - UL listed
 - As short as possible and no more than one extension cord used.

Grounding requirement

This cooler must be grounded. This cooler is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into a 115 V, 60 Hz outlet that is properly installed and grounded.

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the cooler is properly grounded.


Features

- Cooler holds 70, 12-oz. cans (1.7 cu.ft)
- Locking wheels provide mobility and stability
- Detachable caddies and serving tables add extra space


Package contents

- 50 L stainless steel cooler
- Transparent removable lid
- Interior baskets (2)
- Detachable shelves (2)
- Detachable bottle caddies (2)
- *User Guide*

Exterior

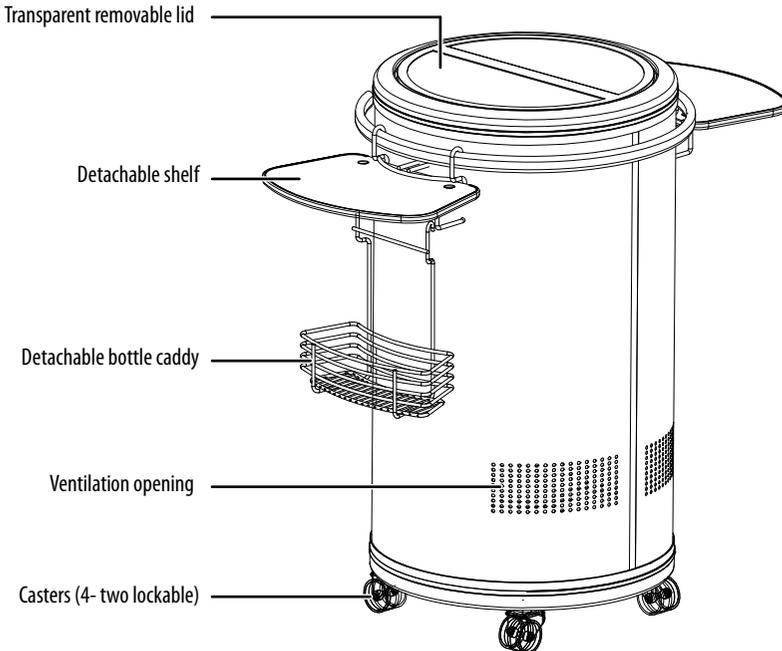

Control/indicator

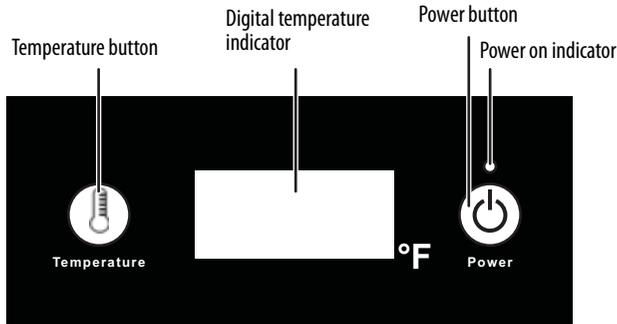

Setting up your cooler

Before using your cooler

- 1 Remove the exterior and interior packing.
- 2 Let the cooler stand upright for approximately two hours before connecting it to power to reduce the possibility of a malfunction in the cooling system from improper handling during transportation.
- 3 Clean the interior and exterior surfaces with lukewarm water and a mild detergent using a soft cloth. Dry thoroughly before using.
- 4 Install the detachable shelves by sliding the top hooks over the rail as shown below, then lift the bottom edge of the shelf until the shelf is horizontal and push it in until it locks in place. Make sure that the depression on the inner top edge of the shelf engages the rubber retainer on the metal framework.



- 5 Hang the detachable bottle caddy from the bottom frame of the detachable shelf after the shelf is in place on the cooler.

Finding a suitable location


- This cooler is designed to be free-standing only, and should not be recessed or built-in.
- Place your cooler on a firm, level surface that is strong enough to support the cooler when it is fully loaded.
- Allow five inches (12.7 cm) on all sides of the cooler to allow for proper air ventilation.
- Locate the cooler away from direct sunlight and sources of heat (stove, heater, radiator, and so on). Heat sources may increase electrical consumption. Ambient temperature below 50°F (10°C) or above 85°F (29.4°C) will hinder the performance of the cooler.
- The cooler comes with four casters, so you can easily move it to a convenient spot. Set the caster brake to prevent the cooler from moving.

Providing a proper power supply


Check your local power source. This cooler requires a 110V-120V, 60 Hz power supply.

Use a receptacle that accepts the grounding prong. The power cord is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this cooler.

Using a 3-prong plug and outlet

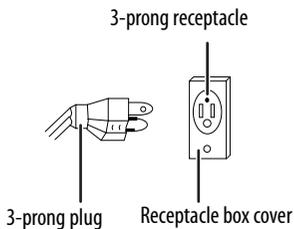

Using a grounding adapter

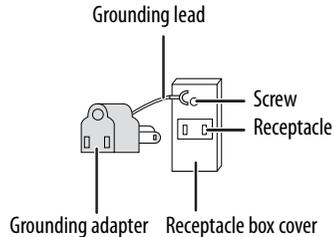

Notes

- The cooler should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.
- Never unplug your cooler by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.

Using your cooler

- 1 Stand the cooler upright for two hours before connecting it to power.
 - 2 Plug the power cord into a wall outlet.
 - 3 Press the  button to turn the cooler on. The display shows the temperature inside the cooler.
 - 4 Press the temperature button on the control to set the desired temperature. The temperature display starts at 32° and increases 1° F each time you press the button. The display flashes during adjustment.
 - 5 Stop pressing the button when you reach the temperature you want. The display returns to the temperature inside the cooler, then the cooler turns on and begins cooling to the temperature you set.
- Suggested temperatures
- Bottled water, soda or beer: 39° F
 - White wine: 45 - 50° F
 - Red wine: 55 - 61° F

Notes

- Run the cooler for at least 2 hours before adding items.
- During use, the average temperature inside the cooler is displayed.
- The thermostat ranges from 32 - 61° F.

Improving cooling

- Alternate the racks within the cooler every six hours.
- Increase the space between the items in the cooler.
- Do not overload the cooler.

Cleaning your cooler

Your cooler is designed for year-round use with only minimal cleaning and maintenance.

Caution

- To prevent damage to the finish, do not use:
- Gasoline, benzine, thinner, or other similar solvents.
 - Abrasive cleaners or metal scouring pads.

- 1 Turn off the cooler and unplug it from the wall outlet.
- 2 Remove all items.
- 3 Wash the inside and outside surfaces with a damp cloth. Add vinegar to the water to prevent mold and fungus.
- 4 Remove the detachable bottom and lid parts and wash with lukewarm water and a mild detergent.

- 5 Dry the interior and exterior thoroughly with a soft cloth.
- 6 Turn the slits in the sealing ring and in the hinge rubber strip downward when assembling the lid.

Storing your cooler

- 1 Turn off the cooler and unplug it from the wall outlet.
- 2 Remove all items.
- 3 Clean the cooler.
- 4 Leave the lid open slightly to avoid possible formation of condensation, mold, or odor.
- 5 Store the cooler in a clean, dry location when not in use.

Caution

Use extreme caution with children. The unit should not be accessible to child's play.

Troubleshooting

Caution

Do not try to repair your cooler yourself. Doing so invalidates the warranty.

Problem	Possible cause	Possible solution
The cooler does not operate	The cooler is unplugged.	Make sure that the cooler is plugged in and that the plug is pushed completely into the outlet.
	The fuse on the circuit is blown or the circuit breaker is tripped.	Check the house fuse/circuit breaker box and replace the fuse or reset the circuit breaker.
	Power failure.	If a power failure occurs, the cooler turns off. Wait until the power is restored, then turn it on.
Beverages in the cooler are freezing	The thermostat is set too cold.	Adjust the thermostat to a warmer setting.
Beverages in the cooler compartment are not cold	The lid has been opened too often or was not closed properly.	Make sure that the lid is closed properly.
	You have just added a large number of warm items to the cooler.	Allow time for the new items to cool, then check again.
	The thermostat is set too warm.	Set the thermostat to a colder setting.
	The voltage may be too low.	Plug it into an outlet that supplies 110V-120V, 60 Hz power.

Problem	Possible cause	Possible solution
The cooler makes unusual noises	The cooler may not be level on the floor.	Make sure the cooler is on is flat, level surface.
	The body of the cooler is touching a wall.	Move the cooler out from the wall.
Moisture is building up in the interior of the cooler	The lid has been opened too often or was not closed properly.	Make sure that the lid is closed properly.
	The cooler is in a location that is very humid.	Move the cooler to a dryer location.

Specifications

Dimensions	20.1W x 20.1D x 32.7 H in. (51W x 51D x 83H cm.)
Weight	48.5 lb. (22 kg)
Power requirements	115 V~60Hz
Capacity	1.7 cu.ft (50 L)

ONE-YEAR LIMITED WARRANTY - INSIGNIA

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy or Future Shop branded retail store or online at www.bestbuy.com, www.bestbuy.ca, or www.futureshop.com, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy or Future Shop retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com, www.bestbuy.ca, or www.futureshop.com), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of cooler or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence

- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold “as is” or “with all faults”
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2015 Best Buy. All rights reserved.

Made in China.

V1 ENGLISH
15-0450