



**SWAGCYCLE**  
by SWAGTRON

USER MANUAL

Thank you for your purchase of the SwagCycle™ Folding Electric Bicycle by SWAGTRON™!

We are the original and official SwagCycle™. There are many generic and copycat brands out there, but don't be fooled. If you want real swag, you're in the right place.

To ensure your safety and the safety of others, please read and be sure to follow all instructions and safety recommendations in this User Manual prior to and when riding your SwagCycle™.

If you have any questions regarding the SwagCycle™, contact us at 1-844-299-0625 for further assistance.

Happy Riding!

-The SWAGTRON™ Team

## Table Of Contents

<b>Section 1. General Information</b> .....	<b>3</b>
<b>1.1 About the SwagCycle™</b> .....	<b>3</b>
<b>1.2 What's In The Box?</b> .....	<b>4</b>
<b>1.3 SwagCycle™ Diagram</b> .....	<b>4</b>
<b>Section 2. Assembling &amp; Folding your SwagCycle™</b> .....	<b>5</b>
<b>Section 3. Charging Your SwagCycle™</b> .....	<b>7</b>
<b>Section 4. How To Ride</b> .....	<b>9</b>
<b>Section 5. Safe Riding Techniques &amp; Tips</b> .....	<b>10</b>
<b>Section 6. Maintenance</b> .....	<b>11</b>
<b>6.1 Cleaning</b> .....	<b>12</b>
<b>6.2 Storage</b> .....	<b>12</b>
<b>6.3 Transportation</b> .....	<b>12</b>
<b>Section 7. SwagCycle™ Specifications</b> .....	<b>13</b>
<b>1 Year Limited Hardware Warranty</b> .....	<b>14</b>

## PRODUCT SAFETY NOTICE

The SwagCycle™ has been designed with the utmost safety in mind for its riders. Extra precautions have been taken to protect the user from product hardware malfunctions through our meticulous design and engineering.

However, like any mode of transportation, the SwagCycle™ has inherent hazards associated with its use (e.g.: losing control, falling off, or riding into a hazardous situation). Please read and be sure to follow all instructions and safety recommendations in this user manual prior to and when riding your SwagCycle™.

Before each ride, especially if you may travel a long distance, inspect your Swagcycle™. First, check the tires for proper inflation and cracks on the walls of the tires. Keeping the tires properly inflated and maintained will help prevent flats and damage. Second, check all cables and cable housings for fraying, breaks, rust, or corrosion and replace if necessary. Lastly, inspect the brakes to make sure that both are working properly. Additionally, check the brake pads for any damage as they will wear over time and eventually need replacement. If a replacement of the brake pads or any other part is needed, please contact customer support for replacement service. In general, it is recommended to make sure all nuts and bolts are taut and properly fastened to prevent injury and unnecessary wear and tear on your SwagCycle™.

Maximum Weight	264 lbs / 120kg
Maximum Speed	15 MPH / 24 km/h
Max Incline	12°

This device requires coordination, agility, and balance. Use your best judgement to determine if an individual can use the SwagCycle™ safely.

SAFETY GEAR, CLOTHING AND FOOTWEAR	<p>Please wear appropriate clothing and safety gear including shoes, kneepads, elbow pads and an ASTM F1492 approved helmet.</p> <p>Avoid wearing anything that can drape over or get caught into/under the wheels. Wear closed-toe, flat shoes to maintain flexibility and stability.</p>
MODIFICATIONS AND REPAIRS	<p>The SwagCycle™ is a highly sophisticated electronics product that includes complex, technical circuitry. Attempting to repair or modify your SwagCycle™ can void all warranties. Only authorized repair centers may open and service the SwagCycle™.</p>
OBEY LOCAL LAWS AND REGULATIONS	<p>Always check and adhere to local laws regarding personal transportation devices, including pedestrian laws.</p> <p>The SwagCycle™ is considered a motor vehicle, so should not be ridden after consumption of alcohol, drugs, or while intoxicated. You can be arrested for drunk driving.</p>

**By riding the SwagCycle™, the user acknowledges and accepts personal responsibility of all risks associated with the use of the SwagCycle™ Folding Electric Bicycle, which may include, but are not limited to, muscle injuries, broken bones, lacerations, or serious injury which may be sustained while using the SwagCycle™.**

## Section 1. General Information

This user manual will guide you through the functions and usage of your SwagCycle™. Before operating this device, read all the instructions for safe assembly, charging, and usage.

Please inspect the SwagCycle™ unit upon unpacking for any signs of physical damage or defects.

Ensure that the SwagCycle™ unit is fully charged before using.

If you have questions, contact SWAGTRON™ before you attempt to use or return your SwagCycle™.

### 1.1 About the SwagCycle™

The SwagCycle™ Folding Electric Bicycle by SWAGTRON™ is a compact, zero emissions personal transportation device that feels like a bicycle but rides like a motorcycle. It is environmentally friendly and uses only the highest quality components and industry-leading safety features.

- Riding speeds up to 15mph – No pedaling!
- Rechargeable, portable, reliable
- Eco-friendly and all-electric with zero emissions
- Includes USB port for charging mobile devices



## 1.2 What's In The Box?


- SwagCycle™ Folding Electric Bicycle
- 1x Charging Adapter
- 1x User Manual
- 2x Foot Peg

## 1.3 SwagCycle™ Diagram



## Section 2. Assembling & Folding your SwagCycle™

SwagCycle™ was designed to be easy to assemble and fold for easy transportation and storage. See the following images and instructions.

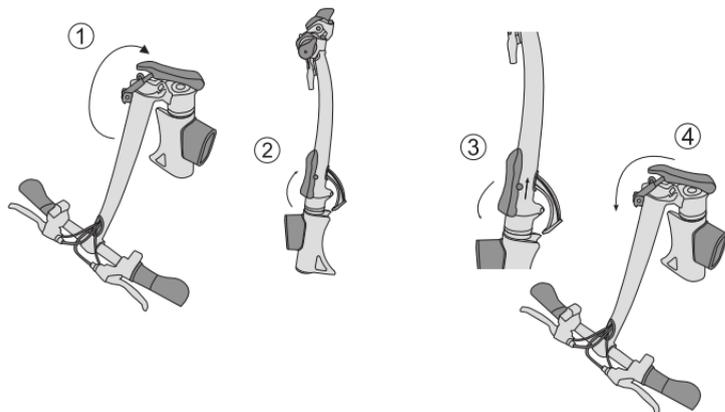

**NOTE:** Be careful not to position your fingers between the latch and the stem. Doing so may result in injury.

### **TO UNFOLD (fig. 1 & 2):**

**Step 1:** Pull the handlebar stem upright.

**Step 2:** Fold the latch up to close it. It will snap into place.

### **TO FOLD (fig. 3 & 4):**

**Step 1:** Locate the silver bolt in the side of the latch and pull it up.


**Step 2:** While holding the bolt up, use your other hand to unfold the latch by pulling it down away from the stem. There is a notch on the other side of the latch to make this easier.

**Step 3:** With the latch undone, fold the stem down




#### **TO ATTACH THE FOOT PEGS:**

- With the kickstand holding your SwagCycle™ upright, screw the Foot Pegs onto the front wheel and ensure they are securely tightened.

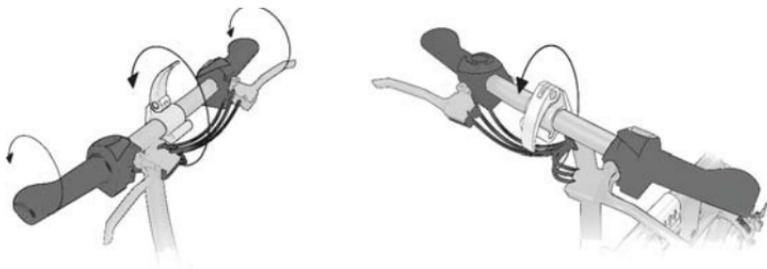

#### **TO ADJUST THE HANDLEBARS:**

- Unfold the latch to rotate and adjust the direction of the handlebars to a comfortable position.
- Secure the handlebars by flipping the latch closed.

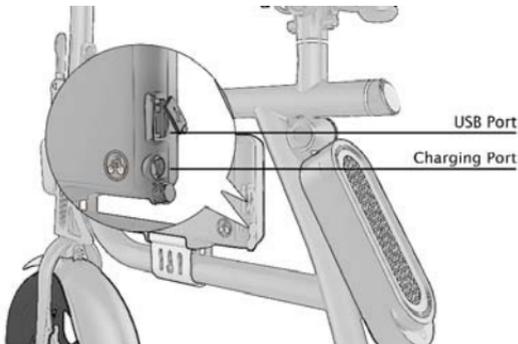

### Section 3. Charging Your SwagCycle™

**Step 1.** Locate the charging port as shown in the image.

**Step 2.** Connect the charging adapter to the port.

**Step 3.** An indicator will light up based on the battery status:

– **Red:** Charging

– **Green:** Fully Charged

**Step 4.** Allow at least 5 hours when charging for the first time. After this initial charge, average charging time is 2.5–4 hours.

**Step 5.** Once fully charged, cover the charging port with its cap to prevent water or debris from entering.

The SwagCycle™ battery also includes one USB port, as shown in the image, to charge your mobile devices while on-the-go. Please keep in mind this will use extra battery power so plan your ride accordingly!

#### **Safety tips for charging your battery:**

- Fully charge the battery before your first use, this may take up to 5 hours
- To maximize the life of the battery, you must charge it after each cycling session.
- When not in active use, please charge at least once a month to maintain optimal battery levels
- Perform periodic visual inspection of the battery ports and charger cables

**NOTE:**

- When the battery is fully charged, please STOP CHARGING and unplug the unit
- Keep your charging environment clean and dry at all times.
- If the charging port is damp or has any liquid on it, do not charge your SwagCycle™
- In order for the battery to operate at maximum efficiency, avoid charging your SwagCycle™ in extremely hot or extremely cold environments
- Use only the battery and charging adapter provided to you by SWAGTRON™, use of third party products may compromise the battery and damage the bicycle, If a replacement is needed, please contact SWAGTRON™ directly.

**DO NOT charge the battery in the following cases:**

- There is excessive odor or heat
- Leakage or physical damage

## Section 4. How To Ride

Get ready to ride with swag! The instructions below will ensure you have a comfortable and safe riding experience. Please read carefully.



- Start your SwagCycle™ by pressing the Power Switch
- Moving forward on your SwagCycle™ is as easy as twisting the Throttle
- To slow down, gradually apply pressure to the Back Brake to slow down the rear motorized wheel
- To stop, gradually apply pressure to the Front Brake to stop the front wheel
- Use the Headlight Switch to turn it on when riding at night
- Use the Horn to alert pedestrians and other riders of your presence
- The Battery Indicator shows how much charge is left in the battery, make sure the battery is at full power before heading out on a long distance ride

## Section 5. Safe Riding Techniques & Tips

Following these techniques and tips can ensure you have a safe, fun riding experience on the SwagCycle™

- Check to make sure your brakes are fully intact, Foot Pegs are securely installed, and handlebars are locked in place
- Always wear an ASTM F1492 approved helmet and protective gear to avoid possible injury
- Make sure your feet are always on the Foot Pegs. Taking your feet off the SwagCycle™ while riding is dangerous
- Ensure the battery is fully charged accordingly for the distance you plan to go
- Ensure your tires are intact with no punctures
- Ensure the vehicle speed is safe to yourself and others, and be ready to stop at any time
- When riding with friends, keep a safe distance between your devices to avoid collisions
- Be aware of your surroundings at all times to ensure a safe ride. Your eyes are your best tools for safely avoiding obstacles and slippery surfaces
- Stay in open spaces and flat areas, avoid steep slopes or high traffic areas until you're familiar with riding
- The SwagCycle™ can only support the weight of one person at a time
- Remember, only ride the SwagCycle™ where it is permitted, you MUST comply with local laws and give way to pedestrians

**WARNING:**

- Never ride at high speeds on uneven terrain or slopes
- Never perform stunts or turn abruptly without checking your surroundings
- Never carry passengers on the SwagCycle™ with you
- Never carry heavy items while riding
- Never ride in the rain
- Never use the SwagCycle™ to do anything that may cause personal injury or property damage
- Never get off the SwagCycle™ when it is in motion

**FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS INCREASES THE RISK OF SERIOUS INJURY, OR IN VERY RARE CASES, DEATH. USE WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.**

For more safe riding tips or information, visit <http://www.swagtron.com>.

**Section 6. Maintenance**

Your SwagCycle™ needs to be maintained. Follow the tips and reminders below to keep your SwagCycle™ running at top performance.

**NOTE:**

- Do not perform any kind of maintenance while the SwagCycle™ is charging
- Attempting to repair or modify your SwagCycle™ can void all warranties, only authorized repair centers may open and service the SwagCycle™

If you need assistance, please contact SWAGTRON™ support at [support@swagtron.com](mailto:support@swagtron.com)

## 6.1 Cleaning

Proper cleaning of your SwagCycle™ can guarantee a longer lifespan and a smooth riding experience.

- Wipe the outer body of your SwagCycle™ with a soft, dry microfiber cloth
- Check around the wheels and ensure there is no blockage, the SwagCycle™'s design allows for easy wheel maintenance
- The SwagCycle™ meets IP54 water-resistance, meaning it can withstand splashes, however, do not submerge the SwagCycle™ in water
- Do not let water and liquids get into the SwagCycle™'s electric parts or battery

## 6.2 Storage

Below are some tips to consider when storing your SwagCycle™ unit

- Before storing, fully charge the SwagCycle™ to prevent battery over-discharge due to non-use
- If storing the SwagCycle™ for more than one month, discharge and recharge the battery at least once a month
- Cover the SwagCycle™ to keep dust out. Do not store in a dusty environment as this may cause damage over time

## 6.3 Transportation

The SwagCycle™ for quick and easy transportation. Before moving, lifting, or otherwise transporting the device, turn it off. Fold the SwagCycle™ and grasp it firmly before lifting and/or moving it. Note, the device weighs approximately 29 lbs. If you are unsure of your ability to lift this much weight with one hand or arm, doing so is not recommended. Please lift the device with both arms or otherwise gain the assistance of someone who may handle the weight without trouble.

Lithium-ion batteries are considered hazardous materials, therefore transportation is governed by federal, state, and local laws.

International law prohibits the shipping of bare lithium-ion batteries, If you are shipping your SwagCycle™, you must ship it with the battery installed.

## Section 7. SwagCycle™ Specifications

Item	Parameters
Net Weight	29 lbs / 13 kg
Dimensions	35.5 x 18.9 x 37.2 in. / 900 x 480 x 945 mm.
Max Incline	12°
Maximum Load	264 lbs / 120 kg
Battery	36V 4.4 Ah
Charging Voltage	110V – 220V / 50 – 60Hz
Pin Polarity	
Charging Time	2.5 – 4 Hours
Wheel Size	Front Wheel: 12 in. / Rear Wheel: 10 in.
Wheel PSI	Front Wheel: 43 PSI/3.0 BAR   Back Wheel: 36 PSI/2.5 BAR
Water Resistance	IP54
Warranty	1 Year Limited

## 1 Year Limited Hardware Warranty

SWAGTRON™ (“SWAGTRON”) offers a ONE YEAR limited warranty covering the hardware of SWAGTRON™ SwagCycle™ Folding Electric Bicycle (“Product”), limited to those residing in the 50 US States and Canada. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

SWAGTRON warrants the Product to be free from defects in materials and workmanship under normal use for one (1) year, as sold to the original purchaser, from the date of retail purchase by the original end-user purchaser. If a hardware defect arises and a valid claim is received within the warranty period, at its option and to the extent permitted by law, SWAGTRON will: (1) repair the hardware defect by using new or refurbished parts that are equivalent to new in performance and reliability; or (2) exchange the product with a product that is new or refurbished, that is substantially equivalent to the original product. This warranty is for replacement for like-items only and does not cover items out of production if the company no longer stocks them. This warranty is not assignable or transferable. The original purchaser may call the SWAGTRON toll-free number at 1-844-299-0625 for service request.

Upon SWAGTRON’s replacement or repair of a Product under warranty, the original end-user purchaser will have the remaining warranty under the original warranty period (without any postponement during repair or replacement). When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes SWAGTRON’s property. Important: Do not disassemble the Product. Disassembling the Product will void this warranty. Only SWAGTRON or a party expressly authorized by SWAGTRON should perform service on this Product.

This warranty only covers technical hardware defectiveness during the warranty period and under normal use conditions. SWAGTRON does not warrant uninterrupted or error-free operation of this Product. This Warranty does not apply to damages or circumstances, such as, but not limited to:

- (a) Damage that is caused by conditions, malfunctions, or damage not resulting in from defects in material or workmanship. These conditions include, but are not limited to, road hazard, accidents, and improper operation or maintenance;
- (b) Product has been tampered with, repaired and/or modified by non-authorized personnel;
- (c) Obsolescence;
- (d) Damage (accidental or other) to the Product that is cosmetic, meaning damage that does not impact the operation and functioning of the Product, such as without limitation to rust, change in color, texture or finish, wear and tear, scrapes, scratches, dents, cracks, or gradual deterioration;

- (e) Damage to the Product caused by war, terrorism, fire, accident, natural disaster, intentional or accidental misuse, abuse, neglect or improper maintenance, use under abnormal conditions, accidental drops, abuse or fire;
- (f) Damage to the Product caused by an external electrical fault, surge, or any electrical anomaly;
- (g) Any contamination, condition or other circumstance, which SWAGTRON, in its sole discretion, considers a danger to health and safety, including, but not limited to any contact between the Product and a biohazard, bodily fluids, infectious materials/substance, chemicals, hazardous substances, diseases, radiation, or other;
- (h) Fraud, theft, misplacement, unexplained disappearance, or willful acts.

## **Limitation of Liability**

In no event shall SWAGTRON be liable for any incidental, indirect, special or consequential damages or liabilities (including but not limited to incidental or consequential damages for loss of time, inconvenience, loss of use of product, or any other consequential or incidental loss) in connection with the purchase, use, or operation of the product.

SWAGTRON is not liable for property damage, personal injury, or death.

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. AS PERMITTED BY APPLICABLE LAW, SWAGTRON SPECIFICALLY DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF SWAGTRON CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPAIR OR REPLACEMENT SERVICE AS DETERMINED BY SWAGTRON IN ITS SOLE DISCRETION. NO RESELLER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY. IF ANY TERM(S) IS HELD ILLEGAL OR UNENFORCEABLE, THE LEGALITY AND ENFORCEABILITY OF THE REMAINING TERMS SHALL NOT BE AFFECTED OR IMPAIRED.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, SWAGTRON IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION OR PERFORMANCE OF THE PRODUCT, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOSS OF USE; LOSS OF REVENUE; LOSS OF ACTUAL OR ANTICIPATED PROFITS (INCLUDING LOSS OF PROFITS ON CONTRACTS); LOSS OF THE USE OF MONEY; LOSS OF ANTICIPATED SAVINGS; LOSS OF BUSINESS; LOSS OF OPPORTUNITY; LOSS OF GOODWILL; LOSS OF REPUTATION; LOSS OF, DAMAGE TO, COMPROMISE, OR CORRUPTION OF DATA; OR ANY INDIRECT OR CONSEQUENTIAL LOSS OR DAMAGE HOWSOEVER CAUSED INCLUDING THE REPLACEMENT OF EQUIPMENT AND PROPERTY, ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH THE PRODUCT AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT. THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENT ACTS AND/OR OMISSIONS. SWAGTRON DISCLAIMS ANY REPRESENTATION THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER THIS WARRANTY OR MAKE A PRODUCT EXCHANGE, AND IS UNABLE TO RECOVER ANY USER SOFTWARE OR DATA ON THE DEVICE.

**SWAGCYCLE**  
*by* **SWAGTRON**