

 
Quick Start Guide

Monaco Plus WiSA SoundSend Immersive Wireless Home Audio System

Tuned by THX™


The Platin Monaco features audio that has been Tuned by THX which delivers an enhanced listening experience through a well-balanced crossover design and an optimized frequency response.

- 1 Unbox your Platin Monaco system and place the speakers (and their power cords) appropriately around the listening area. It is recommended to space the Left (FL) and Right (FR) speakers outside of the width of the TV at ear height when seated and as far apart as they are from the listener(s). Each speaker will need to be plugged into a power outlet. Speaker locations (FL, C and FR) are labeled on rear of speakers.

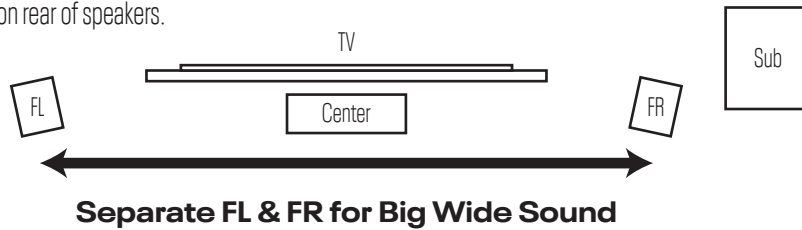


For 5.1 systems, surround speakers (SL and SR) should be placed to the left and right and slightly behind the main listening position.

 
- 2 Plug each Monaco speaker into a wall outlet (speaker side first, wall side second) and confirm they are ready to connect to your SoundSend

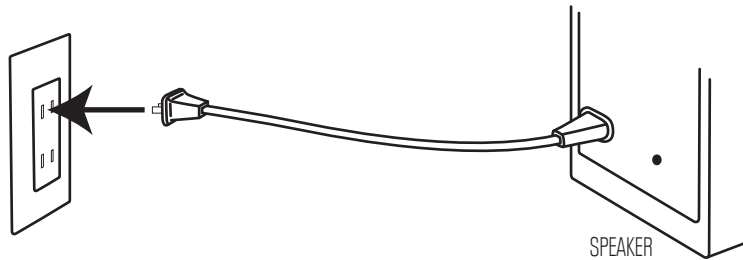

 - 3 Connect your SoundSend to your TV's HDMI (ARC and/or eARC) port and to a wall outlet (cables included)

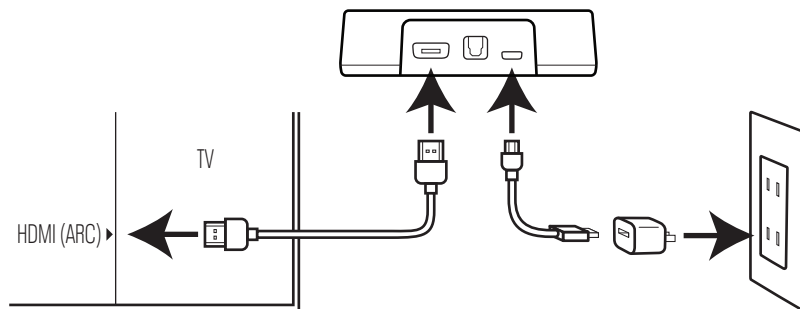

 - 4 LED will pulse while connecting and then be solid when connections are confirmed

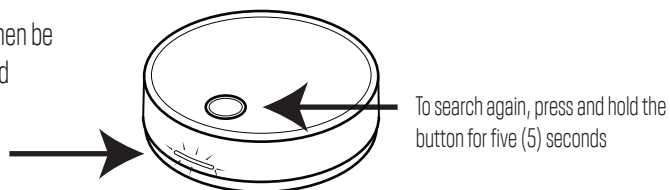

Important Note:

Make sure your TV's audio output is set to HDMI (ARC). This should be found in the Sound or Audio settings of your TVs on screen menu.

For detailed set-up information and troubleshooting resources scan the QR code or visit www.wisaassociation.org/soundsend/resources

