

Converting to a monopod

- 1 Holding the tripod firmly, unscrew the monopod leg from the main tripod assembly.



- 2 Unscrew the center column locking screws, unscrew the bottom hanging hook, then remove the center column from the tripod base.



- 3 Screw the center column (with ball head) into the monopod leg.



- 4 To adjust the height, unscrew the leg twist locks, extend the leg to the height you want, then tighten the leg locks.

Storing your tripod

- 1 Remove your camera.
- 2 Loosen the center column locks. Raise the column as far as it will go, then tighten the bottom lock. Lower the top section as far as it will go.
- 3 Twist each leg lock counterclockwise and collapse the legs.
- 4 Wrap your hand around all four leg locks, then twist clockwise to tighten them all at once.
- 5 Pull out the leg release tabs and flip the legs up.
Note: You may need to rotate the head slightly so the legs fit between the knobs.
- 6 Store the tripod into the carrying case.

Important safety instructions

- Make sure that all leg locks are correctly tightened and that the legs are fully opened before use.
- Do not carry or transport your tripod with camera equipment attached (for example, over your shoulder or cradled in your arms).
- Do not expose your tripod to excessive heat or cold, or use near any flame or fire.
- Do not oil or grease any part of the tripod.
- Do not use any solvents or thinners to clean your tripod. Use only a mild detergent and wipe dry with a soft, lint-free cloth.
- Do not exceed the load limit of this tripod.

Specifications

- Maximum operating height: 57.1 in. (145 cm)
- Minimum operating height: 6.7 in. (17 cm)
- Folded height (reversed legs): 13.4 in. (34 cm)
- Net weight: 2.7 lbs (1.24 kg)
- Max operating load: 8.8 lb (4 kg)
- Number of leg sections: 5
- Quick release thread: 1/4 in. (0.6 cm)
- Panoramic angle: horizontal: 360° and vertical: 90°
- Material: aluminum alloy

One-year limited warranty

Visit www.dynexproducts.com for details.

Contact Dynex:

For customer service, call 800-305-2204 (U.S. and Canada) or 01-800-926-3020 (Mexico)
www.dynexproducts.com

DYNEX is a registered trademark of BBY Solutions, Inc.
Registered in some countries.
Distributed by Best Buy Purchasing, LLC, 7601 Penn Ave South, Richfield, MN 55423 U.S.A.
©2014 BBY Solutions, Inc. All Rights Reserved.

DYNEX  

DX-TRPMN57 57" Compact Tripod-Monopod Combo



Before using your new product, please read these instructions to prevent any damage.

Package contents

- Tripod
- Carrying case
- *Quick Setup Guide*

Features


- Compact portable size, with built in bubble level, can support a camera up to 8.8 lbs (4 kg)
- One leg conversion to use as a monopod
- Super-low 6.7 in. (17 cm) shooting angle
- Reversed folding reduces storage space requirement to 13.4 in. (34 cm)



Reversed folding



One leg monopod conversion

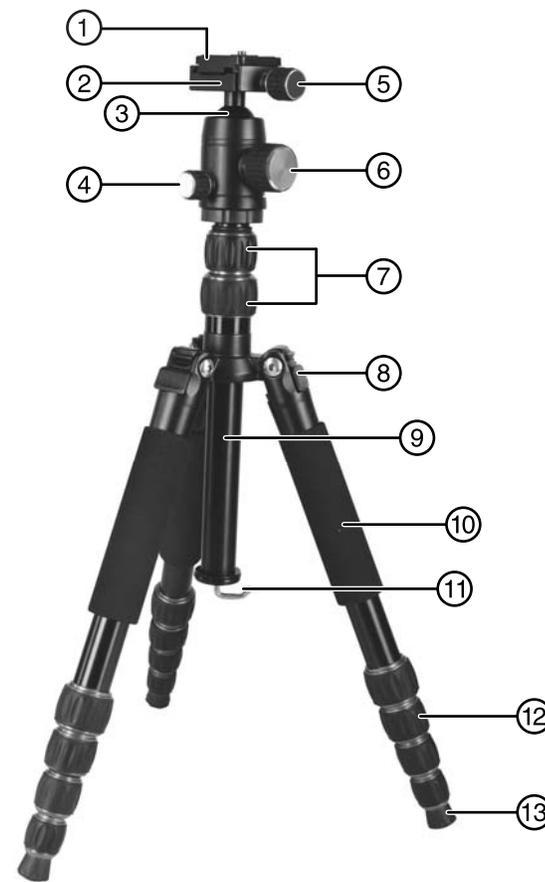

#	Item	Description
1	Quick-release mounting plate	Mount your device to this removable plate.
2	Mounting base plate	Holds the quick-release mounting plate.
3	Variable angle ball head	Allows the camera to be adjusted to any angle.
4	Pan locking knob	Locks the horizontal movement of the ball head.
5	Quick-release mounting plate locking knob	Locks the quick-release mounting base plate to the tripod.
6	Ball head locking knob	Lets you adjust the angle of the ball head.
7	Center column locks	Lock the first and second sections of the column.
8	Angle adjusting tab	Lets you adjust the leg angle position.
9	Center column	Adjustable column provides a quick height adjustment.
10	Grip sponge	Grip the tripod comfortably.
11	Hanging hook	Hang a heavy item on this hook to add stability to the tripod.
12	Twist screw leg lock	Locks the legs in place.
13	Rubber feet	Provide a secure, non-slip footing for your tripod.

Setting up your tripod

- 1 Swing each leg down.
- 2 With one hand, grab all the leg locks on one leg and twist them counterclockwise to loosen them.
- 3 Extend the leg sections to the height you want.
- 4 Twist each leg lock clockwise to tighten it. Repeat for each leg.
Caution: Incorrectly securing a leg lock can cause the tripod leg to retract unexpectedly and could result in damage to the tripod or to the attached camera or camcorder.
- 5 To set the angle position, pull out the angle adjusting tab and lift the tripod leg, then press the angle adjusting tab in place.
- 6 Adjust the center column by unscrewing the center column locks and raising the center column to the height you want, then tighten the center column locks.
- 7 To remove the quick-release mounting plate, unscrew the quick-release mounting plate locking knob, then lift the plate away from the head.
- 8 Align the bottom of your camera or camcorder with the 1/4" mounting screw, then secure your camera or camcorder to the plate with the screw. The screw should be tight.
- 9 Slide the plate onto the tripod head. Turn the quick-release mounting plate locking knob until it stops to secure the plate.

Using your tripod

- 1 To adjust the horizontal movement of the ball head, turn the pan locking knob counter-clockwise, move the ball head into the position you want, then lock the ball head in place by turning the knob clockwise until tight.
- 2 To adjust the head ball, turn the ball head locking knob counter-clockwise, adjust the ball head, then lock the ball head in place by turning the knob clockwise until tight.
- 3 For low angle shooting, unscrew the hanging hook, then remove the center column. Reverse the direction of the center column, then insert the column into the base. Screw the hanging hook into place.

