COSTWAY



Please give us a chance to make it right and do better!

Replacements for missing or damaged parts will be shipped ASAP! Contact our friendly customer service department for help first.

US office: Fontana UK office: Ipswich




Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



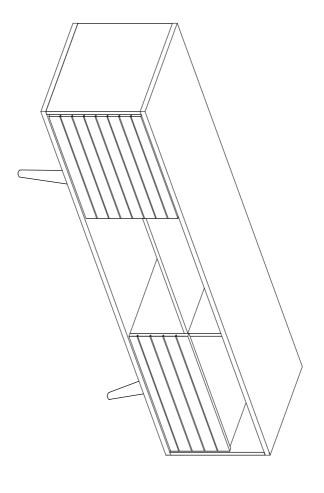


USER'S MANUAL TV Cabinet HW63442 HW63443 HW63444




₹6

Before You Start

- \geqslant Read each step carefully before starting. It is very important to difficulties may occur. ensure each step followed in correct order, otherwise assembly
- Þ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included
- Þ \triangleright Keep the handtools close at hand. Do not use power tools to Work in a spacious area, preferably on a carpet close to where the unit will be used.
- assemble your furniture. They may scratch or damage the parts.

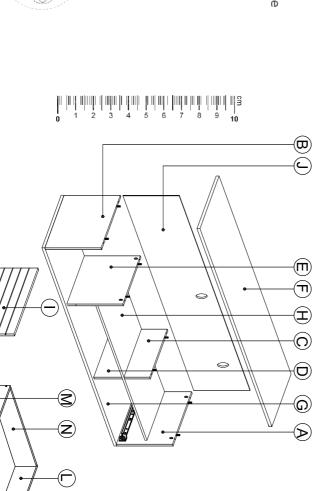



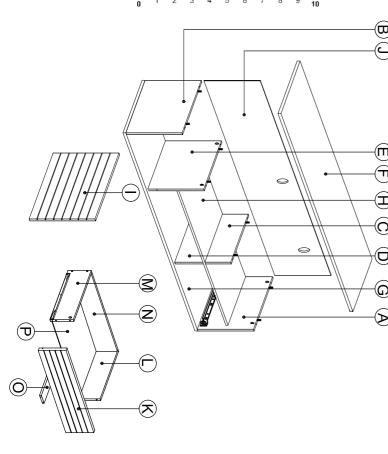

02

6

4

×

4

X2

Dla 6 x 30mm

Glue 10cc

M6.5 x 32mm

05

3

X 4 M4

Ø45 /27mm (240mm)

3

<u>≺</u>

7/8

9

X


M8 x 38mm


5


X


Glue 10cc


₹

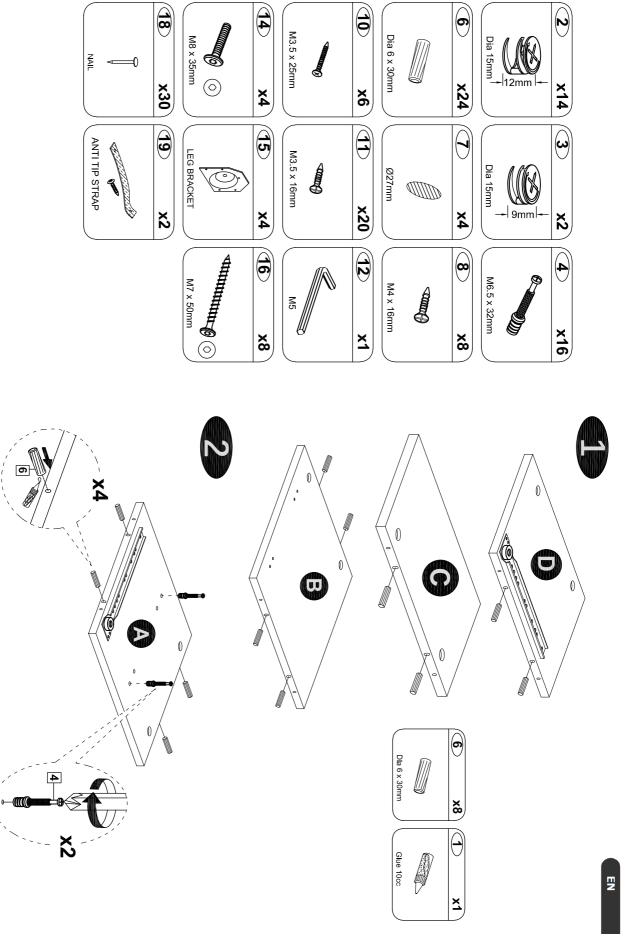


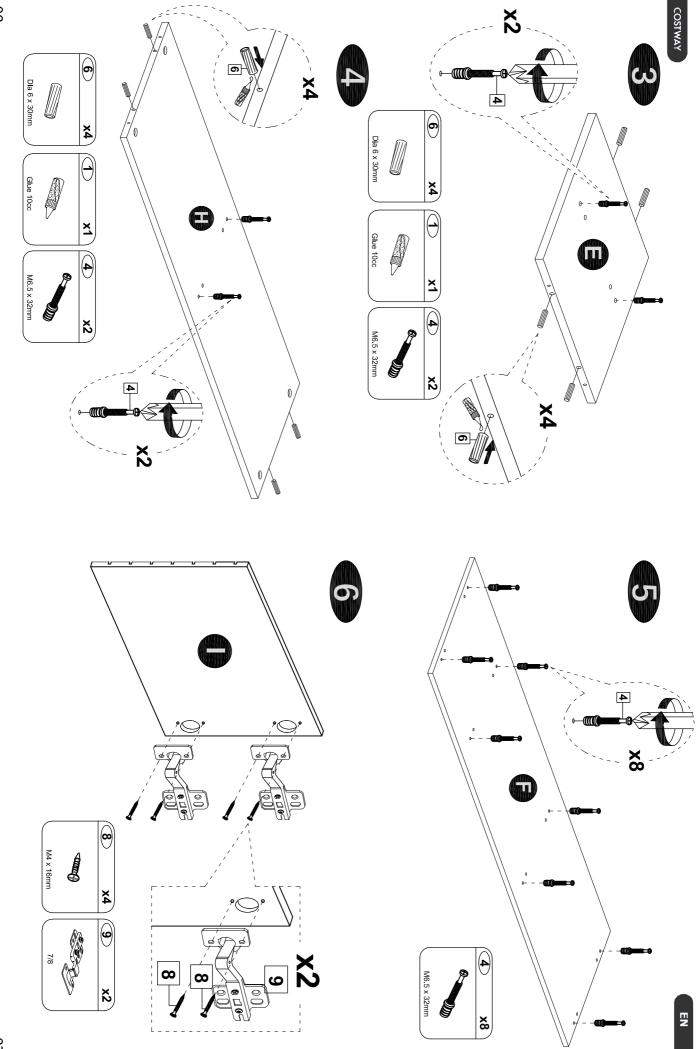

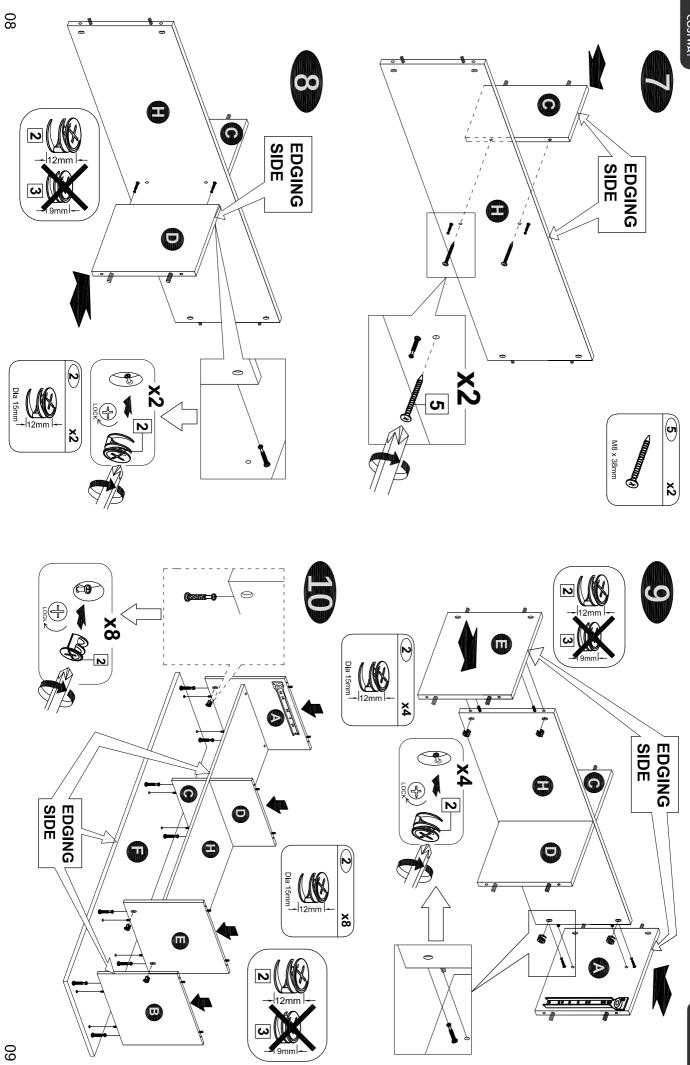


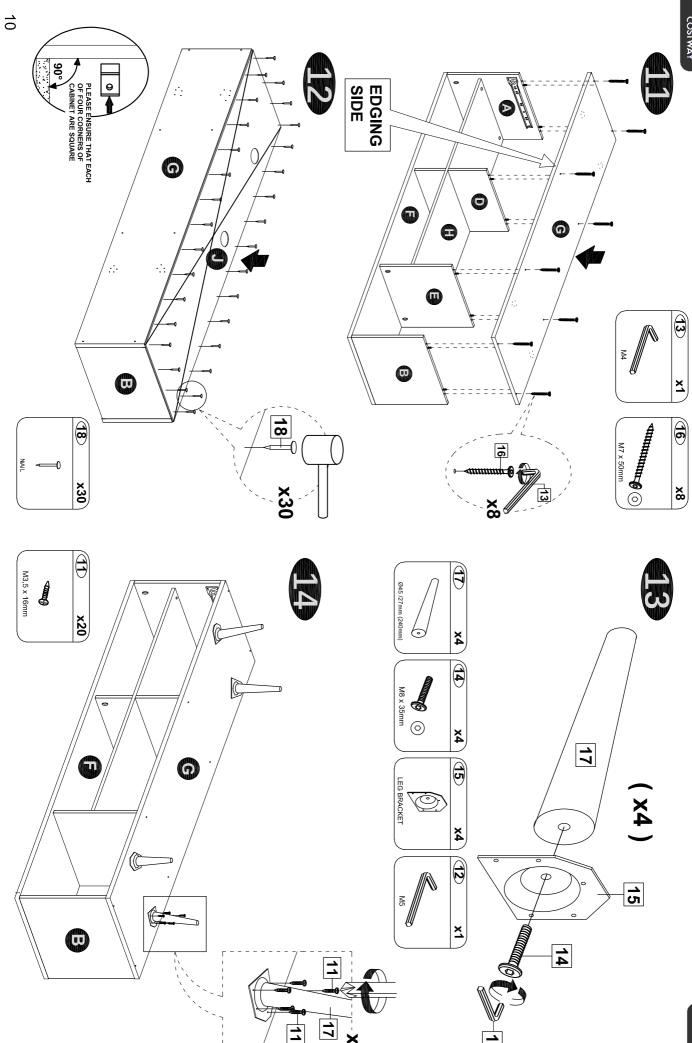


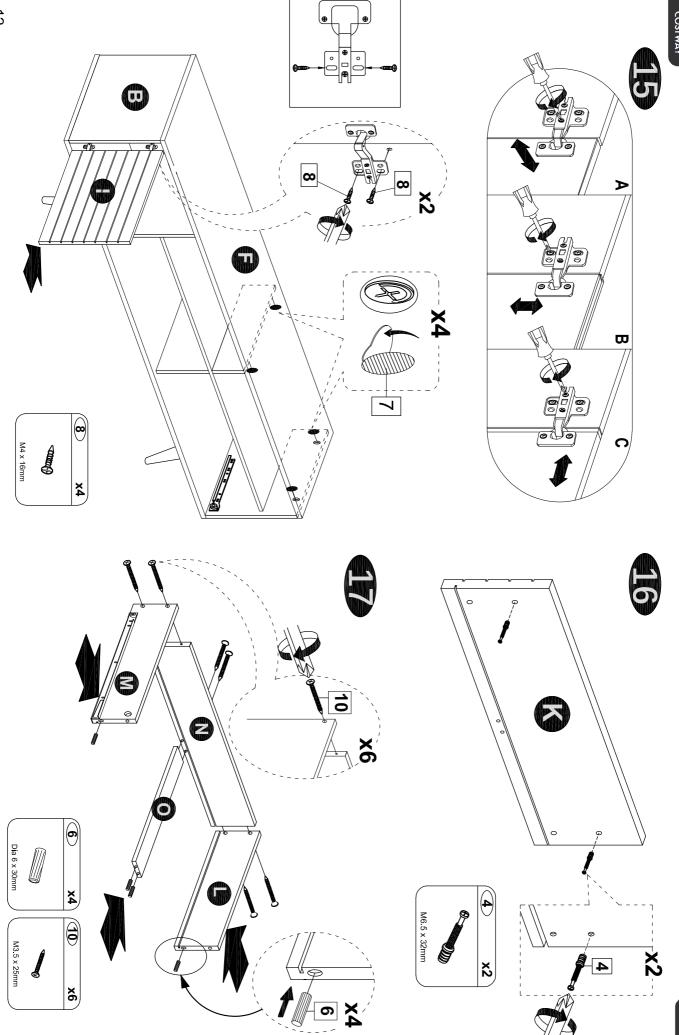


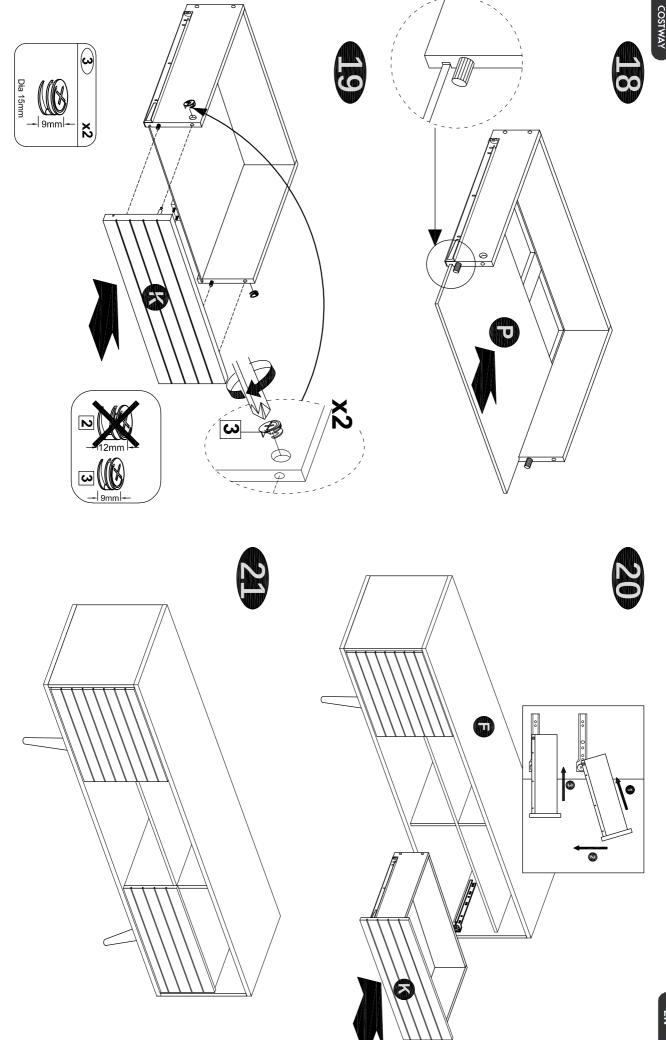

FITTING OF ANTI-TIP BRACKET

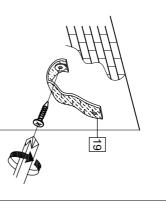

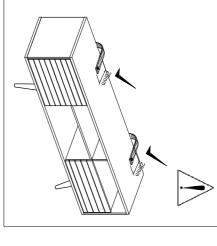

 

NOTE: Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work).

You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater that the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.

The screw supplied is to fix the anti-tip strap to the cabinet.

19



Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish

Liquid spills should be removed immediately. Using a soft clean cloth, blot the Never use water to clean your furniture as it may cause damage to the finish.

Check bolts/screws periodically and tighten them if necessary.

spill gently. Avoid rubbing

Further advice about wood turniture care

splitting of wood It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and

the finish It is advised to keep furniture away from direct sunlight as sun may damage

Proper care and cleaning at home will extend the life of your purchase

ages. Following these important and helpful tips will enhance your furniture as it