

GAMESIR G7 PRO TRI-MODE
Xbox Wired, PC & Mobile Wireless Controller
(Mech White EAN: 6936685222267; Shadow Ember EAN: 6936685220409)

Pro by nature, performance reimagined.

Level up from the celebrated G7 lineage - introducing the G7 Pro. Not only does it inherit the exceptional performance of the G7 series, the G7 Pro also brings exciting new upgrades: the first Xbox controller with TMR sticks, Hall Effect & clicky trigger stops, extra mappable mini bumpers, and enhanced low-latency input and output - all working together to deliver a smoother, more precise gaming experience, born for esports. Additionally, it goes beyond Xbox and PC with full Android support through tri-mode connectivity: [wired for Xbox](#), 2.4G & wired for PC, and Bluetooth for Android. A true next-gen upgrade, crafted for gamers who demand more.

Key Features:

1. Tri-mode connectivity - [Wired for Xbox](#), [Wireless for PC](#), and [Bluetooth for Android](#)

The G7 Pro supports seamless connectivity across Xbox, PC, and Android. Effortlessly switch between modes using the convenient physical mode switch. Choose from [Wired for Xbox](#); 2.4G & Wired for PC; Bluetooth for Android.

* For wired connection, the detachable cable retainer ensures a stable and secure connection.

2. GameSir Mag-Res™ TMR sticks, smooth control and ultra-long lifespan

The G7 Pro is equipped with the latest GameSir Mag-Res™ TMR sticks, blending the precise performance and low power consumption of traditional potentiometer sticks with the exceptional durability of Hall Effect sticks. This innovative technology ensures a higher and more stable polling rate, offering gamers a smoother, instantaneous, and anti-drift gaming experience like never before.

3. Hall Effect analog triggers, with clicky Micro Switch trigger stops

The GameSir precision-tuned Hall Effect analog triggers provide unmatched smoothness and linear input for precise control. Featuring clicky Micro Switch trigger stops, gamers can easily switch based on their preferences. Additionally, the G7 Pro offers a Hair Trigger Mode that can be activated by holding the M+LT/RT buttons. Whether you need precise linear control or ultimate responsiveness, the G7 Pro gives you the competitive edge.

4. Built-in gyroscope with mapping function ([PC only](#))

Enhance your control on PC with the built-in gyroscope, which allows you to map the gyroscope to the stick, buttons, or mouse. This enables more precise and intuitive gameplay.

5. Four extra buttons for enhanced personalized control

The G7 Pro features four extra buttons, including two mini bumpers (R5/L5) and two lockable back buttons (R4/L4), allowing gamers to customize their controls.

6. 1000Hz polling rate on PC via both wired & 2.4G connections

Experience ultra-responsive gaming with a 1000Hz polling rate on PC, available through both wired and 2.4G wireless connections. This ensures instantaneous input registration, reducing lag and optimizing your performance for the most competitive gameplay.

7. Optical Micro Switch ABXY and Mechanical Micro Switch D-pad

Feel the esports-grade precision with optical micro switch ABXY buttons and a mechanical micro switch D-pad. Designed for tactile feedback and long-lasting durability, every press is crisp and responsive—ensuring consistent performance even during the most intense gaming moments.

8. Three-part magnetic swappable faceplate and extra D-pad for free customization

Personalize your setup with a three-part magnetic swappable faceplate and two extra D-pads (included), making it easy to match your controller to your unique style or grip preferences. Plus, the G7 Pro is compatible with faceplates from the previous G7 series, giving you even more ways to customize.

Please note: While G7 series faceplates are compatible with the G7 Pro, the G7 Pro's faceplate is not compatible with other G7 series controllers (G7, G7 SE, and G7 HE).

9. Four rumble motors for realistic and immersive haptic feedback

The controller features a total of four rumble motors, with one in each grip and trigger, providing immersive and realistic vibration feedback, ensuring that every small crash and shot is felt in your hands as if it were happening on the spot.

10. Smart Auto Start-Stop Charging Station

The G7 Pro comes with a Smart Auto Start-Stop Charging Station and a built-in 1200mAh battery, delivering extended battery life for hours of uninterrupted gameplay. Simply place the controller on the station to begin charging, and pick it up to play. The station also includes a receiver storage compartment at the base, allowing you to extend the cable's reach or to securely store the receiver when not in use.

11. 3.5mm audio, supported via both wired & 2.4G wireless

The G7 Pro supports 3.5mm audio output via both wired & 2.4G wireless connections, delivering a more convenient and immersive gaming experience.

12. Upgraded software, lets you tailor the controller to your needs

The G7 Pro is compatible with the upgraded GameSir Nexus app, which brings a significant upgrade over the original. It introduces powerful new features such as gyro settings, stick curve adjustments, and button-to-mouse mapping, giving you deeper customization and more control than ever before.

TECH SPECS:

Working Platform: Xbox Series X|S, Xbox One, PC, Android, Steam

Connection: [Wired for Xbox](#); 2.4G & Wired for PC; Bluetooth for Android

Sticks: GameSir Mag-Res™ TMR sticks

Triggers: Hall Effect analog triggers with Micro Switch trigger stops

Buttons: Optical Micro Switch ABXY, Mechanical Micro Switch D-pad

Rumble Motors: 4

Extra Buttons: 4 (R4/L4 back button and R5/L5 mini bumper)

Back Button Latches: Yes

3.5mm Audio Jack: Yes, supported via both wired & 2.4G wireless

Gyroscope: Yes (PC only)

Battery: 1200mAh

Charging Station: Included

Software: GameSir Nexus

Faceplate: Three-part magnetic swappable

* Compatible with the previous G7 series faceplates, but other G7 series controllers are not compatible with the G7 Pro's faceplate.

Included Accessories: Charging Station*1, Receiver*1, D-pad*2, Cable Retainer*1, 3m Type-C Cable*1

Product Size: 152*103*58mm/5.98*4.06*2.28in

Net Weight: 272g/0.60lbs

Package Size: 177*173*94mm / 6.97*6.81*3.70in

Gross Weight: 782g / 1.72lbs

Carton Size: (20pcs/carton): 490*375*380mm / 19.29*14.76*14.96in

Carton Weight: (20pcs/carton): 17.41kg / 38.39lbs

PACKAGING CONTENTS:

Controller *1
Charging Station *1
Receiver *1
D-pad *2
Cable Retainer *1
3m Type-C cable*1
Xbox Game Pass Ultimate Card (1 month) *1
GameSir Sticker*1
Thank You & After-sale Service Card *1
Manual *1

INSTRUCTIONS:

ACCESSORY REPLACEMENT GUIDE



CONNECTION STATE

Xbox Indicator	Description
Breathing	Reconnecting State *It can connect to previously paired devices.
Running Light Effect (Sequentially Lighting Up)	Paring State (Bluetooth Mode) *In this state, it can be discovered and paired with devices.
Solid	Connection Successful
Off	Power-off State *The controller will enter power-off state after 10 minutes of inactivity in 2.4G or Bluetooth mode.

OPERATING INSTRUCTIONS

Description	Operation
Power On/Off	Short press the Xbox button to power on. While powered on, press and hold the Xbox button for 5 seconds to power off.
Pairing	In Bluetooth mode, press and hold the pairing button for 2 seconds to enter forced pairing mode.
Preset Configuration Switching	M+Y Default Configuration M+B Configuration 1

	M+A Configuration 2 M+X Configuration 3
Hair Trigger Mode	Enable/disable hair trigger mode Press and hold the M button + LT/RT button for 2 seconds 
Low Battery	When the battery is below 15%, the Xbox indicator will flash red.
Charging	You can charge the controller via the Type-C port or the charging station.

WINDOWS CONNECTION TUTORIAL

WIRED CONNECTION

1. Use the included Type-C cable to connect the controller to your computer, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

RECEIVER CONNECTION

1. Insert the receiver into the computer.
2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.
3. Once connected successfully, the Xbox indicator will remain solid.



ANDROID CONNECTION TUTORIAL

BLUETOOTH CONNECTION

1. Toggle the controller's mode switch to the Bluetooth mode, and press the Xbox button briefly to power on.
2. Open the Bluetooth list on your phone, find the device named GameSir-G7 Pro, and click to connect.
3. Once connected successfully, the Xbox indicator will remain solid.

* If the connection is unsuccessful, press and hold the pairing button on the controller to re-enter pairing status.



XBOX CONNECTION TUTORIAL

WIRED CONNECTION


1. Use the included Type-C cable to connect the controller to the Xbox console, then press the Xbox button briefly to power on.
2. Once connected successfully, the Xbox indicator will remain solid.

*Only supports wired connection.

VOLUME ADJUSTMENT


1. Hold the M button + the D-pad up/down to increase/decrease the main volume (11 levels in total).

*A sound cue will be provided when adjusting to the maximum or minimum level.

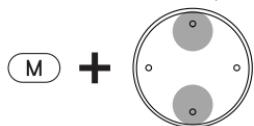


2. Hold the M button + the D-pad left/right to increase game volume (while decreasing voice volume) / decrease game volume (while increasing voice volume).

*A sound cue will be provided when adjusting to the maximum, medium or minimum level.

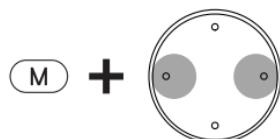

3. Mute Function: Press the mute button to enable the mute function; the mute indicator will turn solid red. Press the mute button again to disable the mute function (default state); the mute indicator will turn off. While the mute function is active, holding the mute button will temporarily disable it. Release the button to restore the mute function.

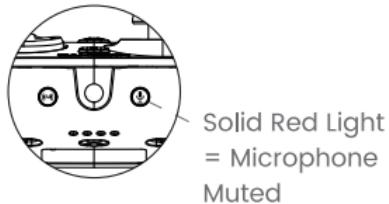

EXTRA BUTTON SETTING



Set the extra button value: Press and hold the M button + L4/R4/L5/R5 button, and the Xbox indicator will start flashing slowly. Press the button you want to map to the extra button, and the Xbox indicator will return to a solid light, indicating that the extra button setting is complete.

* Within the setting mode, pressing the corresponding extra button will clear its button value.

STICKS & TRIGGERS CALIBRATION

1. Set the trigger to analog mode, then press and hold $\text{R4} + \text{L4} + \text{Xbox}$ until the Xbox indicator starts flashing slowly.
2. Ensure that the LT & RT triggers and the left & right sticks are not being touched. Then Press the A button. The Xbox indicator will turn off.
3. Press the LT & RT triggers to their maximum travel for 3 times. Rotate the left & right sticks to their maximum angles for 3 times. Press the A button. A solid light on the Xbox indicator indicates that the calibration is complete.

CONTROLLER RESET

If the controller encounters issues such as being unable to power on or off properly, you can use a small object similar to the size of a paperclip to press the Reset button inside the circular hole on the back of the controller. This will force the controller to power off.

FAQ:

1. What platforms does the G7 Pro support?

The G7 Pro supports Xbox, PC, and Android.

2. Does the G7 Pro use a wired or wireless connection?

The G7 Pro offers tri-mode connectivity:

- **Wired for Xbox**
- 2.4G & Wired for PC
- Bluetooth for Android

3. What are the special features of the sticks?

The G7 Pro is equipped with the latest GameSir Mag-Res™ TMR sticks, combining the precise performance and low power consumption of traditional potentiometer sticks with the exceptional durability of Hall Effect sticks, offering gamers a smoother, instantaneous, and anti-drift gaming experience like never before.

4. Does the G7 Pro have Hall Effect analog triggers?

Yes, the G7 Pro features Hall Effect analog triggers with clicky Micro Switch trigger stops. It also includes a Hair Trigger Mode, activated by holding M + LT/RT.

5. How many rumble motors does the G7 Pro have?

The G7 Pro has 4 rumble motors, one in each grip and trigger, providing immersive haptic feedback.

6. How many mappable buttons does the G7 Pro have?

The G7 Pro has 4 mappable buttons: 2 mini bumpers (R5/L5) and 2 lockable back buttons (R4/L4).

7. What is the function of the back button latches?

The latches allow gamers to enable or disable the back buttons to prevent unintended inputs.

8. What is the function of the mode switch?

The mode switch allows for quick and easy switching between connection modes for added convenience.

9. Does the G7 Pro support a 1000Hz polling rate on PC?

Yes, the G7 Pro supports a 1000Hz polling rate on PC via both wired and 2.4G connections.

10. What accessories are included in the box?

- Charging Station x 1
- Receiver x 1
- D-pad x 2

- Cable Retainer x 1
- 3m Type-C Cable x 1

11. Does the G7 Pro support gyro?

Yes, the G7 Pro features a built-in gyroscope with mapping support (**PC only**).

12. Does the G7 Pro have software support?

Yes, it supports the upgraded GameSir Nexus app, offering upgrades like gyro settings, stick curve adjustments, and button-to-mouse mapping for deeper customization.

13. Does the G7 Pro support audio?

Yes, the G7 Pro supports 3.5mm audio output via both wired & 2.4G wireless connections.

14. Does the G7 Pro have a swappable faceplate? Is it compatible with the previous G7 series faceplates?

Yes, it features a three-part magnetic swappable faceplate. And the G7 Pro is compatible with faceplates from the previous G7 series. However, the G7 Pro's faceplate is not compatible with other G7 series controllers (G7, G7 SE, and G7 HE).

15. What are the differences between the G7 Pro, G7 HE, G7 SE and G7?

				
Compatible Platform	Xbox/PC/Android	Xbox/PC	Xbox/PC	Xbox/PC
Console Connection	Wired	Wired	Wired	Wired
PC Connection	2.4G & Wired	Wired	Wired	Wired
Android Connection	Bluetooth	N/A	N/A	N/A
Stick Tech	GameSir Mag-Res™ TMR sticks	GameSir™ Hall Effect sticks	GameSir™ Hall Effect sticks	Potentiometer sticks
Trigger Tech	Hall Effect analog triggers, with Micro Switch trigger stops	Hall Effect analog triggers	Hall Effect analog triggers	Hall Effect analog triggers
Motor	4	4	4	4
ABXY Buttons	Optical Micro Switch	Micro Switch	Membrane	Micro Switch
D-pad	Micro Switch	Tactile Switch	Membrane	Tactile Switch
Grip	Rubberized	Rubberized	Laser-engraved	Rubberized
Extra Buttons	2 mini bumper & 2 back buttons	2 back buttons	2 back buttons	2 back buttons
Back Button Latches	Yes	No	Yes	No
Software	GameSir Nexus	GameSir Nexus	GameSir Nexus	GameSir Nexus
Battery	1200mAh	No	No	No
Power Source	USB port/charging station	USB port	USB port	USB port
Faceplate	Three-part magnetic detachable (Compatible with the previous G7 series faceplates)	Magnetic detachable	Magnetic detachable	Magnetic detachable
Gyroscope	Yes (PC only)	No	No	No
Audio	3.5mm audio jack (supports 2.4G & wired)	3.5mm audio jack	3.5mm audio jack	3.5mm audio jack
Price	\$79.99	\$49.99	\$44.99	\$44.99