


R-45



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

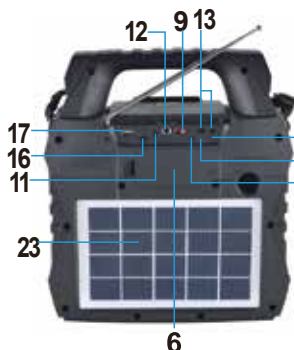

FUNCTIONS

1. TELESCOPIC ANTENNA
2. BAND FUNCTION SWITCH
3. MODE BUTTON
4. PLAY/PAUSE BUTTON
5. TUNING KNOB
6. BATTERY COMPARTMENT
7. PREV-"BUTTON
8. NEXT+"BUTTON
9. POWER SWITCH
10. DC 5V IN JACK
11. AUX IN JACK
12. MIC JACK
13. 3.7V OUT JACK*2
14. CHARGE INDICATOR LIGHT
15. POWER INDICATOR LIGHT
16. TF CARD SLOT
17. USB SLOT(5V 500mAh OUTPUT)
18. HANDLE
19. STRAP
20. SPEAKER
21. PHONE BRACKET
22. DISCO LIGHT
23. SOLAR PANEL

FUNCIONES

1. ANTENA TELESCÓPICA
2. INTERRUPTOR DE FUNCIÓN DE BANDA
3. BOTÓN DE MODO
4. BOTÓN PLAY/PAUSE
5. BOTÓN DE SINTONIZACIÓN
6. COMPARTIMENTO DE LA PILA
7. BOTÓN «-» ANTERIOR
8. BOTÓN «+» SIGUIENTE
9. INTERRUPTOR DE ENCENDIDO
10. TOMA DE ENTRADA DC 5V
11. ENTRADA AUX
12. TOMA DE MICRÓFONO
13. TOMA DE SALIDA DE 3,7V*2
14. INDICADOR LUMINOSO DE CARGA
15. LUZ INDICADORA DE ENCENDIDO
16. RANURA PARA TARJETA TF
17. RANURA USB (SALIDA 5V 500mAh)
18. MANGO
19. CORREA
20. ALTAVOZ
21. SOPORTE PARA TELÉFONO
22. LUZ DE DISCOTECA
23. PANEL SOLAR

LES FONCTIONS

1. ANTENNE TÉLESCOPIQUE
2. COMMUTATEUR DE FONCTION DE BANDE
3. BOUTON DE MODE
4. BOUTON LECTURE/PAUSE
5. BOUTON DE SYNTONISATION
6. COMPARTIMENT DES PILES
7. BOUTON «-» PRÉCÉDENT
8. BOUTON «+» SUIVANT
9. INTERRUPTEUR D'ALIMENTATION
10. PRISE D'ENTRÉE 5V C.C.
11. PRISE D'ENTRÉE AUXILIAIRE
12. PRISE MICRO
13. PRISE DE SORTIE 3,7V*2
14. TÉMOIN DE CHARGE
15. VOYANT D'ALIMENTATION
16. EMBLACEMENT POUR CARTE TF
17. Emplacement USB (sortie 5V 500mAh)
18. POIGNÉE
19. SANGLE
20. HAUT-PARLEUR
21. SUPPORT DE TÉLÉPHONE
22. LUMIÈRE DISCO
23. PANNEAU SOLAIRE

DISCO LIGHT FUNCTION

In default mode, disco light on state. Long press and hold the "MODE" button to turn the disco light on/off.

FUNCIÓN DE LUZ DE DISCOTECA

En el modo predeterminado, la luz de la discoteca está encendida. Mantenga pulsado el botón «MODE» para encender o apagar la luz de la discoteca.

FONCTION LUMIÈRE DISCO

En mode par défaut, la lumière disco est allumée. Appuyez longuement sur le bouton «MODE» et maintenez-le enfoncé pour allumer/éteindre la lumière disco.

RADIO FUNCTION

1. Put rechargeable battery into battery compartment paying careful attention to the polarity.
2. Push the power switch to turn on the radio.
3. Adjust the band selector, and then turn the tuning knob to receive the different programmes from AM/FM/SW.
4. When listen to the programmes from FM, Please pull out the antenna and change the length to make the listening clear.
5. When listen to the programmes from AM, please change the radio's position until receiving the best signal.
6. When you don't want to listen to the radio, please turn it off and disconnect the USB power cord or take out the batteries. When you don't want to use the radio for a long time, please take out the batteries from the unit.

FUNCIÓN RADIO

1. Coloque la pila recargable en su compartimento prestando especial atención a la polaridad.
2. Pulsa el interruptor de encendido para encender la radio.
3. Ajuste el selector de banda, y luego gire el botón de sintonización para recibir los diferentes programas de AM/FM/SW.
4. Cuando escuche los programas de FM, saque la antena y cambie la longitud para que la escucha sea más clara.
5. Cuando escuche los programas de AM, cambie la posición de la radio hasta recibir la mejor señal.
6. Cuando no desee escuchar la radio, apáguela y desconecte el cable USB o extraiga las pilas. Si no desea utilizar la radio durante mucho tiempo, extraiga las pilas de la unidad.

FONCTION RADIO

1. Placer la batterie rechargeable dans son compartiment en respectant la polarité.
2. Appuyez sur l'interrupteur d'alimentation pour allumer la radio.
3. Réglez le sélecteur de bande, puis tournez le bouton de réglage pour recevoir les différents programmes AM/FM/SW.
4. Lorsque vous écoutez les programmes FM, tirez l'antenne et changez sa longueur pour une écoute plus claire.
5. Lorsque vous écoutez les programmes AM, changez la position de la radio jusqu'à ce qu'elle reçoive le meilleur signal.
6. Lorsque vous ne souhaitez pas écouter la radio, éteignez-la et débranchez le cordon d'alimentation USB ou retirez les piles. Si vous ne souhaitez pas utiliser la radio pendant une longue période, retirez les piles de l'appareil.

BLUETOOTH FUNCTION

1. Push function switch to MP3/BT position.
2. After listening to bluetooth, open mobile bluetooth device to search and connect "R-45".
3. After the success of the mobile phone player directly to open the play music.

FUNCIÓN BLUETOOTH

1. Ponga el conmutador de funciones en la posición MP3/BT.
2. Después de escuchar el bluetooth, abra el dispositivo bluetooth móvil para buscar y conectar «R-45».
3. Después del éxito del reproductor de teléfono móvil directamente para abrir la reproducción de música.

FONCTION BLUETOOTH

1. Placez le commutateur de fonctions en position MP3/BT.
2. Après avoir écouté le bluetooth, ouvrez le dispositif bluetooth mobile pour rechercher et connecter le «R-45».
3. Après le succès du lecteur de téléphone portable, ouvrir directement le lecteur de musique.

BUTTON FUNCTION

1. In the MP3 state, press the“-”to play the previous song. Press and hold is to reduce the volume. When the volume is reduced to the minimum, there is a“DiDi” tone.
2. In the MP3 state, pressing the“+”is play the next song. Press and hold is to increase the volume , and when the volume is added to the maximum, there is a“DiDi” tone.
3. Press“M”in the MP3 state to convert RADIO/MP3(USB/TF)/BLUETOOTH/AUX IN.
4. Press“PLAY/PAUSE”in the MP3 state to play/pause.

FUNCIÓN DEL BOTÓN

1. En el estado MP3, pulse «-» para reproducir la canción anterior. Mantenga pulsado es para reducir el volumen. Cuando el volumen se reduce al mínimo, se oye un tono «DiDi».
2. En el modo MP3, pulse «+» para reproducir la canción siguiente. Mantenga pulsado el botón para subir el volumen, y cuando el volumen esté al máximo, se oirá un tono «DiDi».
3. Pulse «M» en el estado MP3 para convertir RADIO/MP3(USB/TF)/BLUETOOTH/AUX IN.
4. Pulse «PLAY/PAUSE» en el estado MP3 para reproducir/pausar.

FONCTION DU BOUTON

1. En mode MP3, appuyez sur les touches « - » pour lire la chanson précédente. Maintenez la touche « - » enfoncée pour réduire le volume. Lorsque le volume est réduit au minimum, une tonalité « DiDi » est émise.
2. En mode MP3, appuyez sur la touche « + » pour lire la chanson suivante. Une pression prolongée permet d'augmenter le volume, et lorsque le volume est augmenté au maximum, une tonalité « DiDi » est émise.
3. Appuyez sur «M» en mode MP3 pour convertir RADIO/MP3(USB/TF)/BLUETOOTH/AUX IN.
4. Appuyez sur «PLAY/PAUSE» en mode MP3 pour lire/pause.

USB/TF CARD PLAYBACK FUNCTION

1. Turn on the power.
2. Set the function selector to MP3/BT.
3. Insert a usb flash drive(or a TF card) with MP3 format music, the unit will play automatically. Press play/pause button to hold the playback, press it again to continue the playback.Press PREV button to select the previous song and NEXT button to the next song.

FUNCIÓN DE REPRODUCCIÓN DE TARJETAS USB/TF

1. Conecte la alimentación.
2. Ponga el selector de funciones en MP3/BT.
3. Inserte una unidad flash USB (o una tarjeta TF) con música en formato MP3, la unidad reproducirá automáticamente. Pulse el botón de reproducción/pausa para detener la reproducción, vuelva a pulsarlo para continuar la reproducción.Pulse el botón PREV para seleccionar la canción anterior y el botón NEXT para pasar a la siguiente canción.

FONCTION DE LECTURE DES CARTES USB/TF

1. Mettez l'appareil sous tension.
2. Réglez le sélecteur de fonction sur MP3/BT.
3. Insérez une clé USB (ou une carte TF) contenant de la musique au format MP3, l'appareil lira automatiquement. Appuyez sur le bouton play/pause pour suspendre la lecture, appuyez à nouveau pour continuer la lecture. Appuyez sur le bouton PREV pour sélectionner la chanson précédente et sur le bouton NEXT pour passer à la chanson suivante.

NOTE

1. This model includes built in rechargeable battery.
2. In order to prolong battery life and product normal use, charging time please keep 6-8 hours.

NOTA

1. Este modelo incluye batería recargable incorporada.
2. Con el fin de prolongar la vida de la batería y el uso normal del producto, el tiempo de carga por favor mantenga 6-8 horas.

NOTE

1. Ce modèle comprend une batterie rechargeable intégrée.
 2. Afin de prolonger la durée de vie de la batterie et de permettre une utilisation normale du produit, le temps de charge doit être compris entre 6 et 8 heures.
-

Notes for using rechargeable batteries

After disassembling and installing rechargeable batteries, replace batteries of the same brand and model when renew the battery. please plug in the power supply or charger to activate the battery, then turn on the power of the unit to work normally.

Notas para el uso de pilas recargables

Después de desmontar e instalar las pilas recargables, sustituya las pilas de la misma marca y modelo cuando renueve la batería. por favor, conecte la fuente de alimentación o el cargador para activar la batería, a continuación, conecte la alimentación de la unidad para que funcione con normalidad.

Remarques concernant l'utilisation des piles rechargeables

Après avoir démonté et installé les piles rechargeables, remplacez les piles de la même marque et du même modèle lorsque vous renouvelez la pile. Veuillez brancher le bloc d'alimentation ou le chargeur pour activer la pile, puis mettez l'appareil sous tension pour qu'il fonctionne normalement.

This product is not waterproof and should not be exposed to rain during outdoor use.

Este producto no es impermeable y no debe exponerse a la lluvia durante su uso en exteriores.

Ce produit n'est pas étanche et ne doit pas être exposé à la pluie lors d'une utilisation extérieure.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 864-6900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your **R-45** journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

