

INSIGNIA™

## USER GUIDE

# .7 Cu. Ft. Retro Microwave Oven

**NS-MWR07R2 / NS-MWR07M2**



Before using your new product, please read these instructions to prevent any damage.

## Contents

SAFETY INFORMATION .....	3
GROUNDING INSTRUCTIONS .....	5
RADIO INTERFERENCE .....	5
Cookware and cooking materials .....	6
Materials you can use .....	6
Materials to be avoided .....	7
Package contents .....	7
Features .....	7
Components .....	8
Control panel .....	9
Setting up your microwave .....	10
Installing the turntable .....	12
Using your microwave .....	13
Setting the clock .....	13
Using the kitchen timer .....	13
Cooking in your microwave .....	13
Cooking quickly .....	14
Using the Auto menu .....	14
Popping popcorn in your microwave .....	16
Defrosting in your microwave .....	16
Using multi-stage cooking .....	16
Using the energy saving (Eco) mode .....	17
Checking the time and power level .....	17
Using the child-lock .....	17
Turning off the buzzer .....	17
Resetting the turntable .....	17
Troubleshooting .....	18
Maintaining your microwave .....	19
Obtaining replacement parts .....	19
Specifications .....	20
ONE-YEAR LIMITED WARRANTY .....	21

# SAFETY INFORMATION

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY:

- 1 Do not attempt to operate this oven with the door open because this can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- 2 Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- 3 Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
  - (a) DOOR (bent)
  - (b) HINGES and LATCHES (broken or loosened)
  - (c) DOOR SEALS and SEALING SURFACES
- 4 The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave oven energy when using your oven, follow these basic safety precautions.

- 1 Read all instructions before using the oven.
- 2 Read and follow the specific: **PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**; found on page 3.
- 3 As with any cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity or when used by children.
- 4 To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Carefully attend the oven when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
  - If materials inside the oven ignite, keep the oven door closed. Turn the oven off and unplug the oven or shut off power at the fuse or circuit breaker panel.
  - Do not use the oven cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- 5 This oven must be grounded. Connect only to a properly grounded outlet. See **GROUNDING INSTRUCTIONS** found on page 5.
- 6 Install or locate this appliance only in accordance with the provided installation instructions.

- 7 Some products, such as whole eggs and sealed containers (for example closed glass jars), are able to explode and should not be heated in this oven.
- 8 Use this oven only for its intended purpose, as described in this manual. Do not use corrosive chemicals or vapors in this oven. This oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- 9 As with any appliance, close supervision is necessary when used by children. Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- 10 This oven should be serviced only by qualified service technicians. Contact the nearest authorized service facility for examination, repair, or adjustment.
- 11 Do not cover or block any openings on the oven.
- 12 Do not store or use this oven outdoors.
- 13 Do not use this oven near water (for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations).
- 14 Do not immerse the cord or plug in water.
- 15 Keep the cord away from heated surfaces.
- 16 Do not let the cord hang over the edge of a table or counter.
- 17 When cleaning the surfaces of the door and the oven that come together on closing the door, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
- 18 Liquids, such as water, coffee, or tea can be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**
  - Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when inserting a spoon or other utensil into the container.

**WARNING:** Handling the power cord on this oven, or cords associated with accessories sold with this oven, will expose you to lead, a chemical known to the state of California to cause cancer and birth defects or other reproductive harm.

**Wash your hands after handling.**

## SAVE THESE INSTRUCTIONS

# GROUNDING INSTRUCTIONS

**WARNING:** Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this oven.

This oven must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This oven is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. DO NOT alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.

**WARNING:**

Do not insert your fingers into any gaps or holes. It may cause injuries.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the oven is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the oven. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the oven.

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- If a long cord set or extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the oven.
  - The extension cord must be a grounding-type 3-wire cord.
  - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

# RADIO INTERFERENCE

- 1 Operation of the microwave oven may cause interference to your radio, TV, or similar equipment.
- 2 When there is interference, it may be reduced or eliminated by taking the following measures:
  - Clean the door and the sealing surface of the oven.
  - Reorient the receiving antenna of the radio or television.
  - Relocate the microwave oven with respect to the receiver.
  - Move the oven away from the receiver.
  - Plug the oven into a different outlet so that the oven and receiver are on different branch circuits.

Cookware and cooking materials

**WARNING:** Personal Injury Hazard  
Tightly-closed containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

Cookware and other materials must fit on the turntable. Always use oven mitts or pot holders because cookware may become hot.

Refer to the [Materials you can use](#) on page 6 and [Materials to be avoided](#) on page 7 tables as a guide, then test before using.

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensils test

- 1 Fill a microwave-safe container with 1 cup (250 ml) of cold water, along with the utensil in question.
- 2 Cook on maximum power for one minute. **Do not exceed one minute cooking time.**
- 3 Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- 4 To prevent the risk of fire, do not put hot pads, blankets, clothes, or other textiles in oven.

Materials you can use

MATERIAL	REMARKS
Browning dish	Follow the manufacturer’s instructions. The bottom of the browning dish must be at least 3/16-in. (5 mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Use microwave-safe only. Follow the manufacturer’s instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove the lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Use heat-resistant oven glassware only. Make sure that there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow the manufacturer’s instructions. Do not close with a metal tie. Make slits to let steam escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave your microwave unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Use only if labeled “Microwave Safe.” Follow the manufacturer’s instructions. Some plastic containers soften as the food inside gets hot. “Boiling bags” and tightly closed plastic bags should be slit, pierced, or vented, as indicated on the package.
Plastic wrap	Use microwave-safe only. Use to cover food during cooking to retain moisture. Do not let plastic wrap touch food.

MATERIAL	REMARKS
Thermometers	Use microwave-safe only (such as meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

### Materials to be avoided

MATERIAL	REMARKS
Aluminum foil	May cause an electric spark. Transfer food into microwave-safe dish.
Aluminum tray	May cause an electric spark. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause an electric spark. Use a microwave-safe dish instead.
Metal or metal trimmed utensils	Metal shields the food from microwave energy. The metal trim may cause arcing.
Metal twist ties	May cause an electric spark and could cause a fire in your microwave.
Paper bags	May cause a fire in your microwave.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Textiles	Hot pads, blankets, clothes or others may cause burns or a fire.
Wood	Wood will dry out when used in your microwave and may split or crack.


### Package contents

- .7 Cu. Ft. Retro Microwave Oven
- Glass tray
- Turntable ring assembly
- *User Guide*

### Features

- Cook or reheat meat, vegetables, pasta and more using a 700 W output at the touch of a button
- Cherry red or mint green color, round viewing window, and chrome details provide a fun retro touch
- Compact design fits on your countertop or kitchen cart while the 3.3 ft (1 m) cord reaches to an outlet
- Nine preset cooking functions easily cook your favorites
- Ten power levels heat your food to your exact preference
- 10 in. (25.5 cm) glass turntable automatically rotates to evenly heat food
- Lock function prevents children from changing your microwave settings
- Eco mode helps you to conserve electricity and save money


Components

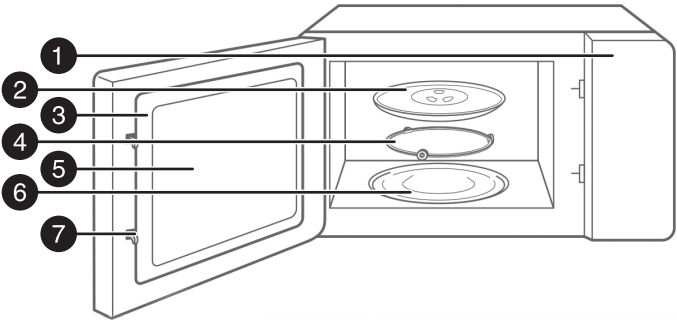





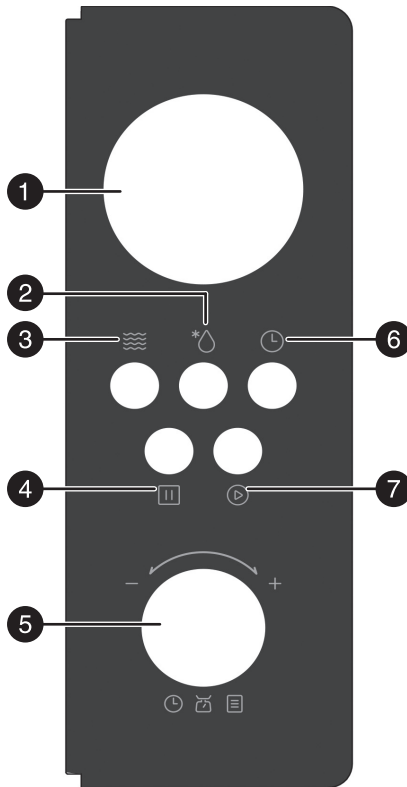

#	ITEM	DESCRIPTION
1	Control panel	Use to set cooking times and enter other information as needed.
2	Glass tray	Lets food cook evenly.
3	Door assembly	Protects you from exposure to excessive microwave energy.
4	Turntable ring assembly	Lets the turntable rotate to cook food evenly.
5	Observation window	Lets you view the item being cooked.
6	Turntable shaft	Rotates the turntable assembly.
7	Safety interlock system	Prevents your microwave from operating when the door is open.



## Control panel



#	ITEM	DESCRIPTION
1	Display	In standby mode, displays the time. In cooking mode, displays cooking time, weight, and other information.
2	 (defrost)	Press once, then enter the weight of the item you want to defrost. The cooking time is set automatically. See <a href="#">Defrosting by weight</a> on page 16. Press twice, then enter the amount of time you want to defrost. See <a href="#">Defrosting by time</a> on page 16.
3	 (microwave)	Press repeatedly to select the power level. You can select between 100% and 10%. The power levels (PL10, PL9, PL8, PL7, PL6, PL5, PL4, PL3, PL2, and PL1) appear in sequence on the display. See <a href="#">Cooking in your microwave</a> on page 13.


#	ITEM	DESCRIPTION
4	 (stop/clear)	Press to stop the cooking process. Press again to clear the cooking operation. In standby mode, press and hold for three seconds or more to set the child lock. See <a href="#">Using the child-lock</a> on page 17.
5	 (adjustment) knob	Turn to adjust settings.
6	 (kitchen timer/clock)	Press once to set the timer. See <a href="#">Using the kitchen timer</a> on page 13. Press twice to set the time. See <a href="#">Setting the clock</a> on page 13.
7	 (start/ +30 sec.)	Press to start cooking. In the wait state, press one or more times to specify the cook time in 30 second increments. Maximum time is 95 minutes.

## Setting up your microwave

- 1 Remove your microwave and all materials from the carton and the microwave cavity.
- 2 Examine your microwave for any damage, such as dents or a broken door. Don't install or use your microwave if you find any damage.
- 3 Remove any protective film from the microwave cabinet surface, the door, and the control panel.

**CAUTION:** Don't remove the light brown or white plastic cover in the microwave cavity. This cover protects the magnetron.

- 4 Place your microwave on a level surface that provides enough open space for the air vents.

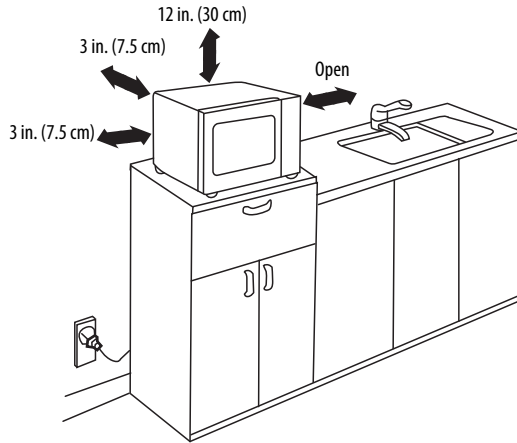

**Notes:**

- A minimum clearance of 3 in. (7.5 cm) is required between your microwave and any adjacent walls. One side must be open.
- Leave a minimum clearance of 12 in. (30 cm) above your microwave.
- Don't remove the legs from the bottom of your microwave.
- Blocking the air vents can damage your microwave.
- Place your microwave as far away from radios and TVs as possible. Operation of your microwave may cause interference to your radio or TV reception.

- 5 Plug your microwave into a standard household outlet. Make sure that the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**CAUTIONS:**


- Don't mount your microwave under a cabinet.
- Don't install your microwave over a range cooktop or other heat-producing appliance. If installed near or over a heat source, your microwave could be damaged and the warranty would be voided.

## Installing the turntable

**Notes:**


- Never place the glass tray upside down. The glass tray should never be restricted.
- Both the glass tray and turntable ring must always be used during cooking.
- Always place all food and containers of food on the glass tray for cooking.
- If the glass tray or turntable ring cracks or breaks, contact your nearest authorized service center.

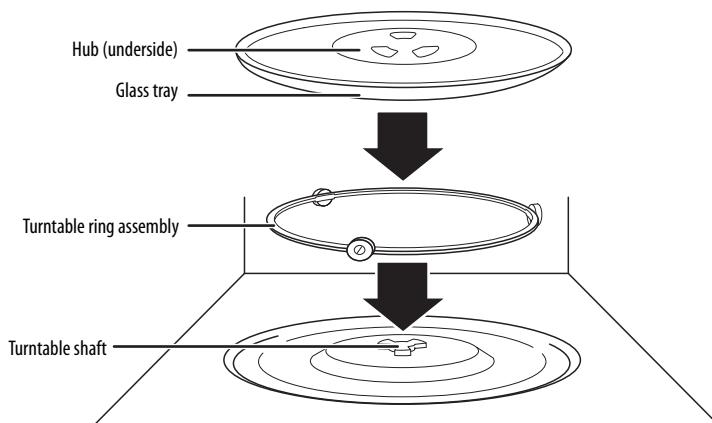


- 1 Place the turntable ring assembly in the round depression in the bottom of your microwave so that it turns freely.
- 2 Place the glass tray (flat side up) on the turntable assembly so that the hub engages the turntable shaft in the bottom of your microwave. The glass turntable shouldn't turn freely when it is correctly installed.





## Using your microwave

### Setting the clock

**Note:** If the clock isn't set, it won't function when powered. During the process of setting up the clock, if you press  (stop/clear) or make no changes within in one minute, the oven exits the setting.



- 1 Plug the power cord into an outlet. *0:00* flashes on the display and the buzzer sounds once.
- 2 Press  (kitchen timer/clock) twice. The hour flashes on the display.
- 3 Turn the adjustment knob to select the hour. You can select from **00:05** to **95:00**. The hour you select appears on the display.
- 4 Press  (kitchen timer/clock). The minutes flash on the display.
- 5 Turn the adjustment knob to select the minutes. You can select from **0** to **59**. The minutes you select appear on the display.
- 6 Press  (kitchen timer/clock) to confirm the setting. The: symbol flashes on the display.

### Using the kitchen timer

- 1 Press  (kitchen timer/clock) once. *00:00* flashes on the display.
- 2 Turn the adjustment knob to select the amount of time. You can select from **1** to **95** minutes. The time you select appears on the display.
- 3 Press  (start/+30sec.) to confirm the setting. When the time reaches 0, the buzzer sounds five times and the display shows the current time.

**Note:** While the kitchen timer is running, you can't program your microwave.

### Cooking in your microwave

- 1 Press  (microwave). *PL10* appears in the display.
- 2 Press  repeatedly or turn the adjustment knob to select the power level. You can select between 100% and 10%. The power levels (*PL10*, *PL9*, *PL8*, *PL7*, *PL6*, *PL5*, *PL4*, *PL3*, *PL2*, and *PL1*) appear in sequence on the display.

The available power levels are:

	1 TIME	2 TIMES	3 TIMES	4 TIMES	5 TIMES	6 TIMES	7 TIMES	8 TIMES	9 TIMES	10 TIMES
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1

- 3 Press  (start/+30sec.) to confirm the setting.

- 4 Turn to adjust the cooking time between 00:05 and 95:00.


When you turn the knob to set the cooking time, each click of the knob add a specific amount of time.

 
When you start turning the knob, each click adds 5 seconds.

When you reach one minute on the timer, each click adds 10 seconds.

After the timer reaches five minutes, each click adds 30 seconds.





AMOUNT OF TIME	TIME ADDED WITH EACH CLICK
0 to 1 minutes	5 seconds
1 to 5 minutes	10 seconds
5 to 10 minutes	30 seconds
10 to 30 minutes	1 minute
30 to 95 minutes	5 minutes

- 5 Press  (start/+30sec.) to start cooking.

**Note:** When setting your microwave, if you press  (stop/clear) or if you don't enter a setting within one minute, your microwave goes back to the former setting automatically.



## Cooking quickly

**Note:** When using the auto menu or defrost by weight function, you can't increase the cooking time.

- 1 In standby mode, press  (start/+30sec.) to cook at 100% power for 30 seconds. Each time you press , the time increases by 30 seconds. The maximum cooking time is 95 minutes.
- 2 In standby mode, turn the adjustment knob left to select the cooking time, then press  (start/+30sec.) to start cooking. Your microwave cooks at 100% power.
- 3 While your microwave is cooking or when you are using the time defrost function, press  (start/+30sec.) to increase the cooking time.

## Using the Auto menu

Your microwave has nine pre-programmed cooking modes.

- 1 In standby mode, turn the adjustment knob right to choose the menu from A-1 to A-9 or turn left to choose the menu from A-9 to A-1. The auto menu number appears in the display.
- 2 Press  (start/+30sec.) to confirm your menu selection.
- 3 Turn the adjustment knob to choose the weight of food.
- 4 Press  (start/+30sec.) to start cooking. When cooking is done, the buzzer sounds five times.

See [Auto menus](#) on page 15.

**Auto menus**

<b>MENU</b>	<b>AMOUNT</b>	<b>DISPLAY</b>
A1 Popcorn	1.75 oz. 3.0 oz. 3.5 oz.	1.75 3.0 3.5
A2 Beverage	1 cup (120 ml/cup) 2 cups 3 cups	1 2 3
A3 Fresh vegetable	4 oz. 8 oz. 16 oz.	4 8 16
A4 Meat	9 oz. 12 oz. 16 oz.	9 12 16
A5 Pizza	4 oz. 8 oz. 14 oz.	4 8 14
A6 Potato	1 (about 8 oz.) 2 3	1 2 3
A7 Pasta	1.75 oz. (with 450 ml cold water) 3.5 oz. (with 800 ml cold water)	1.75 3.5
A8 Soup	1 cup (8 oz.) 2 cups 3 cups	1 2 3
A9 Reheat	9 oz. 12 oz. 18 oz.	9 12 18

## Popping popcorn in your microwave

- 1 When selecting 3.0 or 3.5 oz. of popcorn, we suggest that you fold down a triangle on each corner of the bag before cooking, as shown.



- 2 When the popcorn bag expands and no longer rotates properly, press **||** (stop/clear) once, open the oven door, then adjust the bag position to ensure even cooking.
- 3 Press **▶** (start/+30sec.) to resume cooking.

## Defrosting in your microwave

### Defrosting by weight

- 1 Press **⏻** (defrost) once. *dEF1* appears on the display.
- 2 Turn the adjustment knob to select the weight of the food. The weight range is 4 to 54 oz.
- 3 Press **▶** (start/+30sec.) to start defrosting.

### Defrosting by time

**Note:** The defrost power level is PL 3. You can't change it.

- 1 Press **⏻** (defrost) twice. *dEF2* appears on the display.
- 2 Turn the adjustment knob to select the cooking time.
- 3 Press **▶** (start/+30sec.) key to start defrosting.

## Using multi-stage cooking


You can set up a two-stage cycle to cook your food. For example, you can defrost a meal, then cook it.

In this example, the food is defrosted for five minutes, then 80% power for 7 minutes.

**Note:** Auto cooking cannot be used with multi-stage cooking.


- 1 Press **⏻** (defrost) twice. *dEF2* appears on the display.
- 2 Turn the adjustment knob to set the defrost time to five minutes.
- 3 Press **⌚** (microwave) once. *PL10* appears on the display.
- 4 Turn the adjustment knob to set the power level to 80%. *PL8* appears on the display.
- 5 Press **▶** (start/+30sec.) to confirm.



- 6 Turn the adjustment knob to set the cooking time to seven minutes.
- 7 Press  (start/+30sec.) to start cooking.



### Using the energy saving (Eco) mode

Energy saving (Eco) mode turns off the LED display to save power.



- In standby mode, press  (stop/clear) for less than three seconds. The display turns off and your microwave enters power saving mode.
- To exit the power saving mode, press any button, then open the door. The display turns on and the buzzer beeps once.

**Note:** Energy saving mode only works if the door is closed and the child lock function is turned off.


 
### Checking the time and power level

- While cooking, press  (microwave). The current power level appears on the display for three seconds.
- While cooking, press  (kitchen timer/clock). The current time appears on the display for three seconds.

 
### Using the child-lock

- To lock your microwave — Press and hold  (stop/clear) for three seconds. Your microwave sounds a long beep to indicate that the lock is turned on.
- To unlock your microwave — When your microwave is locked, press and hold  (stop/clear) for three seconds. Your microwave sounds a long beep to indicate that lock is turned off.

### Turning off the buzzer

- 1 In standby mode, press and hold  (kitchen timer/clock) for three seconds. A long beep sounds and the buzzer is turned off.
- 2 To turn the buzzer back on, press and hold  (kitchen timer/clock) for three seconds. A long beep sounds and the buzzer is turned back on.

### Resetting the turntable

If the turntable isn't in its initial position when cooking is done, the turntable enters the turntable reset function. During the reset, the lamp, fan, and turntable continue working, and  appears on the display.

When the reset function is complete, your microwave stops cooking and the buzzer sounds five times to indicate cooking is done.

**Note:** The turntable reset function only works at the end one completed cooking cycle. If you pause cooking or open the door, the function doesn't work.

## Troubleshooting

If you have a problem with your microwave, review the following chart for a possible solution. If your microwave still doesn't work correctly, contact the nearest authorized service center.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
My microwave won't start	The power cord isn't plugged in.	Plug the electrical cord into a power outlet.
	The door is open.	Close the door and try again.
	The wrong operation is set.	Check the instructions and try again.
Arching or sparking in my microwave	You're using incorrect materials in your microwave.	Use only microwave-safe materials. See <a href="#">Materials you can use</a> on page 6.
	You're trying to use your microwave when it's empty.	Don't operate your microwave when it's empty.
	Spilled food remains in your microwave.	Clean your microwave with a wet towel.
Unevenly cooked foods	You're attempting to use incorrect materials in your microwave.	Use only microwave-safe materials. See <a href="#">Materials you can use</a> on page 6.
	The food isn't defrosted completely.	Defrost the food completely before cooking it.
	The cooking time or power level isn't adequate to cook the food.	Use the correct cooking time and power level.
	The food isn't turned or stirred.	Turn or stir the food.
Overcooked foods	The cooking time or power level isn't adequate to cook the food.	Use the correct cooking time and power level.
Undercooked foods	You're attempting to use incorrect materials in your microwave.	Use only microwave-safe materials. See <a href="#">Materials you can use</a> on page 6.
	The food isn't defrosted completely.	Defrost the food completely before attempting to cook it.
	The cooking time or power level isn't adequate to cook the food.	Use the correct cooking time and power level.
	Your microwave air vents are blocked or restricted.	Make sure that the air vents aren't blocked or restricted.
Incorrect defrosting	You're attempting to use incorrect materials in your microwave.	Use only microwave-safe materials. See <a href="#">Materials you can use</a> on page 6.
	The cooking time or power level isn't adequate to cook the food.	Use the correct cooking time and power level.
	The food isn't turned or stirred.	Turn or stir the food.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Sensor cooked foods not cooked correctly	The cover or lid on the food isn't vented.	The cover or lid over food must contain a vent hole for escaping steam.
	You opened the door before the sensor-detected cooking time appeared on the display.	Don't open the door to stir or turn the food.

## Maintaining your microwave

Keep your microwave clean, especially the interior.

- Clean the exterior with a damp cloth or sponge. Don't let water or cleaning solution drip into the air vents.
- Clean the interior with a damp cloth or sponge.

## Obtaining replacement parts

Call Insignia Customer Service at 1-877-467-4289.

## Specifications

Rated voltage	120V~60Hz
Rated input power (microwave)	1,050W
Rated output power (microwave)	700W
Oven capacity	.7 cu. ft.
Turntable diameter	10.3 in. (25.5 cm)
External dimensions (H×W×D)	10.2 × 17.3 × 14.1 in. (25.9 × 44 × 35.9 cm)
Internal dimensions (H×W×D)	8.1 × 12 × 11.9 in. (20.5 × 30.6 × 30.3cm)
Certifications	UL approved
Power cord length	39.4 in. (1 m)
Net weight	21.2 lbs. (9.6 kg)

# ONE-YEAR LIMITED WARRANTY

## Definitions:

The Distributor\* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at [www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca) and is packaged with this warranty statement.

## How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

## What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

## How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website ([www.bestbuy.com](http://www.bestbuy.com) or [www.bestbuy.ca](http://www.bestbuy.ca)), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

## Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

## What does the warranty not cover?

This warranty does not cover:

- Food, beverage, and/or medicine loss/spoilage.
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance

- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

**1-877-467-4289**

[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

\*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A

©2023 Best Buy. All rights reserved.

INSIGNIA™

[www.insigniaproducts.com](http://www.insigniaproducts.com)  
1-877-467-4289 (U.S. and Canada)

INSIGNIA is a trademark of Best Buy and its affiliated companies.  
Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2023 Best Buy. All rights reserved.

V6 ENGLISH  
23-0424