 





# QUICK SETUP GUIDE

## RF-G1501 / RF-G1501-C, 4-Port HDMI Switch with 4K Compatibility


### FRONT

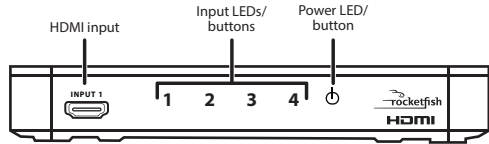
 
### REMOTE

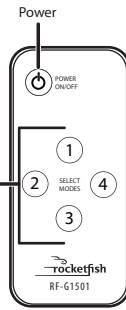

### BACK

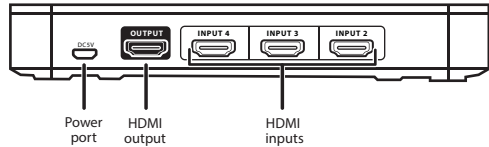 

Input selectors

### FEATURES


Your 4-Port HDMI Switch supports the latest 4K video and next-generation audio signals. In the unlikely event that a feature is not supported, it would cause the feature to not work at all and would not degrade the picture or sound quality.

- **Resolution** – 480p, 720p, 1080p, and 4K (up to 3840 × 2160)
- **Frame Rate** – Up to 4k at 60 Hz (1080p at 120 Hz)\*
- **Color** – Deep Color, HDR, and other expanded color spaces
- **Audio** – Works with all audio formats supported by the HDMI standard

**\*Note:** TVs with high internal refresh rates (such as 240 Hz) are compatible. The specifications refer to source signal and not TV refresh rate.

### PACKAGE CONTENTS

 - 4-Port switcher
- Power adapter
- Remote control
- *Quick Setup Guide*

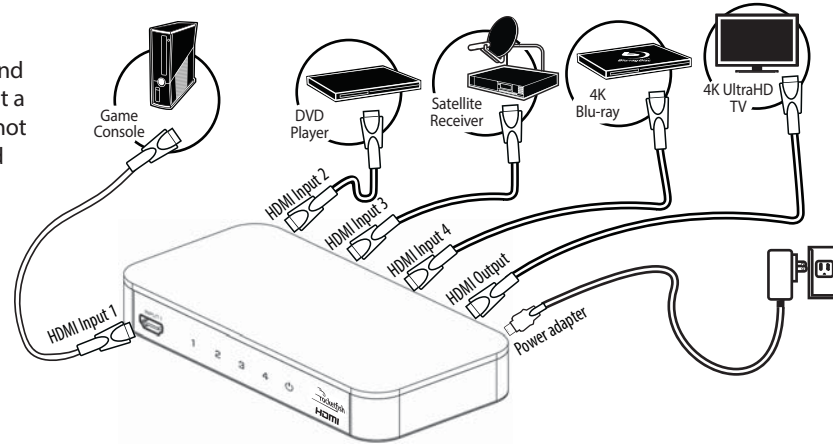


### SETTING UP YOUR SWITCHER


- 1 Connect HDMI cables from your source devices to the switcher's **INPUT** ports.
- 2 Connect an HDMI cable from your TV (or projector) to the switcher's **OUTPUT** port.
- 3 Connect the power adapter from the **DC 5V** port to a power outlet. The power LED and an input LED light up.

**Optional wall-mounting:** Insert two screws 4 in. (10.2 cm) apart into your wall, then hang the switcher on the screws. Mounting hardware not included.

## USING YOUR SWITCHER

- 1 Turn on your TV and source device.
- 2 To turn on your switcher:
  - Press **POWER ON/OFF** on your remote control.
  - OR
  - Tap the  (power) symbol on your switcher.
- 3 To select a source device:
  - Press the number on your remote that matches the input your source device is connected to.
  - OR
  - Tap the number on your switcher that matches the input your source device is connected to.

 
The corresponding input LED lights.

- 4 Use your source device as usual to play video and audio.
- 5 When finished, press and hold  (power) to turn off your switcher.

**Note:** You may leave the power on while not in use.

## REPLACING THE REMOTE BATTERY

- 1 Push in the tab on the battery tray, then pull out the tray.
- 2 Remove the old battery. Insert a CR2025 battery with the + facing up, then slide the tray closed.

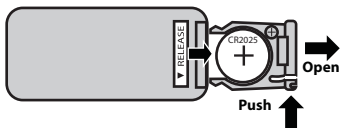

## TROUBLESHOOTING

### No video and/or audio

- Make sure that all connections are correct and secure.
- Make sure that the switcher is plugged in and turned on.
- Make sure that switcher is set to the correct source device.
- Make sure that your TV (or projector) is set to the input/source that your switcher is connected to.
- Make sure that the audio and video formats (such as a Blu-ray disc) are supported by the source device and display that you are using.
- Unplug the switcher's power cable, wait 10 seconds, then plug it back in again.
- Make sure that your TV or projector supports the video resolution that your source device is using.
- Make sure that your HDMI cable is not damaged. Try connecting a different HDMI cable.
- Long HDMI cables may cause signal loss. Try a different, shorter HDMI cable.

### Input source will not change

If you are changing the source with the switcher:

- Press more firmly and touch the button longer.
- Make sure that you are not wearing gloves and that your fingers are clean and dry.
- Try changing the source with a remote.

If you are changing the source with a remote:

- Move closer to the switcher and make sure that there is a line of sight between the switcher and remote sensors.
- Replace your remote control's battery.
- Try changing the source with the controls on the switcher.

**Note:** For maximum compatibility, this device will not relay CEC commands between devices. Power, input switching, and other controls must be done on individual device.

## SPECIFICATIONS

**Dimensions** (L × W × H): 6.9 × 3.4 × 1.02 in. (17.5 × 8.6 × 2.6 cm)

**Weight:** 0.66 lbs. (0.3 kg)

**Power supply with micro USB connector:** 5V DC/1A

## LEGAL NOTICES

### FCC Statement

#### 1. FCC Caution - §15.21:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### 2. FCC Statement - §15.105(b):

"This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

3. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

## ONE-YEAR LIMITED WARRANTY

Visit [www.rocketfishproducts.com](http://www.rocketfishproducts.com) for details.

## CONTACT ROCKETFISH:

For customer service, call 1-800-620-2790 (U.S. and Canada)

or 01-800-926-3010 (Mexico)

[www.rocketfishproducts.com](http://www.rocketfishproducts.com)