

5. Remove the batteries if they are no longer

with regard to polarity (+ and -).

4. Ensure the batteries are installed correctly

as it locks into place.

3. Return the battery cover to its original position

first so it will slip easily into place.

the clips, insert the negative end of each battery

the battery compartment.

the positive and negative

positions indicated inside

aligned with the “arrow” mark, turn clockwise

head into position. Making sure the “i” mark is

trimmer head from the handle. To use a new

At this point you should be able to easily lift the

trimmer head on the unit, properly install the

head counterclockwise until the “i” mark is

Hold the power handle while turning the trimmer

NOTE: *Pushing the shaver head against the skin*

too hard will not allow the hair to enter the foils

and be cut. Experience will show just the right

pressure to use to maximize performance.

1. Prepare your legs for wet or dry shaving.

2. Turn shaver on.

3. Shave with smooth, steady strokes up and

down your skin.

4. Keep the full shaving head in contact with

your skin.

5. For best results, shave against the direction of

hair growth.

6. When you finish shaving, turn the shaver off.

Important: After several uses, you will be able

to determine the optimum shaving method for

your legs and bikini area.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

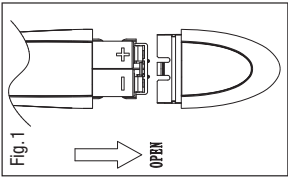 


Fig. 1

Remove the power handle (Fig. 4).

Align the two AAA

batteries (included

with the shaver)

into the battery compartment.

Being careful not to bend

the clips, insert the negative end of each battery

first so it will slip easily into place.

3. Return the battery cover to its original position

by pushing it in and up until you hear a small click

as it locks into place.

4. Ensure the batteries are installed correctly

with regard to polarity (+ and -).

5. Remove the batteries if they are no longer

operating.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

INSTRUCTIONS FOR USE

1. To use, push ON/OFF switch upward to the ON position.
2. After use, push down on the ON/OFF switch to turn power handle off.

SHAVING YOUR LEGS/BIKINI AREA

NOTE: *Pushing the shaver head against the skin too hard will not allow the hair to enter the foils and be cut. Experience will show just the right pressure to use to maximize performance.*

1. Prepare your legs for wet or dry shaving.
2. Turn shaver on.
3. Shave with smooth, steady strokes up and down your skin.
4. Keep the full shaving head in contact with your skin.
5. For best results, shave against the direction of hair growth.
6. When you finish shaving, turn the shaver off.

Important: After several uses, you will be able to determine the optimum shaving method for your legs and bikini area.

NOTE: If you are switching to an electric or battery-operated shaver for the first time, it will take 12 uses for your skin and hair to adjust to this new method of removing hair. Do not evaluate performance until you have allowed your skin and hair time to adjust.

SHAVING

USING THE SHAVER

The shaver head is designed to provide a clean, close shave to your legs, arms, and underarms. Take care with the foil as it is very sensitive and easily damaged. Always inspect it for damage before you use it. Never use a foil that is damaged, as this can result in injury. Make sure your skin is clean and dry before use. Do not use any lotions or oils before shaving.

SHAVING YOUR UNDERARMS

1. Prepare your underarms for wet or dry shaving. (Be sure that your skin is clean and free of deodorant.)
2. Turn the shaver on.
3. Lift your arm until the skin under the arm stretches slightly.
4. Use the trimmer head first to remove any long hair, stroking trimmer against the direction of hair growth.
5. Hold the shaver so that it is in full contact with your skin, and shave with gentle strokes.
6. It is important to press lightly. Pressing too hard may lead to skin irritation.
7. When finished shaving, turn the shaver off.

Important: After several uses, you will be able to determine the optimum shaving method for your underarms.

1. Attach the shaver head as described in “TO SWITCH TRIMMER HEADS” section.
2. Move the power switch to the ON position.
3. Hold the shaving foil against the skin, moving the shaver gently against the direction of hair growth.
4. Don't push too hard against the skin as this will cause irritation and may damage the foil.
5. As your skin may be sensitive after shaving, test your moisturizer on a small patch of skin and wait to see if irritation occurs.
6. Cleaning: After each use you will need to clean the shaver head to ensure continued performance.
7. Move the power ON/OFF switch to the OFF position.
8. Remove the shaver head from the handle.
9. Remove the foil head assembly from the shaver head by pushing on the two side buttons and pulling the foil away from the head (see Fig. 4).
10. Using the supplied cleaning brush, gently brush the hair away from the cutter. Blow the hair off the foil; do not use the brush on the foil, it will cause damage.
11. The shaver head may also be rinsed under water. Be sure to allow both to dry before using. To maintain the best cutting performance, be sure to replace the foil head and cutter every six months of regular use. Contact Conair Consumer Service to order the replacement parts.

1. Attach the trimming head as described in “TO SWITCH TRIMMER HEADS” section.
2. To fully remove hair or to outline the bikini area, use the trimmer without the attachment comb.
3. When removing hair, gently move the blades against the direction of growth.
4. To outline, place the blades perpendicular to the skin surface and apply the blades to the edge of the hair. Use the blades to create the desired outline.
5. For the cleanest finish, follow up with the foil shaver.
6. For cutting hair without completely removing it, attach the 3-position comb to the head. Place the comb on the cutting blades first, and then snap down onto the back of the trimmer head.
7. Start with the longest setting by moving the comb switch away from the back of the trimmer.
8. Gently move the comb through the hair in the direction of growth.
9. After you have done this with the longest setting, if you want to make the hair shorter, move to the next lowest position until the desired length of hair is achieved.
10. After hair removal, run a comb or brush (not included) through the hair to remove any cut, loose hairs.
11. When you have finished, move the switch to the OFF position. Clean the blades with the provided brush.

TRIMMING

GUARDE ESTAS INSTRUCCIONES

ADVERTENCIA –

1. Si su piel es sensible a los productos cosméticos, se irrita fácilmente cuando se afeita o padece de alergia, pruebe el aparato sobre una pequeña sección del brazo o de la pierna antes de usarlo.
2. Las hojas de afeitar son delgadas y precisas. No las apriete mucho contra la piel ni las deje caer. Una hoja lastimada o deformada impedirá el buen funcionamiento del aparato y puede provocar heridas. Reemplace las hojas defectuosas inmediatamente.
3. Limpie la unidad en agua fría o tibia solamente. No utilice agua caliente; agua salina o limpiadores; esto puede dañar los sellos de impermeabilidad del aparato.
4. No sumerja el aparato en agua durante un tiempo prolongado.
5. Si usa desodorante, lave bien y deje secar las hojas y las cuchillas internas al aire después de cada uso. Si no lo hace, las cuchillas internas se pueden oxidar.
6. Manténgalo fuera del alcance de los niños.

RESOLUCIÓN DE PROBLEMAS

Si su aparato no funcionase correctamente:

1. Asegúrese de que el aparato esté encendido (ON).
2. Asegúrese de que la(s) pila(s) esté(n) debidamente instalada(s). Cerciórese de que la(s) pila(s) no esté(n) agotada(s).
3. Revise las cuchillas y límpieleas si es necesario, usando el cepillo de limpieza provisto.

4. Si esto no soluciona el problema, regrese el aparato a un centro de servicio autorizado (véase la información de garantía).

INSTRUCCIONES DE OPERACIÓN

PARA SU RECORTRADORA PERSONAL MULTUSO PARA USO DOMÉSTICO SOLAMENTE

1. Deslice la cubierta del compartimiento de la(s) pila(s) hacia abajo para abrir el compartimiento (Fig. 1).
2. Instale dos pilas AAA (incluidas) según muestra el diagrama adentro del compartimiento. Introduzca el polo negativo primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre la cubierta del compartimiento de las pilas, empujando hasta que haga clic.
4. Siempre respete los signos de polaridad (+/-) al instalar las pilas.
5. Retire las pilas al final de su vida útil o si no va a usar el aparato durante un largo período de tiempo.
6. Limpie los contactos del aparato y los de las pilas antes de instalarlas.

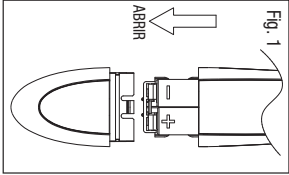


Fig. 1

FUNCIONAMIENTO BÁSICO COMO CAMBIAR EL CABEZAL

Sostenga el aparato firmemente y gire el cabezal en sentido antihorario, hasta que la marca “I” en el cabezal coincida con la flecha en el cuerpo del aparato (Fig. 2). Retire el cabezal. Instale el cabezal deseado, haciendo coincidir la marca “I” con la flecha. Para sujetar el cabezal, gírelo en sentido horario hasta que la marca “I” coincida con el círculo (Fig. 3).

7. Retire las pilas gastadas lo antes posible.
8. No utilice pilas que no sean del tamaño o de la potencia indicada para uso con este producto.
9. Cambie todas las pilas al mismo tiempo.
10. No junte pilas nuevas con pilas usadas. No junte pilas alcalinas con pilas regulares (carbono-zinc) o pilas/baterías recargables (NiCd o Ni-MH).

INSTRUCCIONES DE USO

1. Para encender el aparato, deslice el interruptor hacia arriba (ON).
2. Para apagar el aparato, deslice el interruptor hacia abajo (OFF).

CÓMO AFEITAR LAS PIERNAS/INGLES

NOTA: *presionar las hojas contra la piel aplasta los vellos e impide el afeitado. La experiencia le mostrará cuánta presión aplicar para obtener resultados óptimos.*

1. Prepare la piel para el tipo de afeitado deseado, con agua o en seco.
2. Encienda el aparato (ON).
3. Mueva la máquina suavemente arriba y abajo contra la piel.
4. Siempre mantenga el aparato en contacto con la piel.
5. Para obtener resultados óptimos, afeítese en dirección contraria al crecimiento del vello.
6. Después de terminar, apague el aparato (OFF). Importante: necesitará hacer varios intentos hasta encontrar la mejor forma de afeitar sus piernas/ingles.

AFEITADO

NOTA: *si es la primera vez que usa una afeitadora eléctrica, su piel y sus vellos necesitarán 12 usos para acostumbrarse a esta nueva técnica de afeitado. No evalúe el rendimiento del aparato antes de este tiempo.*

CÓMO AFEITAR LAS AXILAS

1. Prepare la piel para el tipo de afeitado deseado, con agua o en seco. Asegúrese de que la piel esté limpia, seca y libre de desodorante.
2. Encienda el aparato.
3. Aloe el brazo para estirar ligeramente la piel.
4. Si el vello es largo, utilice el cabezal recordador para acortarlo primero, pasando la máquina en dirección contraria al crecimiento del vello.
5. Mantenga el aparato en contacto con la piel y afeite los vellos con movimientos suaves.
6. No presione mucho. Hacer mucha presión puede causar irritaciones cutáneas.
7. Después de terminar, apague el aparato (OFF). Importante: necesitará hacer varios intentos hasta encontrar la mejor forma de afeitar sus axilas.

CÓMO USAR LA AFEITADORA

El cabezal de afeitado ha sido diseñado para proporcionar un afeitado limpio de sus piernas, brazos y axilas. Tenga cuidado con la hoja, ya que es muy frágil y se daña fácilmente. Examine la antes de cada uso para asegurarse de que no esté dañada. Nunca use una hoja dañada; esto puede causar heridas. Su piel debe estar limpia y seca; no use lociones o aceites antes de afeitarse.

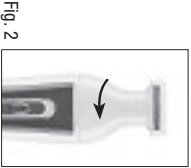


Fig. 2

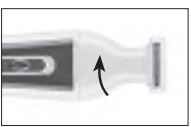


Fig. 3



Fig. 2

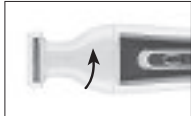


Fig. 3

3. Check the blades to see if they are clogged with hair clippings; if so, use the shaver to remove hair.
4. If the blades are clogged, use the shaver to remove hair.
5. If the blades are clogged, use the shaver to remove hair.
6. Clean the battery contacts and also the device prior to battery installation.
7. Remove any used batteries and address the problem.
8. Always purchase correct size and grade of battery most suitable for its intended purpose.
9. Replace all batteries of a set at the same time.
10. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel cadmium or nickel metal hydride) batteries.

functional or if the trimmer is left in the extended period time.

GETTING STARTED

SHAVING YOUR LEGS/BIKINI AREA

(Fig. 3) and lock into position

Hold the power handle while turning the trimmer head counterclockwise until the “i” mark is aligned properly with the “arrow” mark (Fig. 2). At this point you should be able to easily lift the trimmer head from the handle. To use a new trimmer head on the unit, properly install the head into position. Making sure the “i” mark is aligned with the “arrow” mark, turn clockwise until the “i” and “circle” marks are aligned (Fig. 3) and lock into position

OPERATING INSTRUCTIONS FOR PERSONAL TRIMMER FOR YOUR LEGS/BIKINI AREA

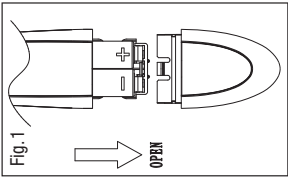 


Fig. 1

Remove the battery compartment cover by pushing in and down toward the bottom of the power handle (Fig. 1).

Align the two AAA

batteries (included

with the shaver)

into the battery compartment.

Being careful not to bend

the clips, insert the negative end of each battery

first so it will slip easily into place.

3. Return the battery cover to its original position

by pushing it in and up until you hear a small click

as it locks into place.

4. Ensure the batteries are installed correctly

with regard to polarity (+ and -).

5. Remove the batteries if they are no longer

operating.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

will take 12 uses for your skin and hair to

adjust to this new method of removing hair.

Do not evaluate performance until you have

allowed your skin and hair time to adjust.

NOTE: *If you are switching to an electric or*

battery-operated shaver for the first time, it

RECORTRADO

1. Instale el cabezal recordador, según se describió en la sección “Cómo cambiar los cabezales”.</



satiny smooth.

ALL-IN-ONE
personal groomer

CÓMO USAR LA RECORTADORA DE PRECISIÓN

1. Sostenga la recortadora a un ángulo recto y corte el vello en dirección del crecimiento.
2. Siga cortando en un ángulo de 90 grados del vello, teniendo cuidado de no ejercer mucha presión sobre la cuchilla; esto puede lastimar la cuchilla y causar heridas.
3. Estire la piel firmemente con una mano para garantizar un afeitado al ras.

MANTENIMIENTO DE LA CUCHILLA

Las cuchillas de su aparato han sido diseñadas para recibir un cuidado muy especial. Limpie las cuchillas después de cada uso, y asegúrese de que el cepillo de limpieza provisto, y luego enjuague hasta en agua corriente. Guarde el el el aparato en un lugar seco y protegido.

Para seguir disfrutando de su aparato durante mucho tiempo, utilícelo únicamente con el propósito para el cual fue diseñado.

LIMPIEZA DE LA CUCHILLA

1. Asegúrese de que el aparato esté apagado (OFF).
2. Sosteniéndolo firmemente el cabezal, oprima los botones de liberación y alee el cabezal (Fig. 5).
3. Tenga cuidado de no presionar las hojas; son delicadas y pueden dañarse fácilmente.
4. Enjuague las cuchillas internas y la hoja bajo agua corriente. No utilice agua caliente; utilice agua fría o tibia solamente.
5. Permita que el marco de la hoja y las cuchillas internas se sequen al aire antes de volver a ensamblar el cabezal. Para regresar el cabezal en su puesto, presione hasta que encaje. Limpie el cuerpo del aparato con una toalla seca. No seque las hojas; permita que el cabezal se seque al aire.

5. Si desea, utilice un pequeño cepillo para limpiar las cuchillas internas.
6. Si el cuerpo del aparato está sucio, límpielo con un paño ligeramente humedecido con agua jabonosa, o detergente suave. Nunca utilice disolvente, solventes o limpiadores fuertes.

Please register this product at www.conair.com/registration

©2016 Conair Corporation
Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

16PG019887

IB-14280

CAUTION

1. When shaking off excess water, hold the main unit firmly to prevent releasing the head assembly or dropping the unit.
2. Do not use a dryer or heater to dry the trimmer. This may result in malfunction or damage to the trimmer.

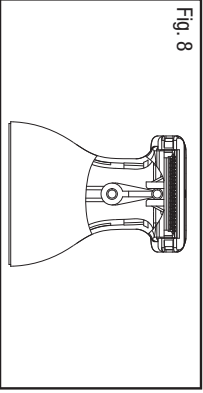


Fig. 8

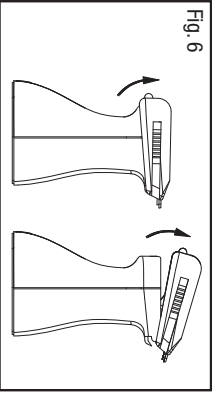


Fig. 6

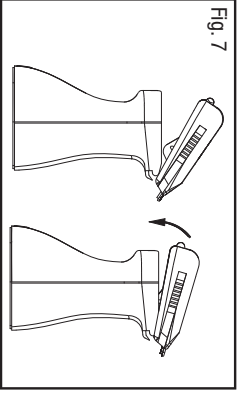


Fig. 7

To replace the blade: Engage at the front and push down at back until it snaps into place (Fig. 7).

Note: Please make sure the swing lever is positioned in the actuator arm after reassembling the head (Fig. 8).

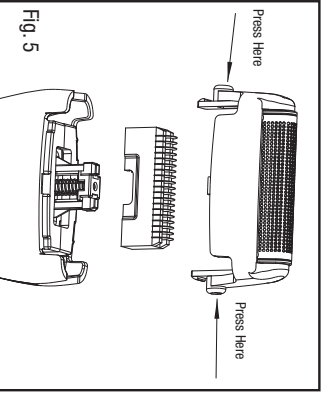


Fig. 5

Your trimmer head is equipped with a detachable blade set for routine maintenance, cleaning and replacement.

DETACHABLE BLADE SET

1. Make sure unit is in the OFF position before cleaning.

2. Hold shaver head and lift up from the back (Fig. 5), then press foil frame release buttons on each side and lift up (the cutter is now in view). Be careful not to push on the foils. They are delicate and can easily be damaged.

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.

4. After wet cleaning, allow the foil frame and cutters to air-dry before closing foil frame and trimmer head. Replace trimmer head back onto the trimmer until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the trimmer head air-dry.

5. The cutter can also be cleaned with a cleaning brush.

6. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

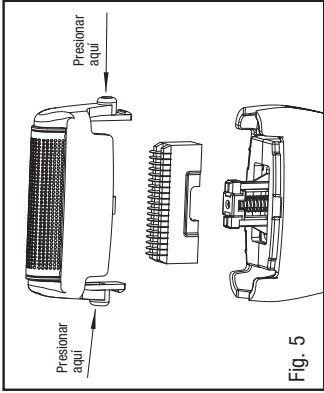


Fig. 5

CUCHILLAS REMOVIBLES

Su recortadora está equipada con cuchillas removibles, para facilitar el mantenimiento, la limpieza, y el reemplazo de las mismas.

Para retirar el juego de cuchillas: sostenga el aparato con el interruptor adelante y empuje las cuchillas hacia arriba con el puñal para desencajarlas (Fig. 6).

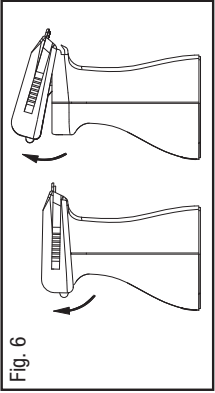


Fig. 6

PRECAUCIÓN

1. Si tiene que sacudir el aparato para eliminar el exceso de agua, sosténgalo firmemente para no dejarlo caer o desarmar el cabezal.
2. No utilice un secador o un calentador para secar el aparato; esto puede impedir su buen funcionamiento o dañarlo.

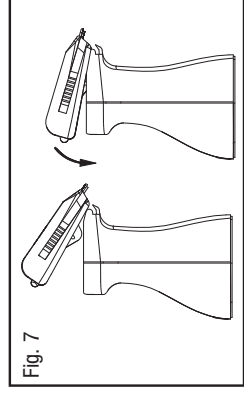


Fig. 7

Para instalar el juego de cuchillas: inserte la parte delantera y presione la parte trasera hacia abajo hasta que encaje (Fig. 7).

Nota: asegúrese de que la palanca giratoria encaje en el brazo de accionamiento al volver a armar el cabezal (Fig. 8).

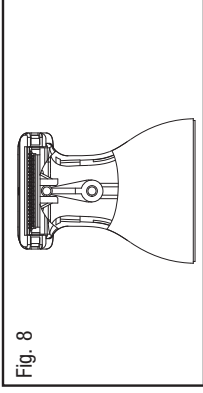


Fig. 8

GARANTÍA LIMITADA DE DOS AÑOS (VALIDA EN LOS EE.UU. Y EN CANADA SOLAMENTE)

Conair reparará o reemplazará su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$5.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA.

Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.

Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

6. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

5. The cutter can also be cleaned with a cleaning brush.

6. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.

4. After wet cleaning, allow the foil frame and cutters to air-dry before closing foil frame and trimmer head. Replace trimmer head back onto the trimmer until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the trimmer head air-dry.

5. The cutter can also be cleaned with a cleaning brush.

6. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

HOW TO CLEAN YOUR SHAVEN HEAD

1. Make sure unit is in the OFF position before cleaning.

2. Hold shaver head and lift up from the back (Fig. 5), then press foil frame release buttons on each side and lift up (the cutter is now in view). Be careful not to push on the foils. They are delicate and can easily be damaged.

3. Rinse the shaver cutter and foil frame under running water or in a sink. Do not use hot water. Use only warm or cold water.

4. After wet cleaning, allow the foil frame and cutters to air-dry before closing foil frame and trimmer head. Replace trimmer head back onto the trimmer until it clicks into place. Wipe the surface of the main unit with a dry towel. Do not dry the foil area. Let the trimmer head air-dry.

5. The cutter can also be cleaned with a cleaning brush.

6. If the body of the power handle becomes dirty, wipe off with a damp cloth and mild detergent or soap. Never use thinners, other solvents, or any harsh cleaners.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer.

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades, then rinse blades under water only, allow to air-dry and store the trimmer until the next use.

1. Attach the eyebrow trimming head as described in "TO SWITCH TRIMMER HEADS" section.

2. To outline and shape your eyebrows, use the trimmer without the attachment comb.

3. Move the power switch to the ON position.

4. Use the blades to define the edge of the eyebrow.

5. Once the shape of your eyebrow has been defined, you may thin out the hair using the attachment comb.

6. Place the comb on the head in the longest "L" position by sliding the comb into the groove on the head closest to the blades.

7. Gently move the comb through the hair. If you need to remove more hair, move the comb to the shortest "S" position. If you want to remove the hair completely, leave the comb off and move the blades against the direction of growth.

8. When finished, move the ON/OFF switch to the OFF position and clean the blades with the supplied cleaning brush.

BLADE CARE

TAKING CARE OF YOUR TRIMMER

USING THE EYEBROW TRIMMER

1. Attach the eyebrow trimming head as described in "TO SWITCH TRIMMER HEADS" section.
2. To outline and shape your eyebrows, use the trimmer without the attachment comb.
3. Move the power switch to the ON position.
4. Use the blades to define the edge of the eyebrow.
5. Once the shape of your eyebrow has been defined, you may thin out the hair using the attachment comb.
6. Place the comb on the head in the longest "L" position by sliding the comb into the groove on the head closest to the blades.
7. Gently move the comb through the hair. If you need to remove more hair, move the comb to the shortest "S" position. If you want to remove the hair completely, leave the comb off and move the blades against the direction of growth.
8. When finished, move the ON/OFF switch to the OFF position and clean the blades with the supplied cleaning brush.

HOW TO USE THE DETAIL TRIMMER

1. Place the trimmer at a slight right angle to the skin and trim in the direction of hair growth.
2. Continue trimming in the direction of growth. Be careful not to apply excess pressure to the blade. This may damage the blade, and can result in injury to the skin during trimming.
3. Pull the skin firmly with one hand during the trimming process to ensure the closest possible shave.

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

Manual de instrucciones



MODELOS LT7

IB-14280

16PG019887

Para registrar su producto, visítenos en:
www.conair.com/registration

©2016 Conair Corporation
Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307