

Tonal Fits快速指引

尺寸: 74.8*74.8mm

4

Reset

If you accidentally get only one earbud work, or fails to pair each other, please reset it:

1. Turn off the bluetooth of the device. Put both of the earbuds into the charging case and close the lid for a few seconds.
2. Take them out of the charging case, and the white indicator light of the earbuds will blink slowly. Then double click the touch panel on both sides at the same time, and the indicator light will blink swiftly for about 3 seconds and then turn to slow blink which shows the resetting complete. Then turn on the bluetooth of the device and connect earbuds again.
3. If the fault persists, please perform the preceding steps again.

A few seconds

X2




5

Charging

Place the case upright on the wireless charger. (Wireless charging pad not included)
Or charge the case via USB-C connector. (USB-C cable included)



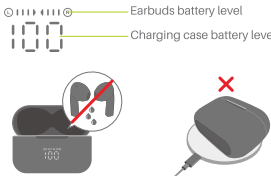



Don't put wet earbuds into the charging case, fully dry off the earbuds before charging.


Don't place the case face up or face down.


Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories, please visit: www.tozostore.com
For any assistance please contact Email: info@tozostore.com

FC RoHS CE       

TOZO®

www.tozostore.com

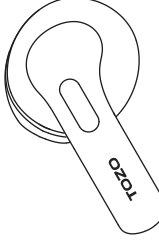

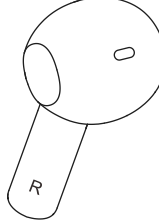

Tonal Fits

Quick Guide

1

Bluetooth Pairing and Wearing



Bluetooth Pairing

1. When open the charging box, they will turn on and link to each other automatically.
2. Take out earbuds from charging box, left and right white light flashes synchronously.
3. Search for the name of earbuds[TOZO Tonal Fits] and select it on your phone.



Wearing

In order to obtain a better wearing effect, the wearing angle can be adjusted appropriately after wearing, so that the earbuds slightly pushed into the ear canal.





Touch panel

2

Smart Touch Control

EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once X2: Press twice X3: Press three times Hold: Press and hold for 3 seconds

X2



Previous song | 前の曲 | Vorheriges lied | Chanson Irécédente | Canzone precedente | Canción anterior | Vorig nummer | Föregående låt

X1



Volume down | 音量を下げる | Lautstärke runter | Baisser le volume | Volume basso | Bajar volumen | Volume vermindern | Sänk volymen

X1



Play/Pause | 再生/一時停止 | Spielen/Pause | Jouer/Pause | Giocare a/Pausa | Tocar/Pausa | Töneelstuk/Pause | Spela/Paus

Hold



Hang up | 電話を切る | Auflegen | Raccrocher | Appendere | Colgar | Ophangen | Lägga på

X3



Activate the voice assistant | 音声アシスタントをアクティブにする | Aktivieren Sie den Sprachassistenten | Activer l'assistant vocal | Attiva l'assistente vocale | Activar el asistente de voz | Activeer de stemassistent | Aktivera röstassistenten

X2



Next song | 次の曲 | Nächstes lied | Chanson prochaine | Canzone prossima | Canción siguiente | Volgende nummer | Nästa låt

Hold



Volume up | 音量を上げる | Lauter | Monter le son | Alza il volume | Sube el volumen | Volume omhoog | Höj volymen

X1



Answer | 答え | Antworten | Réponse | Rispondere | Responder | Antwoorden | Svar

Hold



Reject | 拒絶 | Ablehnen | Rejeter | Rifutare | Rechazar | Afwijzen | Avvisa

3

Power on/off



Power on



Power off

EN

Power on : Take earbuds out from charging case; or press and hold 3S.
Power off : Place the earbuds back into the charging case; or hold L or R for 8S when not playing media.

DE

Ein : Nehmen Sie die Ohrhörer aus dem Ladekoffer; oder 3 Sekunden gedrückt halten.
Ausschalten : Legen Sie die Ohrhörer wieder in das Ladeetui; oder halten Sie L oder R 8 Sekunden lang gedrückt.

IT

Accensione : Estrarre gli auricolari dalla custodia di ricarica; oppure teneri premuto per 3 secondi.
Spegni : Riposizionare gli auricolari nella custodia di ricarica; oppure teneri premuto L o R per 8 secondi.

NL

Aanzetten : Haal de oordopjes uit de oplaadcase; of houd 3 seconden ingedrukt.
Uitschakelen : Plaats de oordopjes terug in de oplaadcassette; of houd L of R 8 seconden vast.

JP

電源オン : 充電ケースからイヤフォンを取り出します、3つのセンソンドを押し続けます。
電源を切る : イヤホンを充電ケースに戻すか、L または R を8秒間押し続けます。

FR

Allumer : Sortez les écouteurs de l'étui de chargement; ou appuyez et maintenez 3 secondes.
Eteindre : Remettez les écouteurs dans l'étui de chargement; ou maintenez L ou R pendant 8 secondes.

ES

Encendido : Saque los auriculares del estuche de carga; o mantenga presionado 3 segundos.
Apagado : Vuelva a colocar los auriculares en el estuche de carga; o mantenga presionado L o R durante 8 segundos.

SE

Ström på : Ta ut öronsnäckorna från laddningsfodralet; eller tryck och håll ned 3 sekunder.
Stäng av : Sätt tillbaka öronsnäckorna i laddningsfodralet; eller håll L eller R 8 sekunder.