


QUICK SETUP GUIDE

Xbox[®] One Battery Charging Station

NS-GXBOBCS101 / NS-GXBOBCS101-C / NS-GXBOBCS101-C2

PACKAGE CONTENTS

- Xbox One battery charging station
- Rechargeable battery packs (2)
- *Quick Setup Guide*

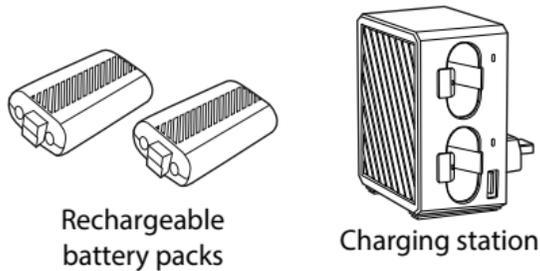


Before using your new product, please read these instructions to prevent any damage.

FEATURES


- Power up to two battery packs simultaneously with dual charging ports
- View charging status at a glance via LED indicators
- Locking mechanism holds battery packs in place
- USB Port with power and data pass-thru
- 100% compatible with standard Xbox One controllers
- Fully UL-certified battery cells

SETTING UP THE BATTERY CHARGING STATION

- 1 Plug the rechargeable battery pack into the charging station. Orient the battery packs with the lighter stripe facing the locking switch. The end with the contacts goes in first. The battery packs automatically lock in when fully seated.

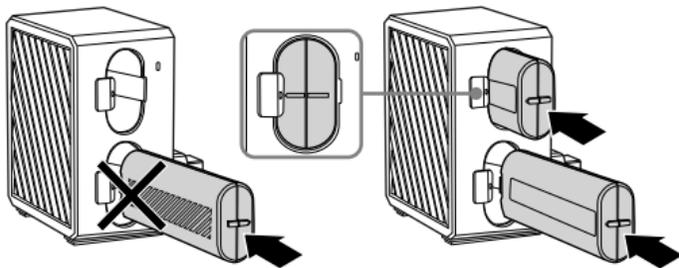


- 2 Plug the charging station into one of the open USB ports on the Xbox One console.

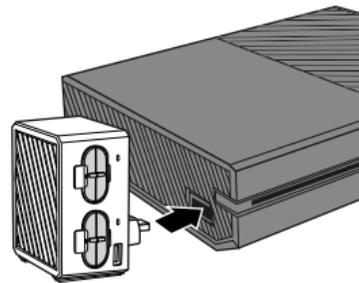


- Status light information:

STATUS LIGHT	DESCRIPTION
Amber	Charging
White	Fully charged

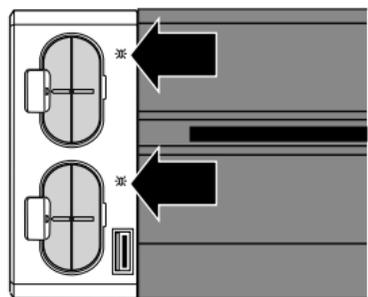


- 3 When the battery pack is fully charged, pull the locking switch to the left to unlock. The battery automatically pops out.

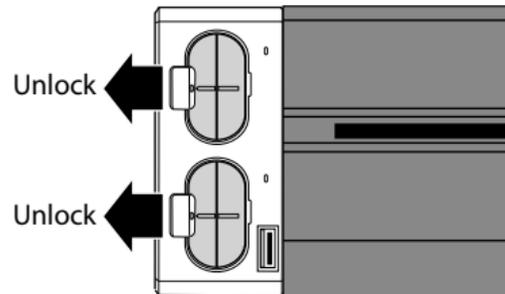

SETTING UP THE RECHARGEABLE BATTERY PACK

- Open the battery cover and insert the rechargeable battery pack into the battery compartment as shown below. The contacts should be facing left and the darker stripe should be facing outward. Close the battery cover.

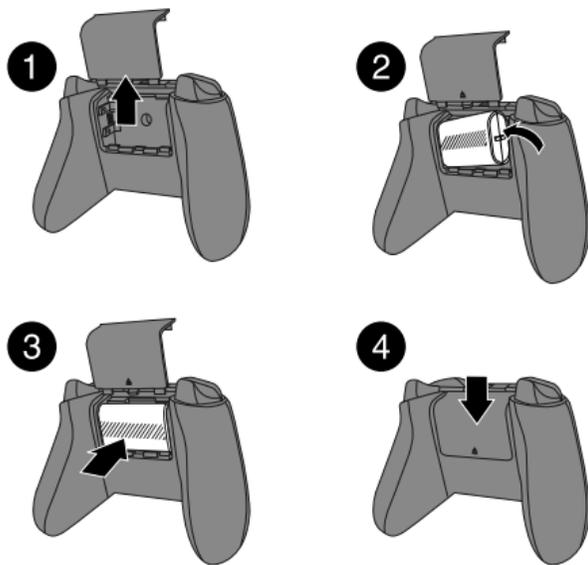

SPECIFICATIONS

External dimensions: charge station (W×H×D)	Approx. 3.14 × 2.75 × 2.51 in. (8 × 7 × 6.4 cm.)
Battery capacity	1200mAh
Battery type	Ni-MH LSD battery
External dimensions: battery (W×H×D)	Approx. 1.96 × 1.18 × .59 in. (5 × 3 × 1.5 cm.)
Operating temperature	32°F~104°F (0°C~40°C)

SAFETY INFORMATION/CAUTION

Incorrect battery use may result in battery leakage, overheating, or explosion. When using batteries, make sure that you follow these instructions:

- Keep batteries out of the reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water or remove the clothing immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Do not allow metal objects to touch the battery terminals, because they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.

- Remove the battery when the product will not be used for an extended period of time.

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-003 Statement

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com

Microsoft and Xbox One are registered trademarks of the Microsoft group of companies.

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China