


INSIGNIA™

60" Espresso TV Stand

NS-HF2003

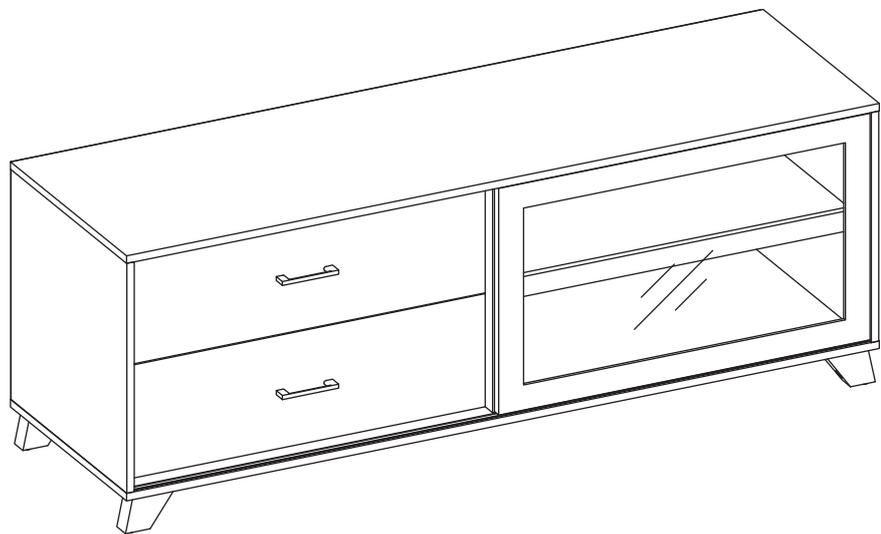

Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	3
IMPORTANT SAFETY INSTRUCTIONS	3
Features	3
Dimensions	3
Tools needed	4
Package contents	4
Stand parts	4
Stand hardware	5
Anti-tip safety kit	5
Pre-assembled hardware	5
Installation tips	6
Installing dowels	6
Installing cam locks and cam screws	6
Assembly instructions	7
STEP 1 - Install the dowels and cam screws	7
STEP 2 - Assemble the left side and middle panels	9
STEP 3 - Attach the right side and bottom panels	10
STEP 4 - Attach the feet	11
STEP 5 - Attach the top panel	12
STEP 6 - Attach the back panel	13
STEP 7 - Attach the trim to the shelf	14
STEP 8 - Assemble the drawers	15
STEP 9 - Insert the drawers and shelf	18
STEP 10 - Attach the door	20
Anti-tip safety strap installation instructions	21
ONE-YEAR LIMITED WARRANTY	22

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-HF2003 represents the state of the art in TV stand design and is designed for reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these installation instructions or any other abuse, mistreatment, unreasonable use, or neglect of the product shall constitute a waiver of all warranties, expressed and implied, and constitute a waiver of all claims of liability (including loss of revenue or income, pain and suffering, emotional distress, or similar damages), incidental, punitive, or consequential damages arising out of or resulting from the improper installation, abuse, mistreatment, unreasonable use, or neglect regardless of whether such damages arise in contract, tort, under statute, in equity, at law, or otherwise.

WARNING: THIS PRODUCT IS INTENDED TO HOLD THE MAXIMUM WEIGHT (EVENLY DISTRIBUTED) INDICATED. EXCEEDING THE MAXIMUM WEIGHT WILL RESULT IN INSTABILITY AND MAY CAUSE POSSIBLE INJURY.

WARNINGS:


- The weight of your TV must not exceed 120 lbs. (54.4 kg).
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

SAVE THESE INSTRUCTIONS

Features

- Supports TVs up to 65" (165.1 cm) and 120 lbs. (54.4 kg)
- Rich dark espresso finish fits your décor
- Two drawers for hiding movies, games, remotes, and more
- Sliding glass door lets you operate AV devices remotely
- Adjustable shelf accommodates most equipment
- Cord cutout provides easy cable routing

Dimensions

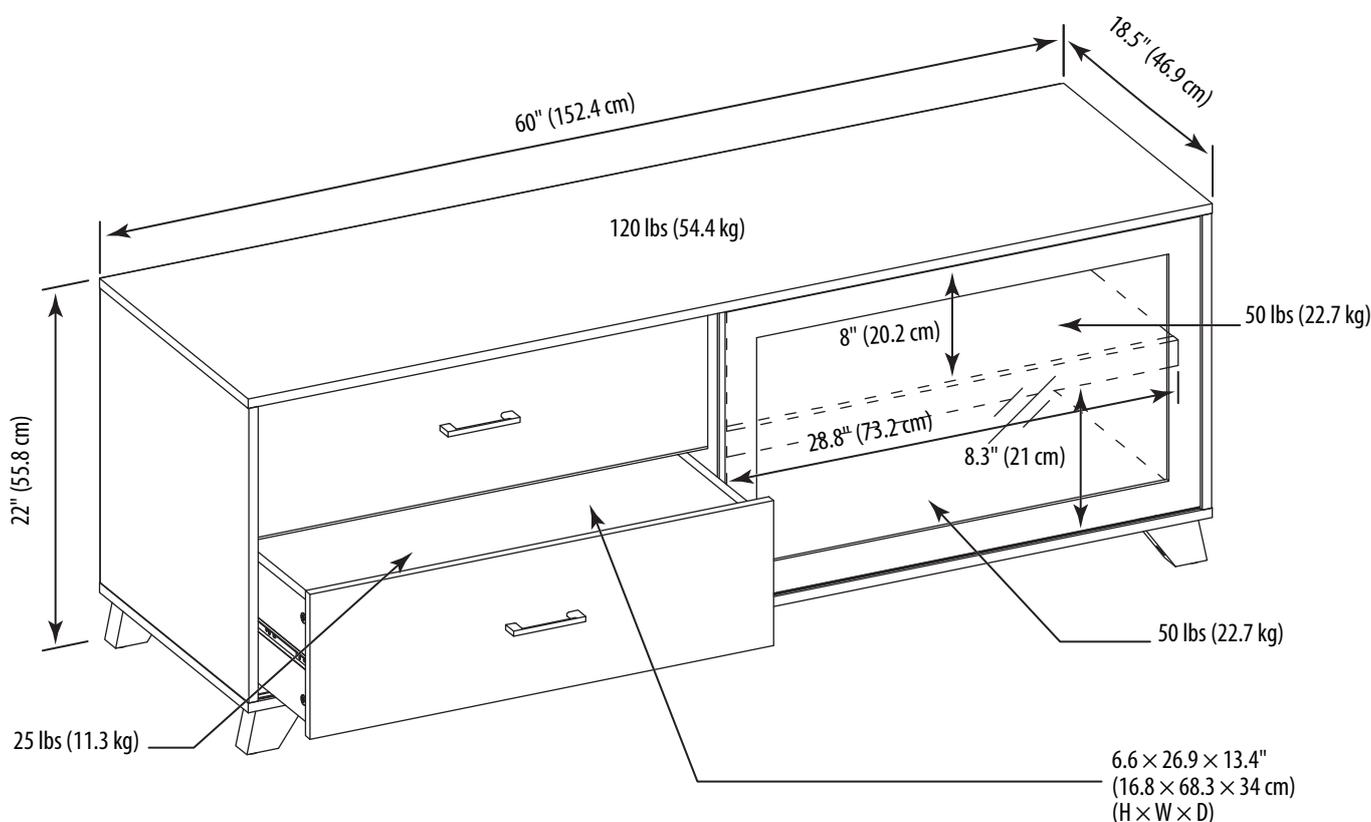


Tools needed

You need the following tools to assemble your new TV stand:



 Phillips screwdriver



Flathead screwdriver




Rubber mallet


Package contents

Make sure that you have all the parts and hardware necessary to assemble your new TV stand.


Stand parts

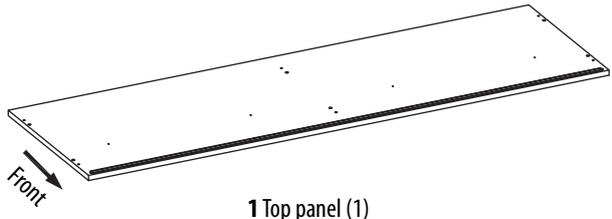


1 Top panel (1)

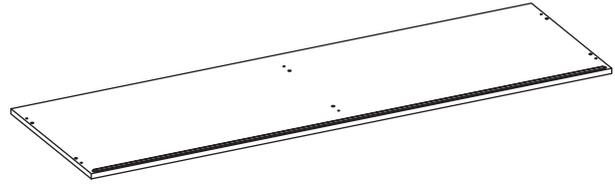


2 Bottom panel (1)

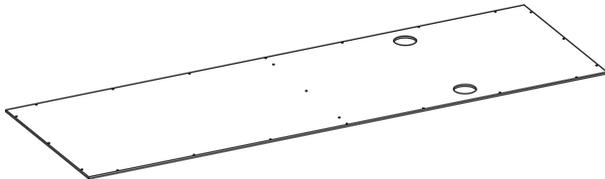

3 Back panel (1)

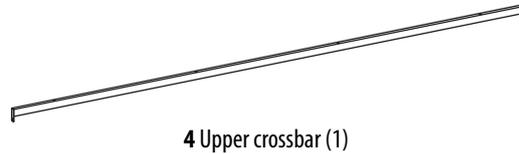

4 Upper crossbar (1)

 


5 Middle crossbar (1)



6 Left side panel (1)



 7 Middle panel (1)



8 Right side panel (1)



 
9 Side foot (4)



10 Middle foot (1)



11 Front trim (1)




12 Adjustable shelf (1)




13 Back drawer panel (2)



 
14 Left drawer panel (2)




15 Right drawer panel (2)

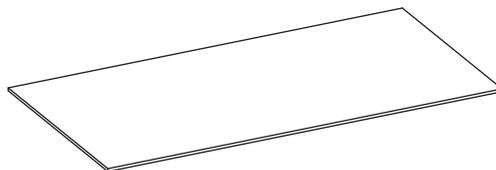


16 Bottom drawer panel (2)

 

17 Bottom drawer support (2)

 



18 Front drawer panel (2)


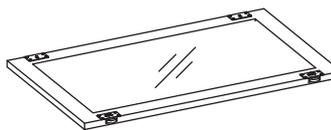


19 Door (1)

Stand hardware

  Note: You may not use all the included hardware.

LABEL	HARDWARE	QTY.
A	 Glue	1
B	 Large wood dowel (WD830)	16
C	 Cam screw (CSST8833BL)	21
D	 Large cam lock (CL1512BL)	11
E	 Small wood dowel (WD630)	6
F	 Small cam lock (CL1410BL)	10
G	 Wood screw 3.5 × 12 × 6 mm (RHWS35126BL)	2
H	 Wood screw 4 × 50 × 8 mm (FHWS4508BL)	6

  LABEL	HARDWARE	QTY.
I	 Wood screw 4 × 32 × 8 mm (FHWS4328BL)	16
J	 Allen bolt 6 × 50 × 10 mm (AB65010BL)	8
K	 Allen wrench	1
L	 Wood screw 3 × 16 × 8 mm (RHWS3168BL)	23
M	 Wire management strip	2
N	 Handle	2
O	 Machine screw 4 × 21 × 8 mm (MS4218BL)	4
P	 Shelf pin	4

Anti-tip safety kit


WA	 Wood Screw 4 × 32 × 8 mm (RHWS4328BL)	2
WB	 Plastic socket	2

WC	 Mounting tab	4
WD	 Plastic mounting strap	2

Pre-assembled hardware

These parts are pre-assembled and attached to other parts. They are shown here for reference only.

ZA	 Roller	2
ZB	 Latch	2
ZC	 Wood screw 3.5 × 12 × 6 mm (FHWS35126BL)	16

 
ZD	 Drawer glides (2 pieces per set)	4 sets
ZE	 Floor leveler	5
ZF	 Wood screw 3.5 × 12 × 6 mm (RHWS35126BL)	24

Installation tips

Installing dowels

CAUTION: Make sure that you use glue with the dowels. The glue helps stabilize your TV stand and keeps it from coming apart.


- 1 Put a drop of glue (**A**) in the dowel hole, then insert about 2/3 of the dowel (**B** or **E**) into the hole. You can tap the dowel with a rubber mallet, if necessary.
- 2 After the dowel is installed, wipe off the excess glue with a damp cloth.

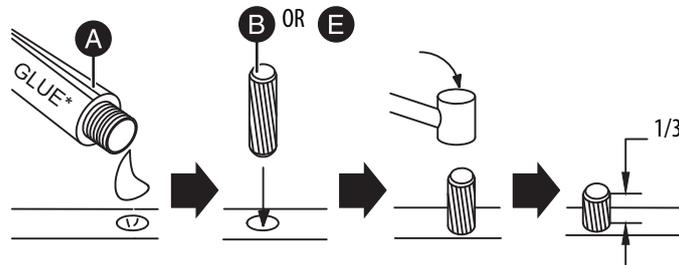


Installing cam locks and cam screws

One end of a cam screw (**C**) is threaded, the other end is not. The un-threaded end locks into a cam lock (**D** or **F**).

- 1 Screw the threaded end of the cam screw (**C**) into the cam screw hole.
- 2 Insert a cam lock (**D** or **F**) into a cam lock hole. Make sure that the open end in the cam lock faces toward the cam screw hole.
- 3 Insert the un-threaded end of a cam screw (**C**) into the opening in the cam lock.

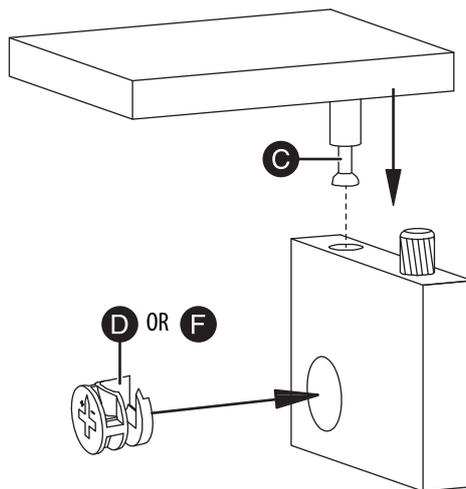

- 4 Use a flat blade screwdriver to turn the cam lock clockwise until the arrow and the + and - symbols point away from the connected panel.

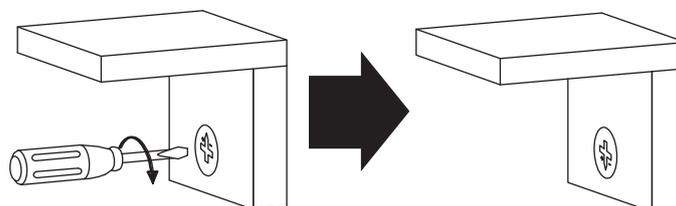

CAUTIONS:

- Do not use an automatic screwdriver to tighten the cam locks.
- Do not over-tighten the cam locks.

Assembly instructions

 
WARNING: You need two people to assemble your TV stand.

STEP 1 - Install the dowels and cam screws.

You'll need



A Glue (1)



B Large wood dowel (16)



C Cam screw (21)




E Small wood dowel (6)




Rubber mallet

- 1 Put a drop of glue in each dowel hole, then insert about 2/3 of each dowel (**B** or **E**) into the hole. Use a rubber mallet, if needed. Install the dowels (as shown). For more information see [Installing dowels](#) on page 6.
- 2 Screw the cam screws (**C**) into the cam screw holes (as shown). For more information, see [Installing cam locks and cam screws](#) on page 6.


Top panel (1)

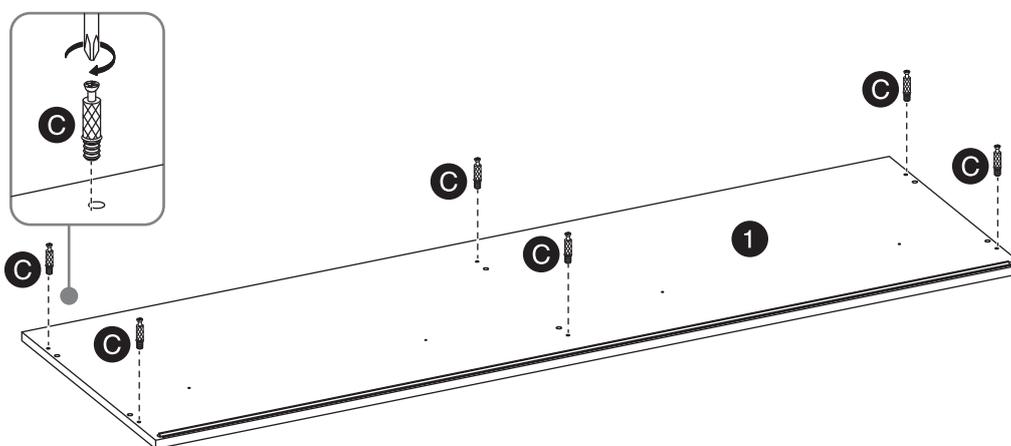


Middle crossbar (5)

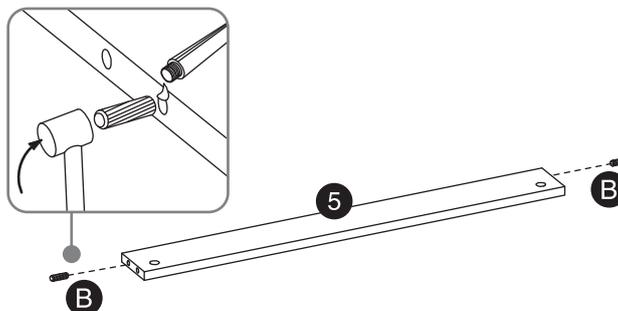


Left side panel (6)

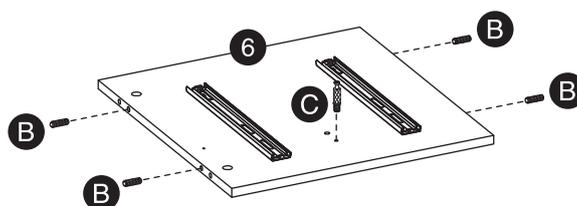


Middle panel (7)

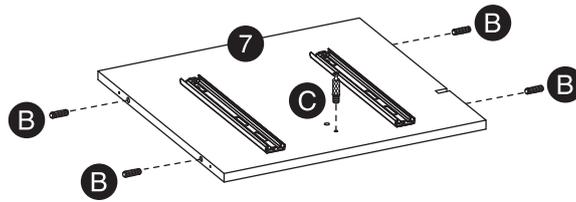

Right side panel (8)

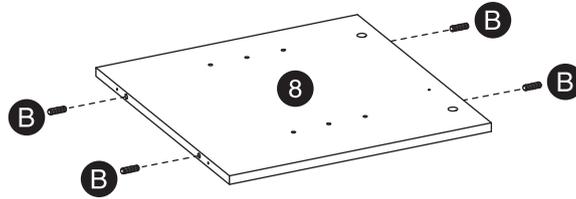



Front trim (11) and adjustable shelf (12)

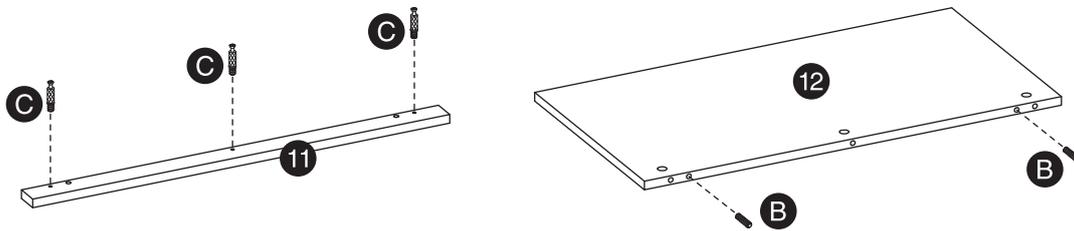


Left drawer panel (14), right drawer panel (15), bottom drawer support (17), and front drawer panel (18)

Note: You need to insert dowels into two of each part shown.

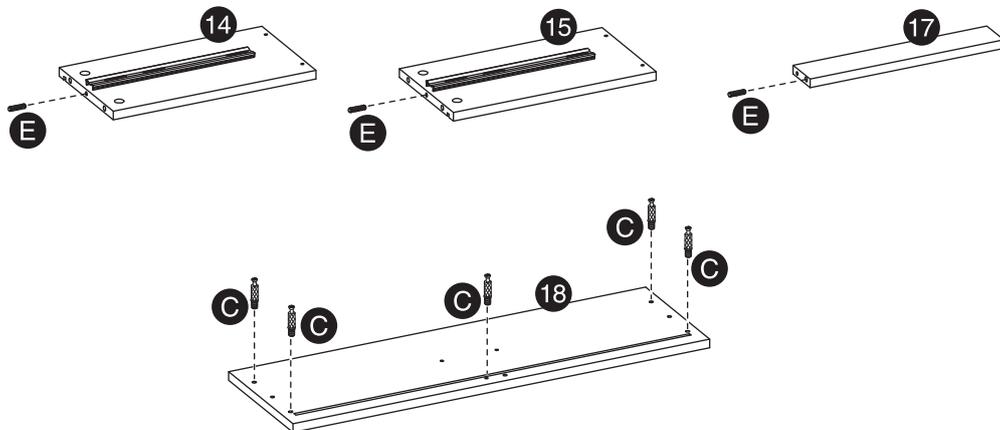

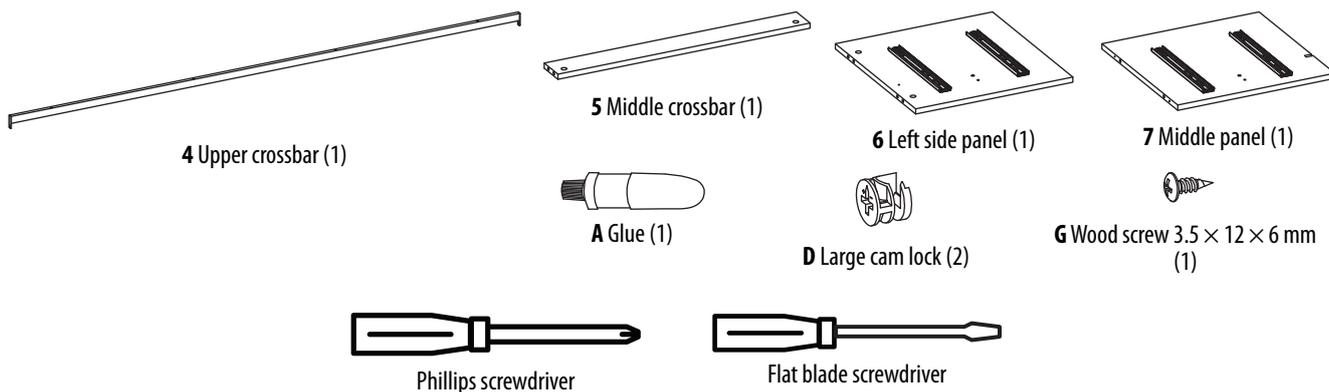
STEP 2 - Assemble the left side and middle panels.**You'll need**

- 1 Insert two large cam locks (**D**) into the cam lock holes on the ends the middle crossbar (**5**). Make sure that the openings on the cam locks face the cam screw holes.
- 2 Put a drop of glue into each dowel hole on the left side panel (**6**) and middle panel (**7**).
- 3 Insert the dowels and cam screws on the ends of the middle crossbar into the holes in the left side panel and middle panel.
- 4 Tighten the cam locks in the middle crossbar.
- 5 Secure the upper crossbar (**4**) to the left side panel with one wood screw 3.5 × 12 × 6 mm (**G**).

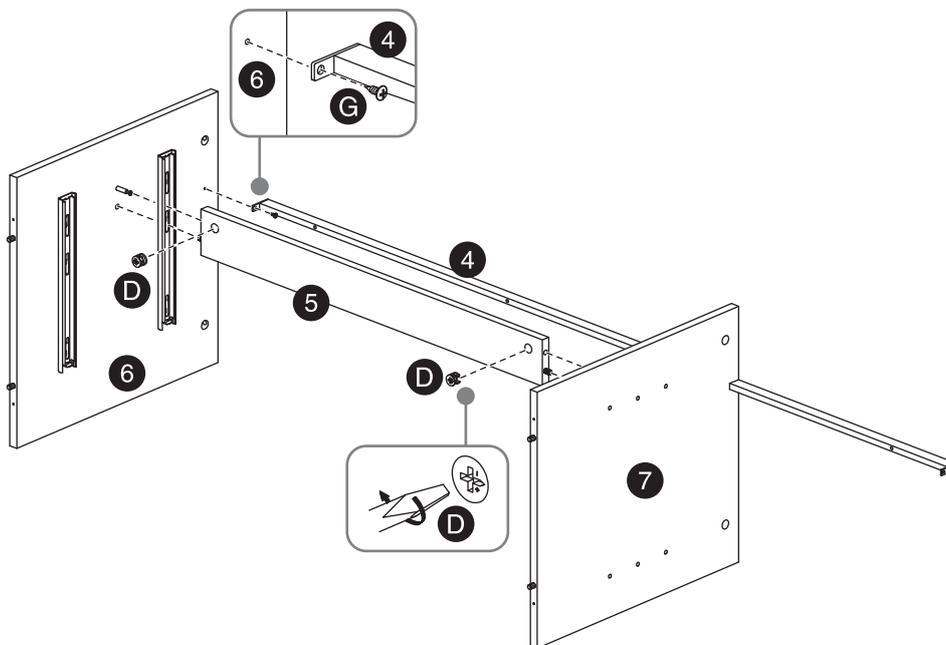


STEP 3 - Attach the right side and bottom panels.


You'll need

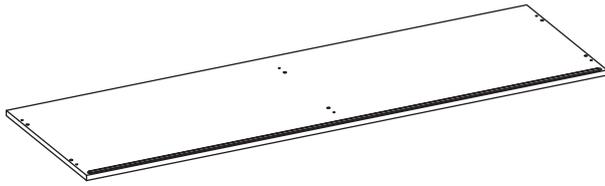

2 Bottom panel (1)

 

8 Right side panel (1)

 


A Glue (1)



G Wood screw
3.5 × 12 × 6 mm (1)



 H Wood screw
4 × 50 × 8 mm (6)





Phillips screwdriver




Flat blade screwdriver



 
- 1 Secure the upper crossbar (**4**) to the right side panel with one wood screw 3.5 × 12 × 6 mm (**G**).
- 2 Put a drop of glue into each dowel hole on the left side panel (**6**), middle panel (**7**), and right side panel (**8**).
- 3 Make sure that the rail on the bottom panel (**2**) is facing the front of your stand, then insert the dowels on the left, middle, and right panels into the bottom panel.
- 4 Secure the bottom panel to the left, middle, and right panels with six wood screws 4 × 50 × 8 mm (**H**).

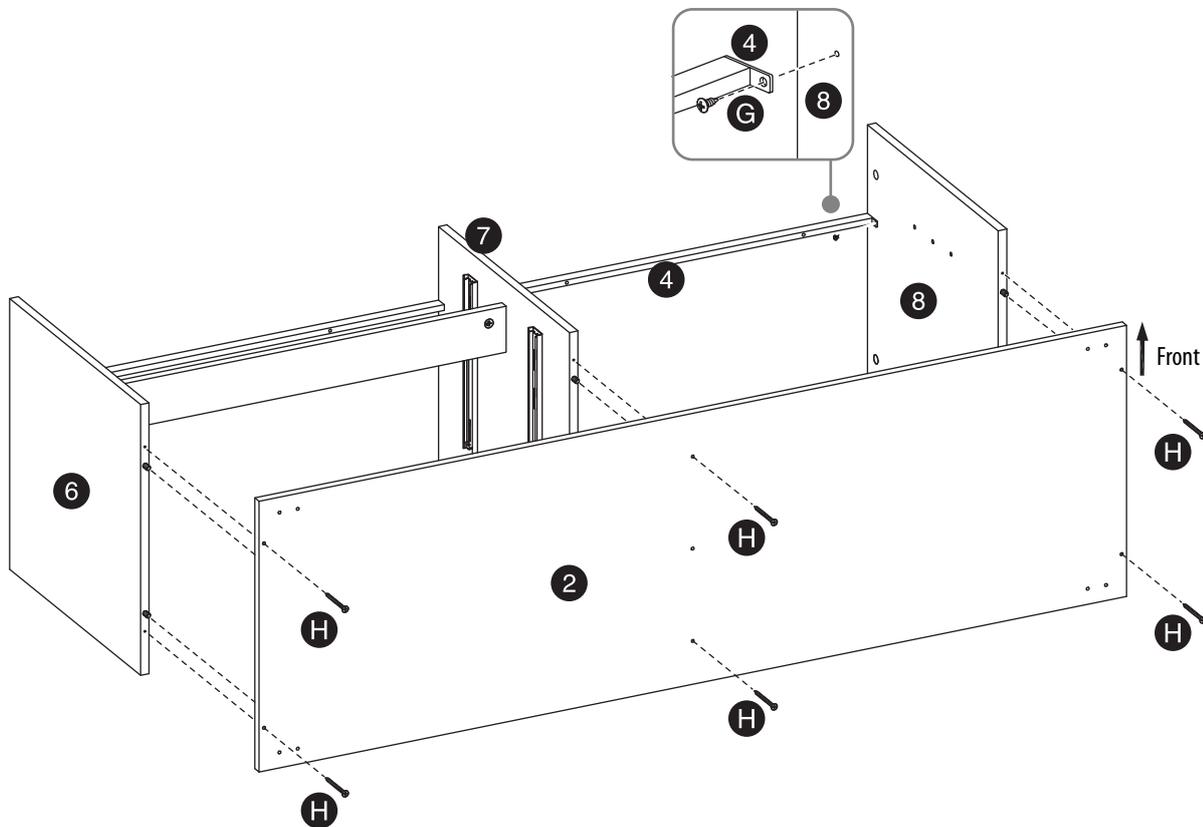

STEP 4 - Attach the feet.**You'll need**

  - 1 Carefully turn your stand on its side with the bottom panel (2) facing you.
- 2 Screw the middle foot (10) into the hole in the center of the bottom panel.
- 3 Align the four side feet (9) with the holes on each corner of the bottom panel. Make sure that the angled sides of the feet face inward.
- 4 Insert two Allen bolts 6 × 50 × 10 mm (J) through each foot and the bottom panel and into your stand. Tighten the screws with the Allen wrench (K).

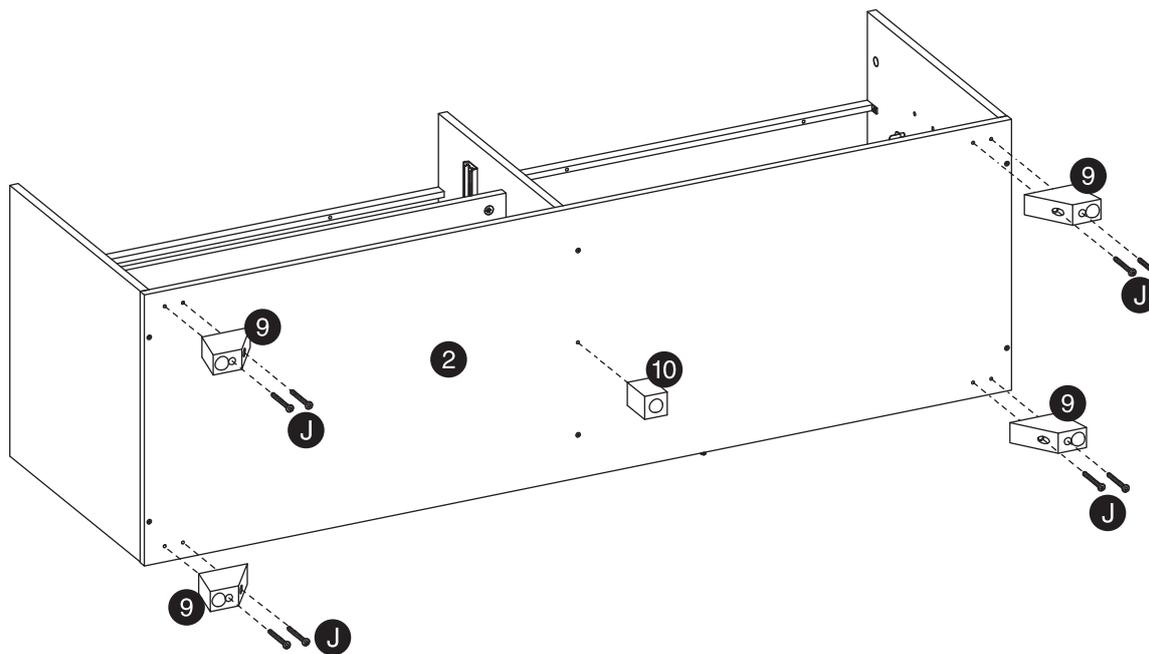

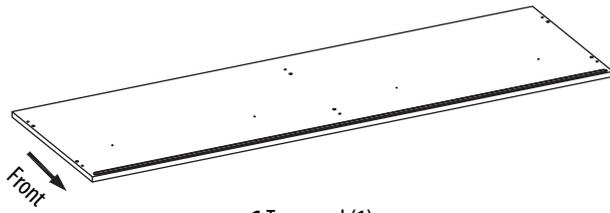
STEP 5 - Attach the top panel.**You'll need****1** Top panel (1)**A** Glue (1)**D** Large cam lock (6)**I** Wood screw
4 × 32 × 8 mm (4)


Flat blade screwdriver



Phillips screwdriver


- 1 Carefully turn your stand upright.
- 2 Insert six large cam locks (**D**) into the cam lock holes in the left, right, and middle panels. Make sure that the openings on the cam locks face the cam screw holes.
- 3 Put a drop of glue in the six dowel holes on the top panel (**1**).
- 4 Place the top panel on the left (**6**), right (**8**), and middle (**7**) panels so that the dowels and cam screws align.
- 5 Tighten the cam locks.
- 6 Secure the top panel to the upper crossbar (**4**) with four wood screws (**I**)

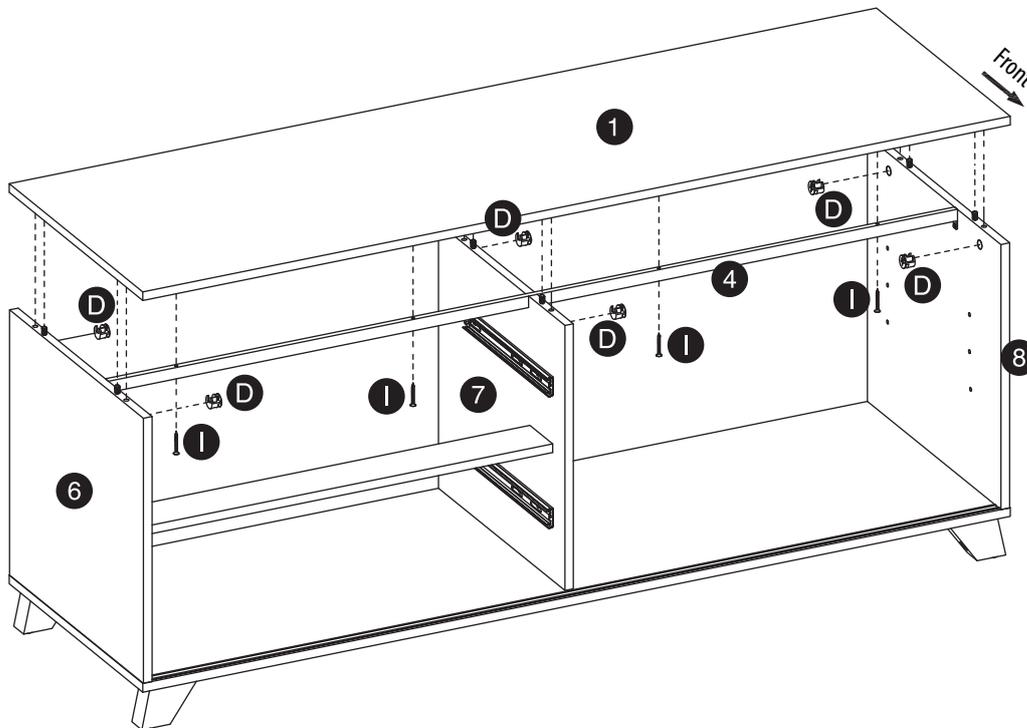

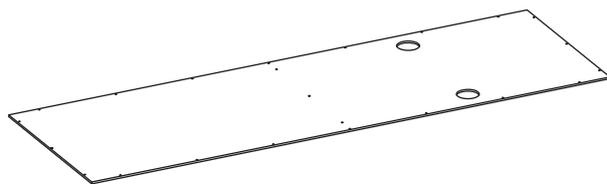STEP 6 - Attach the back panel.**You'll need****3** Back panel (1)


Phillips screwdriver


 
L Wood screw 3 × 16 × 8 mm
(23)

**M** Wire management strip (2)

WC Mounting tabs (2)
Note: WC is part of the
Anti-Tip Safety Kit

 
- 1 Align the screws on the back panel (**3**) with the screw holes on the back of your stand.
- 2 Align two mounting tabs (**WC**) with the holes on the top of each corner of the back panel as shown.
- 3 Insert two wood screws 3 × 16 × 8 mm (**L**) through the mounting tabs and into the back of your stand. Tighten the screws.
- 4 Align two wire management strips (**M**) horizontally with the center holes on the back panel as shown.
- 5 Insert two wood screws 3 × 16 × 8 mm (**L**) through the wire management strips and into the back of your stand. Tighten the screws.
- 6 Secure the back panel to your stand with 19 wood screws 3 × 16 × 8 mm (**L**).

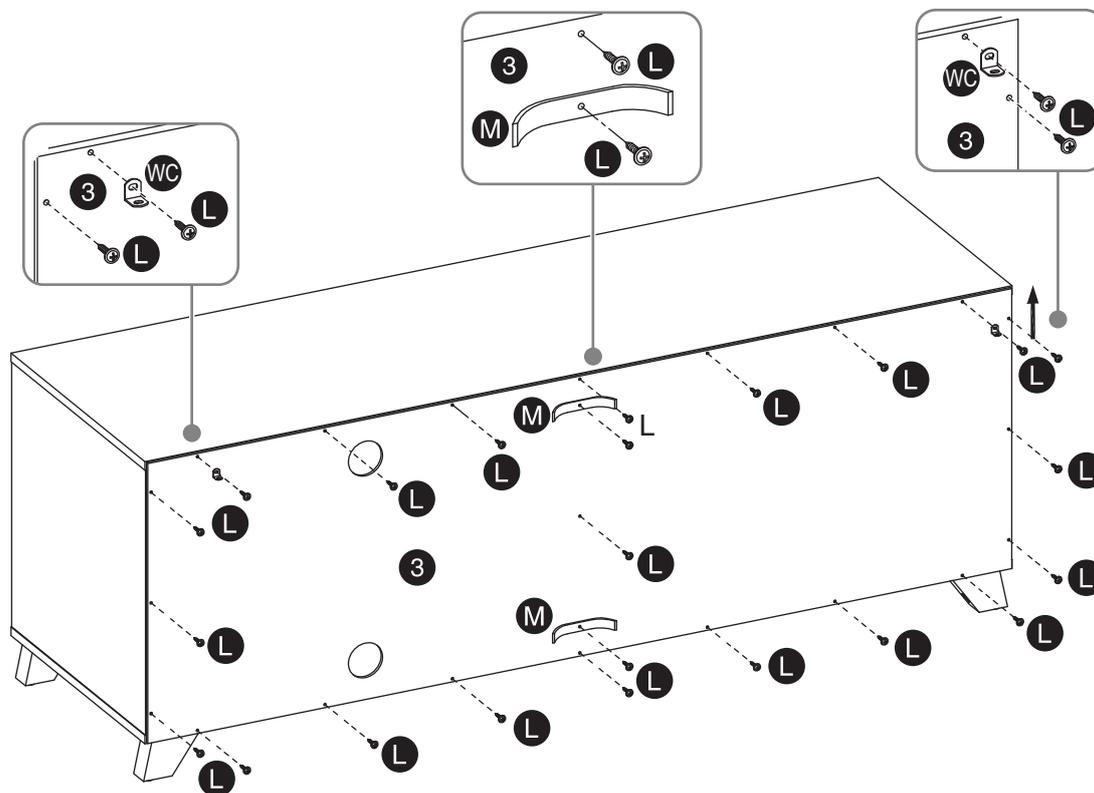


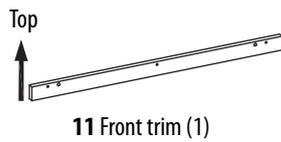STEP 7 - Attach the trim to the shelf.**You'll need**



Flat blade screwdriver

- 1 With the adjustable shelf (12) face down, insert three cam locks (D). Make sure that the openings on the cam locks face the cam screw holes.
- 2 Put a drop of glue in the three dowel holes on the front trim (11).
- 3 Press the shelf and trim together, then tighten the cam locks.

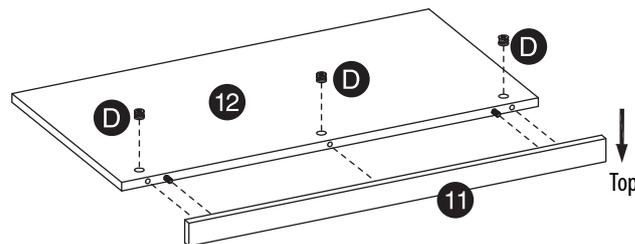

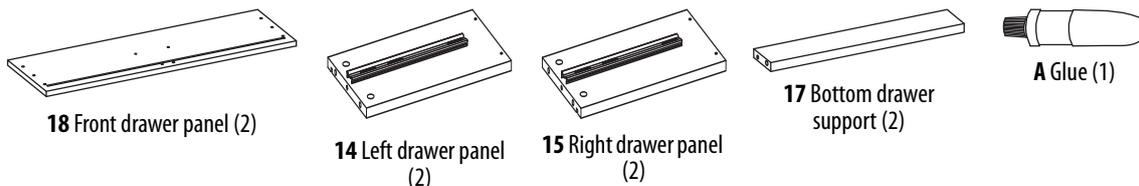
STEP 8 - Assemble the drawers.*Assembling the sides, drawer support, and front panels.***You'll need**



- 1 Place the drawer front (18) face down.
- 2 Put a drop of glue in the three dowel holes on the front panel.
- 3 Make sure that the rails on the side panels face out, then align the dowels and cam holes on the left and right side panels (14 and 15) with the cam screws on the left and right edges of front panel. Press the side panels and front panel together.
- 4 Align the dowel on the bottom drawer support (17) with the cam hole in the back edge of the front panel, then press the parts together.
- 5 Repeat this step on the other drawer.

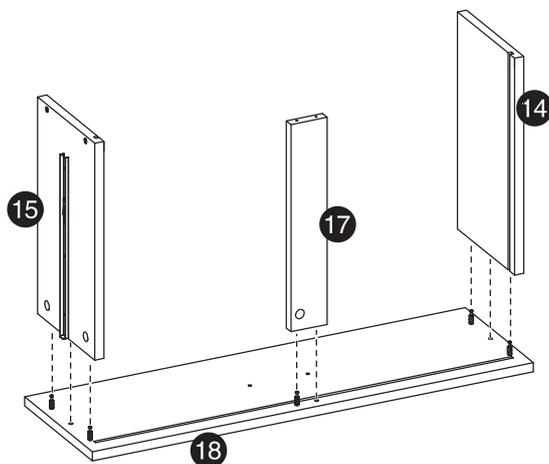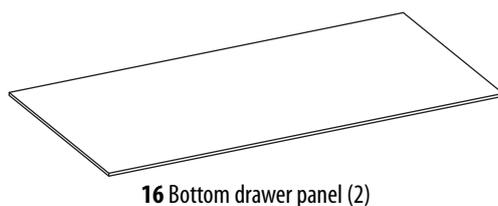*Attaching the bottom drawer panel.***You'll need**



- 1 Slide the bottom drawer panel (16) into the grooves on the left drawer panel (14), right drawer panel (15), and front drawer panel (18).

 2 Repeat this step on the other drawer.

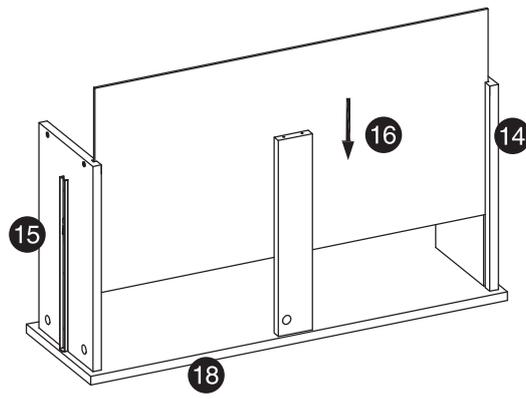


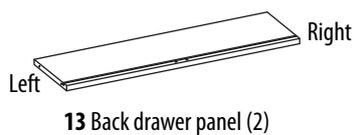Attaching the back drawer panels.**You'll need**

 - 1 Align the back drawer panel (13) with the drawer side panels (14 and 15) and bottom drawer support (17).
- 2 Secure the back drawer panel to the side panels and drawer support using six 4 x 32 x 8 mm screws (I).
- 3 Insert small cam locks (F) into the cam lock holes on the side panels and drawer support, then tighten the cam locks.
- 4 Repeat this step on the other drawer.

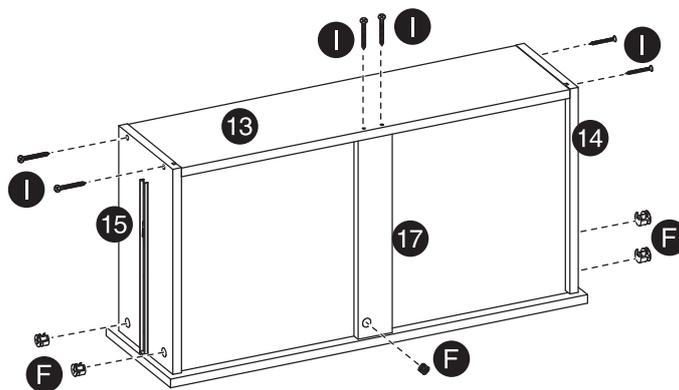
**Attaching the drawer handles.****You'll need**

- 1 Align a handle (N) with the holes in the center of the front drawer panel (18).
- 2 From the inside of the drawer, secure the handle with two machine screws 4 x 21 x 8 mm (O).
- 3 Repeat these steps for the other drawer.

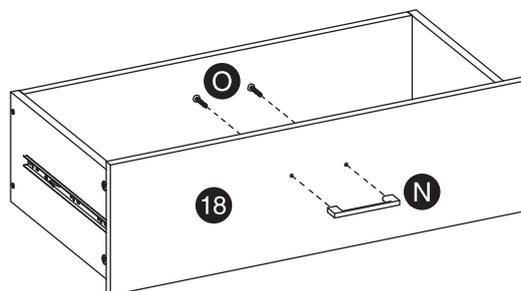


STEP 9 - Insert the drawers and shelf.**Inserting the drawers**


- 1 Slide the ball bearing plates on the left and right drawer side panels to the front of your stand.

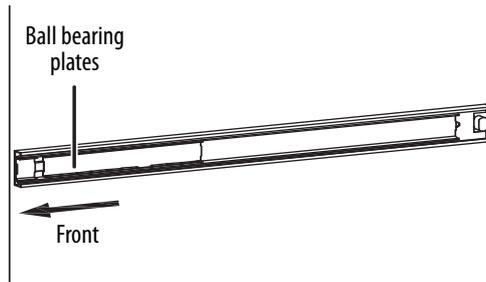


- 2 Align the rails on the drawers with the ball bearing plates, then slide the drawers into your stand.

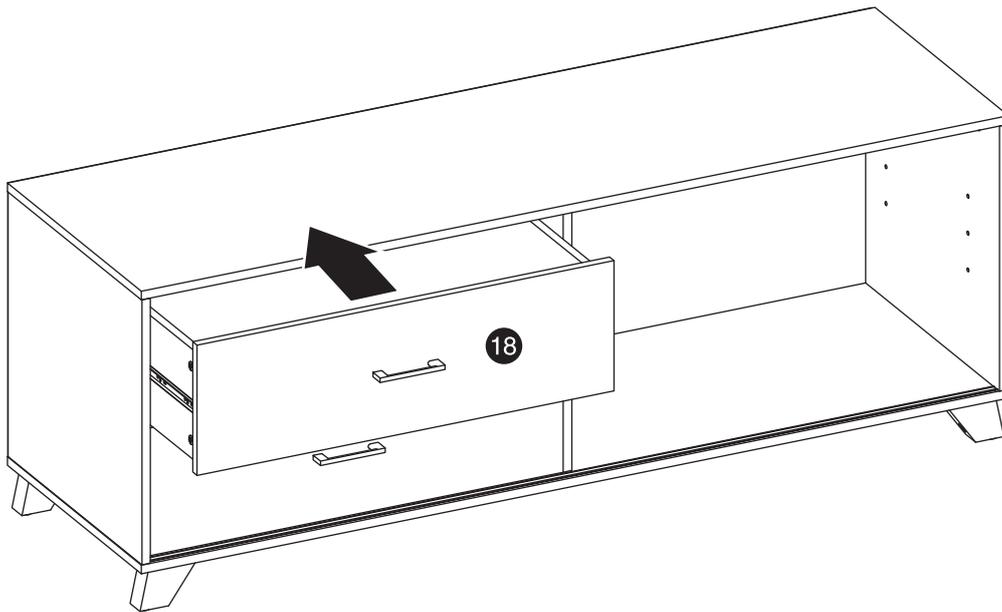**Removing the drawers**

- Pull the drawer out until you can see or feel the black nylon clips on the ball bearing plates, then at the same time, push the right clip down, the left clip up, and pull the drawer out of your stand.

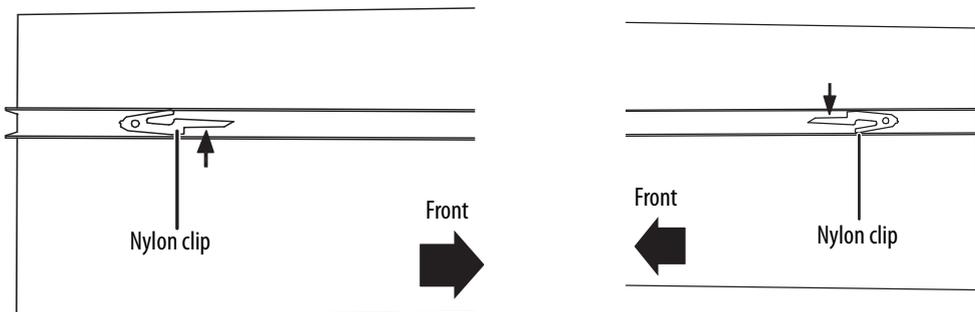

Inserting the shelf You'll need

 


12 Adjustable shelf (1)




P Shelf pin (4)

- 1 Select the level where you want the shelf to sit. You can select from three positions.
- 2 Insert the four shelf pins (P) into the holes inside your stand. Make sure that the pins are on the same level.

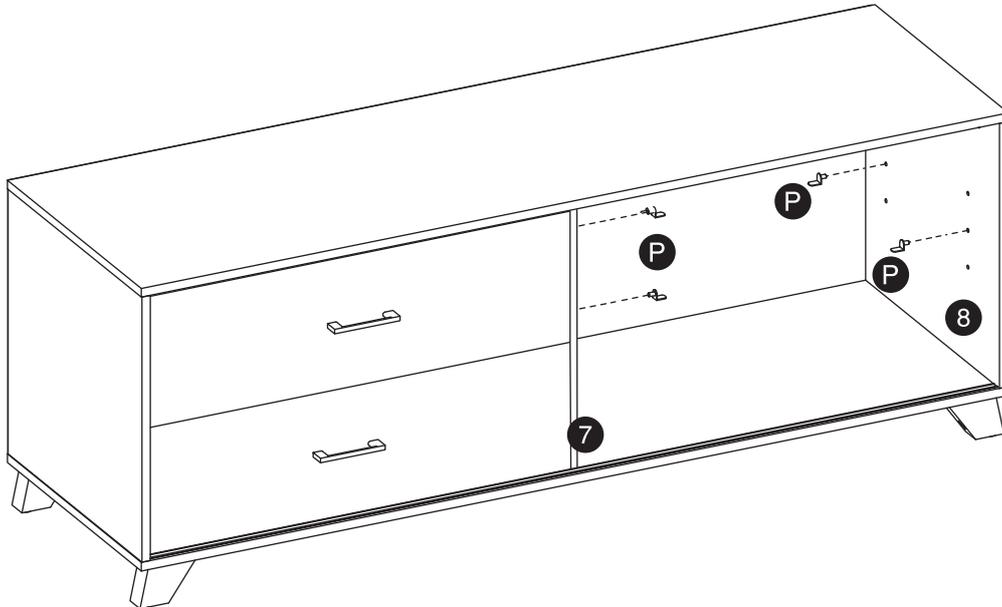


- 3 With the front trim facing you, insert the shelf (12) above the tabs, then lower the shelf onto the tabs.

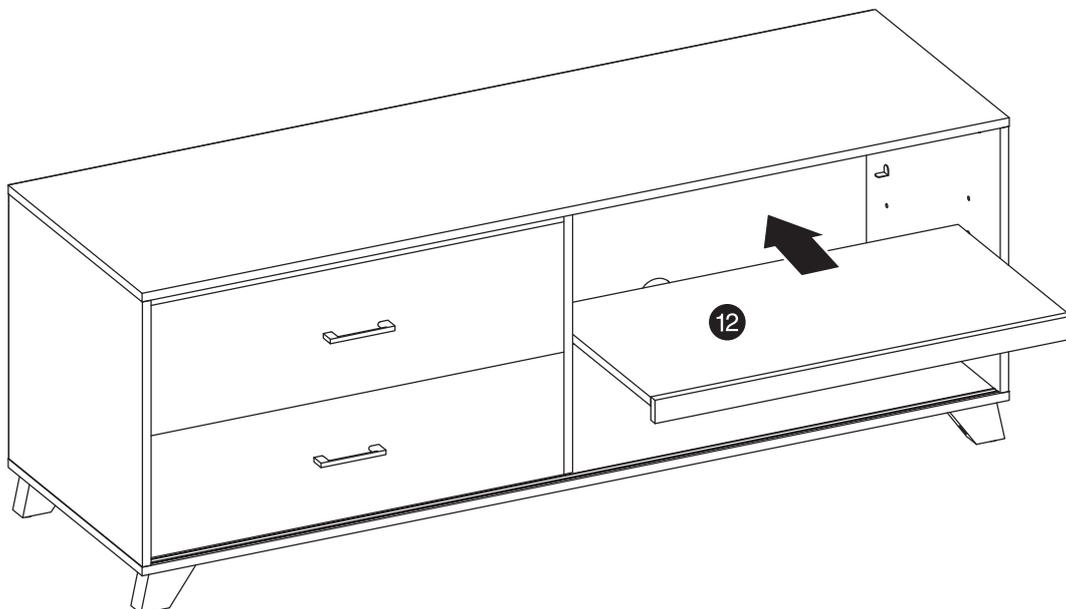

STEP 10 - Attach the door.

You'll need

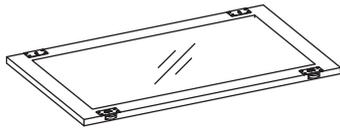

19 Door (1)



Phillips screwdriver

The following parts are pre-installed.




ZA Roller



ZB Latch

- 1 Put the pre-assembled rollers (**ZA**) on the bottom of the door (**19**) into the groove on the bottom panel (**2**).
- 2 Make sure that the latches (**ZB**) are unlocked.
- 3 Insert the latches into the groove on the top of the door (**19**), then push the latch sliders into the locked position.
- 4 Make sure that the door slides freely. If the door does not slide freely, loosen the screws in the center of the rollers, turn the rollers clockwise slightly, then tighten the screws. Test the door movement again.

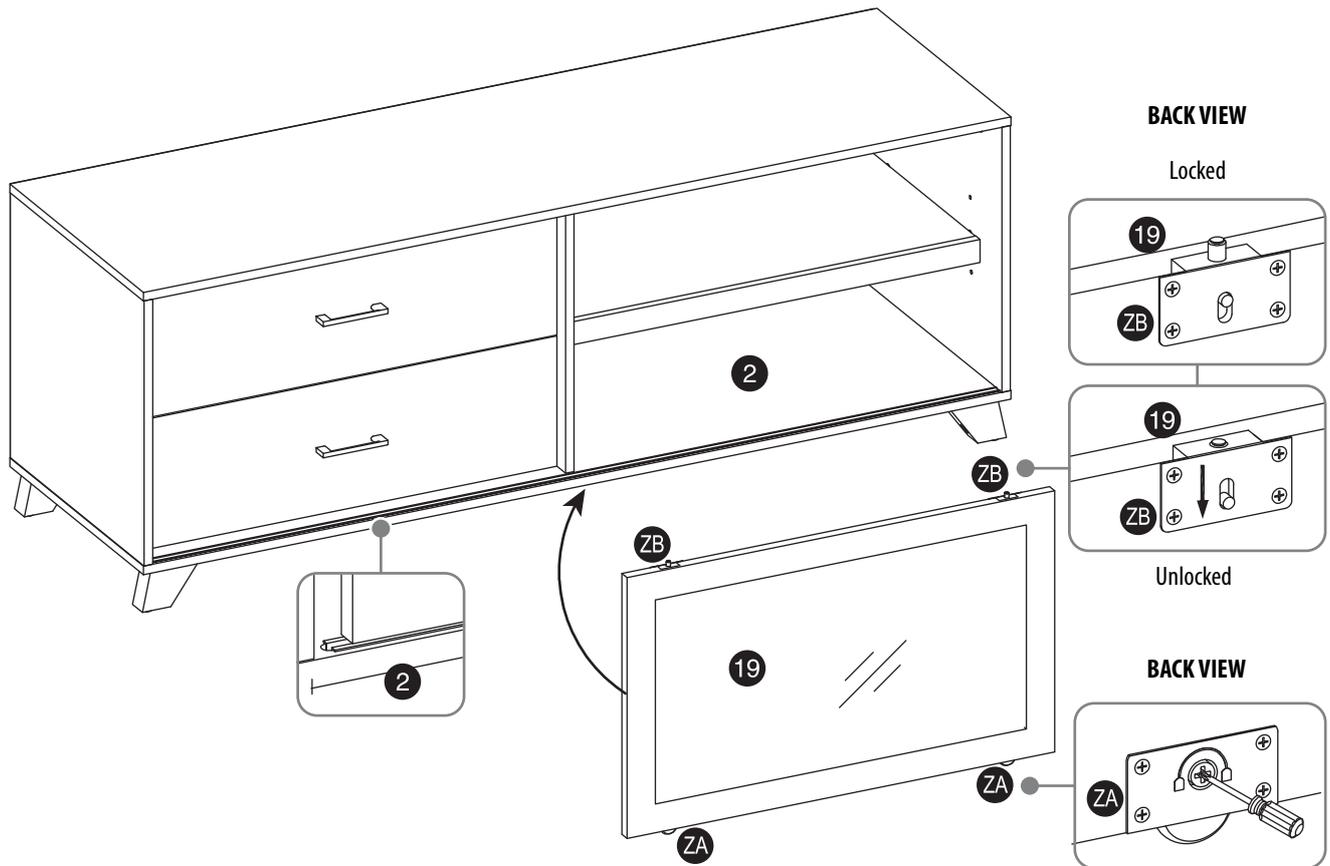

You're done! Clean your stand with a damp cloth, then wipe it dry.

Anti-tip safety strap installation instructions

Note: We recommend that you install the anti-tip strap as a safety precaution.

You'll need

WA Wood screw
4 × 32 × 8 mm (2)

WB Plastic socket
(2)

WC Mounting
tab (2)

WD Plastic mounting
strap (2)

Phillips screwdriver


Rubber mallet

- 1 Use a drill with a 5/16" (8 mm) drill bit to drill two holes in your wall approximately two inches below the position of the mounting tabs on your stand, then insert the plastic sockets (**WB**) into the holes.


Notes:

- You attached the mounting tabs to your stand in [STEP 6 - Attach the back panel](#), on page 13.
- You can use a rubber mallet to lightly tap the sockets into the holes.


- 2 Secure the mounting tabs (**WC**) to the plastic sockets with two of the wood screw 4 × 32 × 8 mm (**WA**).

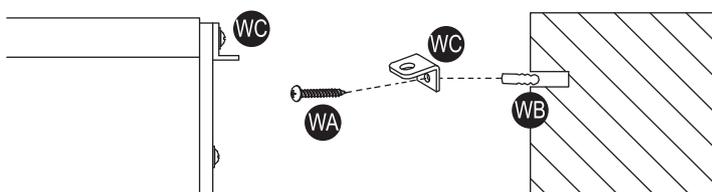

- 3 Thread the plastic mounting straps (**WD**) through the tabs on your stand and on the wall, then thread the straps through the strap holes.

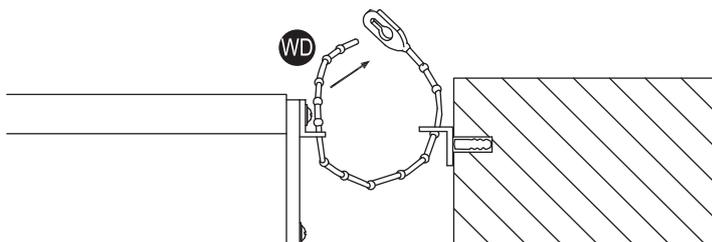

- 4 Pull the straps to tighten them, then thread the straps back through the strap holes to lock them in place.

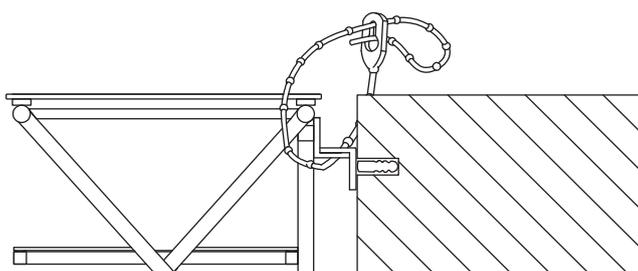

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca, and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Food loss/spoilage due to failure of refrigerator or freezer
- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

INSIGNIA™

For product inquiries, please contact us with the information below:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

V2 ENGLISH
19-0611