

All rights reserved.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.


WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

WARNING: Make sure that no electrical cables, water pipes or gas pipes are located within the wall.

NOTE: We recommend that this product is installed by the professional only. We accept no liability for damages caused by incorrect assembly, installation or use.

(A) M6X50 Screw	X 2		(B) Concrete Anchor	X 2		(C) M4X30 Bolt	x4	
(D) M6X30 Bolt	x4		(E) M8x30 Bolt	x4		(F) M4x20 Bolt	x 4	
(G) M6x20 Bolt	x 4		(H) M8x20 Bolt	X 4		(I) M6 log Bolt Washer	X 6	
(J) Space 17x8.5x14	X 4		(K) Space 20x8.5x6	X 4		(L) M8x8 Bolt	X 4	
(M) M8 Washer	x4		(N) Allen Wrench	x1				

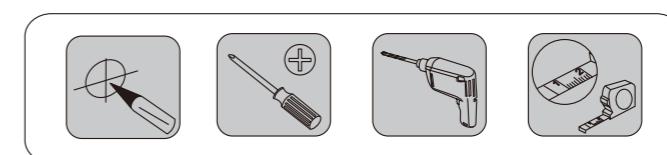

STEP 1

Using ceiling plate (A) as a template, drill 1/4" pilot holes into wood joist. Attach the Ceiling Plate to the ceiling using the Drywall Screws.

IMPORTANT: If you are installing into a concrete ceiling, also use the concrete anchors and make sure that you screw directly into a wooden joist or other adequate support.

STEP 2


Assemble the face plate (D) to the interface bracket plate (E) using four (4) M6 x 12 bolts and washers

STEP 3

Insert Column (C) into Column (B) adjusting length of the pole to achieve the desired height for the TV. Rotate the pole to line up two (2) holes and lock in position with two bolts.

STEP 4

Attach two (2) vertical mount brackets (F) to rear VESA pattern of TV or of Apollo Enclosure.

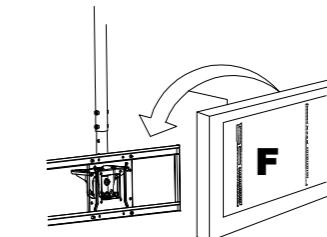


STEP 5

Hang the TV or Apollo Enclosure onto the ceiling mount. Tighten or loosen the tilt knob to obtain the desired tilt and lock in place.


STEP 6

Tighten Screws (A) to secure TV or Apollo Enclosure to interface plate

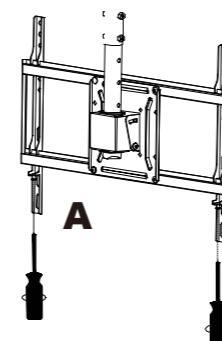

STEP 7

Rotate TV or Apollo Enclosure to desired direction and lock in place with set screw (B)

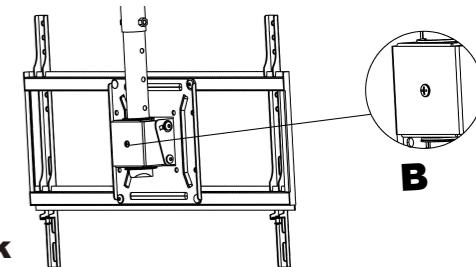



ADJUSTABLE HEIGHT CEILING MOUNT

MODEL CM708